

SUN ODYSSEY 509



OWNER'S MANUAL



JEANNEAU

CROISIÈRE

134614
Index F

<https://www.boat-manuals.com/>

WELCOME ABOARD

Madam, Sir,

You have just taken delivery of your new JEANNEAU boat and we thank you for the confidence you have shown us in ordering a vessel of our brand. The whole JEANNEAU team welcomes you aboard.

A JEANNEAU is made to last, in order to bring you all the pleasure you expect from a vessel over a period of many years. Each boat is subject to the utmost attention to detail from the design stage right through to launching.

This manual is meant to help you to enjoy your boat comfortably and safely. It includes the boat specifications, the equipment provided or installed, the systems and tips on her operation and maintenance. Some of the equipment described in this manual may be optional.

Your JEANNEAU dealer will be able to help and advise you in the use and maintenance of your boat.

Read this user's guide/owner's manual carefully and get to know your boat before using it.

The better you know your vessel the more pleasure you will get from being at the helm.

The sea is a source for learning. Caution based on a knowledge of one's own limits and those of the boat is the pre-requisite for an accomplished sailor.

Even when your boat has been adapted for them, the sea and wind conditions corresponding to the design categories A, B, C and D may vary, ranging from severe conditions to strong storms subject to the risks of exceptional waves and gusts of wind, this meaning they are dangerous conditions in which only an experienced, fit and well trained crew manoeuvring a well maintained boat can sail in a satisfactory manner.

This user's guide/owner's manual is not a course in safety at sea or about sailing sense. If this is your first boat or if you change to a new type of boat which you are not used to, get some training in boat control and sailing to ensure your safety and comfort. Your dealer, your international sailing association or your yacht club will be very happy to recommend local sailing schools or professional instructors.

Make sure the sea and wind conditions will correspond to the category of your boat and you and your crew are able to handle the boat in these conditions.

Always listen to the weather forecast before you put out to sea.

Keep this user's guide/owner's manual in a safe place and hand it over to the new owner if you sell your boat.

You are advised to keep all the instructions and manuals provided by the boat equipment manufacturers (accessories...) in the same place as this manual



INTRODUCTION

THE USERS OF THE BOAT ARE INFORMED OF THE FOLLOWING:

■ This user guide/owner's manual is not a maintenance or repair guide. In case of difficulty do not hesitate to call on the services of your concessionaire JEANNEAU.

■ Any alterations which may affect the safety specifications of the boat must be assessed, carried out and recorded by persons qualified to do so. Any change in the distribution of the vessel's mass (adding a radar, altering the mast, changing an engine, etc) may affect the stability, trim and performance of your boat.

The SPBI shipyards may not be held responsible for any alterations which they have not approved.

■ The complete crew must be equipped appropriately.

■ In numerous countries, a licence, an authorization or a training course is requested. Make sure you have this legal authorization before you use your boat.

■ Adapt the use of your boat to her condition that wears out with time and use.

■ Any boat, however solid she may be, may be severely damaged if badly used. This is not compatible with safe navigation. Always adapt the speed and direction of your boat to the conditions of the sea.

■ The boat shall not be loaded more with than the maximum load recommended by the builder, in particular the total weight of the food supplies, of the different equipment that are not supplied by the builder and of the persons on board.

■ The weight of the boat shall be properly distributed.

■ The stability is reduced when you add weight in the upper parts.

■ In case of heavy weather, the hatches, lockers and doors shall be closed in order to minimize the risk of water coming in.

■ Breaking waves are a serious threat to stability.

■ The water in the bilge shall be kept at its minimum.

■ The stability may be reduced when you tow a boat or when you lift heavy weights with the davits or the boom.

■ If your boat is equipped with a liferaft, carefully read the instructions. The boat must have on board all the proper safety equipment (lifejackets, buoys, harness, flares, liferafts, etc.) depending on the type of vessel, its certification, the country, the weather conditions encountered, etc.

■ The crew must be familiar with the use of all the safety equipment and the emergency safety procedures (MOB, towing etc.). Sailing schools organise regular training sessions.

■ Anyone on the deck shall wear a life jacket or a buoyancy aid.

The safety regulations as defined by the sailing code and enforced by the "COLREG" should be observed.

NAME PLATE:

Some of the data is shown on the manufacturer's plate fixed to the boat. The explanation of the data is given in the appropriate chapters of this manual.

IDENTIFICATION OF VESSEL:

The vessel's identification is found on the builder's certificate delivered with the boat and is engraved on the starboard aft side.

So as to be able to continuously improve their product the SPBI shipyards reserve the right to make any alterations in design, layout or equipment which they judge necessary.

That is the reason why the specifications and information given are not contractual, they may be modified without prior notice or updates.

This owner's manual is designed in accordance with the ISO 10240 standard requirements, it has a general purpose and it may sometimes list some equipment or accessories or deal with some points or questions that are not relevant to your own boat.

The different warnings used throughout this guide are broken down as follows.



DANGER

Indicates the existence of a serious inherent danger with a high risk of death or serious injury if the appropriate precautions are not taken.



WARNING

Indicates the existence of a danger which could lead to injury or death if the appropriate precautions are not taken.

PRECAUTION

Indicates a reminder of safety practice or draws attention to dangerous practices which could cause injury to persons or damage to the vessel or to its components.

ADVICE - RECOMMENDATION

Indicates a recommendation or advice for carrying out manoeuvres appropriate for the planned manoeuvres.



HISTORY OF UPDATES

• Index A	11/2011
• Index B	06/2012
• Index C	08/2012
• Index D	09/2013
• Index E	01/2014
• Index F	06/2014

CONTENTS

SUN ODYSSEY 509 Anglais
Update 06/2014
Index F


Code: 134614

Total number of pages: 192

INTRODUCTION

Chapter 1 SPECIFICATIONS AND WARRANTY.....	Page 7
Chapter 2 SAFETY	Page 13
Chapter 3 HULL	Page 35
Chapter 4 DECK	Page 39
Chapter 5 STEERING SYSTEM	Page 55
Chapter 6 RIGGING AND SAILS.....	Page 63
Chapter 7 INTERIOR	Page 83
Chapter 8 WATER AND SEWAGE WATER	Page 89
Chapter 9 ELECTRICAL EQUIPMENT	Page 115
Chapter 10 ENGINE.....	Page 149
Chapter 11 LAUNCHING	Page 183
Chapter 12 WINTER STORAGE.....	Page 187

PERSONAL NOTES

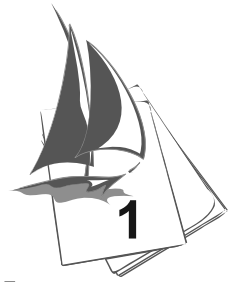

SPECIFICATIONS AND WARRANTY

TECHNICAL SPECIFICATIONS

CERTIFICATION

DESIGN CATEGORY

YOUR BOAT

TECHNICAL SPECIFICATIONS

L.O.A.....	15,38 m
L.O.A - with Optional equipment (Rear skirt).....	15,63 m
Hull length.....	14,98 m
L.W.L.....	14,15 m
Overall width.....	4,69 m
Beam.....	4,69 m
Waterline beam.....	4,02 m
Air draught - Maximum.....	21,70 m

Keeled version - Shallow draught keel	
Draught.....	1,83 m
Ballast weight.....	4 750 kg

Keeled version - Deep draught keel	
Draught.....	2,36 m
Ballast weight.....	4 300 kg

Light displacement..... 14 527 kg


CERTIFICATION

CE Category	A	B	C	D
Persons maximum	13	14	16	16
Displacement with maximum load	19 467 kg	19 467 kg	19 467 kg	19 467 kg
Maximum load recommended by the builder	4 940 kg	4 940 kg	4 940 kg	4 940 kg

Including the mass of the persons who are authorized on board (75 kg/165 lbs per adult), the supplies, the liquids that can be used (fresh water and fuel) in fixed completely full tanks, the additional loads, the optional equipments, the liferaft and the scope for load.


Total mass of liquids (all tanks full).....	1 156 kg
Freshwater capacity.....	400 + 235 l
Fuel capacity.....	237 l
Refrigeration unit capacity.....	255 l
Sewage water capacity.....	4 x 80 l
Recommended maximum power.....	55 Kw
Maximum motorisation mass.....	207 kg
Battery capacity - Engine.....	110A
Battery capacity - Service.....	3 x 110A
Battery capacity - Spare battery.....	2 x 110A
Battery capacity - Bow thruster.....	4 x 50A
Cabins.....	3/4/5
Architect.....	Philippe BRIAND

Note: The capacities indicated are maximum (including options).

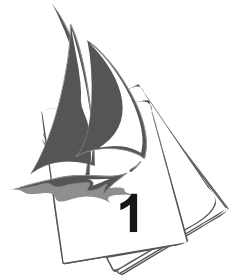

SAILS

Mainsail (classic) - Classic.....	60,90 m ²
Genoa - Classic	52,70 m ²
Furling mainsail.....	49,20 m ²
Mainsail (classic) - Performance.....	60,90 m ²
Genoa - Performance	72,20 m ²
Tacking jib.....	44 m ²
Asymmetric spinnaker	190 m ²
Symmetrical spinnaker	190 m ²
I.....	19,06 m
J.....	5,49 m / 5,93 m (Classical mast / Mast with in-mast furling)
P	17,50 m
E	6,00 m

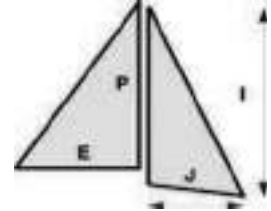

The sails are the main propulsion means of the SUN ODYSSEY 509.

DESIGN CATEGORY

Design category	Wind force (Beaufort scale)	Significant height of waves to be considered (in metres H 1/3)
Vessel designed for navigation: A - "At high sea" B - "In open sea" C - "Near to the coast" D - "In sheltered waters"	Over 8 Up to and including 8 Up to and including 6 Up to and including 4	Over 4 m Up to and including 4 m Up to and including 2 m Up to and including 0,5 m

SPECIFICATIONS AND WARRANTY



Category A: At high sea

This craft is designed to operate in winds that may exceed wind force 8 (Beaufort scale) and in significant wave heights of 4 m and above.

This craft is largely self-sufficient. Abnormal conditions such as hurricanes are excluded. Such conditions may be encountered on extended voyages, for example across oceans, or inshore when unsheltered from the wind and waves for several hundred nautical miles.

Category B: In open sea

This craft is designed to operate in winds up to Beaufort force 8 and the associated wave heights (significant wave height up to 4 m, see Note 1 below).

Such conditions may be encountered on offshore voyages of sufficient length, or on coastal waters when unsheltered from the wind and waves for several dozens of nautical miles.

These conditions may also be experienced on inland seas of sufficient size for the wave height to be generated.

Category C: Near to the coast

This craft is designed to operate in winds up to Beaufort force 6 and the associated wave heights (significant wave height up to 2 m, see Note 1 below). You may meet with such conditions in exposed inland waters, in estuaries and in coastal waters with moderate weather conditions.


Category D: In sheltered waters

This craft is designed to operate in winds up to Beaufort force 4 and the associated wave heights (occasional maximum waves of 0,5 m height).

Such conditions may be encountered in sheltered inland waters, and in coastal waters in fine weather.

NOTE:

- The significant wave height is the mean height of the highest one-third of the waves, which approximately corresponds to the wave height estimated by an experienced observer. Some waves will be double this height.
- The creation of different design categories results from the need to distinguish between different levels of risk according to the construction of the boats. The parameters for the characteristics are established to define the conditions of navigation which each category may encounter; they serve purely to evaluate the boat designs and are not to be used to limit the geographical areas in which these boats may operate.
- One boat may be classed in several design categories at the same time, each with their different maximum capabilities.

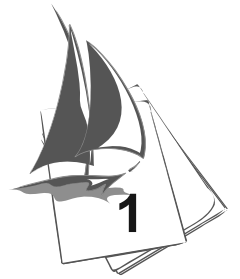

YOUR BOAT

Version

NAME OF THE BOAT

NAME OF THE OWNER

ADDRESS

.....

.....

HULL NUMBER

SERIAL NUMBER

REGISTRATION NUMBER

DELIVERY DATE

DOOR KEY NUMBER

MAKE OF ENGINE

ENGINE SERIAL NUMBER

ENGINE KEY NUMBER


SPECIFICATIONS AND WARRANTY

Your agent



JEANNEAU (Establishment of the company SPBI)
BP 529 - 85505 LES HERBIERS cedex - FRANCE
Tel. (33) 02 51 64 20 20 - Fax (33) 02 51 67 37 65
Internet : [http://www.jeanneau.com\(fr\)](http://www.jeanneau.com(fr)).



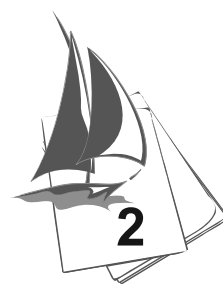

SAFETY

SAFETY EQUIPMENT

GENERAL INFORMATION

GAS SYSTEM

RECOMMENDATIONS FOR GAS

FIGHT AGAINST FIRE

BILGE PUMP SYSTEM

EMERGENCY TILLER

SAFETY EQUIPMENT



**Swimming ladder (means of coming back onboard)
(Reference 1)**



**folding bathing ladder
(Reference 2)**



GENERAL INFORMATION



DANGERS

The major hazards concern:

- The gas system.
- The electrical system.
- Manoeuvring the vessel and the sails.
- The motorisation.

Please refer to the relevant paragraphs.

SAFETY

DANGER



- Fuel leaks or vapour represent a danger of fire and explosion.
- Leave the engine compartment ventilated for a long time before starting the engine.
- There may be danger of fire or explosion if direct or alternating current systems are incorrectly used. Refer to chapter Electricity.
- Certain vessels are equipped with a retractable swimming ladder. The swimming ladder must be in position as soon as you are onboard.
- Reduce speed in waves.

WARNING




- Before you sail, list the compulsory safety equipment.
- Don't exceed the number of persons indicated in the chapter 'Specifications'.
- The total weight of the persons and equipment must never exceed the maximum load recommended by the manufacturer.
- Use the seats provided.

ADVICE - RECOMMENDATION

- When sailing, never padlock or lock the liferaft locker.
- Before putting to sea, carefully read the launching instructions shown on the liferaft.
- Close the deck hatches and portholes before each trip (including the companionway hatch in heavy weather).
- Don't store anything below the floorboards.
- Ensure that movable items are firmly secured when the boat is under way.

GAS SYSTEM


LOCATION

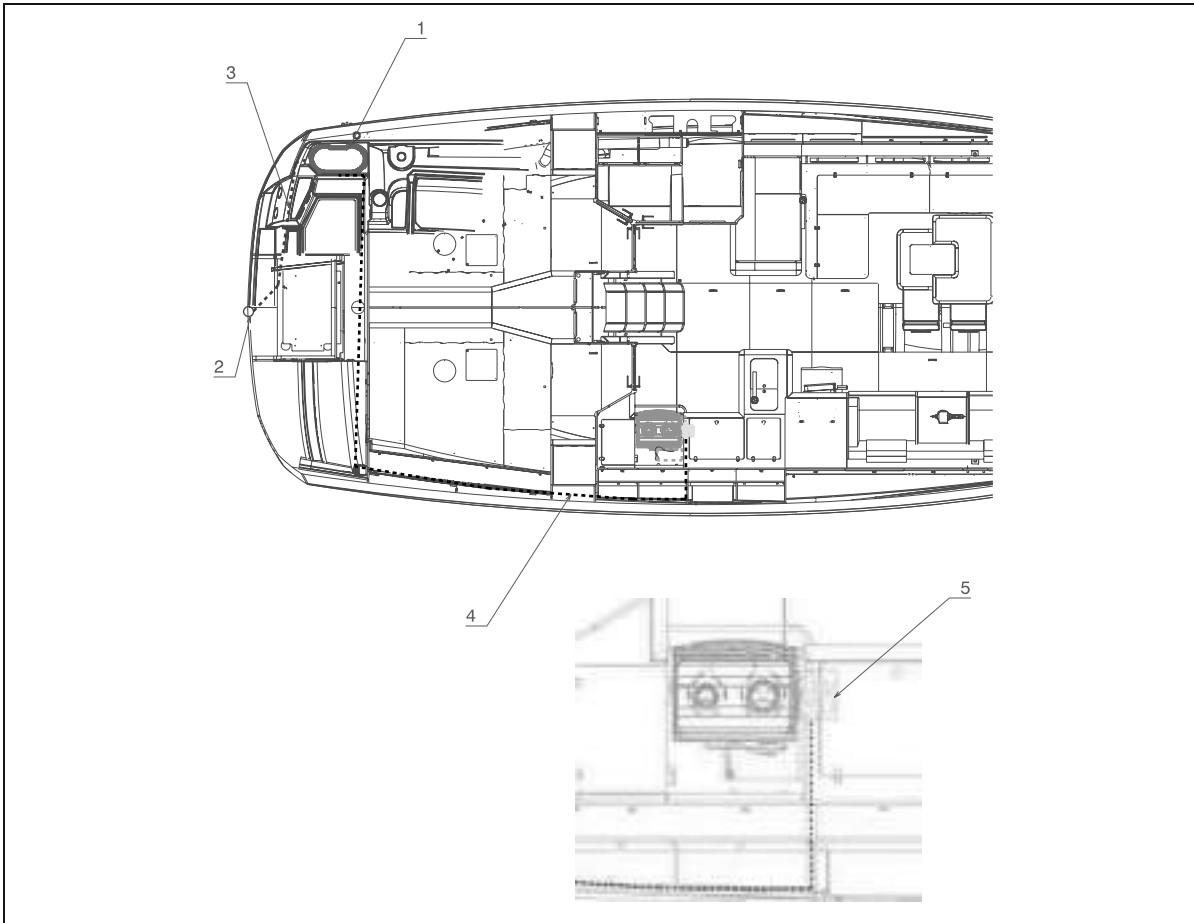

REF	Designation
1	Gas cylinder locker
2	Kitchen sink evacuation through-hull
3	Drain - Gas cylinder locker
4	Gas system
5	Supply valve - Gas




SCHEMATIC DIAGRAM FOR GAS SYSTEM - EUROPE

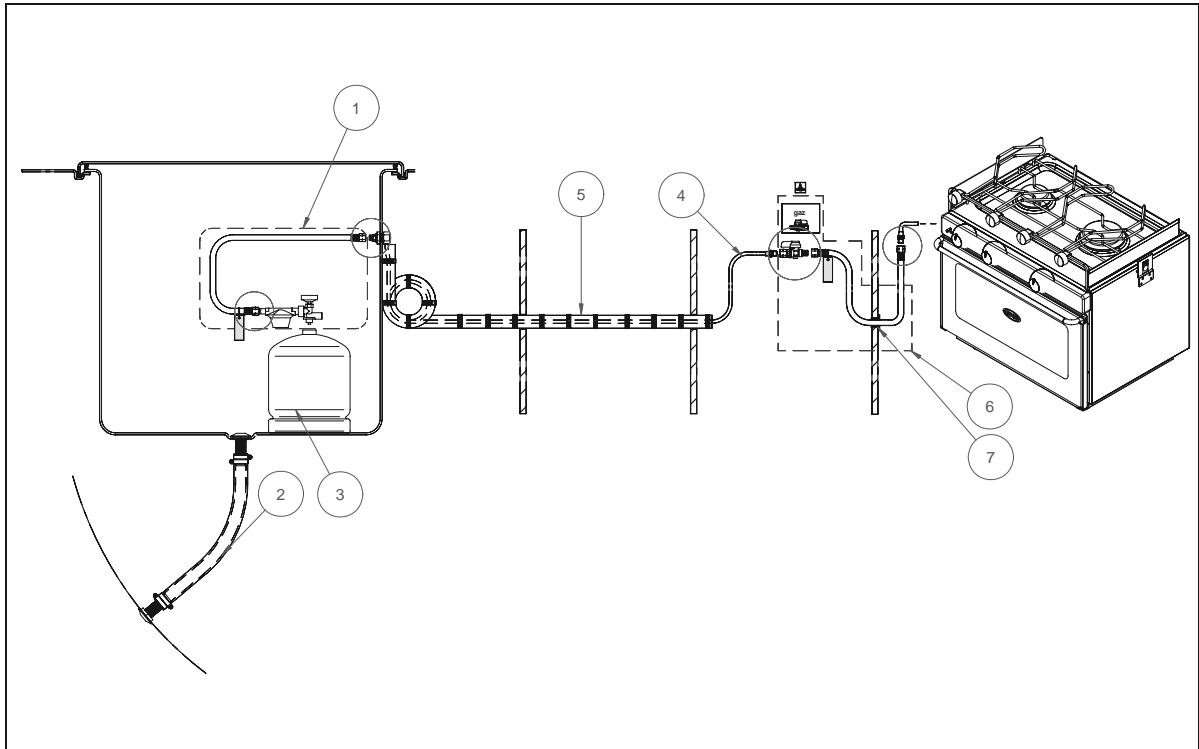


SAFETY

REF	Designation
1	Connection kit gas bottle
2	Drain
3	Gas cylinder
4	Connection kit gas copper
5	PVC girdled sleeve
6	Gas appliance connection kit
7	Wire passage

GAS CYLINDER LOCKER - LOCATION

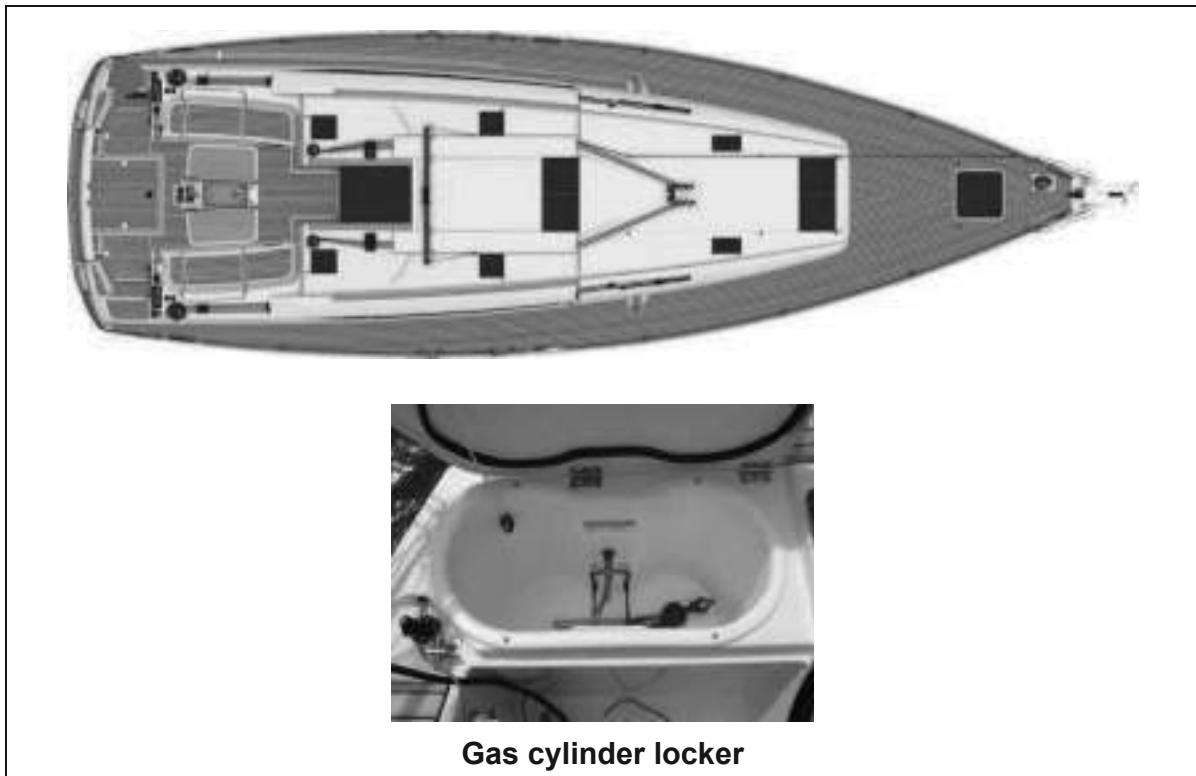


Note: Same position for the other layouts.

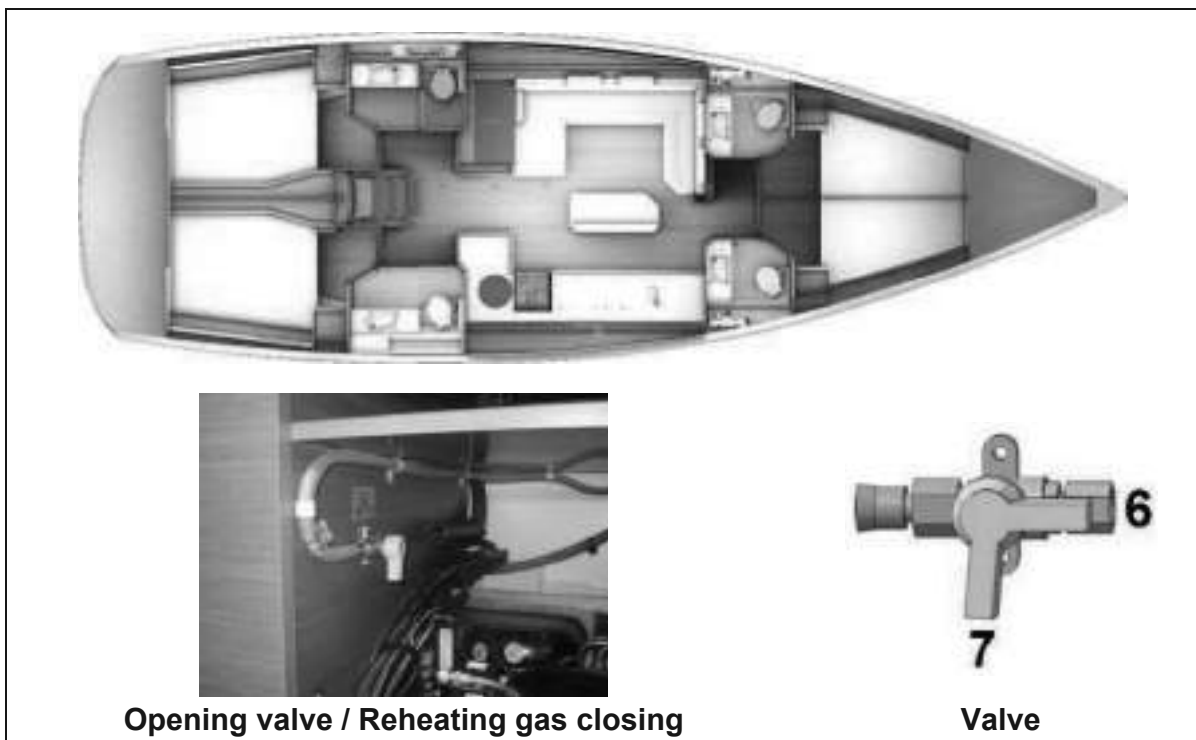

REF	Designation
6	Open valve
7	Closed valve



SCHEMA GAS - US

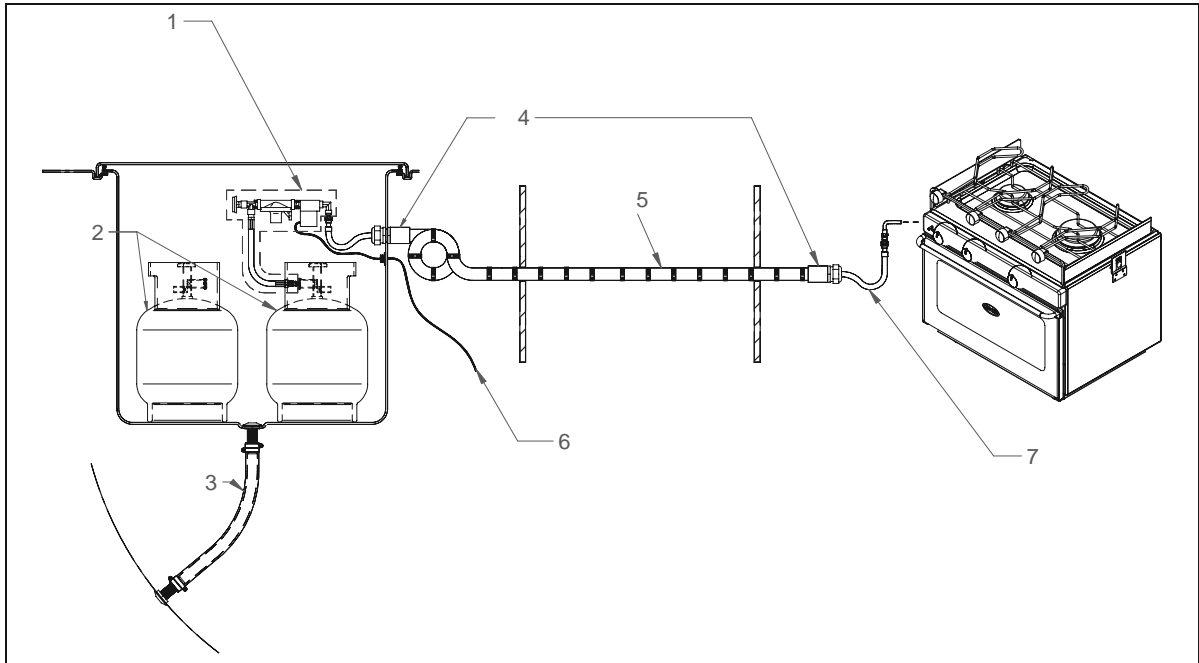

SAFETY

REF	Designation
1	Regulator valve 12V
2	Gas cylinder
3	Drain
4	Stuffing box
5	PVC girdled sleeve
6	Electromagnetic valve for gas 12V
7	Pipe Propane Plastic

RECOMMENDATIONS FOR GAS

Type of cylinder: butane, service pressure 10 kg/cm² or according to current standards of your country).

Close the valves on the system and on the cylinder when the appliances are not used. Close the valves before you change cylinders and immediately in case of emergency.

Never leave unattended an appliance that is working. Don't install or store flammable materials above or over the stove (curtains, papers, napkins etc.).

Make sure that the valves of the appliances are closed before you open the cylinder or hose valve.

In case you smell gas or find that the burners have gone out (although appliance models cut off automatically if the flames go out), turn off the valves of the appliances. Do ventilate the boat in order to get rid of any residual gas. Find the cause of the problem.

Regularly test the gas system in order to detect any gas leak.

Check all the connections using water and soap or detergent, closing the valves of the appliances and opening the valve on the cylinder.

If you detect a leak, close the valve of the cylinder and repair before you use it again.

The appliances use the oxygen of the cabin and release combustible gases. Ventilate your boat when using appliances.

Don't obstruct the air vents and at least leave the door open. Don't use the oven or stove as back up heaters.

Lock the stove oven when being not used in order to avoid damaging the tubes when sailing.



WARNING

- For all recommendations concerning gas: Refer to chapter 2, «Safety».
- Don't use a solution containing ammonia.
- Don't use a flame to detect leaks.
- Don't smoke, don't use a naked flame when you change the gas cylinder.


ADVICE - RECOMMENDATION

- Shut off the gas supply at the bottle as well as the cooker tap.
- When changing the cylinder, refit the cap in place on the regulator threaded section (to avoid corrosion).
- For winter storage instructions and precautions, refer to Chapter 12.

Never obstruct the fast access to the components of the gas system. Keep the taps of the empty cylinders turned off and the cylinders disconnected.

Keep the protection, lids, covers and taps in their places.

Don't use the gas cylinder storage place to store other equipment. Only use the proper locker to store the gas cylinders.

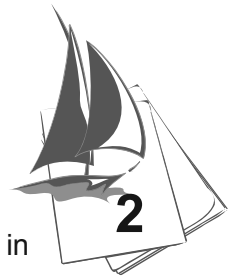

Regularly check and replace the rubber tubings that link the cylinder to one end of the circuit and the stove to the other one, depending on the norms and regulations in force in your country.

Pay particular attention to keep in good condition the screw thread of the cylinder on which the regulator is. Check the condition of the regulator every year and change it if necessary. Use regulators identical to the ones that are fitted.

Have the repairs carried out by someone skilled.

POSITION OF GAS BOTTLE

The locker for storing gas bottles can be reached through the cockpit under the foldaway seat. The locker can accommodate 2 gas bottles. The locker is equipped with bottle fastening straps.

FIGHT AGAINST FIRE

It is the owner's or the skipper's responsibility:

- To have the extinguishers checked in pursuance of the instructions given.
- Use extinguisher replacements with equivalent features (same capacity and fire resistance) if the ones in place are out of date or have been used.
- To tell the crew:
 - where the extinguishers are and how they work,
 - where the release aperture is situated in the engine compartment,
 - where the emergency exits are.
- Make sure the extinguishers can be reached easily when people are on board.
- Make sure that the ventilation openings in the engine (and generator, if installed) compartment are well cleared.

Keep the bilge clean. Regularly check that there is no fuel or gas vapour.

Do not store combustible materials in the engine compartment.

If non-combustible materials are stored in the engine compartment they must be secured so there is no danger of them falling on machinery and they do not obstruct access to and from the compartment.

Always fasten the curtains open when the gas cooker is working.

Exits other than the doors and hatches of the main companionway, equipped with permanently fitted ladders, are identified with a symbol.




WARNING



- Keep an extinguisher handy in case the fire should start again.
- Fire fighting equipment (portable extinguishers, fire blankets and buckets) must be permanently and immediately accessible.

EMERGENCY EVACUATION AND LOCATION OF EXTINGUISHERS

VERSION 3 CABINS

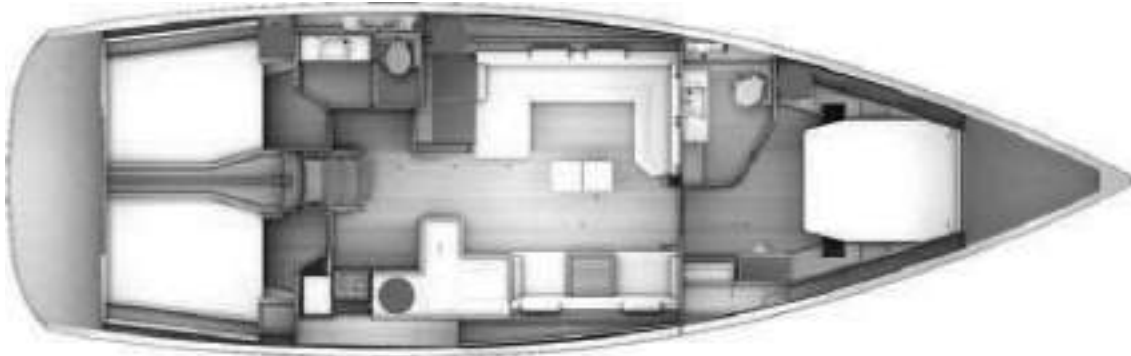


4 AND 5-CABIN VERSIONS

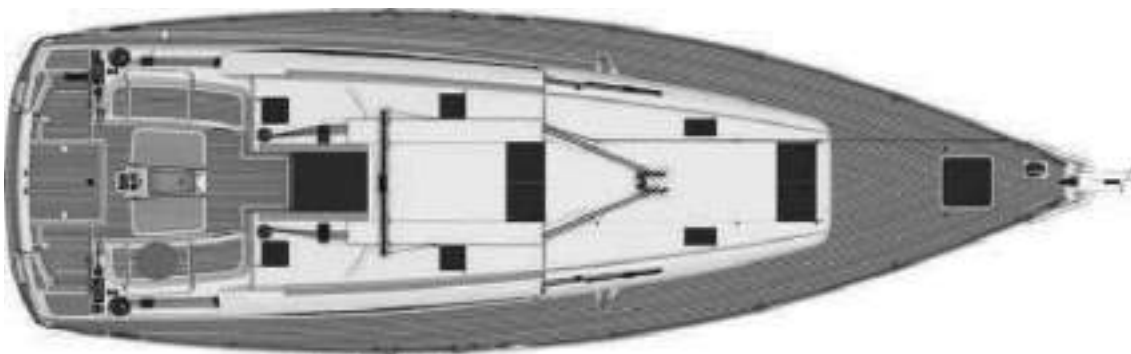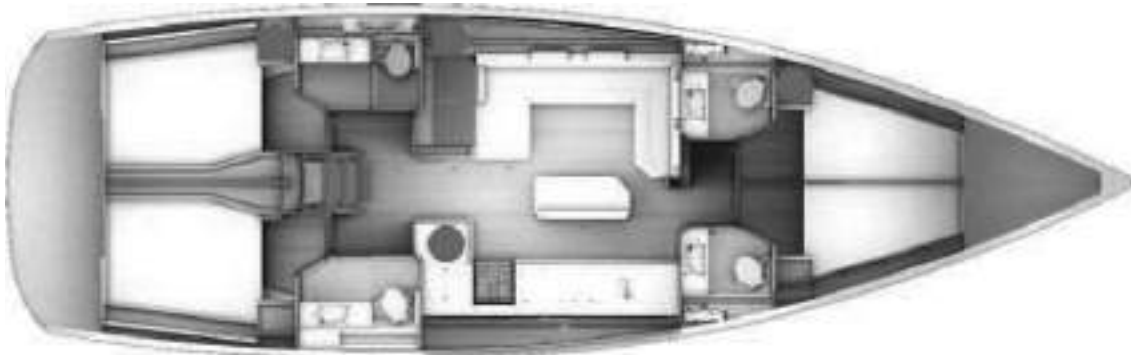

Position of portable extinguishers (not supplied)

- Hanging locker - Forward cabin
- Hanging locker - Port aft cabin
- Galley
- Saloon seating
- Cockpit locker

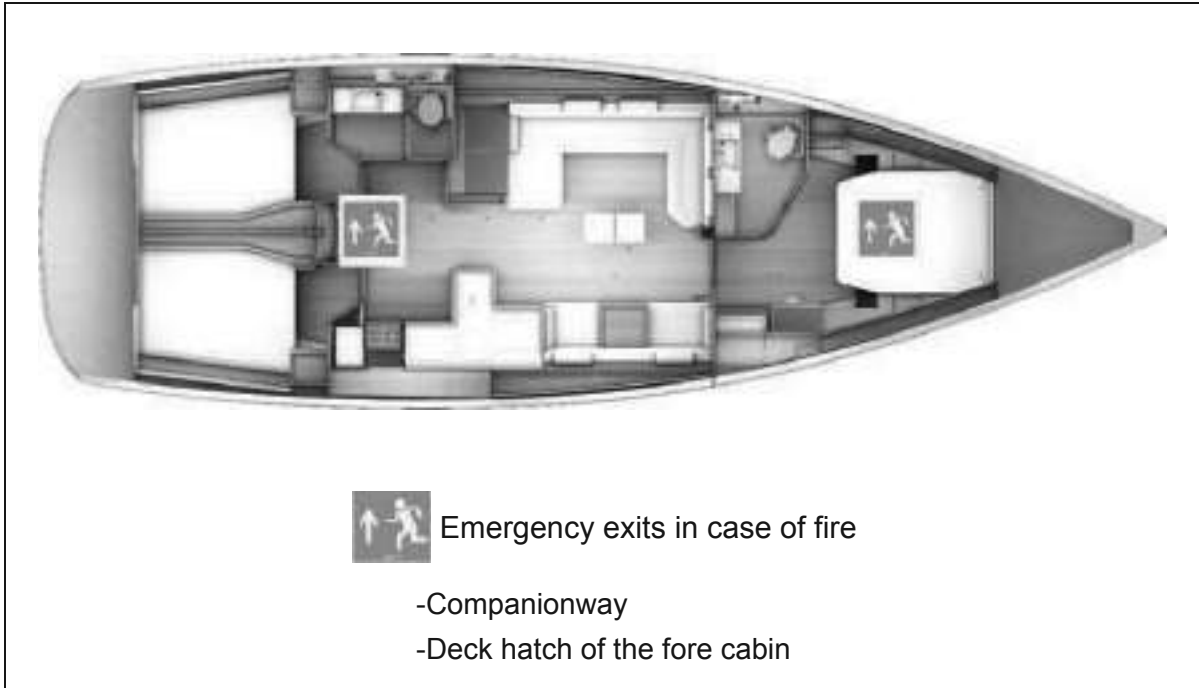

Emergency exits in case of fire

- Companionway
- Deck hatch of the fore cabin

SAFETY



EXTINGUISHERS

The extinguishers are part of the compulsory equipment.

An extinguisher or a fire blanket shall be set less than 2 m from any flame appliance.

Extinguishers must be placed less than 5 m from any berth.

It is compulsory for an extinguisher to be placed less than 2 m away from the extinguisher aperture of the engine compartment.

An extinguisher shall be less than 1 m from the steering station.

The extinguishers must be in position (see "Extinguisher positions" diagram).

Extinguisher, per unit, minimum capacity 5 A/34 B.

For the Sun Odyssey 439: 20A/136B (4 extinguishers of this minimum capacity).



DANGER

- There may be danger of fire or explosion if direct or alternating current systems are incorrectly used (Refer to chapter Electricity).



WARNING


- Do not obstruct the ways to the emergency exits.
- Do not obstruct the safety controls (fuel oil valves, gas valves, power switches).
- Do not block the extinguishers placed on shelves.
- Do not leave the vessel unattended when a cooker or heater is in use.
- Do not use gas lamps in the vessel.
- Do not alter the vessel systems (electrical, gas or fuel).
- Do not fill up a tank or change a gas cylinder when an engine is running or a cooker or heater is on.
- Do not smoke while handling fuels or gas.



WARNING


- The **CO²** extinguishers shall be used only to fight **electrical fires**.
- Clear the area immediately after use in order to avoid suffocation.
- Air before entering.

FUEL SUPPLY VALVE

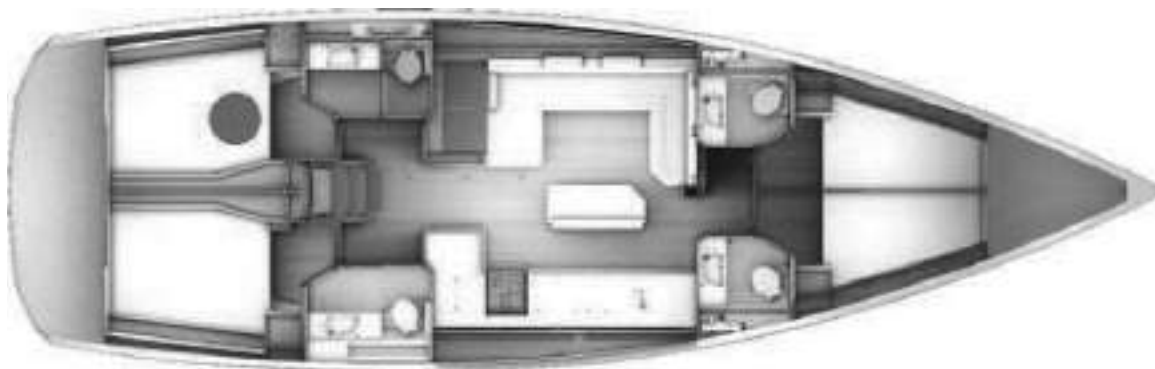


Access




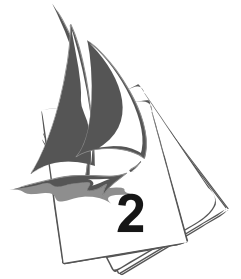

EXTINGUISHER APERTURE OF THE ENGINE COMPARTMENT

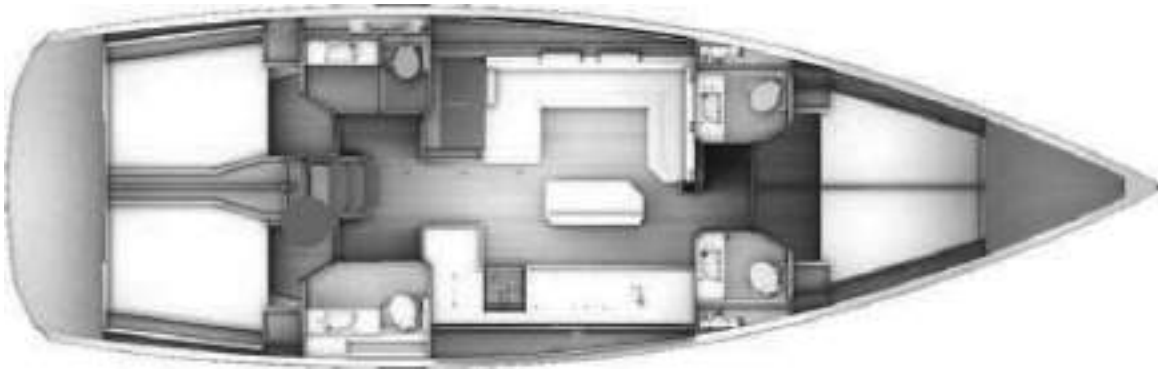

Location

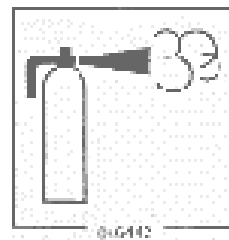

A pictogram helps to locate it easily

SAFETY

The engine compartment has a port that makes it possible to inject the extinguishing product inside without opening the usual access hatches.




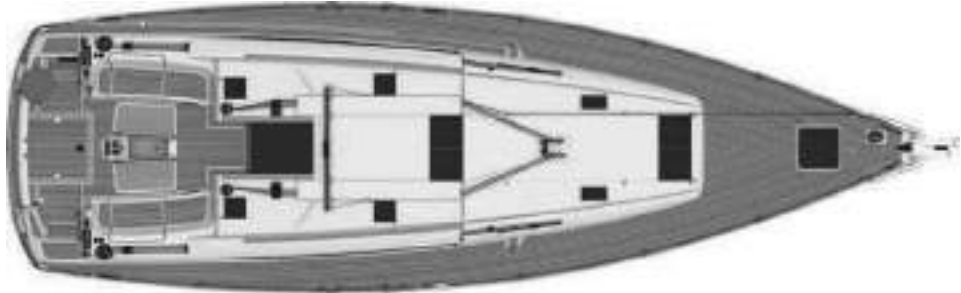
**INSTRUCTIONS TO FOLLOW IN CASE OF A FIRE IN THE ENGINE COMPARTMENT
BILGE:**

- Stop the engine.
- Switch off power and stop fuel supply.
- Block off the air supply from the air inlets and outlets of the engine.
- Inject the extinguishing product through the aperture.
- Wait.
- Open the access hatches and repair.



MANUAL BILGE PUMP

SAFETY



**Arm - Pump
Location
Cockpit locker -
Port aft**

**Operation
Manual pump
Capacity:
0,7l / blow**

BILGE PUMP SYSTEM

PROCEDURE TO BE FOLLOWED


- Switch on the electric bilge pump.
- If necessary activate the manual pump.
- Identify the source of the leak by tasting the water and decide on the relevant action to be taken:
 - freshwater = watertank leak.
 - seawater = breach of hull.





WARNING

- Let open the floodgates navigation.

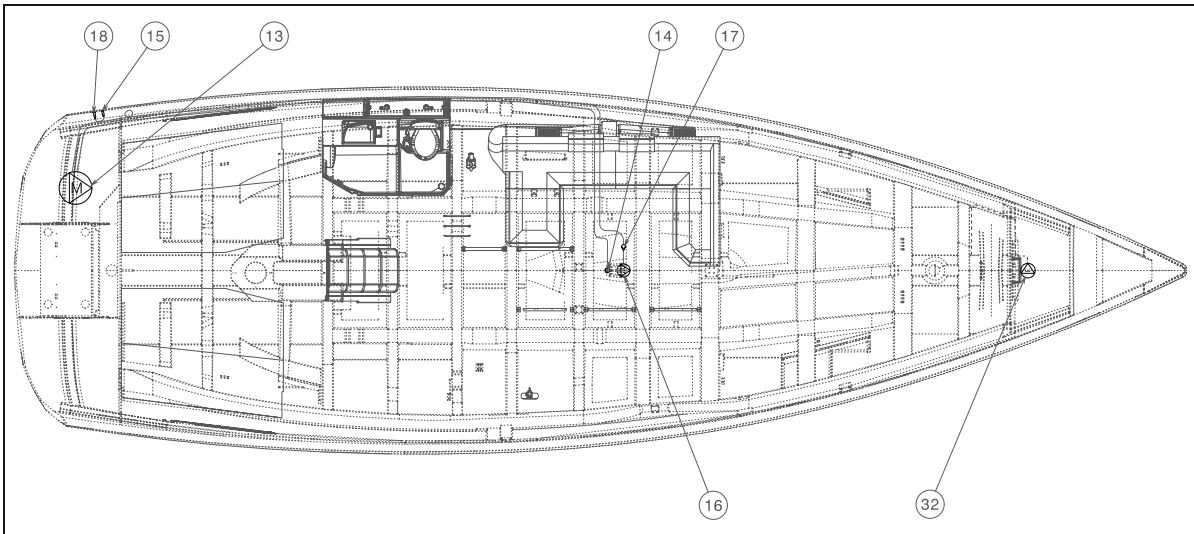DIAGRAM OF THE LAYOUT - SYSTEM - BILGE DRAINING




	Pipe - Bilge pump system (25 mm diameter)
	Pipe - Bilge pump system (20 mm diameter)

REF	Designation
13	Electric bilge pump
14	Stuffing box - Manual bilge pump
15	Thru-hull fitting - Draining of manual bilge pump
16	Electric bilge pump
17	Non-return valve
18	Thru-hull fitting - Electric bilge pump draining
32	Electric bilge pump



ELECTRIC BILGE PUMP

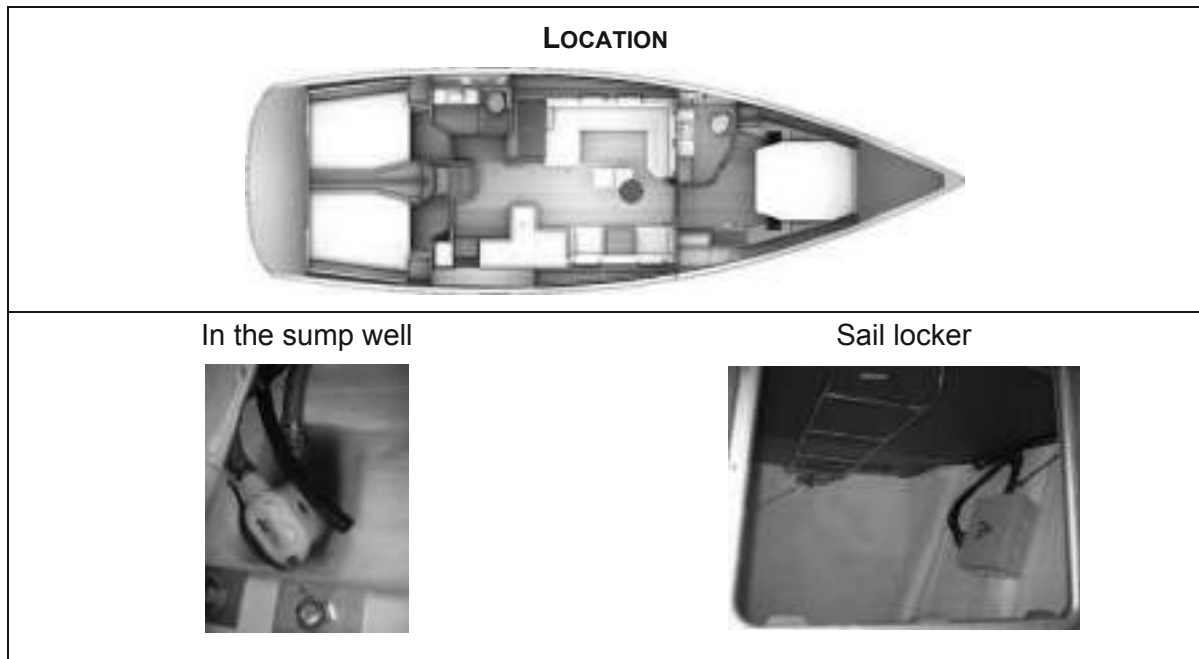

SAFETY

Operation:

The electric bilge pumps are connected to the 12V service circuit. To enable operation the 12V circuit must be activated by turning on the battery switches.

You can energize the electric bilge pump from the electrical panel.

On the electrical panel - three possible positions : OFF / Automatic / Mechanically operated.

In the automatic position each pump is set off automatically by a trip switch located in the sump area or in the bottom of the hull.

Capacity: Refer to manufacturer's instructions for use and maintenance.

MANUAL BILGE PUMP

The manual bilge pump is in the cockpit

The control arm of the pump shall be kept accessible whatever the circumstances.

WARNING




- The bilge pump system is not designed to provide buoyancy to the boat in case of damage.
- The bilge pump system is designed to drive out the water being either sea spray or leaks but absolutely not the water coming through a hole in the hull, this hole being the result of a damage.
- Do not let the pumps run while dry, this may cause them damage.
- The water in the bilge shall be kept at its minimum.
- Check the functioning of each bilge pump regularly.

SAFETY PRECAUTIONS


- Clean off debris which could block the pump intake points or strainers. If the watertight partitions which seal off the fore and aft points are fitted with valves they must be closed at all times and only opened to drain water into the main bilge.

USE STEERS FRANK OF HELP

Sector access port

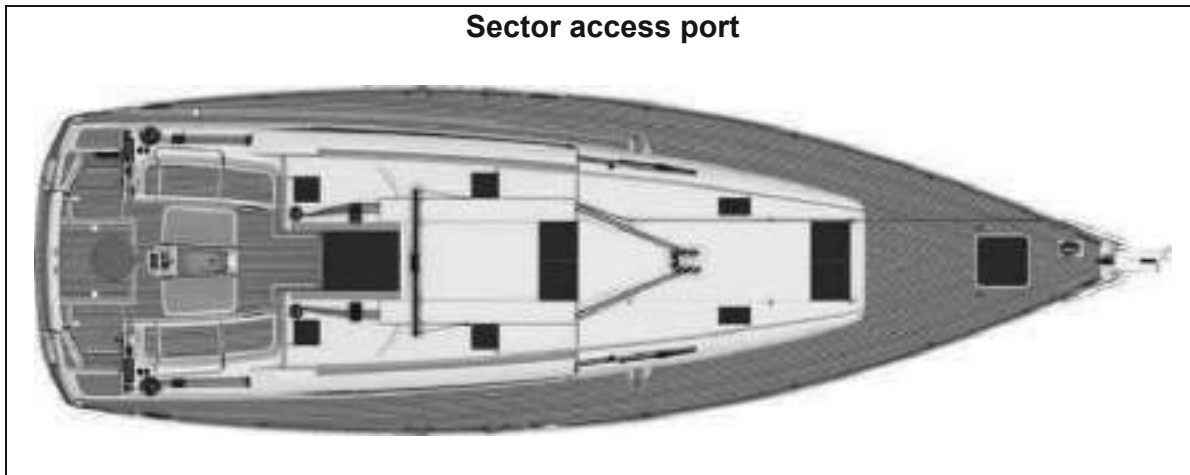

Opening access hole

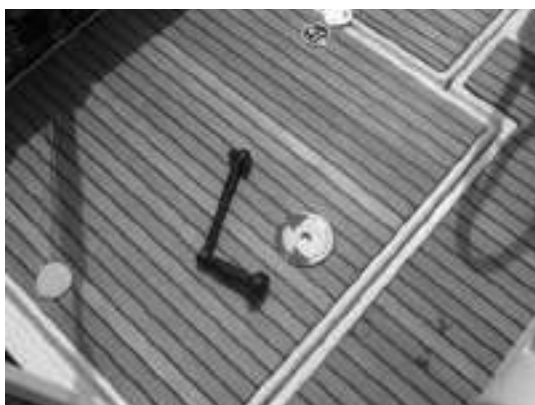

Tiller in position





EMERGENCY TILLER

The emergency tiller is in an aft locker and shall be easy to get to.


To operate the tiller:

- Use a winch handle and unscrew the tiller cover situated at the back of the cockpit.
- Insert the tiller into the rudder stock and make sure it is fully secure in the square.
- If the automatic pilot is connected and is working after the tiller damage, use it.
- Disconnect all apparatus linked to the rudder stock to use the emergency tiller.

SAFETY

ADVICE - RECOMMENDATION

The emergency tiller is designed only to be able to continue underway at a reduced speed in case of steering gear failure.

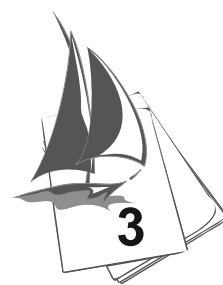


HULL

MAINTENANCE OF THE HULL

LIFTING

LIFTING

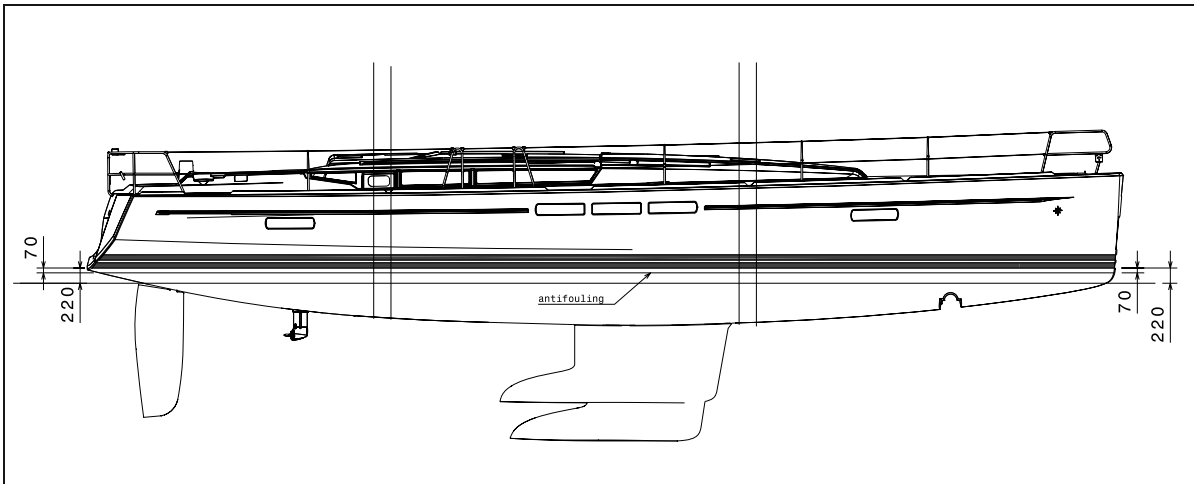

Wetted area: approx.50 m²

Note: Measurements are expressed in mm.

PRECAUTION

- Consult the harbourmaster's office to find out the conditions of water use and the maintenance area for cleaning your vessel.
- It is necessary to seek the advice of your concessionnaire with regard to gel-coat repairs.


PRECAUTION

- When applying the anti-fouling paint do not paint over the electronic instrument sensors nor the anodes.

ADVICE - RECOMMENDATION

- During the refit, check the anodes (See "Motorisation" chapter).
- When the boat is stored at a dry dock, the corrosion protection is not as effective due to oxidation of the anodes: even the new anodes oxidize the surface. Before returning the boat into the water, clean the anodes.
- Cleaning anodes: Use sandpaper.
Do not use metal brushes or steel tools to clean the boat, it may damage the galvanic protection.
- Replacing the anodes: The anodes are fastened with screws and nuts. First, remove the screws and nuts that hold the anode, then clean the contact surface. Press the new anode to obtain a good electrical contact.

MAINTENANCE OF THE HULL

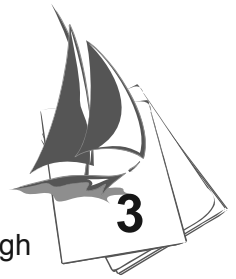

The materials and equipments of your boat have been selected because of their high quality and performance and ease of maintenance. However you shall carry out a minimum maintenance in order to protect your boat from outside attacks (salt, sun, electrolysis ...).

Preferably wash your boat on shore.

Use as few cleaning agents as possible.

Don't use solvents or aggressive detergent agents. Don't discharge cleaning agents into the water.

LIFTING

The lower hull of your boat should be covered with an anti-fouling paint which will prevent the adhesion of marine growth.

The nature of the water in which the boat sails will determine the choice of the anti-fouling paint as well as the frequency of hull stripping and painting. Do not hesitate to take advice from your specialists.

Refer to chapter 11 for launching instructions.

Before applying anti-fouling paint never:

- Do any sandblasting.
- Use any other solvents than ethylic alcohol.
- Use detergents under pressure.
- Use scrapers.
- Do any sanding other than a light rubbing down by hand with a grade 400 wet abrasive paper (for the first application).

If cleaning of the anti-fouling paint has to be done with a high pressure hose:

- The water temperature must not exceed 15 °C.
- The water pressure must not exceed 150 bars.
- The distance between the hose nozzle and the hull must not be less than 10 centimetres.

Follow the supplier's instructions very closely when applying the anti-fouling paint.

All these hull maintenance operations can be carried out by your dealer.



DECK

NAVIGATION- DECK LAYOUT

STABILITY

PREVENTION OF MAN OVERBOARD


MOORING LINES

TOWING

MOORING

MAINTENANCE OF THE DECK

NAVIGATION - DECK LAYOUT

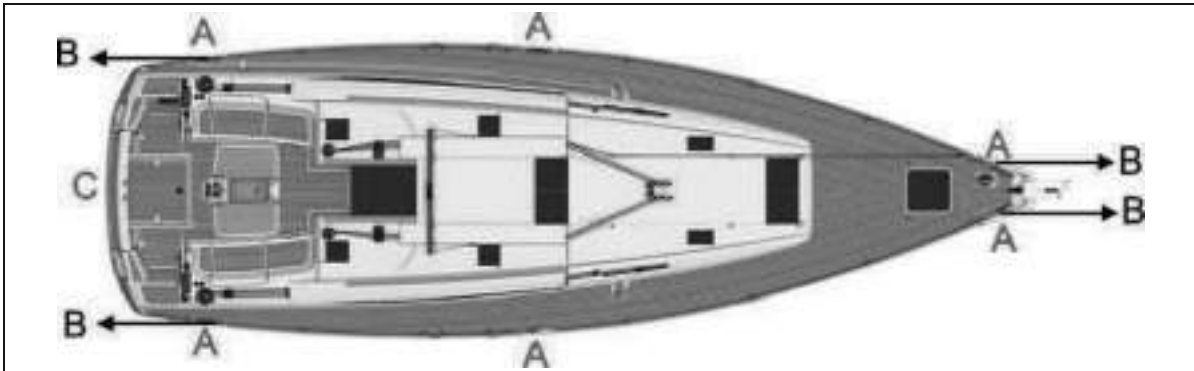

- A. Mooring cleats
 - Jacklines - not supplied
- B. Towing:
 - at the bow, to be towed
 - at the stern, to tow
- C. Swimming ladder (means of coming back onboard)

DANGER



- Wear your life jacket.
- In heavy weather, wear your safety harness and fasten yourself to the boat.
- When at sea close the guardrail side-opening or openings.
- Do not try to stop the boat using a boat hook or your foot, your hand or any other part of the body.


WARNING



The sudden closing of a locker due to a gust of wind or movement of the boat could result in injury.

ADVICE - RECOMMENDATION

Close the deck hatches and portholes before each trip (including the companionway hatch in heavy weather).

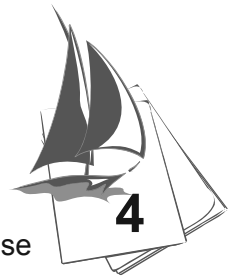

STABILITY

Breaking waves represent a serious danger for stability and for taking in water. Close the companionway doors and hatches in heavy seas.

During sailing keep all the portholes, windows and doors closed.

- The stability is reduced when you add weight in the upper parts.
- Stability may be reduced when towing a boat or when heavy weights are lifted with the davits.

DECK


PREVENTION OF MAN OVERBOARD

Regularly check the guard-rails:

- With metal guard-rails, watch for corrosion particularly at connecting points.
- With synthetic guard-rails, change them as soon as they show signs of wear due to chafing or UV.

Areas forbidden when sailing.

- Aft quarterdeck
- Roof

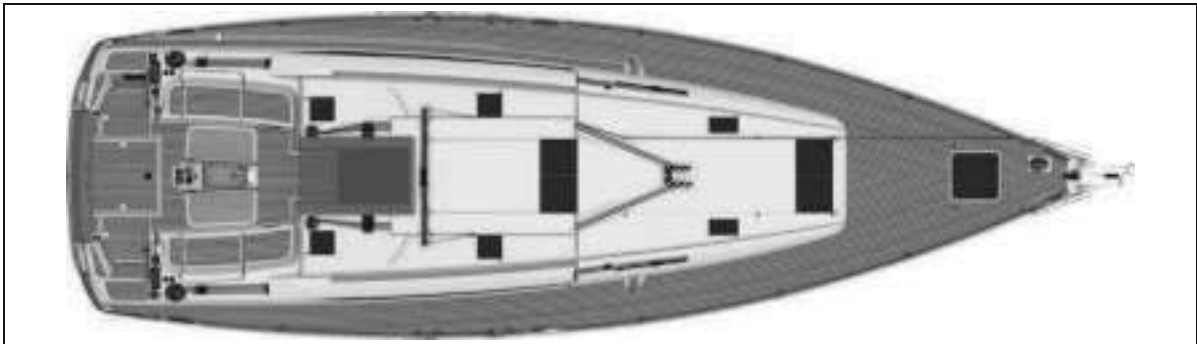

MOORING LINES

A sufficient number of mooring lines suitably sized and suitable for the environment shall be on board for mooring your boat.

- Always manoeuvre your boat using the engine.
- Make allowance for the current and wind when you handle your boat.
- Protect your boat to the highest degree with suitably sized fenders.
- Always keep the mooring ropes unfouled and stored away.
- Handle your boat at a reduced speed.

AFTER MOORING

- Protect the mooring lines against chafing with plastic sleeves.
- Make allowance for the variations in tides if need be.

TOWING

TOWING BOAT

- Tow another boat at a reduced speed and as smoothly as you can.
- Pay particular attention when you throw or catch the towing rope (it may foul on the propeller).

Note: The stability may be reduced when you tow a boat.

TOWED BOAT

Keep steering your boat and see to it that you stay in the wake of the towing boat.

Inappropriate towing can damage your vessel, do not tow at more than 6 knots.



MOORING

As a rule, set the anchor in at least 3 times the depth of water.

ANCHORING WITHOUT WINDLASS

- Have your boat pointed into the wind and without speed.
- Pay out the chain while moving back slowly.
- Once the anchor snags, make it fast by reversing slightly.
- Secure the hawser or the chain to the cleat.

ANCHORING WITH ELECTRIC WINDLASS

- Turn on the boat engine.
- Check that the electrical supply of the windlass is switched on (battery switch, circuit breaker).
- Use the remote control to activate the windlass in lowering mode. Let the chain feed out by keeping the lowering button on the remote control pressed down.
- Let the chain out while moving backwards slowly and as straight as possible.
- Once the anchor snags, make it fast by reversing slightly.
- Secure the hawser or the chain to the cleat.

PRECAUTION

- Before anchoring check the depth of water, the power of the current and the nature of the sea bed.
- Anchoring manoeuvres with the electric windlass can only be carried out with the engine running.

WARNING




Windlass operations are dangerous:


- Always keep the anchor chain or rode free and unfouled.
- Always proceed with care, using gloves and always wearing shoes.
- If your boat is equipped with the twin control optional extra, make sure you use **only one** control at the same time.

ELECTRIC WINDLASS - BREAKER

LOCATION

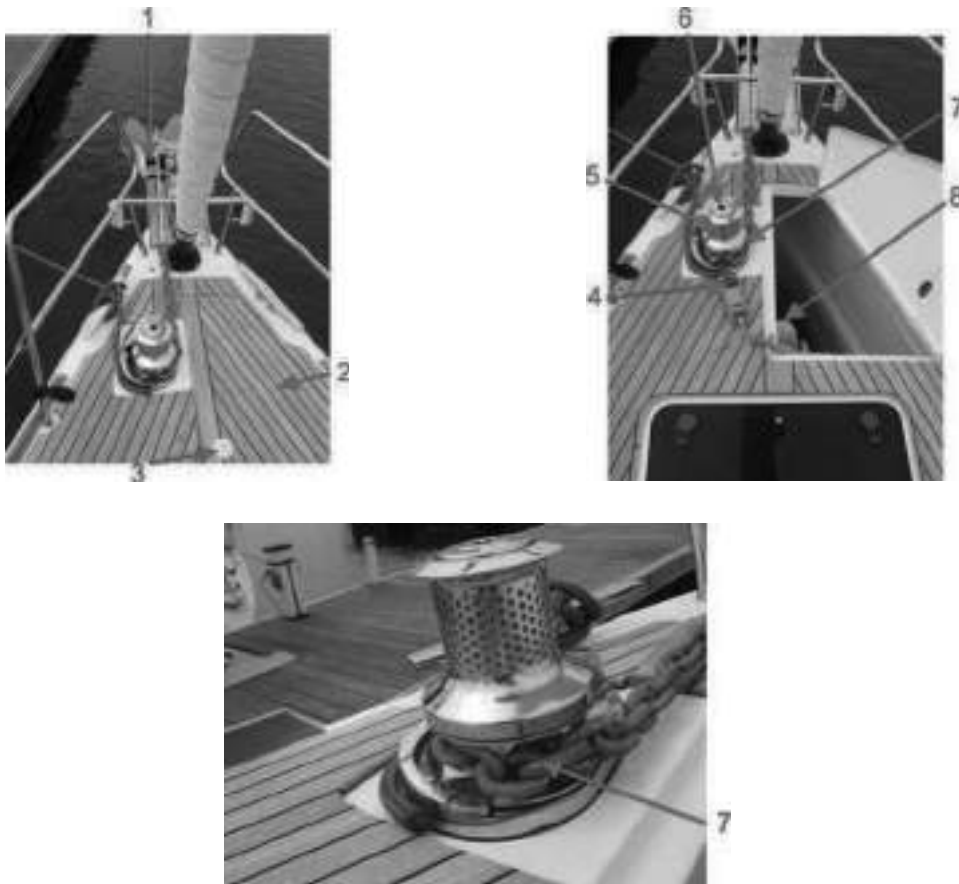

1. Stem roller
2. Mooring locker
3. Opening - Mooring locker
4. Remote control
5. Handle
6. Windlass 12V 1000W
7. Chain rim - 10 mm diameter
8. Clinch

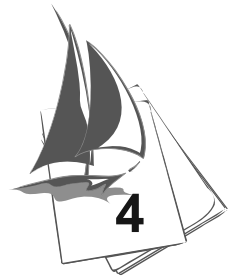

OPERATION

The winch is powered by battery park easements.
Turn on the boat engine.

Relay box

Location: Sail locker



100A breaker



DECK

ANCHORING BY HAND WITH USE OF A MANUAL WINDLASS

- Release the windlass brake using the handle located in the chain locker so as to allow the chain lifter to turn freely and to release the anchor from the stem fitting
- Re-engage the brake and let the anchor hang until the mooring position is reached.
- Have the boat pointed into the wind and without speed.
- Release the brake and pay out the chain slowly.
- Control the speed of anchor lowering using the brake.
- Once the anchor has taken hold re-engage the brake and secure the hawser to the cleat.

HEAVING UP THE ANCHOR

- Lock the cable lifter snubber.
- Ensure the chain is properly set on the cable lifter.
- Slowly go near the anchor, using your engine (Don't use your windlass to winch the boat).
- Heave the anchor completely.
- Visually check the last meters till the anchor gets into contact with the davit.
- If you just change berth, check the position of the anchor on the stem fitting.
- For sailing, store the anchor in the chain locker or fasten the anchor to its roller.
- For electrical windlasses cut off the power supply as soon as the anchor has been lifted.

STERN ANCHORING

Stern anchoring shall be performed with the engine declutched.

- Secure the required length of cable on the mooring cleat.
- Pay out the anchor line slowly.
- Take care not to damage the propeller or the rudder.

ADVICE - RECOMMENDATION

- After each trip rinse the windlass and anchor chain or rode with fresh water.
- Refer to the manufacturer's instructions for windlass maintenance at the beginning or end of the season.
- Check the swinging area once the boat is at anchor.

MAINTENANCE OF THE DECK

Preferably wash your boat on shore.

Use as few cleaning agents as possible.

Don't use solvents or aggressive detergent agents (Refer to chapter 3 "Hull").

Don't discharge cleaning agents into the water.

Regularly brush the deck with a degreasing shampoo and fresh water.

DECK FITTING


- Rinse thoroughly all your equipments with fresh water.
- Periodically lubricate turnbuckles, winches, tracks and travellers with water-repellent grease. Thoroughly and frequently wash off the pulleys and sheaves with clear water.

SOLID WOOD ON EXTERIOR WOODEN PANELLING

Regularly clean the woodworks with fresh water using a sponge (if need be add some gentle soap).

PLEXIGLAS

- Rinse plexiglas with fresh water.
- Use a polish paste for thin scratches.
- Consult your dealer concerning deep scratches.

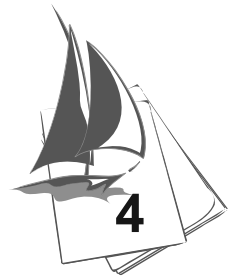

EXTERIOR CUSHIONS

Bring the removable cushions inside (washed with soapy water then dried) when the vessel is unoccupied.

STAINLESS STEEL

Stainless steel is not incorruptible and requires a minimum of upkeep:

- The use of chrome tools is preferable whenever handling stainless steel.

Re-nourish the protective film regularly with passivation paste (consult your dealer).

PRECAUTION

- Consult the harbourmaster's office to find out the conditions of water use and the maintenance area for cleaning your vessel.
- Don't use solvent, alcohol, acetone on plexiglas.

ADVICE - RECOMMENDATION

- Use only products similar to the ones that are included in the maintenance case you have been delivered with your boat.
- Don't use a pressure washer.

Access to companionway



Open



**Cockpit table
Mechanism**



Closed




Platform - aft

Platform - Open



Mechanism



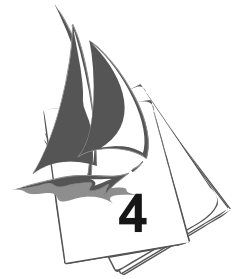

Gangway

Description

- The gangway allows you to embark/disembark easily when the boat is moored stern on to the pontoon.
- The gangway is hydraulic and telescopic (adjustable length); fixed.
- The gangway control is situated in the cockpit.
- The gangway is comprised of the external part and a hydraulic unit situated in the engine compartment.
- A control box situated on the hydraulic unit prevents accidental operation of the control panel. As a precaution it is advised to leave it on the 'AUTO' setting.
- The hydraulic pump controlled by the electric motor is situated under the hydraulic unit reservoir. The motor has a speed regulator: it controls the speed at which the gangway moves.
- The gangway can also serve as a davit for lifting out the tender.

Operation

- The gangway runs on DC power.
- A breaker protects the electrical circuit.
- The gangway motor is designed to run continuously for a maximum of 4 minutes. After this the motor will cut out automatically (risk of overheating).

Maintenance

- Wash the gangway off regularly with clean water.
- Its location at the stern of the boat makes the gangway particularly prone to fouling due to the exhaust gases: clean the fouled areas regularly with a non-abrasive detergent.
- Change the oil in the hydraulic unit at least once a year.
- Regularly check the connections which could loosen with vibration.


DANGER




- Do not use the gangway when at sea.
- Never manoeuvre the gangway with anyone on it, below it or within its arc of movement.
- Do not use the gangway as a diving board.

ADVICE - RECOMMENDATION

- Refer to manufacturer's instructions for use and maintenance.
- Maximum load permitted on gangway: 110 kg.
- Telescopic gangway: Ensure that the stanchions are correctly seated in their sockets before recovering the gangway.
- Manual operation prevents the position sensors from working: the electronics are no longer able to correct the alignment of the gangway if it is not retracting correctly into its housing. Use this procedure with caution.

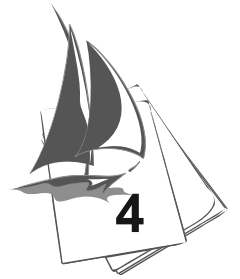

Hydraulic unit

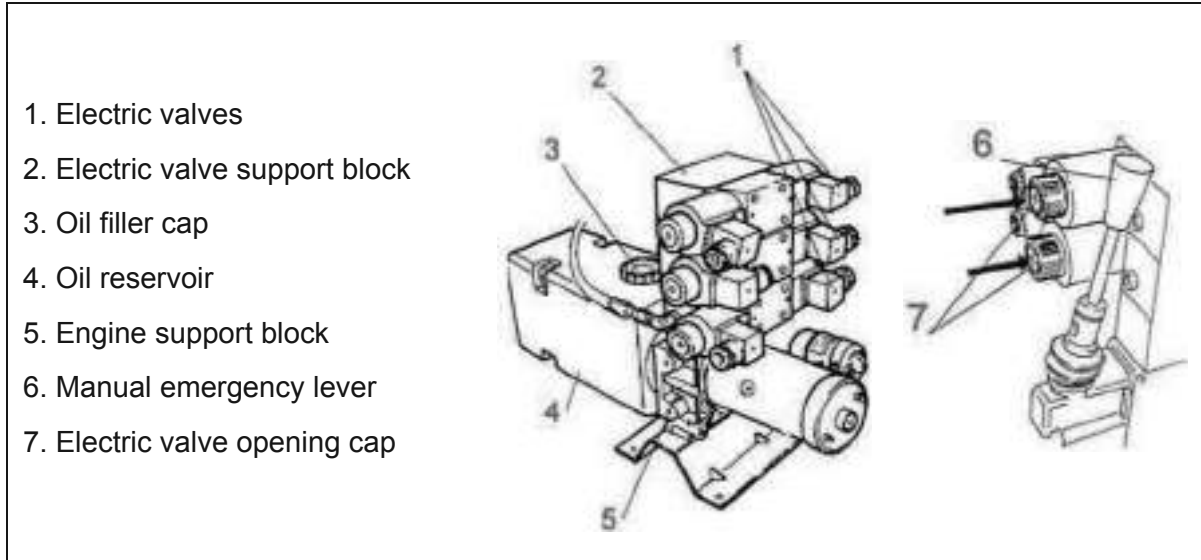

DECK

Emergency procedure


In the event of power failure the system can be operated manually. The hydraulic unit is equipped with a manual emergency pump. The electric valve can also be opened or closed manually.

In this case, manoeuvring of the gangway will be slower but still possible:

1. Activate the lever of the manual pump with one hand. To control one of the available hydraulic manoeuvres, open the electric valve of the desired function.
2. With the other hand, press on the electric valve opening cap using a pointed tool (e.g. screwdriver). When the lever is operated, oil will be directed towards the piston. The lever must be activated several times to expel air and pressurise the system.

Control


1. Control for raising gangway
2. Control for lowering gangway
3. Control for retracting gangway
4. Control for extending telescopic gangway

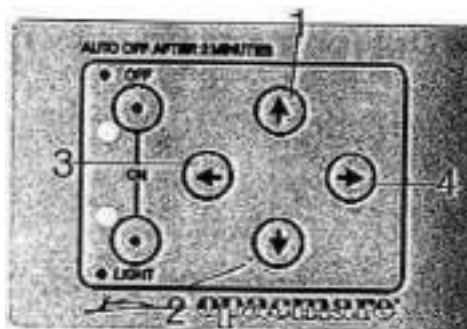


The ON/OFF button turns the control on and off.

The green light is illuminated when the gangway is being operated.

The red light is illuminated when the system is turned off.

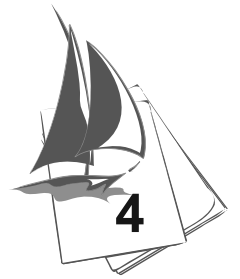

General view

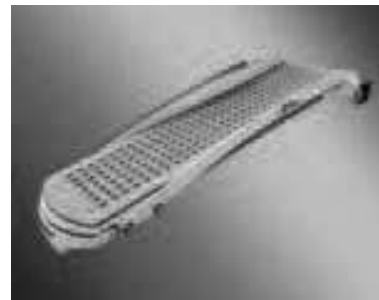

Control



Hydraulic unit
Access: Cockpit locker - aft





STEERING SYSTEM

STEERING GEAR

LOCATION - SCHEMATIC DIAGRAM

STEERING GEAR
Access: Aft cabins


Sheaves - Ropes



Steering sector



STEERING GEAR

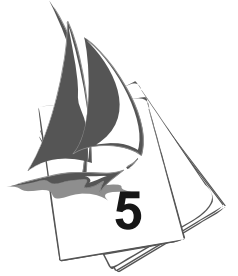

MAINTENANCE

- Regularly check:
 - The tension in the steering cables.
 - The tightness of the steering system components.
- Don't tighten the steering cables excessively.
- Lubricate all the elements.

Maintain the nylon, ertalon or teflon bushes with only a suitable lubricant.

Note: Do not hesitate to consult your dealer about system maintenance.



WARNING

- Refer to chapter 2 "Safety" for use of the emergency tiller.

ADVICE - RECOMMENDATION

- The emergency tiller is designed only to be able to continue underway at a reduced speed in case of steering gear failure.

CABLE ADJUSTMENT - STEERING SYSTEM

The steering gear is assembled and pre-adjusted at the factory, however, only actual use at sea will enable the steering cable to find its definitive position around the wheel drum.


For this reason, it is necessary to re-adjust the gear after the first few sea outings.




WARNING

- The steering system is a feature of sailing safety and for this reason must be verified at least once a year.
- **The steering cable must be changed every 10 years.**

LOCATION - SCHEMATIC DIAGRAM

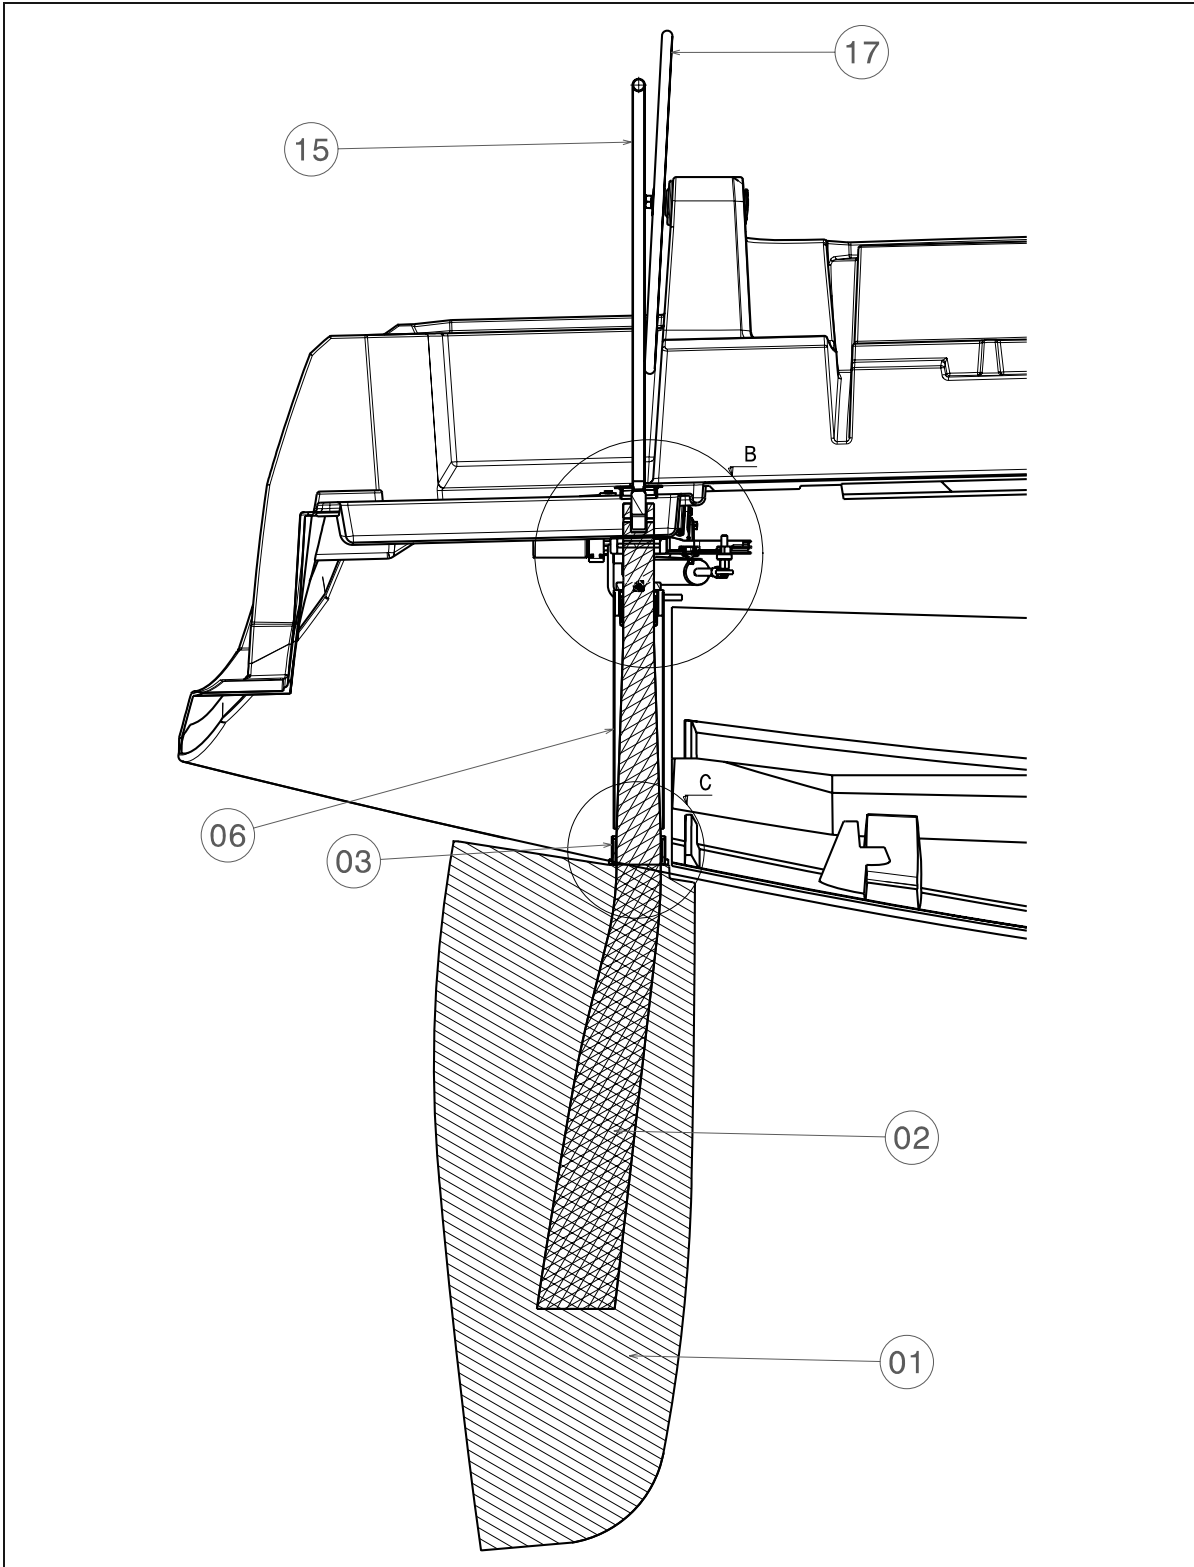


LOCATION

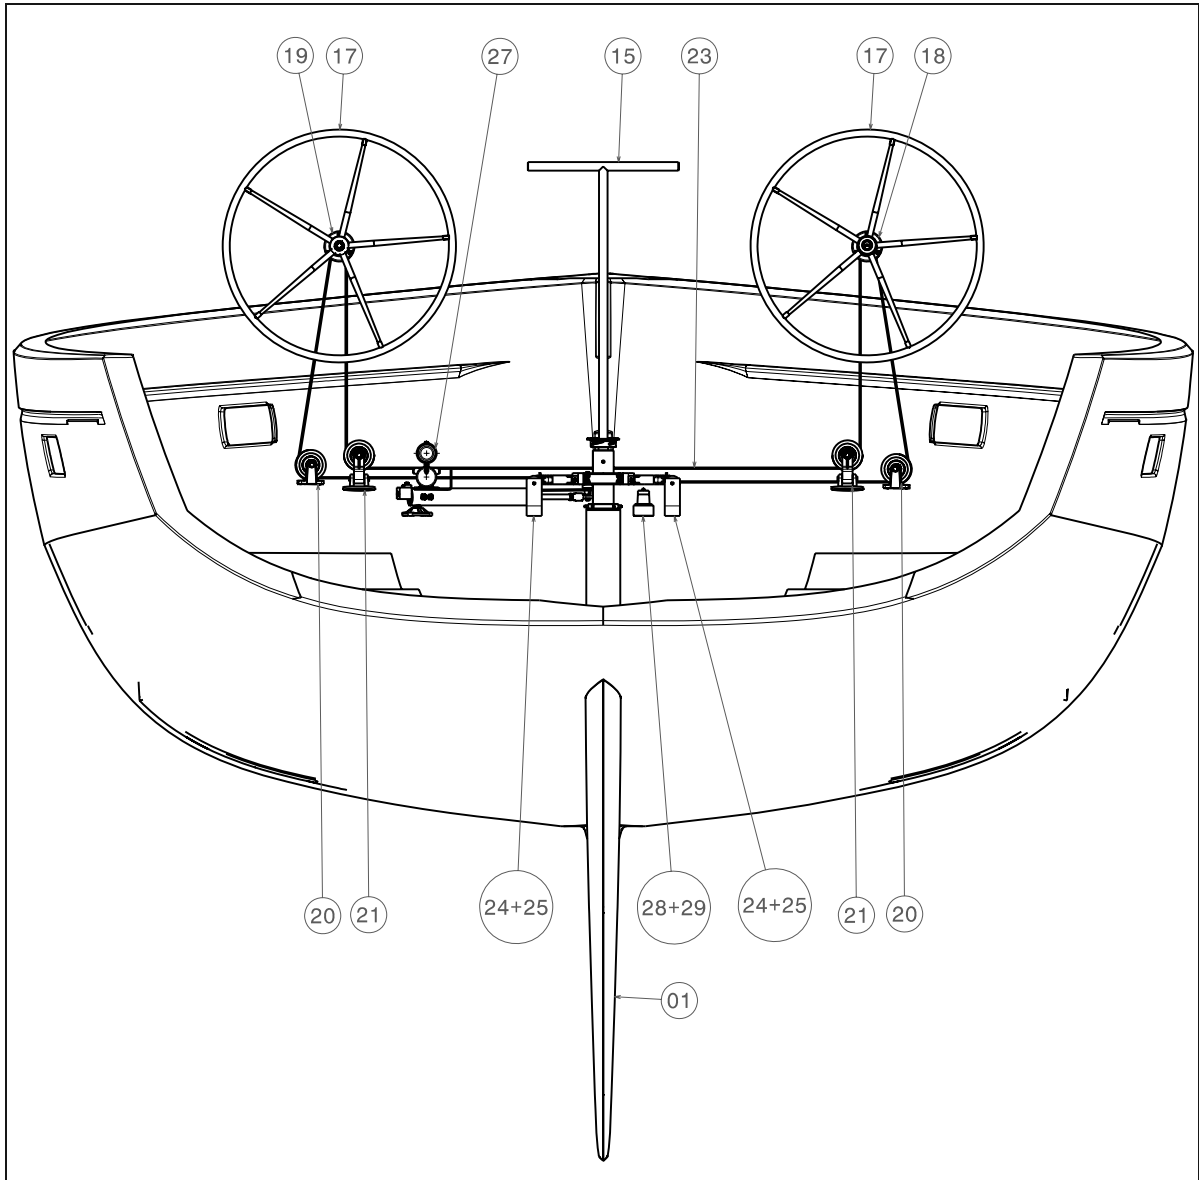

STEERING SYSTEM


LOCATION

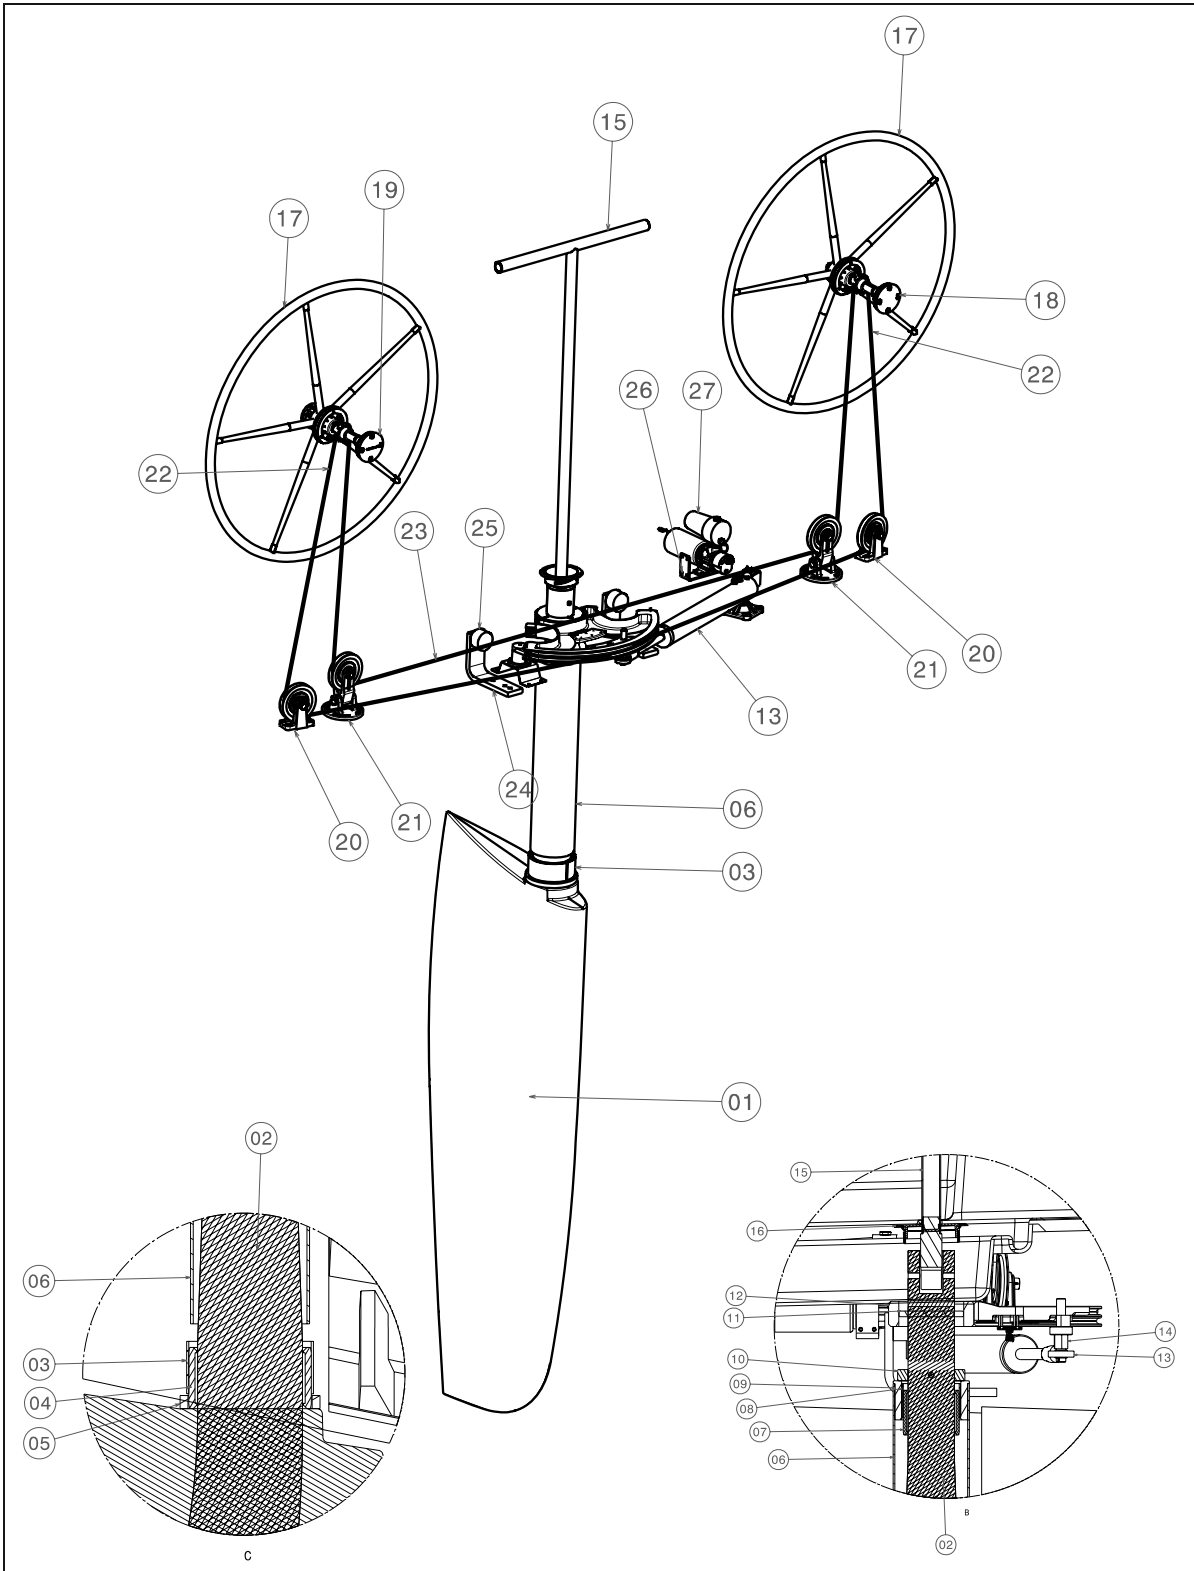



STEERING SYSTEM

REF	Designation
1	Rudder
2	Rudder stock
3	Bronze bush
4	Flange
5	Balance bush
6	Rudder port tube
7	Flange
8	Bronze bush
9	Bearing rudder trunk
10	Flange
11	Pin - Sector
12	Steering sector
13	Autopilot ram
14	Axis cylinder
15	Emergency tiller
16	Emergency tiller hole
17	Steering wheel
18	Hub - Starboard
19	Hub - Port side
20	Sheave - lit
21	Movable Sheaves
22	Chain
23	Line
24	Mount - Sector stopper
25	Sector stopper
26	Mount - Hydraulic pump
27	Hydraulic pump
28	Mount - Indicator - Pilot
29	Indicator - Pilot

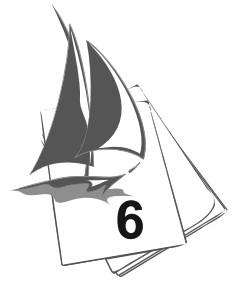

RIGGING AND SAILS

STANDING RIGGING

RUNNING RIGGING


WINCHES


SETTING THE SAILS

SAILS

RUNNING RIGGING SYSTEM

STANDING RIGGING

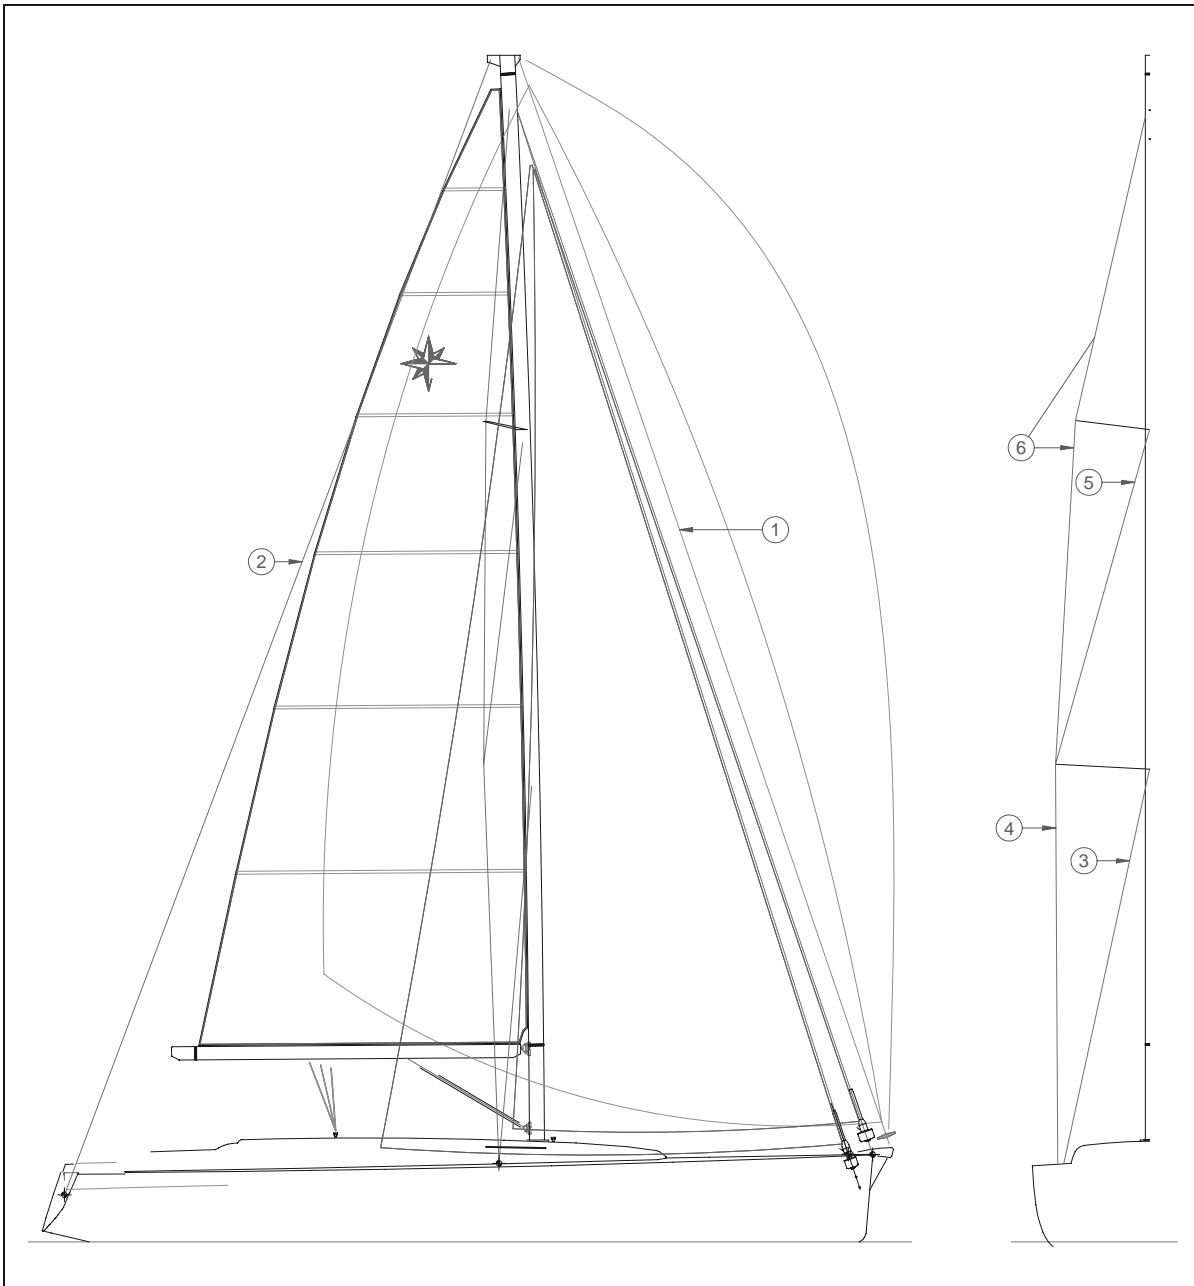

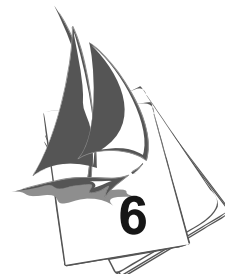

REF	Designation
1	Forestay
2	Backstay
3	D1
4	V1
5	D2
6	V2D3

STANDING RIGGING

Your JEANNEAU dealer was responsible for stepping the mast of your boat.

After masting your vessel and after having sailed for the first time it is necessary to seek the help of a qualified specialist in order to carry out a rigging check.

MAINTENANCE

Before each trip, carefully inspect the mast from top to bottom.

Periodically check the rigging tightening and the lock nut or pin locking (you should check it for the first time after a few days sailing in all types of weather).



DANGER

- To hoist a crew member up to the top of the mast, make a bowline with the halyard directly on the bosun's chair ring (never use the halyard snap shackle or shackle).
- Do not hoist a crew member when sailing in heavy weather.

ADVICE - RECOMMENDATION

Your dealer JEANNEAU can carry out all maintenance operations or recommend a skilled specialist to do so.

RUNNING RIGGING

MAINTENANCE

Change any distorted or dented sheave. Inspect the pins of the sheaves at the top of the mast once a year.

Lightly grease the sheave pins.

Regularly check the condition of the jam cleat jaws.

Inspect the halyards for wear and condition.

Regularly clean the pulleys off (old grease, traces of rust) with clear water.

Slightly lubricate the block pins.

Avoid aggressive gybing in order to reduce premature wear on the sheets, attachment points and the gooseneck.

WINCHES

OPERATION

Avoid rope jamming during winch handling. Do not leave loose ropes on the winches but make them fast on cleats (except on the "Self Tailing" winches).

SETTING THE SAILS

CLASSICAL MAINSAIL

With the mainsail being on the deck:

- Screw the pins of the mast sliders for battens into their boxes.
- Slide in the battens through the leech.
- Screw the box cap until you get the required tension (the tightening screw shall not project beyond the sail).
- Do not forget the small locking screw.
- Put the mainsail into the lazy-bag.
- Set the boom ring in velcro about level with the clew.
- Fit the mainsail onto its slides, begin with the headboard and finish with the tack.



WARNING

- Refer to the manufacturer's instructions to remove the winches and put them back.
Improper refitting may result in accidents (e.g. kick of the crank handle).



FURLING MAINSAIL


- Remove the hatch giving access to the furling mechanism.
- Spread out the sail on the deck.
- Fasten the head (strap) to the shackle of the upper swivel. Pay attention to the winding direction.
- Insert the foot adjustment line into the clew block.
- Slowly hoist the sail. Guide the bolt rope (sometimes the groove leading edges may be insufficiently smoothed off).
- When the sail is up, tack it to the lower shackle.
- Gently sweat up the halyard.
- Refit the hatch.
- Furl the sail facing the wind and keeping a very slight tension on the foot. The mainsail downhaul and sheet shall be eased off.

ADVICE - RECOMMENDATION

- Carry out the complete maintenance of the winches regularly (before and during the sailing season).
- Rinse the winches off regularly during the season.

RUNNING RIGGING SYSTEM

RIGGING DIAGRAM

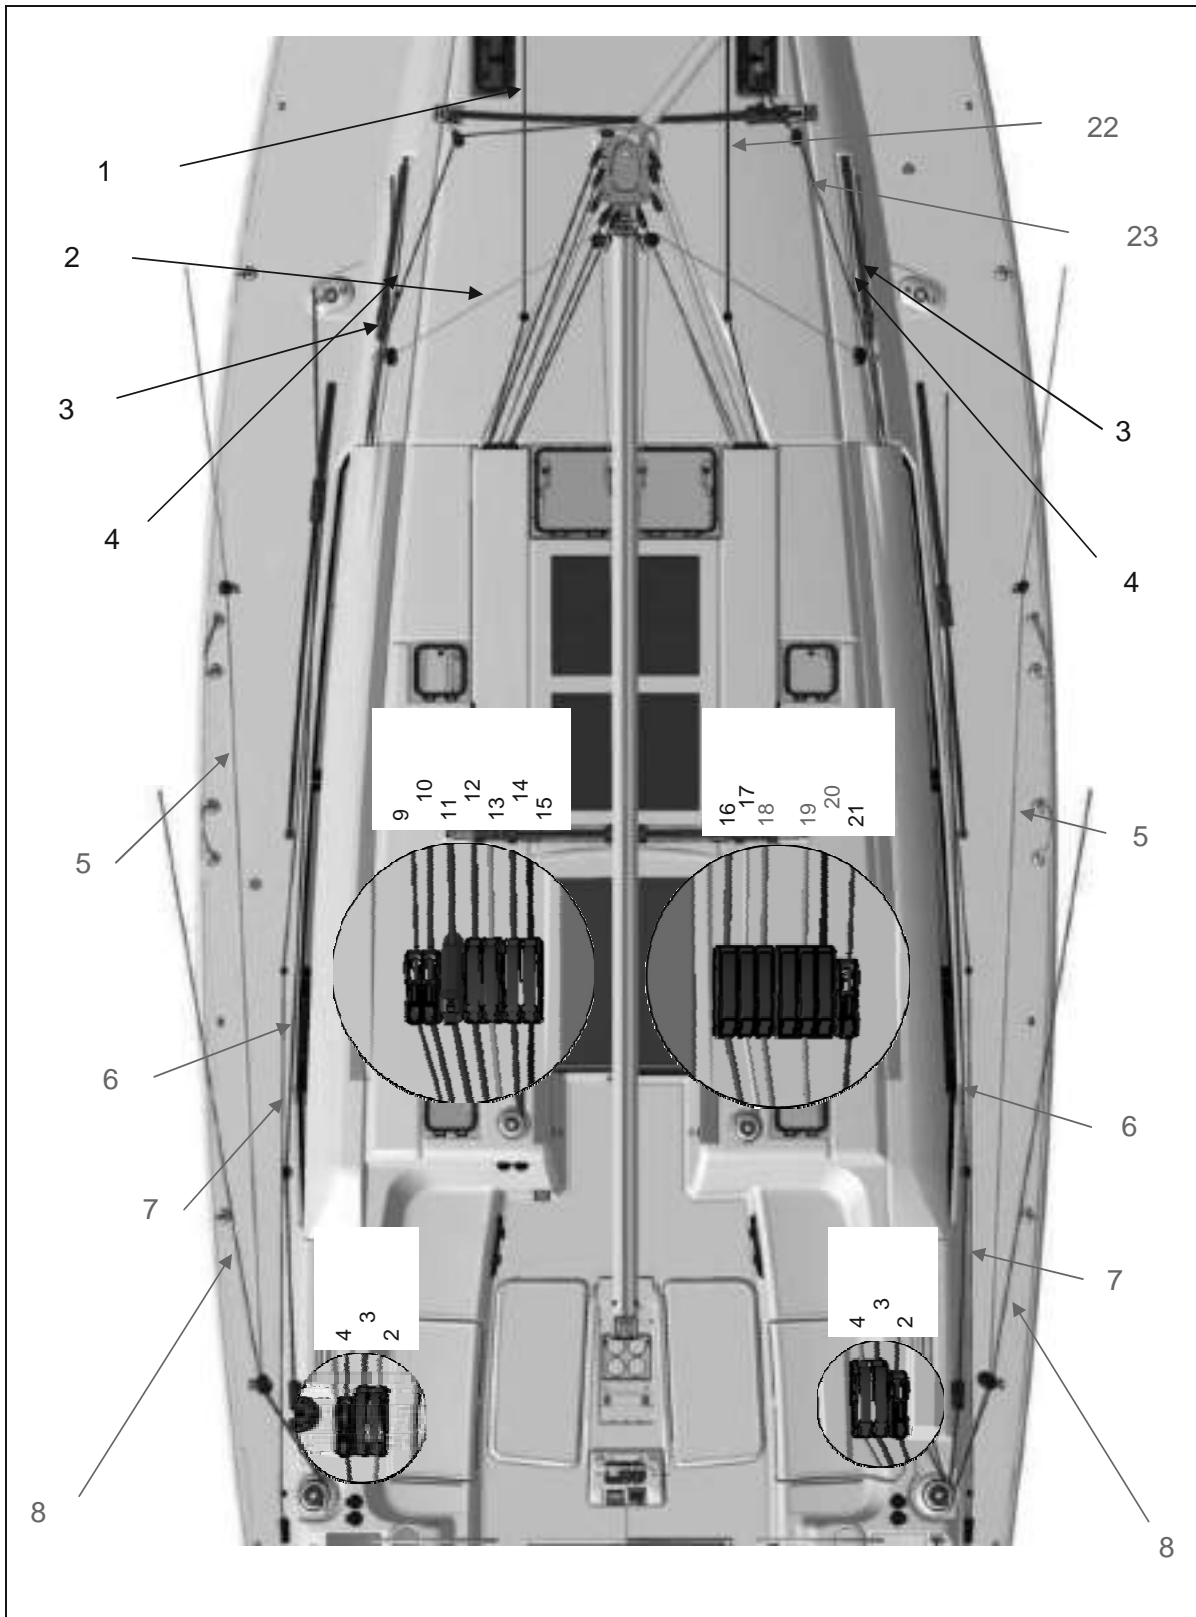




REF	Designation
1	Genoa furler
2	Mainsail sheet
3	Genoa sheet
4	Two-way switch - Genoa
5	Spinnaker guy
6	Genoa sheet - Performance
7	Cable adjustment - Genoa - Performance
8	Spinnaker sheet
9	Traveller adjustment - Mainsail (classic)
10	Genoa furler line
11	Genoa halyard
12	Main halyard
13	Reef 2 (Classical mast)
14	Reef 3 (Classical mast)
15	Kicking strap (Classical mast) / Mainsail safety block stopper (Mast with in-mast furling)
16	Mainsail foot
17	Reef 1 (Classical mast) / Kicking strap (Mast with in-mast furling)
18	Spinnaker halyard
19	Boom lift / Fore stay sail halyard
20	Spinnaker boom downhaul / Asymmetric spinnaker tack
21	Traveller adjustment - Mainsail (classic)
22	Kicker tackle - Symmetric spi / Asymmetric spinnaker tack
23	SHEET - Tacking jib

RUNNING RIGGING SYSTEM


MAST FOOT - CLASSICAL MAST

Port side

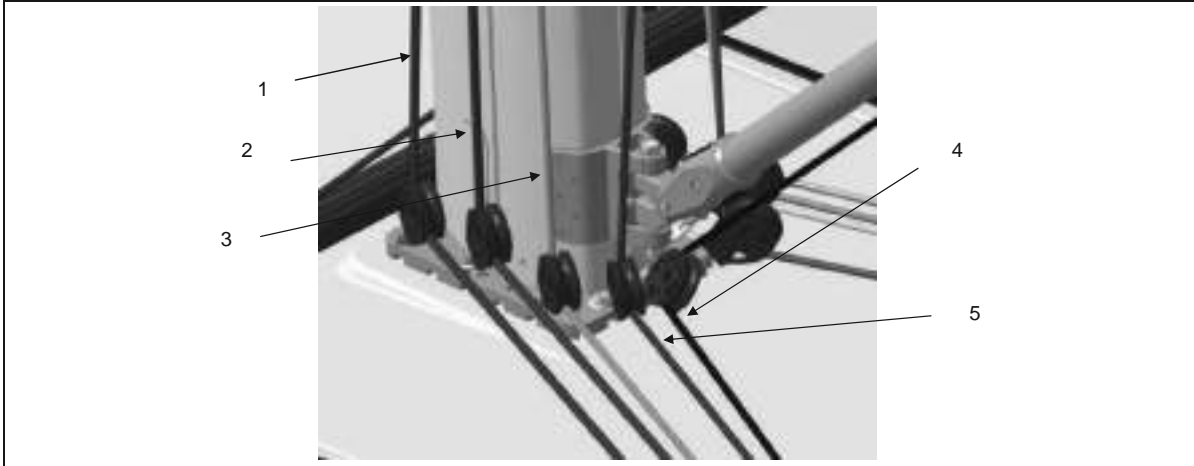

REF	Designation
1	Genoa halyard
2	Main halyard
3	Reef 2
4	Kicking strap
5	Reef 3

Starboard

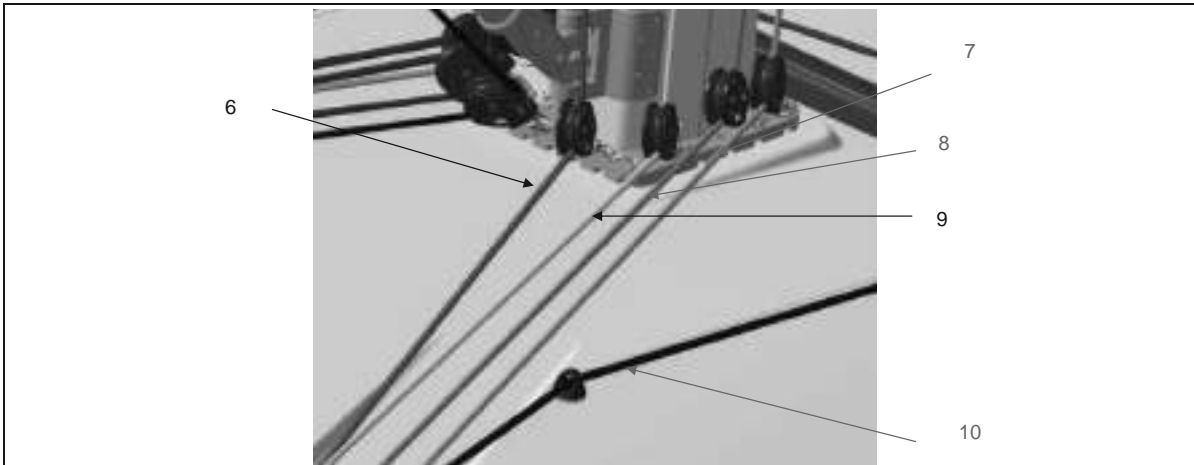


REF	Designation
6	Mainsail foot
7	Boom lift / Fore stay sail halyard
8	Spinnaker halyard
9	Reef 1
10	Spinnaker boom downhaul / Asymmetric spinnaker tack




MAST FOOT - MAST WITH IN-MAST FURLING

Port side

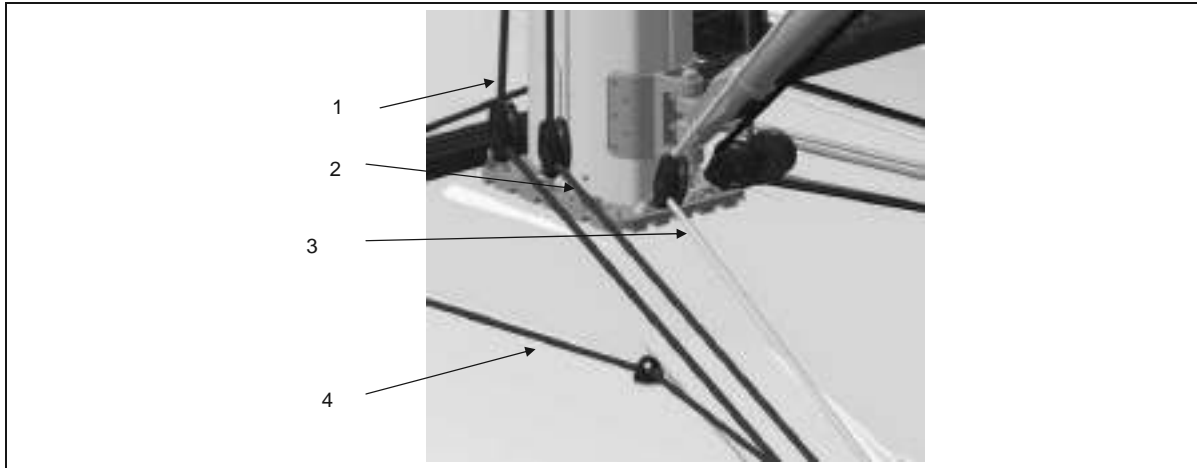

REF	Designation
1	Genoa halyard
2	Main halyard
3	Main furling line
4	Genoa furler


Starboard

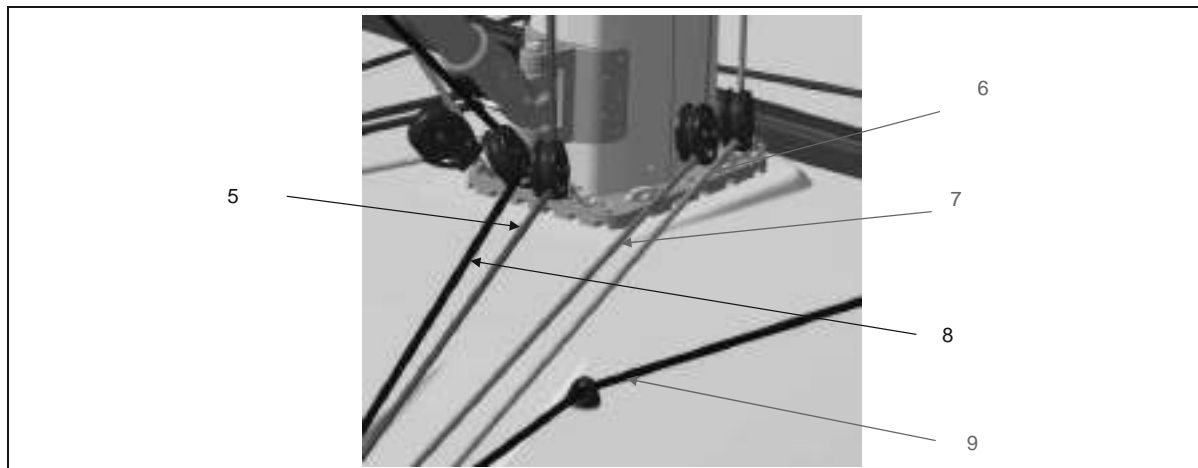

REF	Designation
5	Mainsail foot
6	Boom lift / Fore stay sail halyard
7	Spinnaker halyard
8	Kicking strap
9	Spinnaker boom downhaul / Asymmetric spinnaker tack

RUNNING RIGGING SYSTEM

SYSTEM - MAINSAIL (CLASSIC)

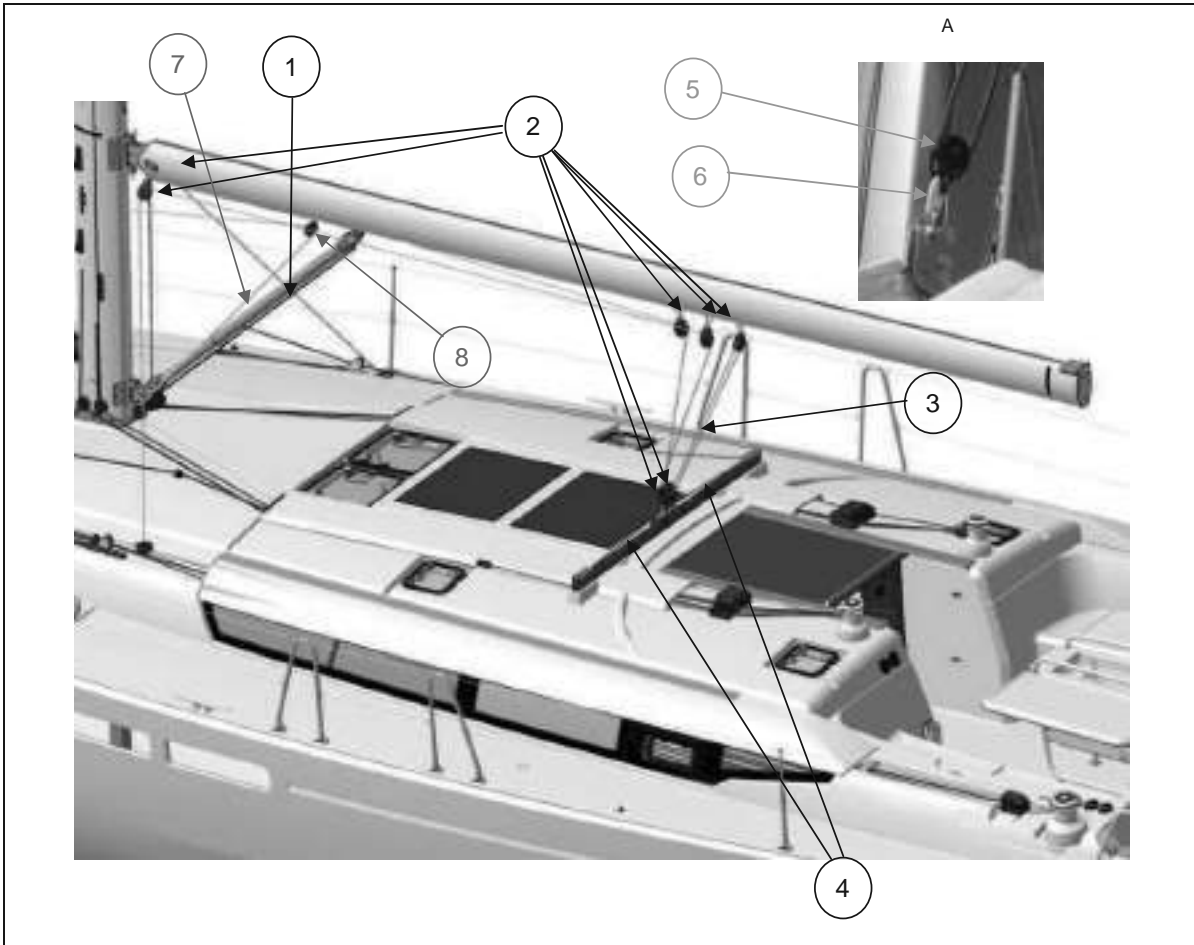

A	Reeving - Classical mainsail
Red	Version: Mast with in-mast furling
Green	Version: Classical mast


REF	Designation
1	Kicking strap (Diameter = 12 mm / Length = 14 m)
2	Swivel single pulley (Diameter = 75 mm)
3	Mainsail sheet (Diameter = 12 mm / Length = 40 m)
4	Two-way switch - Mainsail sheet (Diameter = 8 mm / Length = 8 m)
5	Single frame pulley (Diameter = 75 mm)
6	Loop - Reeving - Mainsail (classic)
7	Mainsail safety block stopper (Diameter = 10 mm / Length = 19 m)
8	Single frame pulley (Diameter = 57 mm)

RUNNING RIGGING SYSTEM
SYSTEM - GENOA - CLASSIC





REF	Designation
1	Genoa sheet - Classic (Diameter = 12 mm / Length = 18 m)
2	Two-way switch - Genoa sheet (Diameter = 8 mm / Length = 14 m)
3	Pulley - transmission - Furling line
4	Genoa furler line (Diameter = 10 mm / Length = 24 m)

RUNNING RIGGING SYSTEM
SYSTEM - GENOA - PERFORMANCE

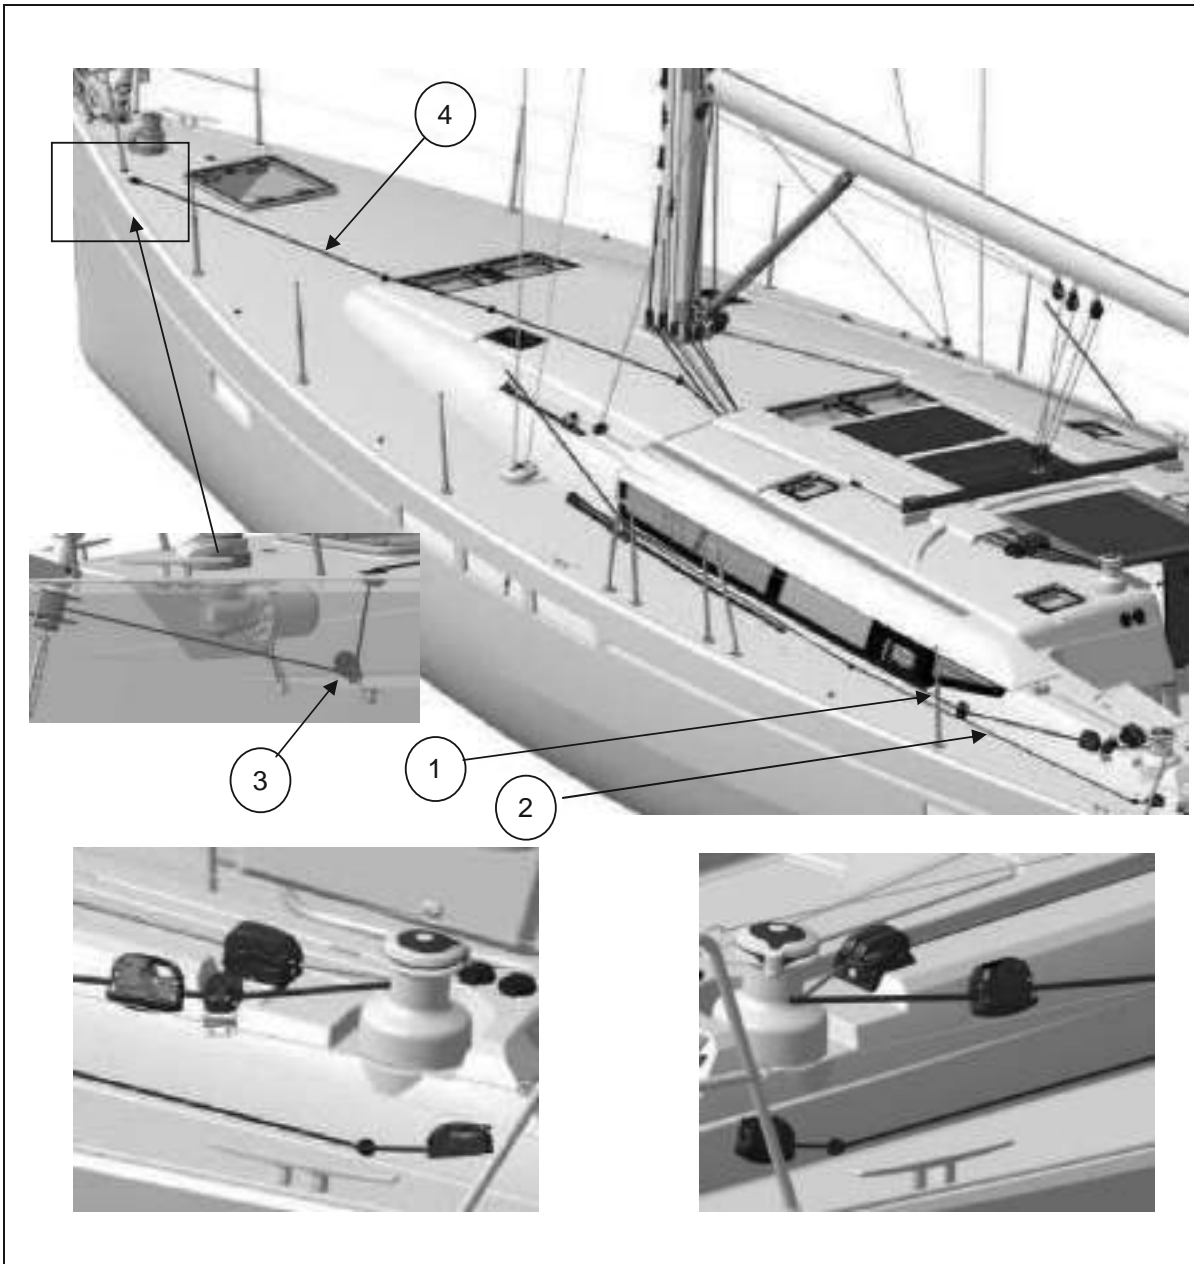

REF	Designation
1	Genoa sheet (Diameter = 12 mm / Length = 18 m)
2	Two-way switch - Genoa sheet (Diameter = 8 mm / Length = 14 m)
3	Swivel single pulley (Diameter = 57 mm)
4	Genoa furler line (Diameter = 10 mm / Length = 24 m)

RUNNING RIGGING SYSTEM
SYSTEM - TACKING JIB

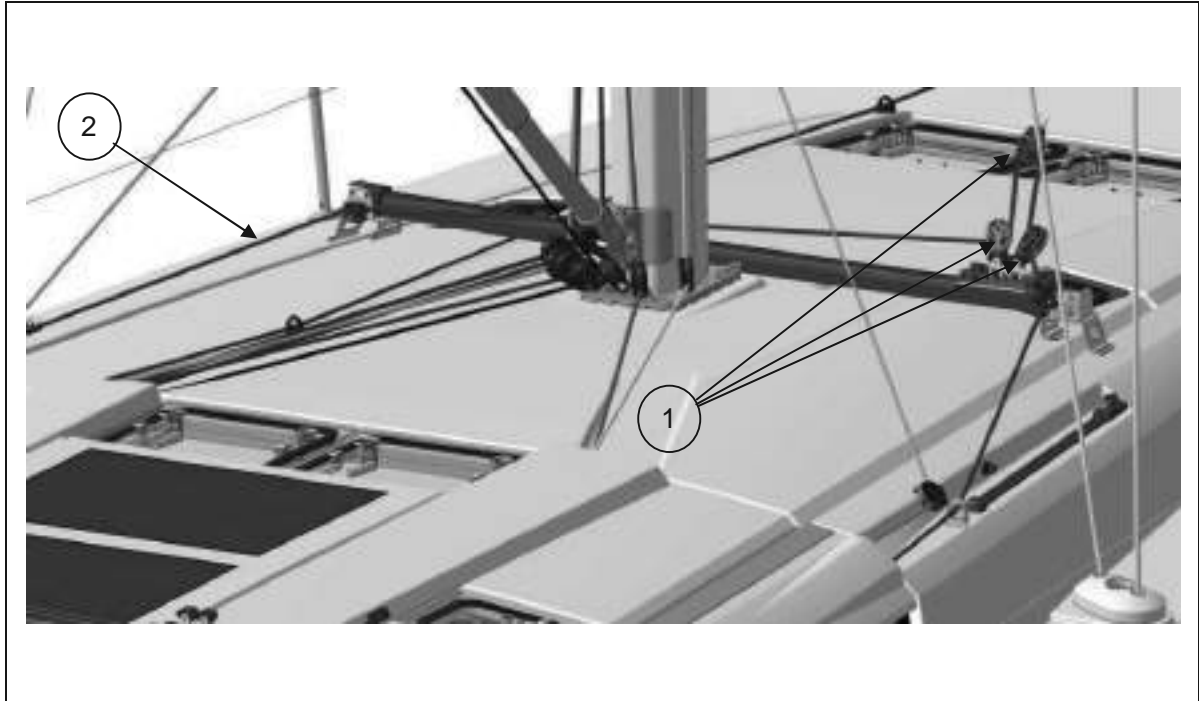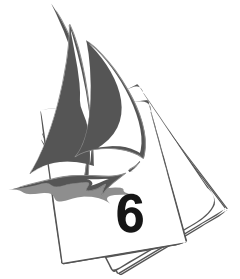


RIGGING AND SAILS

REF	Designation
1	Swivel single pulley (Diameter = 57 mm)
2	Genoa sheet (Diameter = 10 mm / Length = 28 m)

RUNNING RIGGING SYSTEM


SYSTEM - SYMMETRIC SPI

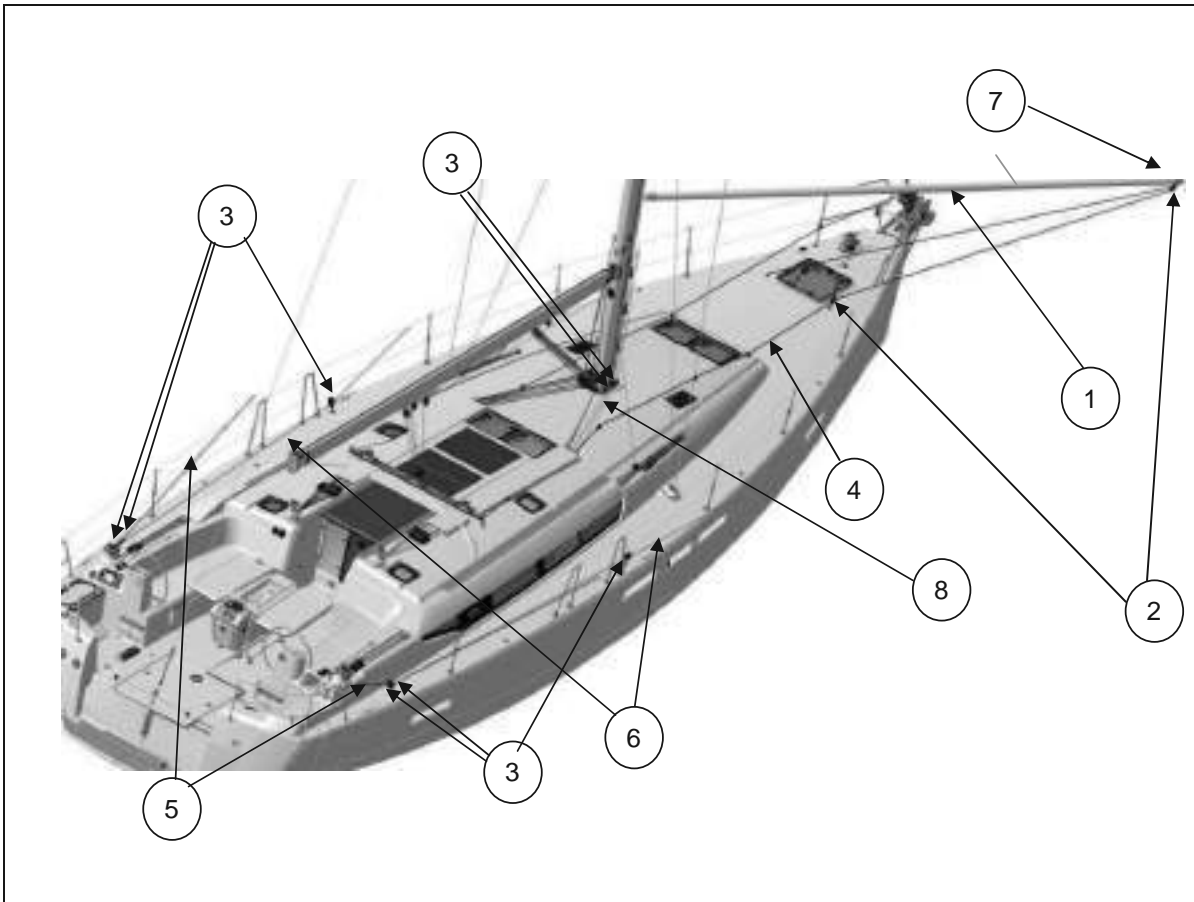

REF	Designation
1	Boom
2	Swivel single pulley (Diameter = 57 mm)
3	Swivel single pulley (Diameter = 75 mm)
4	Spinnaker boom downhaul (Diameter = 12 mm / Length = 20 m)
5	Spinnaker sheet (Diameter = 12 mm / Length = 32 m)
6	Spinnaker guy (Diameter = 12 mm / Length = 32 m)
7	Boom lift (Diameter = 10 mm / Length = 44 m)
8	Spinnaker halyard (Diameter = 12 mm / Length = 48 m)

RUNNING RIGGING SYSTEM

SYSTEM - CODE 0

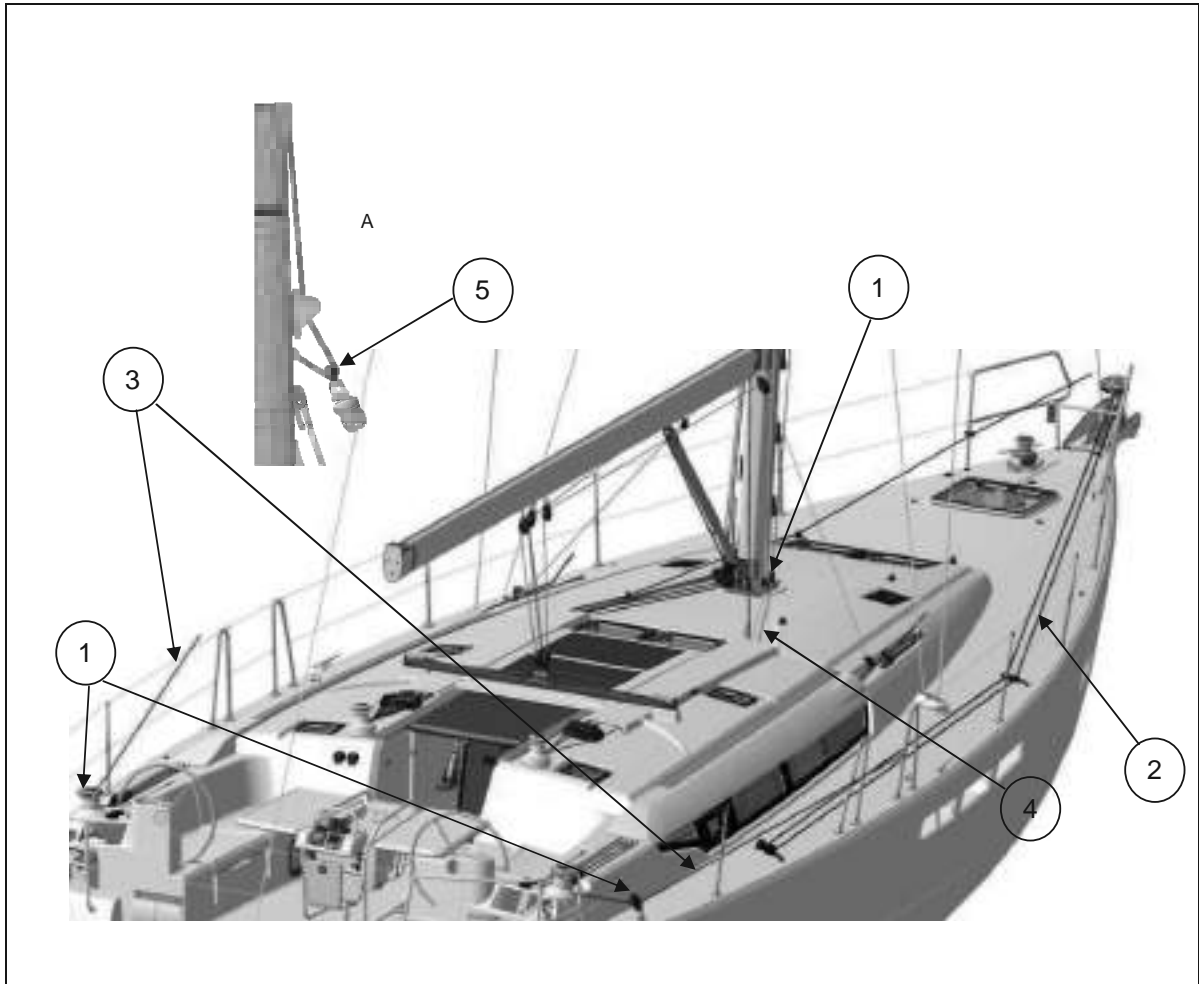


RIGGING AND SAILS

REF	Designation
1	Swivel single pulley (Diameter = 75 mm)
2	Bosse furler (delivered in drum kit)
3	Spinnaker sheet (Diameter = 12 mm / Length = 32 m)
4	Spinnaker halyard (Diameter = 10 mm / Length = 68 m)
5	Tackle block


A	Reeving - Masthead
---	--------------------

RUNNING RIGGING SYSTEM

SYSTEM - ASYMMETRIC SPINNAKER

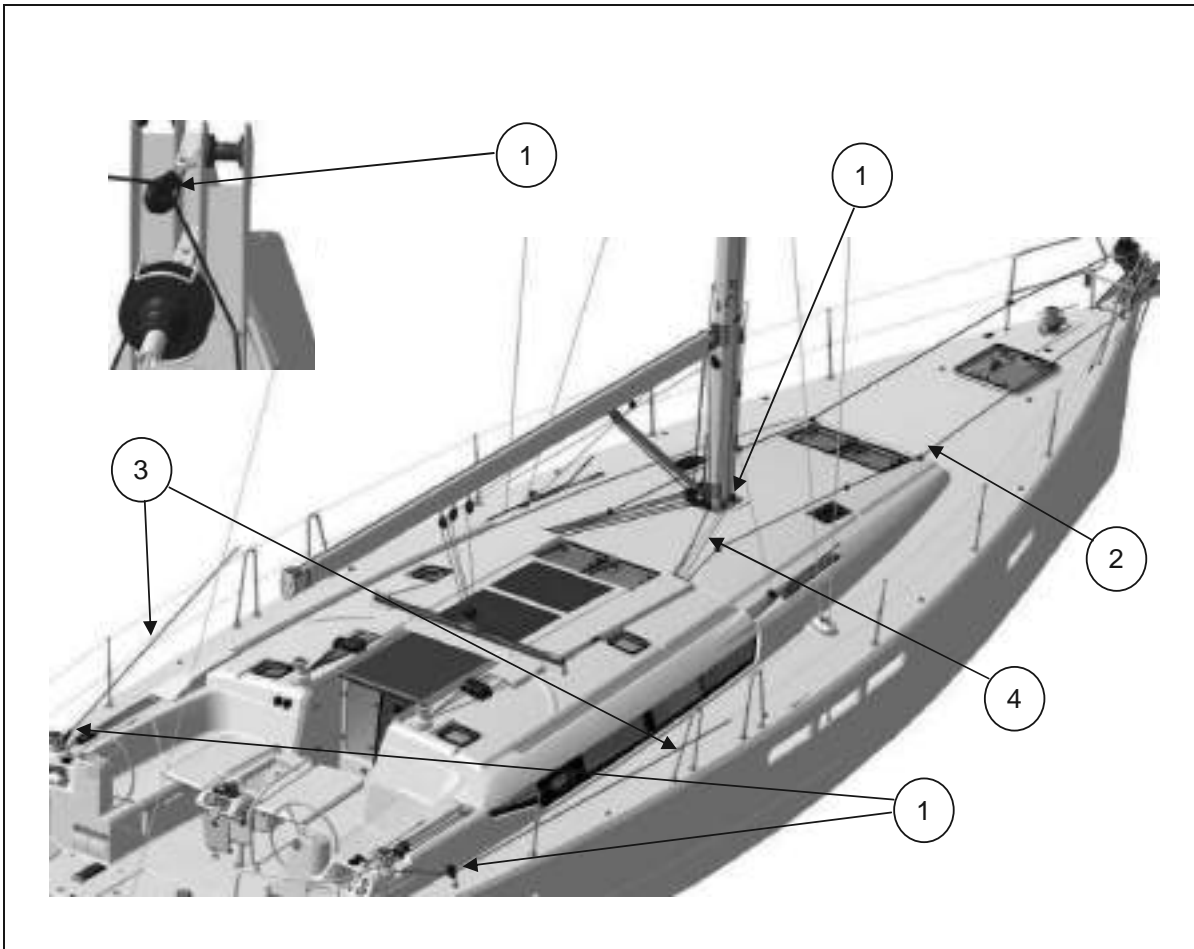

REF	Designation
1	Swivel single pulley (Diameter = 75 mm)
2	Asymmetric spinnaker tack (Diameter = 12 mm / Length = 18 m)
3	Spinnaker sheet (Diameter = 12 mm / Length = 32 m)
4	Spinnaker halyard (Diameter = 12 mm / Length = 48 m)

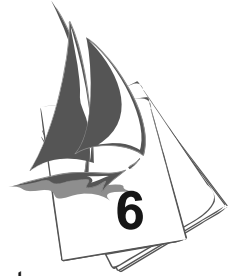

FURLING GENOA

- Secure the head and halyard to the swivel. Secure the tack to the drum and sheets.
- Insert the bolt rope into the hole and hoist it and take care that you do not tear it.
- Have the halyard taut enough but hoist less taut than a sail on a normal stay. Hoist it until the horizontal creases disappear (Adjust the tension of the luff after a few sea trips).
- Pull on the line from the cockpit to furl the genoa.
- Before getting under way take advantage of a windless period of time and hoist the genoa.
- Hand pre-roll the drum to set the furling line on it.

Pay attention to the drum winding direction: The sacrificial strip of the genoa shall be wrapped outside.

Never force it in case it seizes when you furl or unfurl the head sails. Make sure that no ropes are caught in the furler.

MAINTENANCE

- Regularly rinse the drum and swivel.
- Lubricate the bearings if recommended by the manufacturer.
- Remove the sails if your boat is not to be used for a long time.


LAZY-BAG: FITTING

- Spread out the lazy-bag on the deck.
- Slide the battens in and close the batten pockets.
- Hank on the lazy-bag until you have the front part about level with the gooseneck.
- Fasten the lazy-bag to the tack with the strap provided.
- Stretch the lazy-bag from the back before you fasten the lazy-jacks.
- Put the mainsail into the lazy-bag.

ADVICE - RECOMMENDATION

- When you are not sailing, slacken the genoa halyard.
- Install the lazy-bag before the mainsail.
- When the sail is unfurled, adjust the halyard tightness.
- Too much tightness may cause furling problems.
- After taking in a reef for the first time mark the halyard position at the clutch (marker pen or light stitched label) in order to be able to let out the sheet with precision in subsequent manoeuvres.

AUTOMATIC IN-MAST REEFING BLOCK DIAGRAM

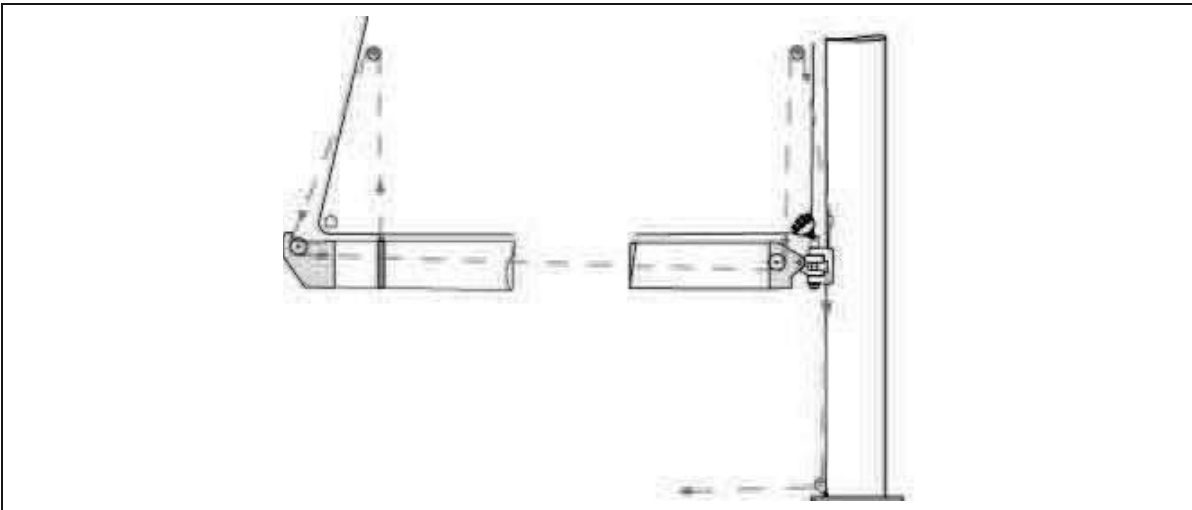

ADVICE - RECOMMENDATION

- At the end of the sailing season, and if possible before winter, leave your sails to a specialist to have efficient maintenance and repairs.



SAILS

The working life of a sail mainly depends on its being regularly maintained.

When sailing, trim the sails properly in accordance with the stresses in order to reduce the harmful strains on the fabric.

Avoid wear and tear: Use protective items against chafing on the the accessories with rough surfaces (protective items for spreaders, stanchions etc.).

Have a sail maker's kit and a user's manual so that you may carry out the emergency repairs waiting for the sailmaker's assistance.

AUTOMATIC REEFING SYSTEM

When you reef down automatically, the mainsail halyard shall not be too loose, otherwise the reefing blocks take up improper positions.

The diagram shows the path of the automatic reef line and does not indicate the standard take system.

SHORTENING THE STANDARD MAINSAIL

To shorten sail:

- Head into the wind.
- Slacken off the kick strap.
- Slightly slacken the mainsail sheet.
- Slightly slacken the mainsail halyard.
- Take in the reef line.
- Take up the slack in the mainsail halyard.
- Reset the mainsail sheet.
- Take up the kick strap slack if necessary.

SHORTENING THE FURLING MAINSAIL

To reduce the surface area of the mainsail:

- Gradually take in the mainsail furling line while letting out the foot tack line (keep the boom perpendicular to the mast).

CLEANING AND MAINTENANCE

Rinse the sails with fresh water from time to time and dry quickly in order to avoid mildew.

Avoid drying the sails to windward when on the mast (when the sails lift, the seams are worn, the sails may be torn by the rigging).

HAULING DOWN THE STANDARD MAINSAIL

To haul down the mainsail:

- Haul up.
- Slacken off the kick strap.
- Take up the slack in the Lazy bag ropes.
- Slacken off the mainsail halyard while taking up the reef lines to control the mainsail descent.
- Fold the mainsail into its lazy-bag.
- Take up the mainsail sheet to immobilise the boom.
- Immobilise the mainsail halyard.

SAIL STORAGE/FOLDING

Avoid storing a wet sail to prevent the appearance of mould and mildew.

Flake the sail parallel to the foot, then roll it up to the bag dimensions.

PROTECTION

UV rays are harmful to polyester and nylon. If the sails remain on the mast, even for 24 h, protect them with a cover or a protection fabric placed on the leech and foot of the furled sails.

Our distributor network offers you accessories that have been selected by the yard and are consistent with your needs.



INTERIOR

INTRODUCTION


INTERIOR MAINTENANCE

MAINTENANCE OF FABRICS


INTRODUCTION

INTERIOR


Version 3 cabins + 2 Toilets

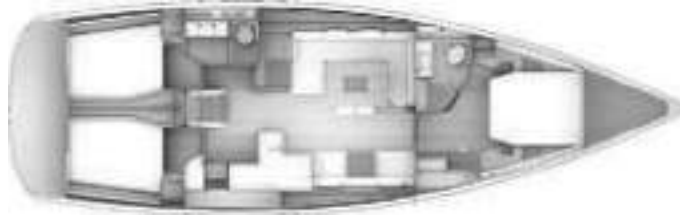

Version 4 cabins + 2 Toilets

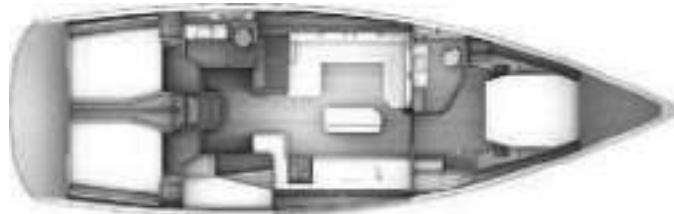

Version 4 cabins + 4 Toilets

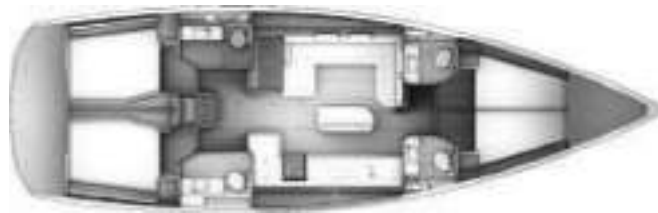

Version 5 cabins + 3 Toilets



Version - Skipper's cabin





INTERIOR MAINTENANCE

INTERIOR

- Take advantage of the fine weather to take the settee and berth cushions out.
- Put the cushions vertically if you leave the boat for long.
- Use blinds to protect the inside of the boat against UV rays.
- Carefully remove all crumbs.
- Make sure the bilges are clean and dry.
- Installed in the square of a dehumidifier air leaving the cabin doors and open storage (cupboards, coolers).
- Defrost the fridge regularly / Cool boxes.
- During long absence leave the fridge and icebox doors open to avoid mould developing.

INSIDE VARNISH

- Rinse the inside varnish with fresh water mixed with spot remover and shampoo.
- Polish the interior varnishing with a chamois leather.

MAINTENANCE OF FABRICS

STAIN REMOVAL

- Dab with a clean rag.
- Remove the stain with a solvent poured onto a clean rag. Never pour the solvent directly over the stain.
- Rub with a clean and dry rag.
- Brush the fabric against the grain.
- Use the vacuum cleaner when the fabric is dry.

PVC OR COATED FABRICS

- Use a sponge and water and soap (household soap type).

ADVICE - RECOMMENDATION

- Preferably wash your boat on shore.
- Use as few cleaning agents as possible.
- Don't discharge cleaning agents into the water.
- Take the removable upholstery inside when the vessel is not being used.
- Place protective covers/awnings.
- Mark up each cover and foam when dismantling.

PRECAUTION

- For the PVC fabrics, don't use any solvent or solvent based product (pure alcohol, acetone, trichloroethylene).

Galley



Mosquito net / Blackout curtain - Saloon



Blackout curtain - Forward cabin



Shower screen

Must be secured while sailing





100% POLYESTER/DRALON JACQUARD

If you cannot remove the fabric:

- Clean with the vacuum cleaner.
- Clean with a foam for synthetic fabrics (please refer to the product instructions).

If you can remove the fabric:

- Hand wash with an ordinary washing powder at 30° C.

In both cases, dry cleaning is possible. Remove the stains as soon as possible with a damp rag.


COTTON JACQUARD

- Dry clean.
- Do not iron.
- Do not use hypochlorite.
- Remove the stains with fractionated petrol.

INTERIOR

Saloon table



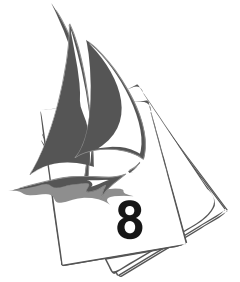

WATER AND SEWAGE WATER

WATER TANK

WATER SYSTEM - DISTRIBUTION

WATER SYSTEM - DRAINAGE

SEWAGE

DECK FILLER



Water tank
Location: Forward cabin
Capacity: 400 l



Water tank
Location: Starboard aft cabin
Capacity: 230 l



Gauge
Location: Electrical panel
(Refer to the instructions for use)




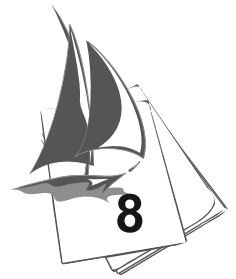





DIAGRAM OF THE LAYOUT - FILLING CIRCUIT

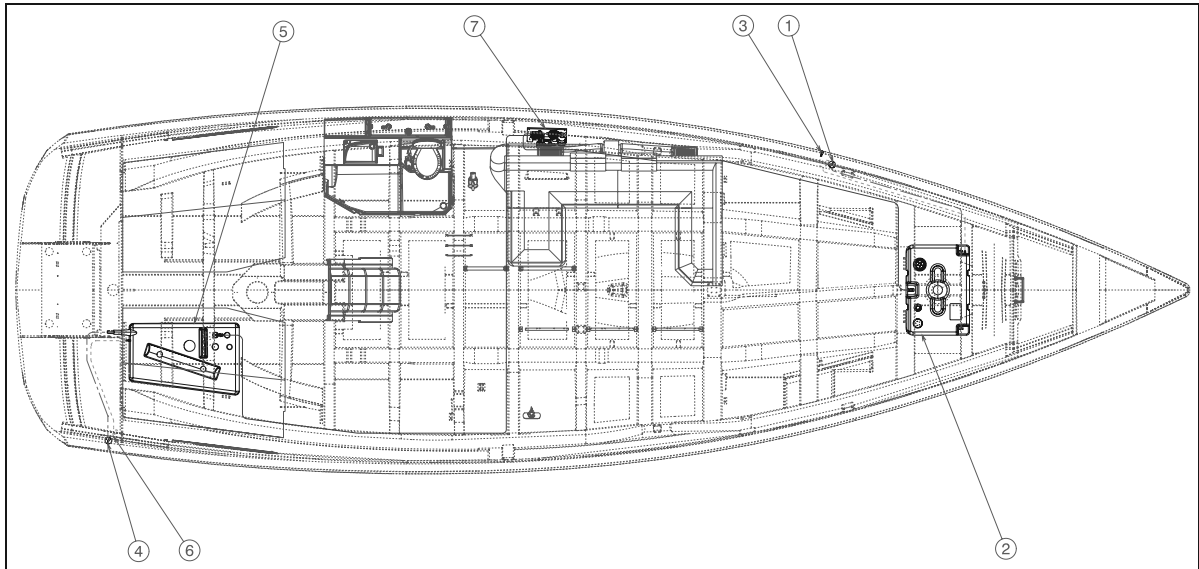

	Supply pipe
	Pipe - Vent hole
	Pipe filling

REF	Designation
1	'WATER' deck filler
2	Forward water tank
3	Vent hole
4	'WATER' deck filler
5	Vent hole
6	Aft water tank
7	Plumbing board

WATER AND SEWAGE WATER

WATER TANK

OPERATION

In order to prevent any handling mistakes, never fill the water and fuel tanks at the same time.

During filling, avoid handling contaminants near the fillers.

Open and close the filler caps with the suitable key.

Check the filler cap seals for condition during filling.

The tanks are fitted with overflow outlets and vents.

Never insert the water filling hose deep down into the system in order to prevent any over-pressure in the systems.


ADVICE - RECOMMENDATION

- Pay attention to the quality of the water for the filling up. Check if it is drinking water.
- It is possible to sterilize the tanks with a Clonazone tablet (sold at the Chemist's).
- If the boat is not used for long, purify the tanks and pipes with acetic acid (or white vinegar).
- For winter storage instructions and precautions, refer to Chapter 12.

WARNING



- The tanks' nominal capacity cannot be fully used due to the load and the need to maintain the correct trim. A 20% reserve should be kept

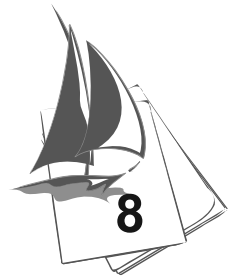

WATER SYSTEM - DISTRIBUTION

**Water heater 220V-
Access - Starboard aft cabin**




1. Thermostatic mixer valve
2. Water heater 40L 220V

**Plumbing board
Saloon backrest**





1. Supply - Forward tank
2. Supply - Aft tank
3. Water pump 12V
4. Expansion tank

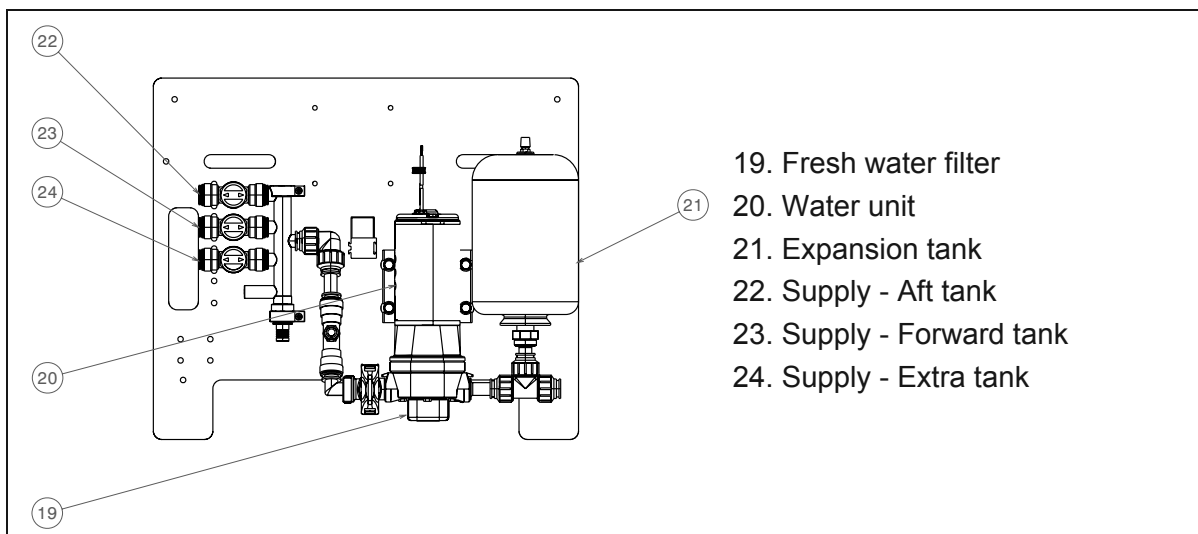

PRECAUTION

- Never operate the water system equipment when the valve is closed or the tank is empty (the electrical equipment may be damaged).
- Check the water filter for condition (refer to manufacturer's instructions).
- Close the taps of empty tanks.
- Bleed the cockpit shower water system to avoid freezing.

Cockpit shower spray - Shore freshwater supply

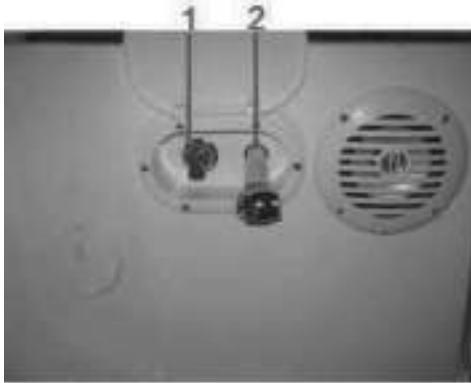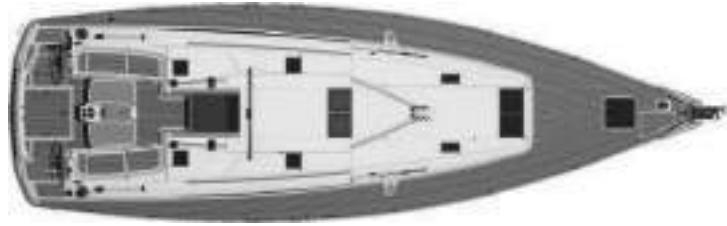

1. Mixer tap
2. Shower



3. Shore freshwater supply


Shore freshwater supply

A non-return flap in the distribution system enables shore water to be used directly, without opening a valve.



WARNING

Turn off shore water before leaving the vessel.

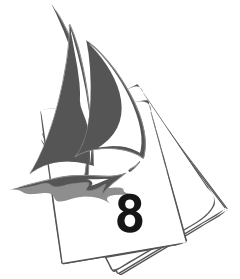

WASHER

Washing machine outlet



General view



Supply valve - House water



DISHWASHER

General view / Access



Supply valve - House water



Dishwasher drainage

