

**NISSAN  
MARINE**

**OUTBOARD MOTOR**

**NSD40/50/70/90/115**

**OWNER'S OPERATING MANUAL**

**Copyright © 2007 Nissan Marine Co. Ltd. All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means without the express written permission of Nissan Marine Co., Ltd.**

<https://www.boat-manuals.com/>

# YOUR NISSAN OUTBOARD MOTOR

---

## OWNER REGISTRATION AND IDENTIFICATION

Upon purchasing this product, be sure your dealer\* fills out the WARRANTY CARD correctly, completely and mails it to the distributor. This card identifies you as the legal owner of the product and serves as your warranty registration. If this procedure is not followed, your outboard motor will not be covered by warranty.

\* In this manual, "dealer" always means an authorized NISSAN dealer.

## PRE-DELIVERY CHECK

Be sure that the product has been checked by the dealer before delivery.

## Limited Warranty

This NISSAN product is fully guaranteed against defective materials and workmanship for the period from the date of purchase, provided that the purchase has been registered in accordance with the above.

The limited warranty will not apply to the normal wear and tear of parts, adjustments, tune-ups, or to any damage caused by, but not limited to:

- 1) Use or operation NOT conforming to the instructions described in this owner's manual.
- 2) Participation in or preparation for racing or other competitive activities.
- 3) Water entering the engine.
- 4) Damage from accidents, collisions, contact with foreign materials, or submersion.
- 5) Growth of marine organisms on motor surfaces.
- 6) Any other careless use or operation.
- 7) Normal deterioration.

The limited warranty does not cover maintenance items. The following items are a few examples not covered by the limited warranty:

Spark plugs, Anode, Trim-tab, Propeller, Fuel filter, Oil filter, Carbon brush, Starter rope, Shear pin, Split-pin, Balance washer, Wire cable, Rubber grommets, water pump impeller, oil seal, "O"-ring, fuel hose, primer bulb, Vinyl tube, etc.

The limited warranty will become void if the product has been altered, modified, or repaired by anyone other than a company or service firm authorized by NISSAN.

The limited warranty will cover only your NISSAN product and will not cover the boat the product is mounted on, the trailer, equipment, or accessories associated with the product.

---

## Serial Number

In the space below, please record the engine's serial number (indicated both on the lower motor cover and on the cylinder block). This number will come in handy in the event of theft or to help in quickly identifying the product type.

Serial Number : \_\_\_\_\_

## To You, Our Customer:

Thank you for selecting a NISSAN product. You are now the proud owner of an excellent outboard engine that will service you for many years to come.

We would like to point out that carefree usage can only be assured on condition that this manual is read through in its entirety and the maintenance routines described later in this manual are followed carefully. Should difficulty arise with the engine, please follow the troubleshooting procedures listed at the end of this manual. If the problem persists, contact an authorized NISSAN service shop or your dealer.

We hope you will get much enjoyment from this product and wish you good luck in your boating adventures.

**NISSAN MARINE**

## NOTICE: DANGER/WARNING/CAUTION/Note

Before operating your outboard motor, be sure to thoroughly read and understand this Owner's Manual and follow all of the instructions shown. Of particular importance is information preceded by the words "DANGER," "WARNING," "CAUTION," and "Note." Always pay special attention to such information to ensure safe and trouble-free operation at all times.

### **▲ DANGER**

Failure to observe will result in severe personal injury or death.

### **▲ WARNING**

Failure to observe could result in severe personal injury or death.

## **▲ CAUTION**

Failure to observe could result in personal injury, or product or property damage.

### **Note:**

This instruction provides special information to facilitate the use or maintenance of the outboard or to clarify important points.

## **EMERGENCY STOP SWITCH**

The Emergency stop switch will stall the engine when the stop switch tether is pulled out. This line can be attached to the body of the operator, effectively preventing injuries from the propeller or raw hub/keel overboard.

We highly recommend use of the Emergency stop switch line. However, we would also like to point out the drawbacks of the switch. Accidental activation of the switch (such as the line being pulled out in heavy seas) could cause passengers to lose their balance and even fall overboard, or it could result in loss of swing in heavy seas, strong currents, or high winds. Loss of control while motoring is another potential hazard.

To prevent such hazardous situations, the 500 mm (20 inch) line is coiled and can be extended to a full 1,300 mm (51 inches).

## **WARNINGS**

As the operator/driver of the boat, you are responsible for the safety of those aboard and those in other craft around you, and for following local boating regulations. Therefore you should possess thorough knowledge of correct operation of the boat, engine, and accessories. To learn about the correct operation and maintenance of the engine, please read through this manual carefully.

It is very difficult for a person standing or floating in the water to take evasive action should he or she see a power boat heading in his/her direction, even at a slow speed. Therefore, when your boat is in the immediate vicinity of people in the water, the engine should be shifted to neutral and shut off.

---

**SERIOUS INJURY IS LIKELY IF A PERSON IN THE WATER MAKES CONTACT WITH A MOVING HOAL GEAR BRUSHING, PROPELLER, OR ANY SOLID DEVICE RIGIDLY ATTACHED TO A BOAT OR GEAR HOUSING.**

It is the operator's responsibility to perform all safety checks and to ensure that all lubrication and maintenance instructions are complied with for safe operation. It is also the operator's responsibility to return the unit to the local dealer for periodic inspection.

Correct periodic maintenance and proper care of this outboard engine will lessen the chance of problems and keep overall operating expenses at a minimum.

### **SERVICING, REPLACEMENT PARTS & LUBRICANTS**

Only let an authorized TOLVTSU service shop perform service or maintenance of this product. Be sure to use genuine parts, genuine lubricants, or recommended lubricants.

### **MAINTENANCE**

As the owner of this outboard engine, you must be acquainted with correct maintenance procedures. Please comply with all instructions concerning lubrication and maintenance, and you should return the engine to the dealer or service shop for periodic inspection at the prescribed intervals.

Troubleshooting cannot be expected unless the engine receives adequate periodic maintenance. If proper maintenance is performed, it is not likely that a costly repair will ever be required.

### **USE OF SERVICE SHOP**

We recommend that you use only authorized dealers to carry out all of your maintenance and repair needs.

# CONTENTS

---

	Page
<b>1. Specifications</b> .....	5
<b>2. Names of parts</b> .....	5
<b>3. Engine Installation on Boat</b> .....	11
1 Installation .....	11
2 Clamp Bracket Dimensional Drawing .....	13
3 Propeller Selection .....	14
<b>4. Remote Control Device &amp; Meters</b> .....	15
1 Installation of the Remote Control Cables (Box side) .....	15
2 Installation of the Remote Control Box on your boat .....	15
3 Connecting the Remote Control Cable to the Engine .....	15
4 Connecting Cords and Cables .....	23
5 Installing the Meters .....	26
6 Installing the Drag Link Assembly .....	28
7 Battery .....	29
<b>5. Fuel and Engine Oil</b> .....	31
<b>6. Running</b> .....	31
1 Break in .....	31
2 Starting .....	35
3 Warm up .....	44
4 Warning System .....	45
<b>7. Operation</b> .....	49
1 Forward/Reverse Running .....	49
2 Shallow Water Running .....	51
3 Stopping the Engine .....	52

---

<b>8. Trim Adjustment</b> .....	55
<b>9. Mooring with the Engine Tilted up</b> .....	59
<b>10. Removing and Carrying the Motor</b> .....	63
<b>11. Adjustments</b> .....	66
1 Remote Control Lever Load .....	66
2 Trim Tab Adjustment .....	66
3 Steering Load Adjustment .....	67
- Throttle Grip Turning Load Adjustment .....	67
<b>12. Inspection and Maintenance</b> .....	68
1 Daily Inspection .....	69
2 Periodic Inspection .....	75
1 Changing Gear Oil .....	77
2 Cleaning Tanks and the Filters .....	78
3 Checking and Refilling Oil in the Power Train & Tilt Unit .....	79
<b>13. Off-season Storage</b> .....	81
1 Engine .....	81
2 Battery .....	82
3 Electric Starter Motor .....	82
<b>14. Pre-season Check</b> .....	83
<b>15. Checking after Striking Underwater Object</b> .....	84
<b>16. If the Engine Becomes Submerged in Water</b> .....	84
<b>17. Precautions in Cold Weather</b> .....	85
<b>18. Troubleshooting</b> .....	85
<b>19. Tool Kit and Spare Parts</b> .....	88
<b>20. Propeller Table</b> .....	90
<b>21. Optional Accessories</b> .....	92



# 1. SPECIFICATIONS 40B • 50B

MODEL		40B		50B	
		LP100	LP100	LP100	LP100
Overall Length	mm (in)	630 (24.9)		1,130 (44.1)	
Overall Width	mm (in)	345 (13.6)		345 (13.6)	
Overall Height S + L + U.L. mm (in)		1,227 (48.3) • 1,354 (53.3) • 1,481 (58.3)			
Transom Height S + L + U.L. mm (in)		405 (15.9) • 530 (20.9) • 657 (25.9)			
Mass	S kg (lb)	93.5 (206)	96.5 (213)	88.5 (195)	
	L kg (lb)	91.5 (203)	97.5 (215)	89.5 (197)	
	U.L. kg (lb)	97 (214)	100 (220)	92 (203)	
Output	kW (HP)	29.4 (40)		36.8 (50)	
Max. Operating Range	rpm	5,150 - 5,850			
Intake Type		Direct Indirect Injection			
Number of Cylinder		1			
Bore - Stroke	mm (in)	68 - 64 (2.68 - 2.52)			
Piston Displacement	ml. (cc) (in <sup>3</sup> )	697 (42.5)			
Exhaust System		Through-hub exhaust			
Cooling System		Water cooling			
Engine Lubrication		Oil injection			
Starting System		Electric - starter motor			
Ignition System		Inductive Ignition			
Spark Plug		NGK PZFR6H			
Alternator		12V, 280W (Max.)			
Trim Position		A		B	
Engine Oil		Genuine Motor Oil or recommended one			
Gear Oil		Genuine Gear Oil or API GL 5, SAE 480 (s #8), approx. 500 ml.			
Fuel Tank Capacity	L (U.S. gal)	25 (6.6)			
Engine Oil Capacity	L (U.S. gal)	Approx. 2.0 (0.53)			
Gear Reduction Ratio		1.85 (13.7)			
Fuel		Unleaded regular gasoline - Pump posted 87 Octane (research octane rating of 91)			

# 1. SPECIFICATIONS W50B

		MODEL	
		W50B	
Item		EPIC	EFTO
Overall Length	mm (in)	630 (24.8)	1,120 (44.1)
Overall Width	mm (in)	345 (13.6)	384 (15.1)
Overall Height	L + UL, mm (in)	1,415 (55.7) - 1,547 (60.7)	
Transom Height	L + UL, mm (in)	550 (21.7) - 677 (26.7)	
Mass	L, kg (lb)	100.5 (222)	107.5 (238)
	UL, kg (lb)	101.5 (224)	108.5 (239)
Output	kW (HP)	36.8 (50)	
Max. Operating Range	rpm	5,150 - 5,850	
Engine Type		Direct fuel injection	
Number of Cylinder		3	
Bore x Stroke	mm (in)	68 x 61 (2.68 x 2.32)	
Piston Displacement	ml (3.7 cu in)	697 (12.5)	
Exhaust System		Through-hub exhaust	
Cooling System		Water cooling	
Engine Lubrication		Oil injection	
Starting System		Electric starter motor	
Ignition System		Inductive Ignition	
Spark Plug		NGK P27FR-H	
Alternator		12V, 280W (Max.)	
Trim Position		4	
Engine Oil		Genuine Motul Oil or recommended one	
Gear Oil		Genuine Gear Oil or API GL5, SAE #80 (1) #90, approx. 700 mL	
Fuel Tank Capacity	L (US gal)	75 (16.6)	
Engine Oil Capacity	L (US gal)	Approx. 2.0 (0.53)	
Gear Reduction Ratio		1.92 (12 - 25)	
Fuel		Unleaded regular gasoline - Pump posted 87 Octane (research octane rating of 91)	

# 1. SPECIFICATIONS 70B • 90B

MODEL		70B	90B
		EPTC	
Overall Length	mm (in)	747 (29.4)	
Overall Width	mm (in)	390 (15.4)	
Overall Height	L. x U.L. mm (in)	1,477 (58.1) x 1,604 (63.1)	
Transom Height	L. x U.L. mm (in)	517 (20.4) x 644 (25.4)	
Mass	L. x U.L. kg (lb)	143 (31.5) x 146 (32.7)	
Output	kW (HP)	51.5 (70)	66.2 (90)
Max. Operating Range	rpm	5,150 / 5,850	
Engine Type		Diesel (diesel injection)	
Number of Cylinders		3	
Bore x Stroke	mm (in)	86 x 77.7 (3.39 x 3.06)	
Piston Displacement	ml (CU in)	1,267 (77.3)	
Exhaust System		Through-hull exhaust	
Cooling System		Water cooling	
Engine Lubrication		Oil injection	
Starting System		Electric starter motor	
Ignition System		Inertial ignition	
Spark Plug		NGK (ZER5J)	
Alternator		12V, 280W (Max.)	
Twin Piston		2	
Engine Oil		Genie/Motor Oil or recommended one	
Gear Oil		Genie Gear Oil or API GL-5, SAE #80 to #90 approx. 900 ml.	
Fuel Tank Capacity	L (U.S. gal)	25 (6.6)	
Engine Oil Capacity	L (U.S. gal)	Approx. 1.0 (1.06)	
Gear Reduction Ratio		2.33 (12 / 52)	2.0 (13 / 26)
Fuel		Unleaded regular gasoline: Pump tested 87 Octane (research octane rating of 91)	


# 1. SPECIFICATIONS 115A

		MODEL	115A
			19PI3
Overall Length	mm (in)		800 (31.5)
Overall Width	mm (in)		425 (19.5)
Overall Height	L - UL mm (in)		1,640 (64.6) - 1,767 (69.6)
Transom Height	L - UL mm (in)		517 (20.3) - 634 (25.0)
Mass	L - UL kg (lb)		178 (39.2) - 181 (39.9)
Output	kW (bhp)		5.0 (6.75)
Max. Operating Range	rpm		5,150 - 5,850
Engine Type			Direct fuel injection
Number of Cylinder			2
Bore x Stroke	mm (in)		68 x 72.7 (2.7 - 2.86)
Piston Displacement	ml (Cu in)		1,768 (107.9)
Exhaust System			Through-hub exhaust
Cooling System			Water cooling
Engine Lubrication			Oil injection
Starting System			Electric starter motor
Ignition System			Inertive ignition
Spark Plug			NGK 17R51
Alternator			15V, 200W (Max.)
Trim Position			2
Engine Oil			Genuine Motor Oil or recommended one
Gear Oil			Genuine Gear Oil or API GL 5 SAE #80 to #90, approx. 900 ml.
Fuel Tank Capacity	L (US gal)		
Engine Oil Capacity	L (US gal)		Approx. 6.7 (7.1)
Gear Reduction Ratio			2.0 (1.5 - 2.6)
Fuel			Unleaded regular gasoline; Pump posted 87 Octane (research octane rating of 91)

## 2. NAMES OF PARTS

EFO

40B · 50B

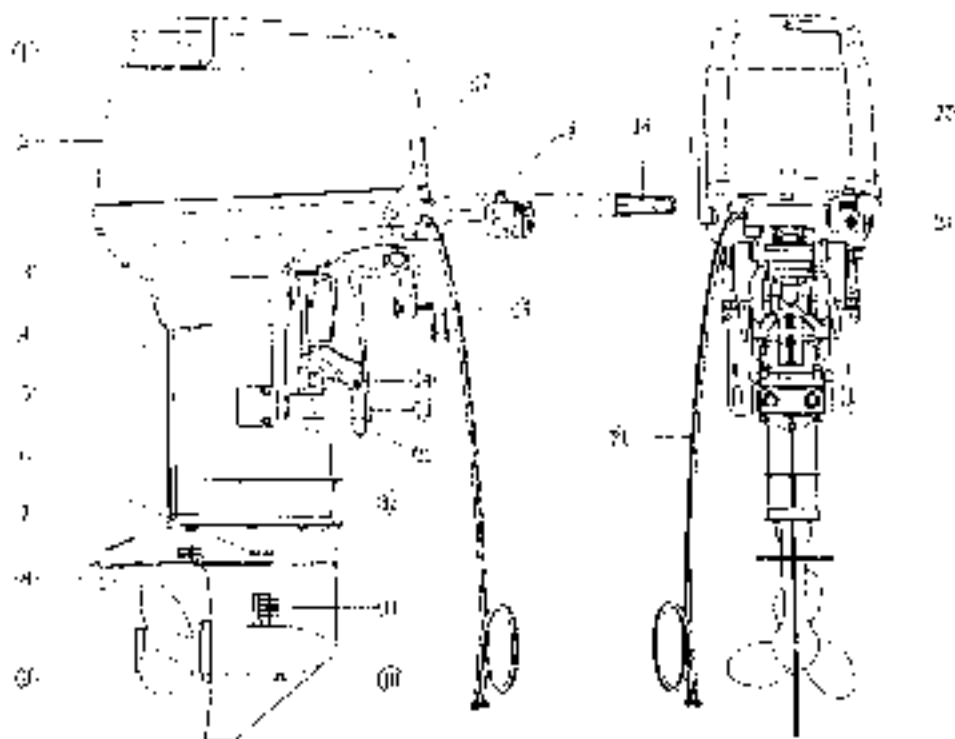


- ①. Tilt Handle
- ②. Top Cowl
- ③. Hook Lever
- ④. Water Check Port
- ⑤. Reverse Lock Lever
- ⑥. Water Plug
- ⑦. Anti-vibration Plate
- ⑧. Trim Tab
- ⑨. Propeller
- ⑩. Oil Plug (lower)

- ⑪. Water Strainer
- ⑫. Oil Plug (upper)
- ⑬. Clamp Bracket
- ⑭. Thrust Rod
- ⑮. Clamp Screw
- ⑯. Throttle Grip
- ⑰. Shift Lever
- ⑱. Stop Switch
- ⑲. Anode
- ⑳. Pilot Lamp

- ㉑. Main Switch
- ㉒. Battery Cords

EFTO

40B - 50B - W50B

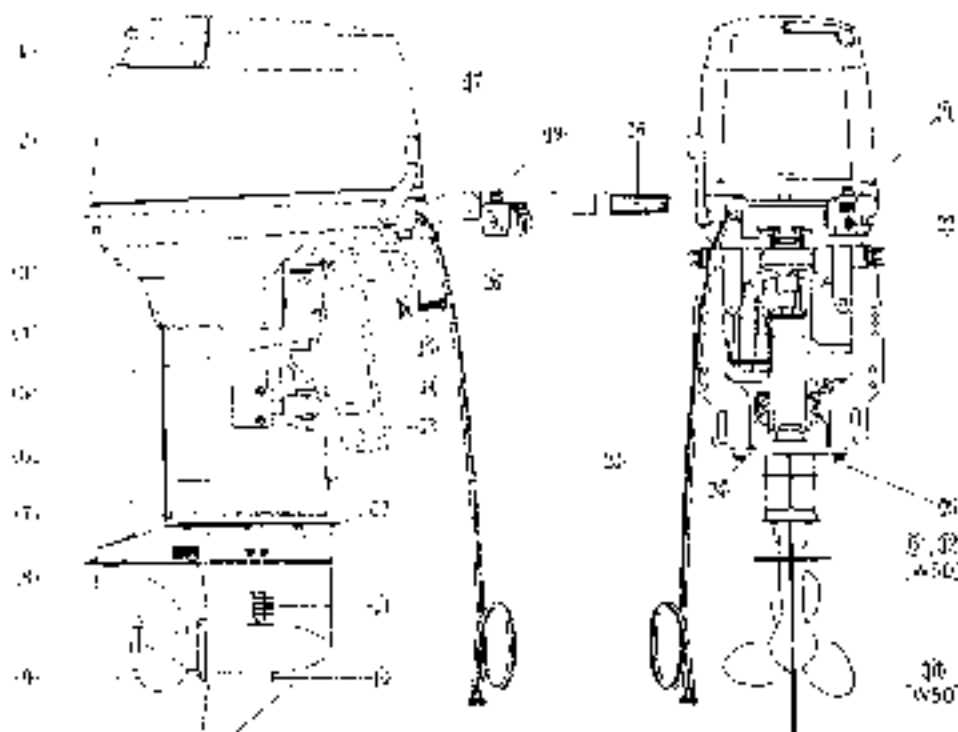

1) Tall Handle

2) Top Cowl

3) Lock Lever

4) Water Check Port

5) Ink Stopper

6) Water Plug

7) Anti-ventilation Plug

8) Trim Tab

9) Propeller

10) Oil Plug (lower)

11) Water Strainer

12) Oil Plug (upper)

13) Clamp Bracket

14) Thrust Rod

15) Clamp Screw

16) Throttle Grip

17) Shift Lever

18) Stop Switch

19) Pilot Lamp

20) Main Switch

21) Battery Cords


22) Power Trim & Tilt

23) Anode

24) Power Lamp & Kill Switch

EPTO

40B • 50B • W50B

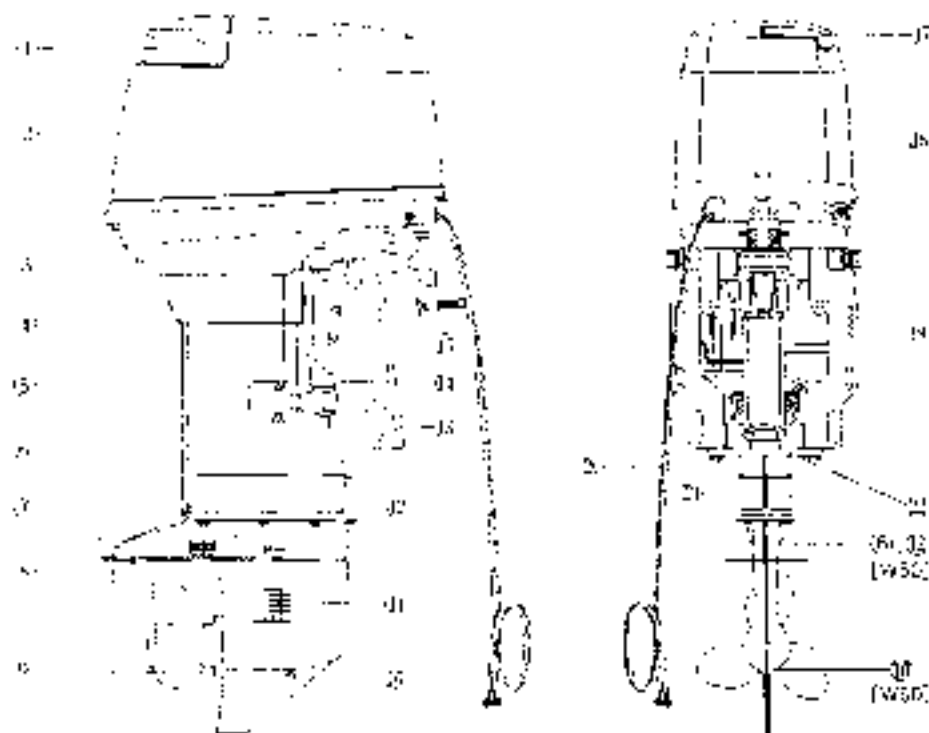

1) Tilt Handle

2) Top Cover

3) Hook Lever

4) Water Check Port

5) Tilt Stopper

6) Water Plug

7) Anti-ventilation Plate

8) Trim Tab

9) Propeller

10) Oil Plug (lower)

11) Water Strainer

12) Oil Plug (upper)

13) Clamp Bracket

14) Thrust Rod

15) Clamp Screw

16) Filler Lid

17) Fuel Connector

18) Power Trim & Tilt Switch


19) Battery Cords

20) Power Trim & Tilt

21) Anode

EPTO

70B · 90B

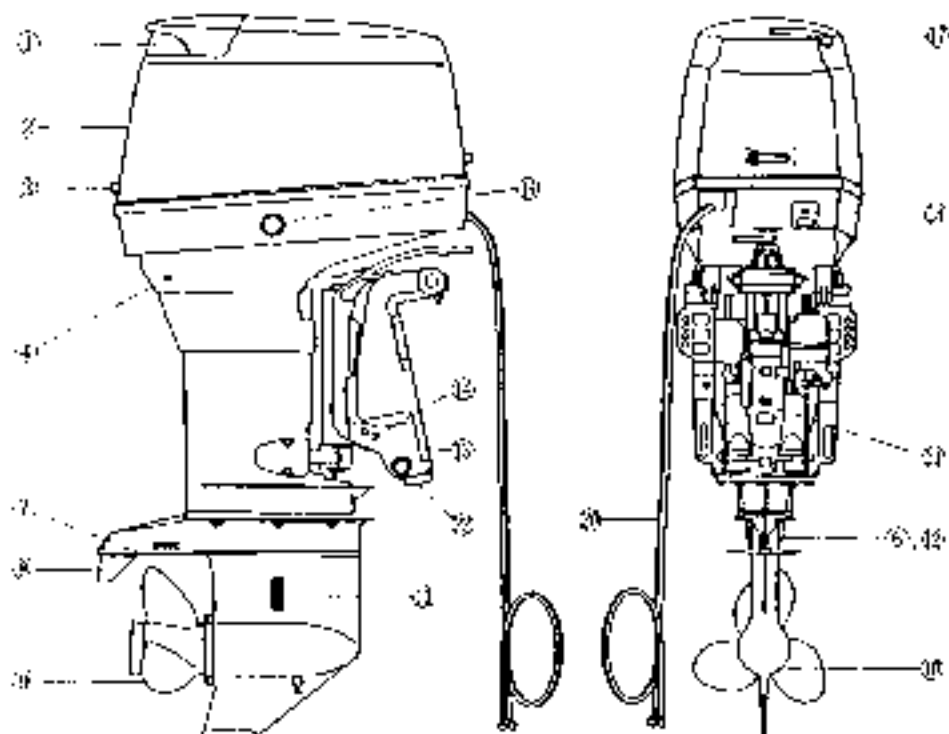

1 Tilt Handle

2 Top Cowling

3 Hook Lever

4 Water Check Port

5 Water Plug

6 Anti-ventilation Plate

7 Trim Tab

8 Propeller

9 Oil Plug (lower)

10 Water Strainer

11 Oil Plug (upper)

12 Clamp Bracket

13 Tilt-rod

14 Filler Lid

15 Fuel Connector


16 Power Trim & Tilt Switch

17 Battery Cords


18 Power Trim & Tilt

19 Anode



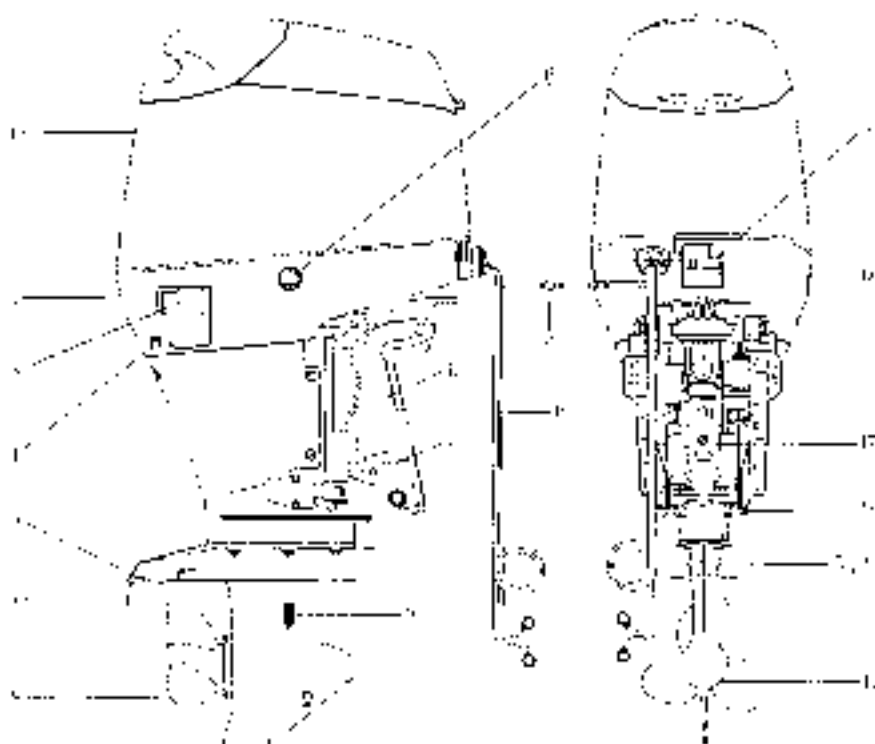


- |                          |                              |
|--------------------------|------------------------------|
| 1) Top Cowl              | 11) Oil Plug (lower)         |
| 2) Bottom Cowl           | 12) Clamp Bracket            |
| 3) Hook Lever            | 13) Thrust Rod               |
| 4) Water Check Port      | 14) Fuel Inlet Nipple        |
| 5) Water Plug            | 15) Power Trim & Tilt Switch |
| 6) Anti-ventilator Plate | 16) Battery Cords            |
| 7) Trim Tab              | 17) Power Trim & Tilt        |
| 8) Propeller             | 18) Anode                    |
| 9) Oil Plug (upper)      | 19) Flushing Connector Cap   |
| 10) Water Strainer       |                              |

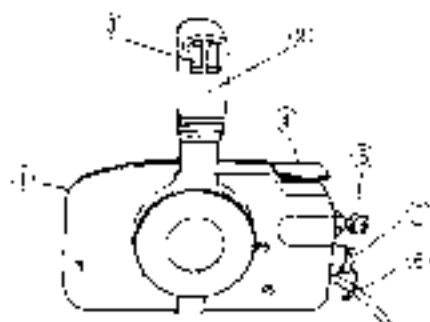

for EPTO Type



for EPTO Type

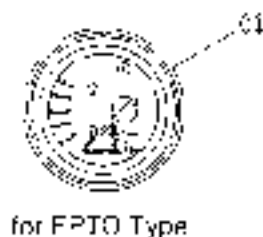

for EPTO Type

- |                           |               |
|---------------------------|---------------|
| ① Remote Control Box      | ⑩ Primer Bulb |
| ② Remote Control Lever    | ⑪ Tachometer  |
| ③ Power Trim & 1th Switch | ⑫ Trim Meter  |
| ④ Neutral Warm-up Lever   |               |
| ⑤ Main Switch             |               |
| ⑥ Harness B               |               |
| ⑦ Stop Switch             |               |
| ⑧ Fuel Tank               |               |
| ⑨ Air Vent Screw          |               |
| ⑩ Fuel Connector          |               |

Note: These parts for model H15A are not enclosed in the engine package

## 3. ENGINE INSTALLATION ON BOAT

### ▲ WARNING

Most boats are rated and certified in terms of their maximum horsepower, and this is shown on the boat's certification plate. Do not equip your boat with an outboard that exceeds this limit. If in doubt, contact your dealer.

Do not operate the engine until it has been securely mounted on the boat in accordance with the instructions below.


#### Note:

Consult your authorized dealer to receive the proper instructions or ask your dealer to mount the motor as necessary.

### 1 Installation

#### 1 Single-engine installation

- Position the outboard engine at the exact center of the stern, and mount it using a cushioning pad or plate. (Fig. 1)

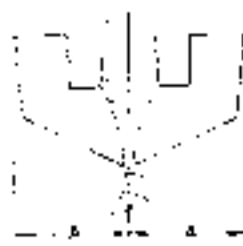

(Fig. 1)

#### 2 Twin engine installation

- When installing two outboard engines, be sure to keep an interval of 470 ~ 660 mm (e.g. 40, 50, 70 and 80 models) or 700 ~ 890 mm (e.g. 115 model) between the two. (Fig. 2)


40-70 470-660mm  
(18.5-26.0 in)  
115 700-890mm  
(27.6-35.0 in)



(Fig. 2)

#### 4. Transom Height

Install the engine with the Anti-ventilation Plate at a level 10 ~ 30mm (0.4 ~ 1.2 in) below the bottom of the boat (Fig. 2).

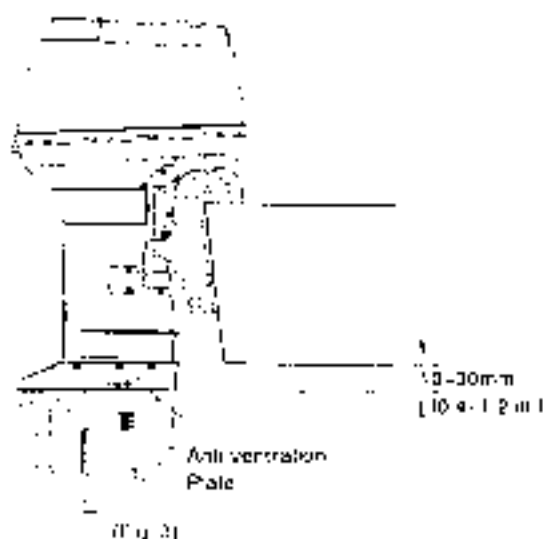

#### Transom Matching

Be sure that the anti-ventilation plate of the outboard is below the water surface when running with wide open throttle.

In case the above condition cannot be met due to the shape of your boat, please consult your dealer.

### ▲ CAUTION

Overheating may occur if the Anti-ventilation Plate is at a level higher than the bottom of the boat, as a result of a lack of cooling water.

- If the height difference exceeds 10 ~ 30mm (0.4 ~ 1.2 in), engine power performance is likely to be reduced as a result of increased water resistance to the gear case assembly.

#### 4. Attaching the Clamp Bracket


After positioning the Clamp Bracket, fix it with clamp screws then drill 4-size holes in the transom board, matching the holes in the Clamp Bracket. Secure

the engine with the supplied bolts (M12 x 105mm) and nuts. Be sure to use the washers. Use the larger diameter washers inside of the transom (B and D) and use the small diameter washers outside of the clamp bracket.



The mounting holes may be drilled beforehand by referring to the dimensional drawing.

## 2 Clamp Bracket Dimensional Drawing

manual tilting type EFO 40 • 50

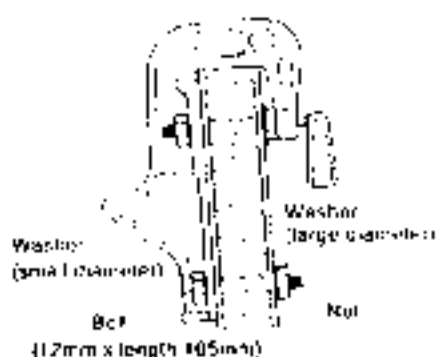

with the Power Trim and Tilt type EFTO • EPTO 40 • 50

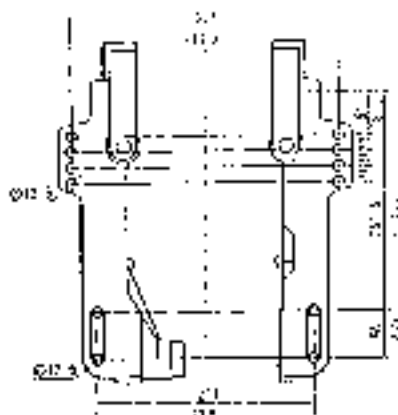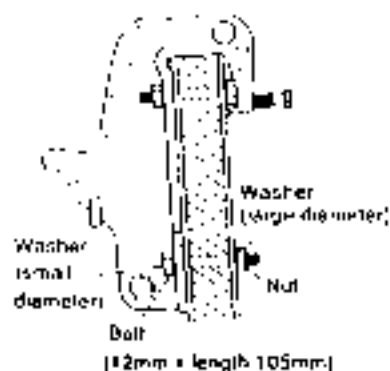

## Power Trim and Tilt type EPTO 70 • 90 • 115



### Note:

We recommend that the bolt head of the upper bolts face inward while the nuts are kept on the outside of the boat to prevent injury to the passengers.

### Notes:

1. Apply sealing agent, such as silicon sealer, between the bolts and the transom board holes when tightening the bolt.
2. Be sure to fix the engine securely with the bolts.

### 3 Propeller Selection

A propeller must be selected so that the engine rpm measured at wide open throttle while cruising is within the max. operating range:

5150 to 5850 rpm

For genuine propellers, refer to Propeller Table of this manual.

### Note

The 115 model is supplied with no standard propeller. In other words, it is shipped from the factory without a propeller.

## **4. REMOTE CONTROL DEVICE & METERS**

---

40 - 50 - 70 - 90 - 115

It is recommended you consult with your dealer for installation and adjustment of the remote control device.

### **1 Installation of the Remote Control Cables (Box side)**

Follow the instruction manual provided with the remote control box.


### **2 Installation of the Remote Control Box on your boat**

Follow the instruction manual provided with the remote control box.


### **3 Connecting the Remote Control Cable to the engine.**

40 - 50


1- Detach the top cow, by turning the lever.

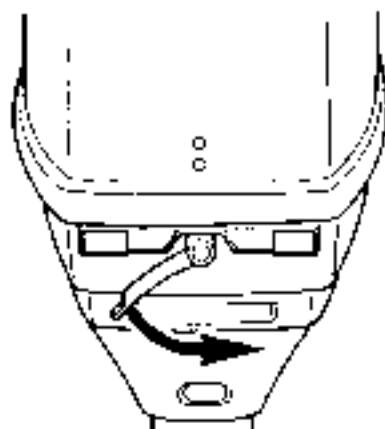

- 2 Detach the bracket and set Cable Harness B and Remote Control Cables. Having fixed the Remote Control Cables to the bracket, tie them to the bottom cow!

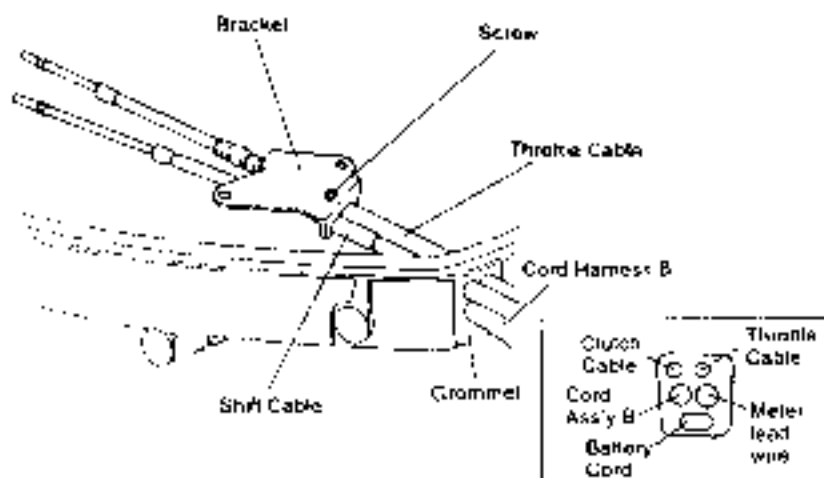


- 3 Detach the throttle and shift cable joints by removing the R-shaped pins.

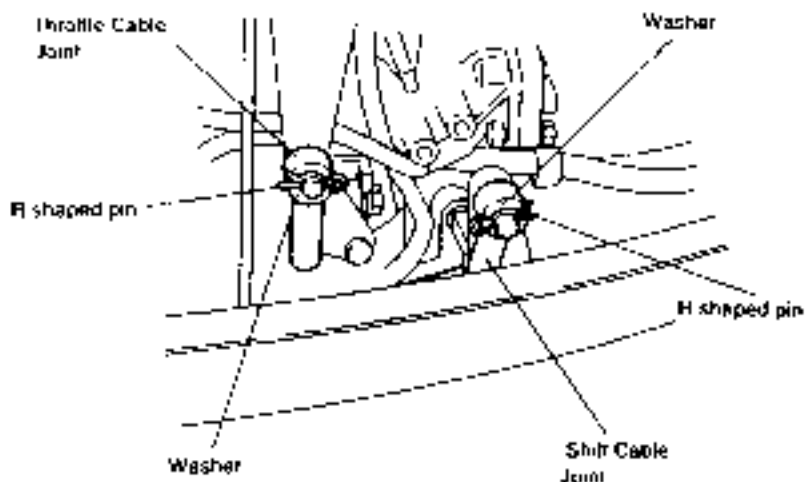






- Screw the eye of the remote control cable into the cable joint up to approx. 10 mm (0.39 inch), then lock them with a lock nut. Here, apply grease to the hole of the cable joint.

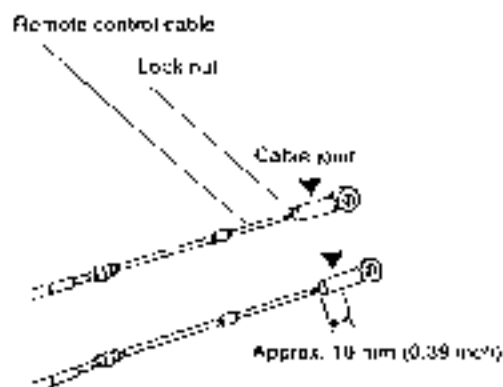



- 1 Move the Remote Control lever Forward, to Neutral and to Reverse to confirm the shift is working, and then set the lever to Neutral.
- Double-check that the Remote Control Cables, the throttle cable and shift cable have been connected correctly. Move the Remote Control Lever Forward until the first engaging point (approx. 32°). The cable which is moved first when the lever is turned is a shift cable. Check that the shift lever is in Neutral and the neutral warm-up lever is fully closed when the remote control cables have been connected.

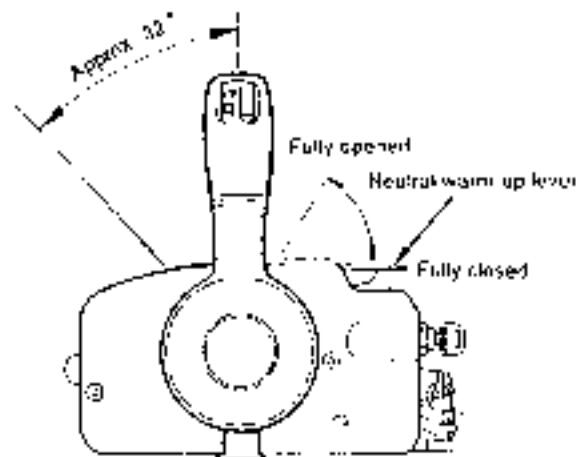

- 5 Set the shift arm to the [N] position and close the advancer arm completely.  
If the advancer arm does not contact with the stopper, the throttle position sensor will be active improperly.
- The advancer arm should have contact with the stopper at neutral position of the remote control lever.

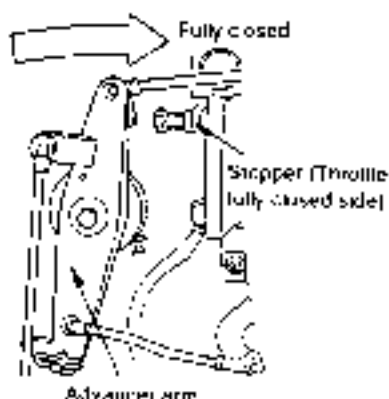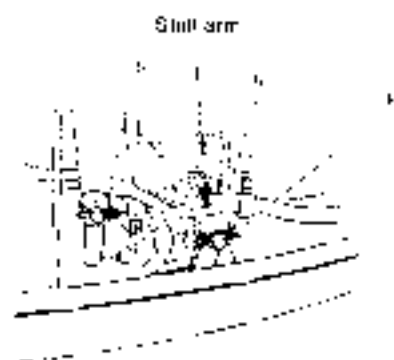


- Adjust the cable joint (shift side) so that the hole meets with the shift arm pin, and lock the cable joint with the nut, and insert the shift arm pin and then secure with a washer and R-shaped pin. Also, adjust the cable joint (throttle side) so that the hole meets with the advancer arm pin, and lock the cable joint with the nut, and insert the advancer arm pin and then secure with a washer and R-shaped pin.

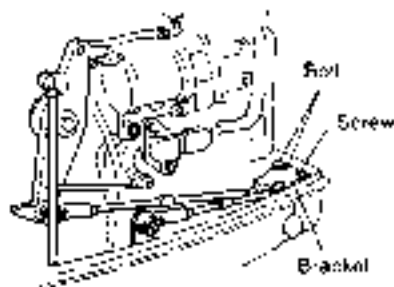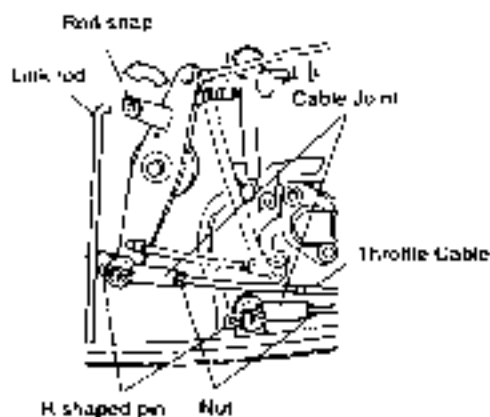


### 3 Connecting the Remote Control Cable to the engine.

70 - 90

- 1 Detach the top cowl by turning the lever

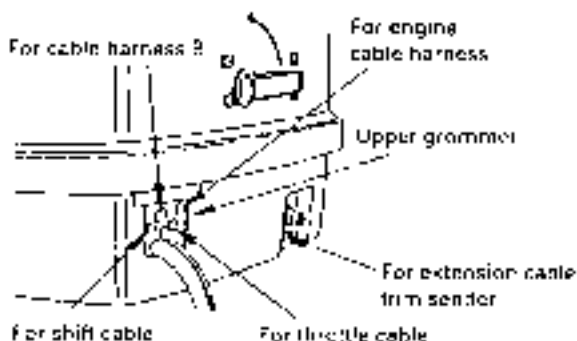


- 2 Detach the upper grommet cord clamp bolt.

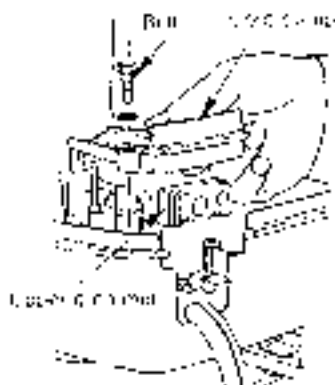


- 3 Detach the throttle and shift cable joints by removing the R-shaped pins.


Place the shift arm forward, to Neutral, and to Reverse to confirm the shift is working, and then set the shift arm to Neutral.

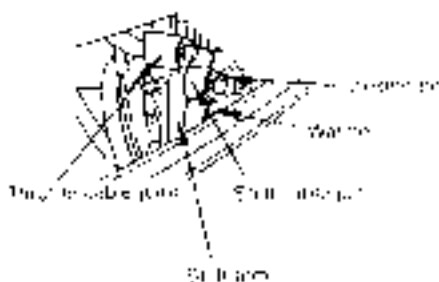

- Screw the tip of the remote control cable into the cable joint up to approx. 10 mm (0.39 inch), then lock them with a lock nut. Here, apply grease to the hole of the cable joint.

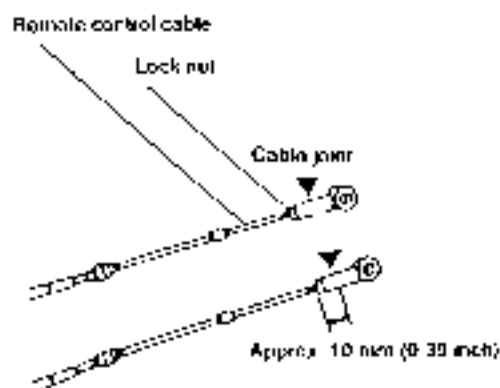


- ④ Move the Remote Control lever Forward, to Neutral and to Reverse to confirm the shift is working, and then set the lever to Neutral.
- Double-check that the Remote Control Cables, the throttle cable and shift cable have been connected correctly. Move the Remote Control Lever Forward until the first engaging point (approx. 32°). The cable which is moved first when the lever is turned is a shift cable. Check that the shift lever is in Neutral and the neutral warm-up lever is fully closed when the remote control cables have been connected.

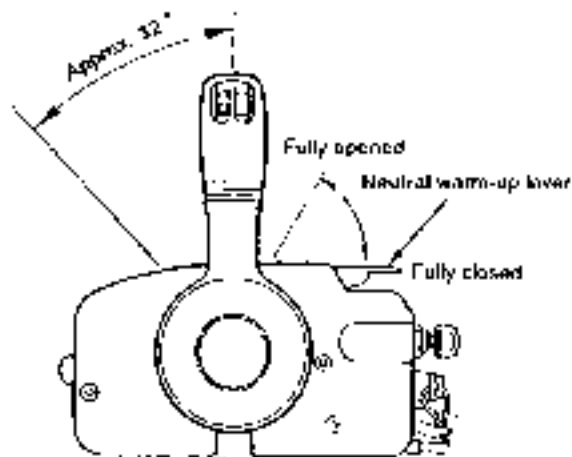


- Set the shift arm to the (N) position and close the advancer arm completely. If the advancer arm does not contact with the stopper, the throttle position sensor will be active incorrectly.

- The advancer arm should have contact with the stopper at neutral position of the remote control lever.

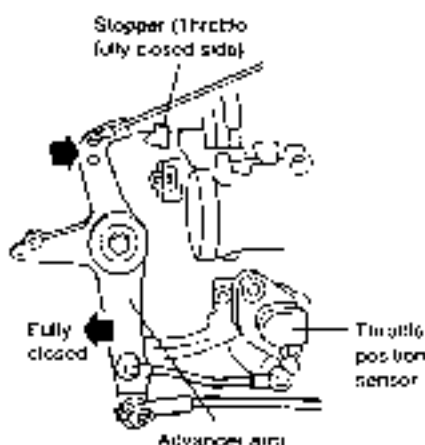


- Adjust the cable joint (shift side) so that the hole meets with the shift arm pin, and lock the cable joint with the nut, and insert the shift arm pin and then secure with a washer and R-shaped pin. Also, adjust the cable joint (throttle side) so that the hole meets with the advancer arm pin, and lock the cable joint with the nut, and insert the advancer arm pin and then secure with a washer and R-shaped pin.

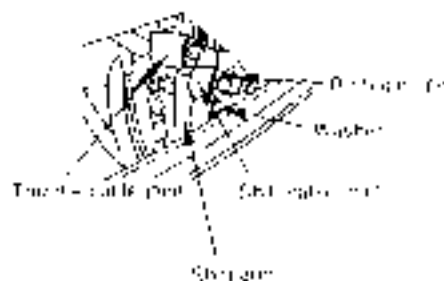

### 3 Connecting the Remote Control Cable to the engine.


115

- 1 Turn the three hook levers fastening the bottom cowl and then remove the top cowl.
- 2 Remove the hose clamp fastening the cord grommet.  
Remove the bolts fastening the cord clamp and then remove the cord clamp and the cord grommet.

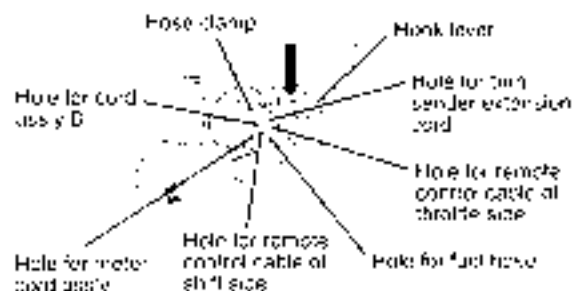


- 3 Detach the throttle and shift cable pins by removing the R-shaped pins.


Move the shift from Forward, to Neutral and to Reverse to confirm the shift is working, and then set the shift arm to Neutral.

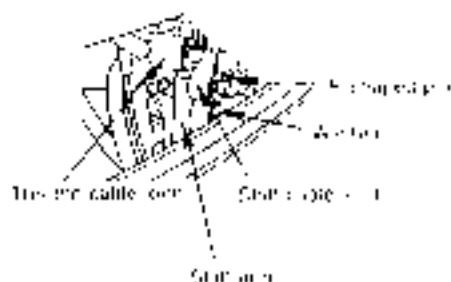

- Screw the tip of the remote control cable into the cable joint in to approx. 10 mm (0.39 inch), then lock them with a lock nut. Here apply grease to the hole of the cable joint.

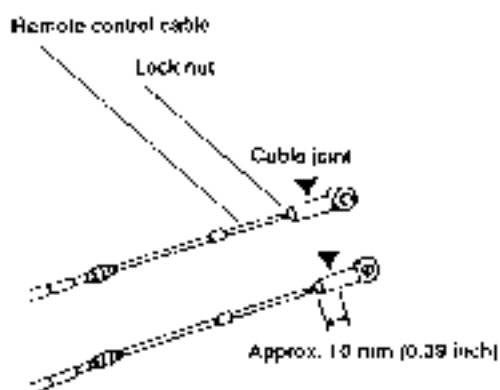


- ④ Move the Remote Control lever Forward, to Neutral and to Reverse to confirm the shift is working, and then set the lever to Neutral.
- Double check that the Remote Control Cables, the throttle cable and shift cable have been connected correctly. Move the Remote Control Lever Forward until the first engaging point (approx. 52°). The cable which is moved first when the lever is moved is a shift cable. Check that the shift lever is in Neutral and the neutral warm-up lever is fully closed when the remote control cables have been connected.

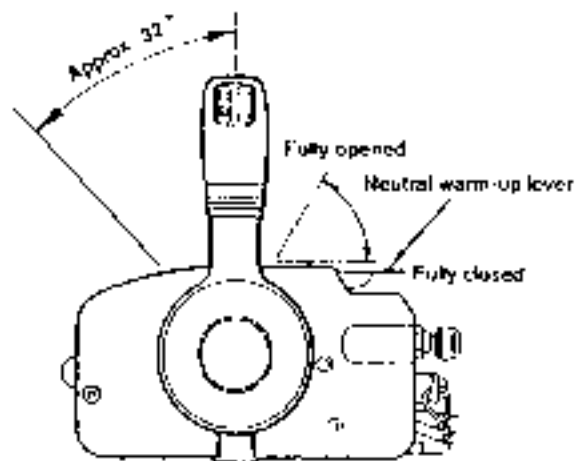


7) Set the shift arm to the [N] position and close the advance arm completely.

If the advance arm does not contact with the stopper, the throttle position sensor will be active improperly.

- The advance arm should have contact with the stopper at neutral position of the remote control lever.

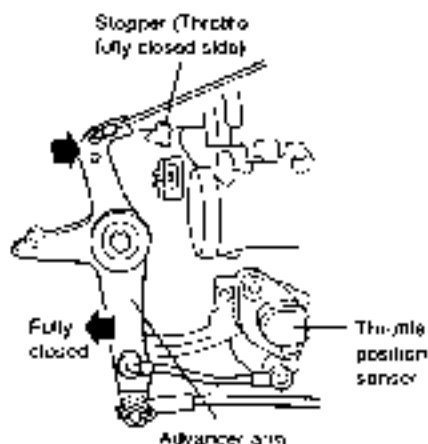


- 8) Install the base clamp to the end grommet.  
Install the cable clamp.

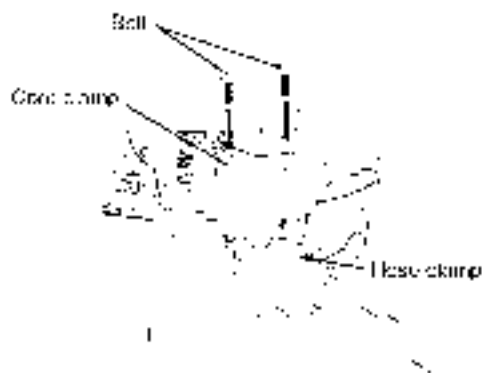




- 4) Adjust the cable joint (shift) side so that the hole meets with the shift arm pin, and lock the cable joint with the nut, and insert the shift arm pin and then secure with a washer and R-shaped pin. Also, adjust the cable joint (rotary) side so that the hole meets with the advance arm pin, and lock the cable joint with the nut, and insert the advance arm pin and then secure with a washer and R-shaped pin.

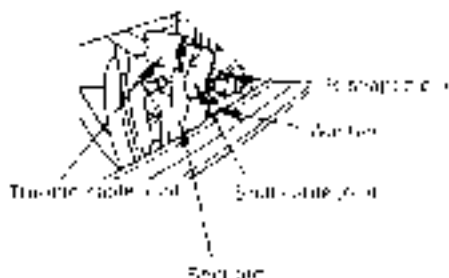


#### 4 Connecting Cords and Cable

- 1) Connect cable harness B and meter lead wire to cable harness A.

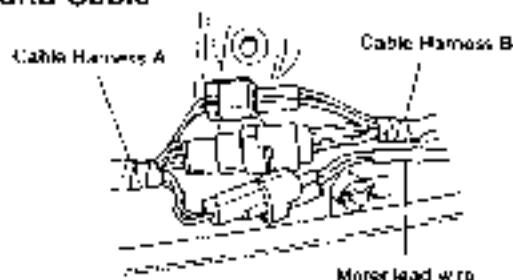

- 2) Connect the trim sender and the extension cable trim sensor.

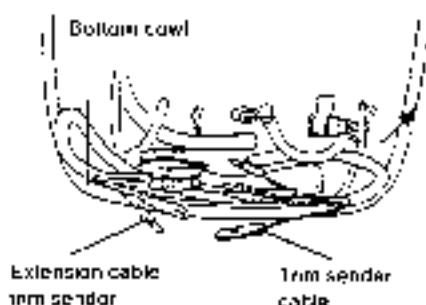


### **⚠ CAUTION**

Do not disconnect the electric couplers while the engine is running, as this will damage the C/D unit and could result in a serious electric shock.


## 5 Installing the meters

Install the meters securely in the dashboard where they can be easily read and are not exposed to water splashes. The recommended dashboard thickness is 2 ~ 11mm (0.08 ~ 0.4 in.). For dashboards thicker than 11mm (0.4 in.), the fitting plate should be cut accordingly. Be sure to tighten the fitting nuts on the fitting plate evenly.

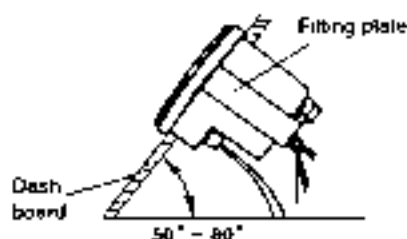



The dashboard inclination should be 50 ~ 80°.

Set the tachometer selector knob to "4P".

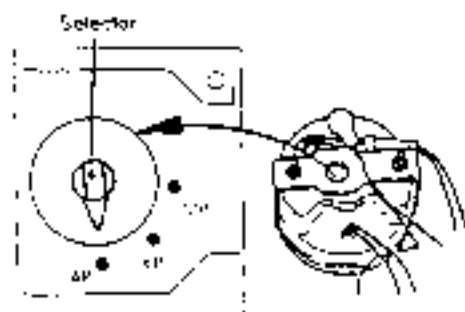

Cut holes with 45mm (1.746 in.) diameter for the tachometer and 52.5mm (2.067 in.) for the trim meter.

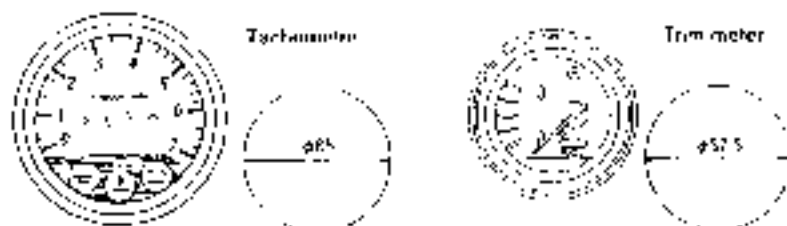

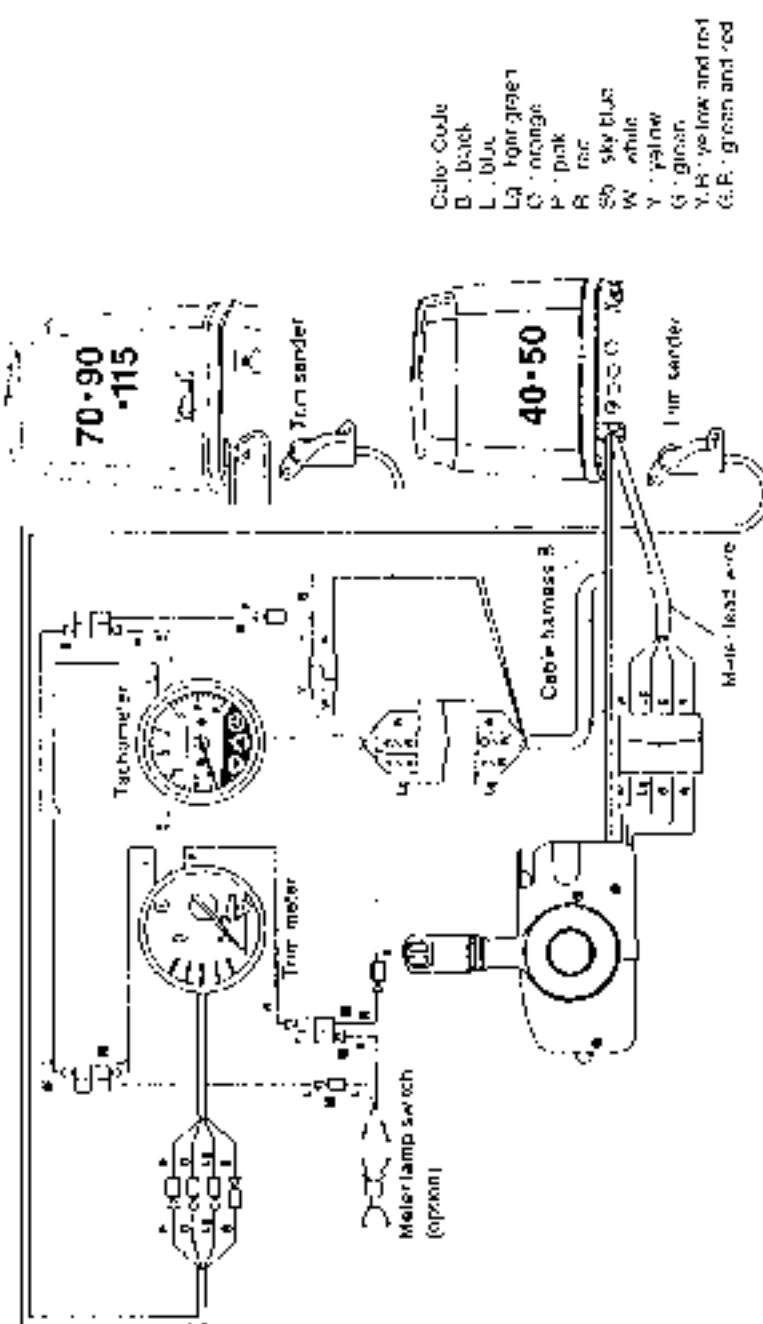

(Note)  
 The parts of ... mark is to be used when  
 a Meller Lamp Switch is used; 5 lines

## 6 Installing the Drag Link Assembly

Incorrect or unstable installation of the Drag Link Assembly can result in accidents while riding the boat or breakage of the hull.

Installation of the Drag Link Assembly by your dealer is highly recommended.

### Note:


Depending on the steering cable manufacturer, spacers (optional) may be required.

- 1 Connect the Drag Link Rod to the tip of the steering cable.
  - Tighten the rod using self-locking nut, making sure the rod can swing freely.
- 2 Connect the other tip of the rod to the steering bracket with a bolt, applying a collar and washer. The bolt head must face downward. Secure with a split pin to the bolt.

### Note

Apply grease in required places. (Refer to the illustration below)

Apply grease inside the bracket bolt

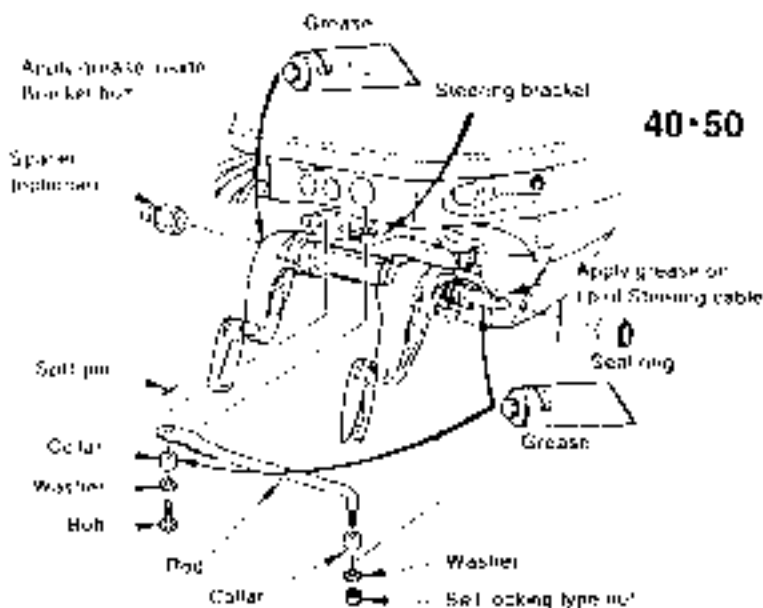



**Notes:**

1. Battery cables should be of sufficient length to allow free movement of the engine.
2. Keep battery cables in a tidy arrangement, and protect them from damage (from steering, etc.)
3. If the battery cable is poorly connected, it may cause a failure in starting the engine or malfunction of some electronic device.
4. The battery charging system will be damaged if the polarity (+ and -) is reversed.
5. Be sure the battery is fully charged prior to starting the engine.
6. Do not disconnect the battery cable(s) from the battery terminal(s) during engine running.

**▲ WARNING**

- Hydrogen gas is generated when charging a battery. Thus, keep the battery well ventilated during charging. Remove from boat, this will protect your hull interior from damage. Electric sparks, cigarette smoking and other sources of fire must be avoided in the charging area to prevent explosion of the battery.
- The battery fluid (electrolyte) contains sulfuric acid. If electrolyte is spilled on the skin, clothes, etc. wash thoroughly with water and consult a medical doctor. Always use safety glasses and rubber gloves when handling the battery.

## 5. FUEL & ENGINE OIL

### Fuel

- Unleaded, minimum pump posted 87 octane gasoline is recommended (Octane is based on posted rating.)
- (\*) based on the research octane rating method.

#### Note:

Use of low-quality gasoline results in a short engine life as well as starting difficulties and other engine problems.

#### Notes

- (1) Gasoline containing alcohols (methanol (methyl), or ethanol (ethyl), acetone or benzene, may cause:
  - Wear and damage to bearings, cylinder(s), piston(s), piston rings
  - Corrosion of metal parts
  - Deterioration of rubber parts and plastic parts.
  - Starting, idling, and other engine performance problems.
- (2) Do not use gasoline that contains more than 10% ethanol or more than 5% methanol.
- (3) Damages resulting from the use of gasolines that contain alcohol, acetone or benzene are not covered under the limited warranty.

Fuel tank capacity - 25 liters (6.6 U.S. gallons) for 40 - 50 - 55 - 90

#### Fuel Tank

When using a fixed fuel tank in place of genuine fuel tank, it is recommended to select a one with a structure facilitating interior coating.

### **▲ DANGER**

Gasoline vapors are present, an errant spark could cause an explosion or fire.

- Do not smoke near gasoline.
- Do not overfill gasoline.
- If any gasoline is spilled, wipe it up immediately.
- Stop the engine before pouring gasoline into the fuel tank.

### Engine oil

- Use a genuine engine oil or recommended one.
- Will not recommend use of other two-stroke engine oil.

## ▲ CAUTION

DO NOT mix different brands of oil.


Mixing different brands of oil, or different types of oil even if the brand is the same, may cause gelling, resulting in possible filter screen blockage. This could result in serious engine damage because of impaired lubrication performance.

The required amount of engine oil is automatically supplied from the oil tank through the oil pump, according to the engine running conditions. Gasoline is fed over a separate feeding line.


Replenishing oil in the engine's oil tank

1. Open the filler lid from the top cowd for the 40, 50, 70 and 90 model.  
Remove the top cowd for the 115 model.
2. Open the oil tank cap.
3. Fill the oil tank with the genuine engine oil.
4. After replenishment of the oil tank, be sure to close the oil tank cap tightly.

**40•50•70•90**  
Location of Recommended  
Engine Oil

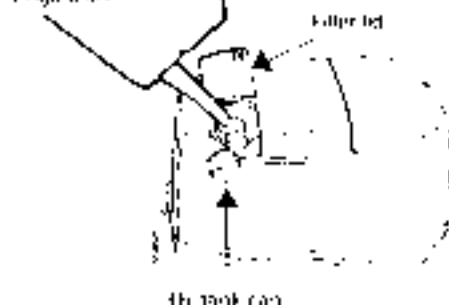

**115**

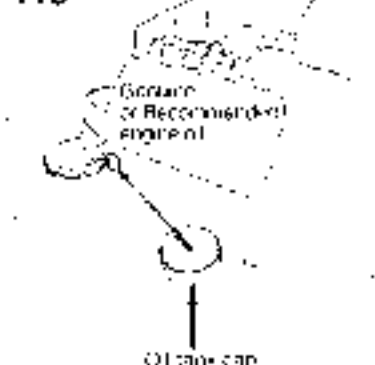

## ▲ CAUTION

1. In the unlikely event that gasoline by mistake is filled into the oil tank, drain the oil tank completely, and consult an authorized service shop for advice.
2. Check the amount of oil in the oil tank visually before starting the engine. Running out of oil at sea is a cause for potential disaster.




#### Oil pump air vent:

Visually check whether there is air in the oil through the vinyl pipe connecting the oil tank with the oil pump. If present, purge the air as follows:

#### 40 • 50

- Loosen the air vent screw on the oil pump to purge the air, and tighten it when all air, as seen through the vinyl pipe on the oil pump side, has been purged.

#### 40•50

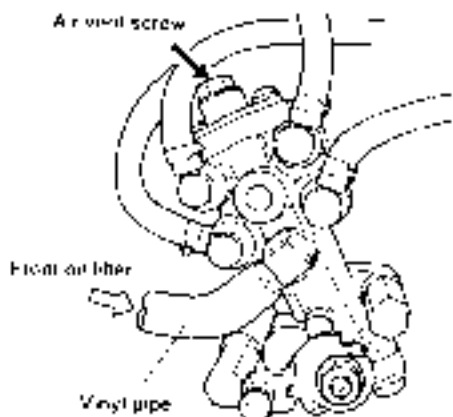

#### 70 • 90 • 115

- See page 39 for air removal from the oil lines

#### Note

Wipe off any spilled oil with a rag, and dispose of it.

## 6. RUNNING

### 1 Break-in - - - - -10 hours

Start the break-in after reading the next section (Starting) very carefully. Before break-in, you need 30 minutes idle running after forced engine oil filling.

The most critical time in the life of your engine is the first 10 hours of operation. Correct operation during this break-in period will prolong the life of the engine and ensure optimum performance. Follow the procedures shown below carefully.

Time	Break-in method	Running Conditions
0 min	Trailing or idling speed	Cruising at maximum speed
10 min	Throttle opening $\approx 1/2$ about 3,000 rpm	
1 hr	Throttle opening $\approx 3/4$ about 4,000 rpm	Run with full throttle for 1 min - 10 min
2 hrs	Throttle opening $3/4$ about 4,000 rpm	Run with full throttle for short time
10 hrs	Normal running	-

### **▲ CAUTION**

1. Never pour engine oil into the fuel tank.
2. Severe engine damage may be caused if the break-in procedures described above are not observed.
3. Change new gear oil after 10 hours break-in.

## 2 Starting

### ▲ CAUTION



NEVER fill up portable fuel tanks on board to avoid fire or explosion resulting from spilled gasoline. If gasoline is ever spilled on board, wipe it up thoroughly. Fuel tanks must always be filled up on land.

#### 1 Preparations



- (1) Loosen the air vent screw on the fuel tank cap.




- (2) For the 40, 50, 70 and 90 models, insert the fuel connector into the connector in the engine side.

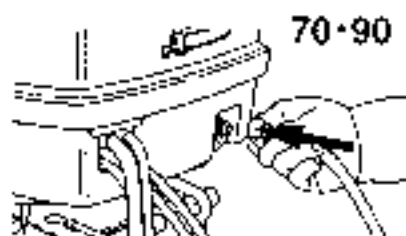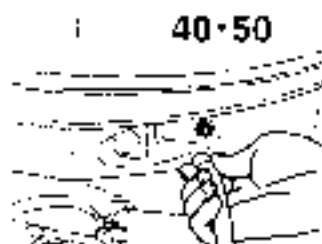

- (3) For the 115 model, remove the cap from the fuel hose nipple and then connect the hose coming from the fuel tank. After connection, be sure to tighten the hose tightly with a hose band or the like.

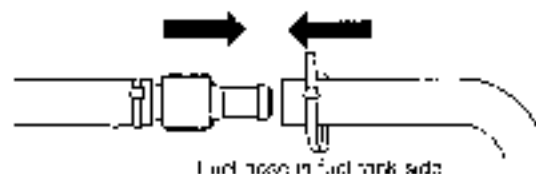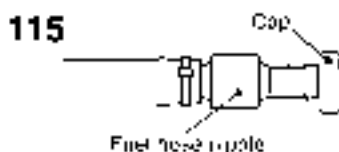

(C) Install a lock in the stop switch.

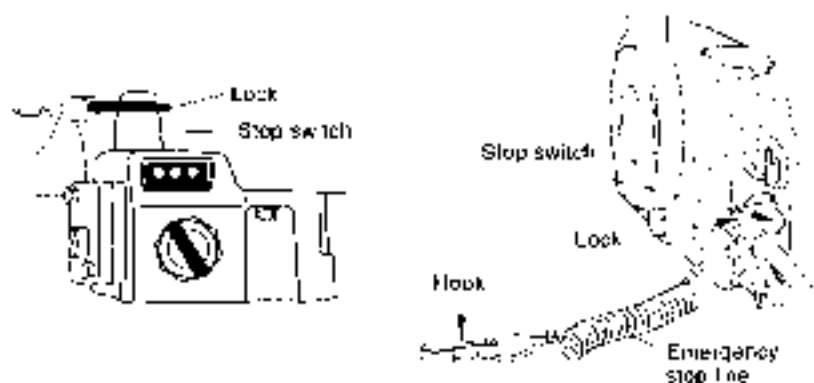

### **▲ CAUTION**

- Be sure to connect the emergency stop line to your waist. The engine is shut down if the stop line switch is disconnected. This is a safety measure, designed to protect the driver if thrown overboard.
- If the engine is stopped by the stop switch, immediately turn off the main switch.

---

14) Feed fuel to the carburetor by squeezing the primer bulb until firm



### **Forced fuel feeding:**

When the engine is new, stops because of emptying fuel tank or have been left without operation for a long time, or just after the engine is overhauled, be sure to execute the following operation for feeding the engine with fuel forcibly before starting the engine.

- Repeat to squeeze the primer bulb until it becomes firm
- Set the main switch to "ON" position and hold it turned on for 3 seconds  
- To activate the FFP (Fuel Feed Pump).
- Turn off the main switch and again squeeze the primer bulb repeatedly until it becomes firm
- Repeat the above steps b and c until the primer bulb remains as it is firm



## Forced engine oil feeding:

When the engine is new or have been left without operation for a long time, or just after the engine is overhauled, be sure to execute the following operation for forcibly feeding the engine oil to the oil line before starting the engine.

### 40 • 50

- Disconnect the link rod by turning the rod snap interlocking with the oil pump as shown in the figure.
- Make sure that the oil pump control lever is set at open side position.
- Idle the engine for more than 30 minutes.
- Reset the link rod to the advance arm.

### 40 • 50

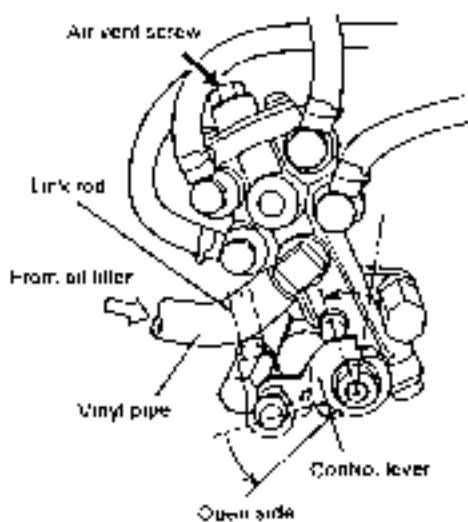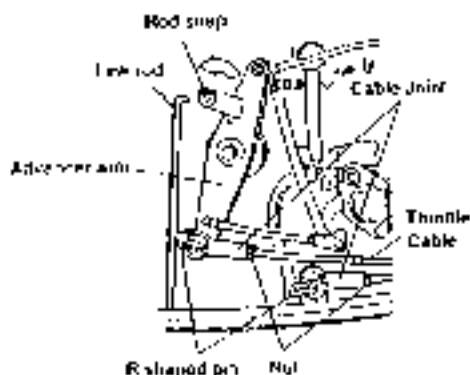

## 70 • 90 • 115 (Electric Oil Pump)

Check to see by eyes if the oil line from the oil tank to the cylinder block (1 to 9 in the 70 and 90 models, or 1 to 11 in the 115 model) gets air inside or not. If there is air inside the oil line, remove it as follows.

### - Oil Tank Filter (1) -



- Fill the oil tank up with the specified oil.
- Remove the pipe of the filter inlet side at the part (A).
- Since the oil flows out with air, wait until air is completely discharged from the pipe. After checking for no air in the oil line, reconnect the pipe as it was and attach the clip to secure pipe connection.

### - Filter-Oil Pump-Cylinder Block -

(70 • 90) : 1 - 9, 115 : 1 - 11

- Turn on the key switch.
- Within 1 second after the buzzer starts sounding, remove the stop switch lock.
- Within 2 seconds after removing the stop switch lock, quickly repeat pulling and pushing back the stop switch knob 2 times.
- The buzzer sounds 3 times and the oil pump is actuated for about 1 minute for pressure test of oil.
- When air is completely removed from the oil line, turn off the key switch.


## 70•90•115

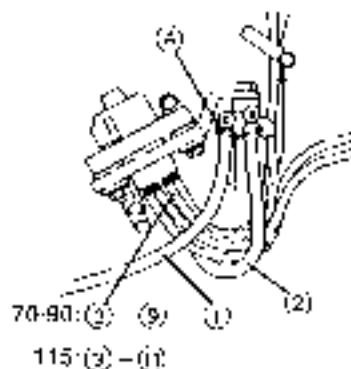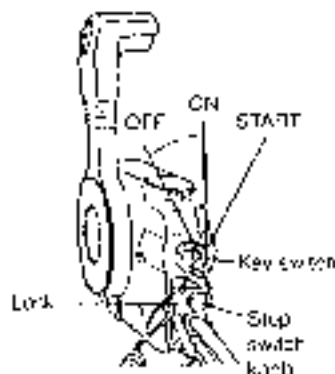

- 2-1. Starting: **EFO - EFTO**  
1) Set the shift lever to Neutral.

**Note**

Be sure that the shift is at neutral when starting the engine.  
This model is provided with start in-gear protection.

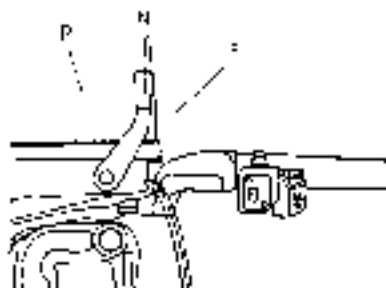

**▲ CAUTION**

If motor starts in gear, do not use, contact your dealer.

- 2) Turn the throttle grip so that the indicator line meets the "START" mark completely closed.



**Note**


Turn the handle grip to the [START] (fully closed), before turning the main switch key to [ON].

The wrong operation (i.e. turn the main switch key to [ON] on the condition that the handle grip is opened) will be memorized by ECU (engine control unit).

If this wrong operation has done repeatedly, it will have a possibility that the three warning lamps flash. In this case, turn the handle grip to [START] (fully closed) and start the next operation after returning the main switch key to [OFF].



- (3) Turn the main switch key to ON, and wait a few seconds until the sound of the warning buzzer stops. And then continue turning the key clockwise to start the engine.

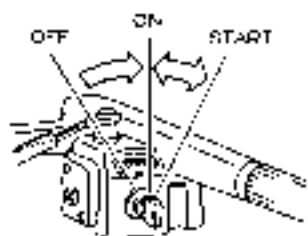

**Note:**

If the main switch key is pressed for 1(one) second during idling or trolling operation, the buzzer sounds and engine revolution changes. Each time the main switch key is pressed in the above manner, engine speed changes as follows.

700 → 800 → 900 → 800 → 700 → 800 → 900 rpm →

- (4) Release the main switch key as soon as the engine starts. The key will return to the 'ON' position automatically.

**Notes**

**'Important'**


1. Extended operation of the starter motor will run the battery down. Operate the starter motor for a maximum of 5 seconds. If the engine does not start, wait for 10 seconds before operating the starter motor again.
2. NEVER operate the starter motor once the engine has started.
3. If the starter motor won't turn over, check that the battery terminal connections are tight and the battery is fully charged.

**▲ CAUTION**

Do not operate engine without ample supply of cooling water. If the cooling water supply is insufficient, damage to the cylinder wall and water pump impeller will occur.

## 2.2 Starting EPTD

- 1) Insert the key into the remote control box.
- 2) Set the Remote Control lever to Neutral (N).

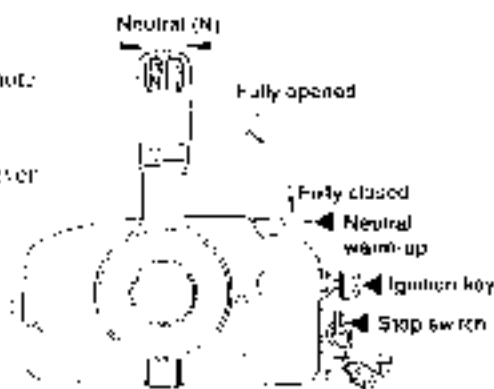


### Note:

Turn the neutral warm-up lever to the fully closed position, before turning the main switch key to [ON].


The wrong operation (i.e. turn the main switch key to [ON] on the condition that the lever is opened) will be memorized by ECU (engine control unit).

If this wrong operation has done repeatedly, it will have a possibility that the three warning lamps flash. In this case, turn the lever to the fully closed position and start the next operation after returning the main switch key to [OFF].

- 3) Turn the main switch key to ON, and wait a few seconds until the sound of the warning buzzer stops.

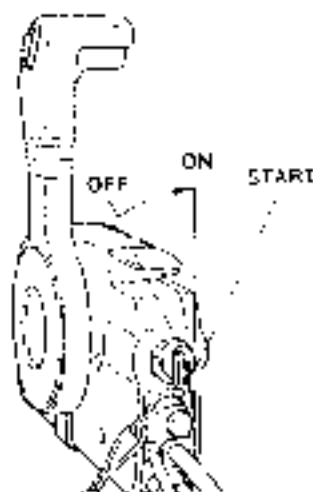

12. Continue turning the key clockwise to start the engine. When the engine starts, release the key and allow it to return to ON.

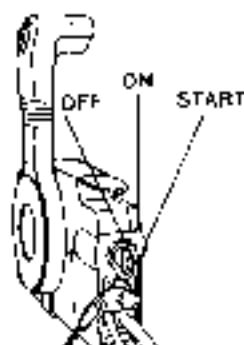

**Note**

If the main switch key is pressed for 1(one) second during idling or trolling operation, the buzzer sounds and engine revolution changes. Each time the main switch key is pressed in the above manner, engine speed changes as follows.

700 → 800 → 900 → 800 → 700 → 600 → 500 rpm →

**Notes:**

**"Important"**

1. Extended operation of the starter motor will run the battery down. Operate the starter motor for a maximum of 5 seconds. If the engine does not start, wait for 10 seconds before operating the starter motor again or starter will be damaged.
2. NEVER operate the starter motor once the engine has started
3. If the starter motor won't turn over, check that the battery terminal connections are tight and the battery is fully charged.

**▲ CAUTION**

Do not drive engine without ample supply of cooling water. If the cooling water supply is insufficient, damage to the cylinder wall and water pump impeller will occur.

### 3 Warm-up


Before driving the boat, let the engine run at low speed to let it warm and allow the oil to circulate through the engine. If the engine is not warmed up beforehand, the engine life will shorten greatly.

This outboard engine automatically controls warm-up operation, namely, it runs at a speed slightly higher than idling just after it is started, and it reverts to the normal running at a preset speed after warm-up is complete.

During the warm-up operation, confirm that cooling water is discharged from the check port and the port.

#### ▲ CAUTION

If cooling water is not discharged and engine operation is continued, the engine will overheat and damage occur.

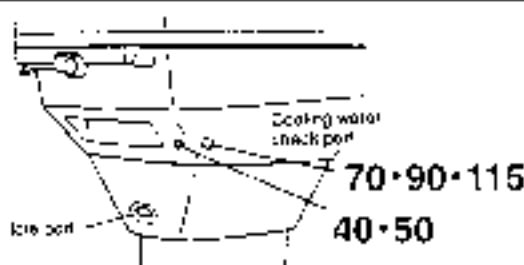

#### ■ Engine speed

Proper idle speed after warm-up operation.

Clutch engaged (In gear)	Clutch disengaged (Out of gear)
700 rpm	700 rpm

#### ▲ CAUTION

Do not shift to [F] or [R] until turning into proper idle speed.

Do not exceed the full-throttle engine speed.

Full-throttle engine speed
5,150 ~ 5,650 rpm

---

## 4 Warning System

When there is something abnormal with the engine, the warning lamp flashes and/or the buzzer sounds.

If a trouble occurs, deal with it as mentioned below.

### (1) ESG (A device preventing over revolution)

ESG is a device to prevent over revolution of the engine.

If the load to the engine becomes light for some reason, it runs at a higher speed than the usual. In such the case, the buzzer sounds and the ESG is activated not to ignite the spark plug, therefore, the engine speed varies.

Remedy

Immediately turn the throttle grip or the control lever to the intermediate or lower speed and move the boat to a safe place. Then, shift the control lever or shift lever to the neutral (N) position and stop the engine.

Engine speed to activate ESG: 6,000 rpm approx.
---

Notes
-------

- If the propeller is damaged such as worn, broken, bent propeller blade(s) or slipping propeller rubber, replace the propeller.
- If the pitch of the propeller is small and the engine runs at a high speed (rpm), replace the propeller with another proper within the full-throttle speed range.

## (2) Warning against low oil level


If the engine oil has decreased to the specified quantity or less, the warning system is activated with flashing of the warning lamp and the buzzer that sounds intermittive warns three times at intervals of 2 minutes.

### Remarks:

The warning system against low oil level is activated regardless of the shift position of the control lever (shift lever), namely, if it is set at "N", "1" or "R" position.

Engine oil remainder subject to warning

Model	Remaining oil
10-50	350 ml approx.
70-90	610 ml approx.
115	1,400 ml approx.

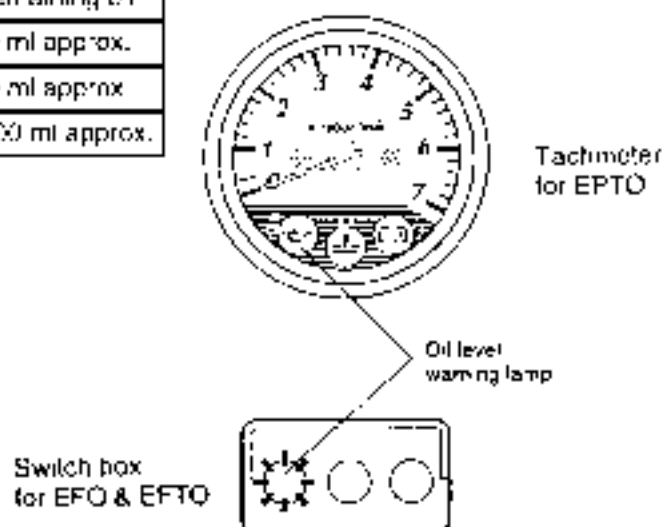

### Remarks

Slow down the engine speed and move the boat to a safe place. Then turn off the main switch and replenish the oil tank with engine oil after the engine completely stops.


After replenishment of oil is complete, start the engine and make sure that the warning lamp in the tachometer is turned off without sounding of the buzzer or the warning lamp in the switch box is turned off without sounding of the buzzer.

### (3) Cooling water lacking

If the cooling water temperature for the engine exceeds the specific degree during operation, the warning lamp flashes with the buzzer sounding and the engine speed is automatically slowed down.

#### Note:

This warning is set out according to the sensing result of the cooling water only; without regard to sensing conditions of combustion, lubrication, etc.

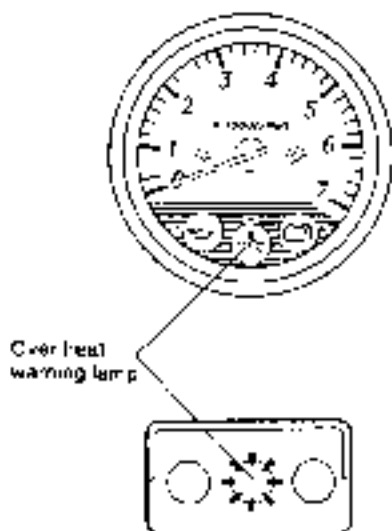

#### Kennedy:

Move the boat to a safe place as soon as possible, and turn the throttle grip or control lever to the low speed position. Then, shift the shift lever or control lever to the neutral (N) position and stop the engine after making sure that cooling water is drained out of the cooling water check port.

If dust, vinyl, etc. are adhering to the gear case, remove them.

Sensing temperature of sensor	Controlled engine speed	Remedy ①:
Lim 1	2 800 to 3 200 rpm	① Slow down to idling speed
Over limit	700 to 900 rpm	② Stop the engine

- ① This controlled engine speed will not be canceled unless the following operation ① and ② is done, although the cooling water get back to normal temperature.

## ⚠ CAUTION

If the buzzer sounds frequently after restarting the engine, please contact your dealer.

#### (4) Battery voltage too low

If the battery voltage drops to 11 V or lower, the warning lamp flashes. And also if the voltage is too high, all of the three warning lamps flash.


If the battery is defective or the battery cable is poorly connected, the warning lamp flashes and the engine speed is automatically slowed down to 2,000 to 3,200 rpm. If the defect is serious, the engine will stop.

#### Remedy

- Check the battery cable connection. If there is a poor connection, reconnect it tightly.
- Charge the battery.
- Replace the battery with a new one.



Battery warning lamp

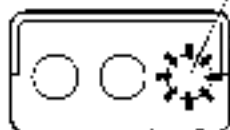


#### (5) Engine trouble

In case of an engine trouble, all the three warning lamps flashes at the same time.

#### Notes:

This warning system has three kind indications with cause of engine trouble as below.

1. The warning lamp flash
2. The engine speed control 2,000~3,200 rpm and the warning lamp flash
3. The engine speed control 700 ~900 rpm, and the warning lamp flash

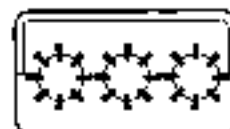

#### Remedy

Consult your dealer about the trouble, because the engine needs inspection and repair service by an authorized serviceman in this case.




## 7. OPERATION

### 1 Forward/Reverse Running


(EFO • EFTO)

Turn the throttle grip toward "SLOW" and move the Shift Lever quickly to Forward or Reverse when the engine speed has reached the lowest rpm.

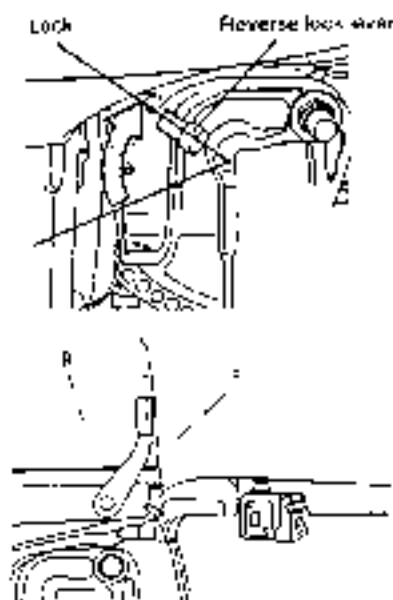

### ▲ CAUTION


1. It may be dangerous to attempt shifting at high RPM. Be sure to slow down to trolling or idling rpm before shifting.
2. Before moving the Shift Lever to Reverse, make sure the Reverse Lock is engaged (in up position) . . . EFO model only.

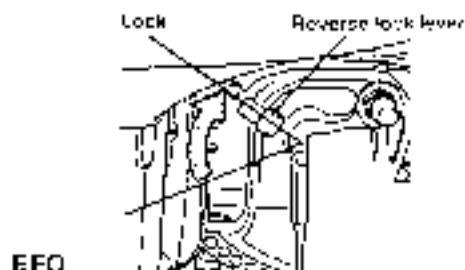

3. Do not increase the engine speed unnecessarily while reversing.
4. The Shift Lever cannot be turned from Neutral to Reverse unless the throttle grip has been turned fully toward 'SLOW'.

## 12) EPTO

While pressing the Lock button on the Remote Control lever upward, swiftly move the Lever to Forward (F) or Reverse (R) to the engaging point (approx. 1/2 forward or backward from Neutral). If the Lever is moved further forward or backward, the throttle will open.

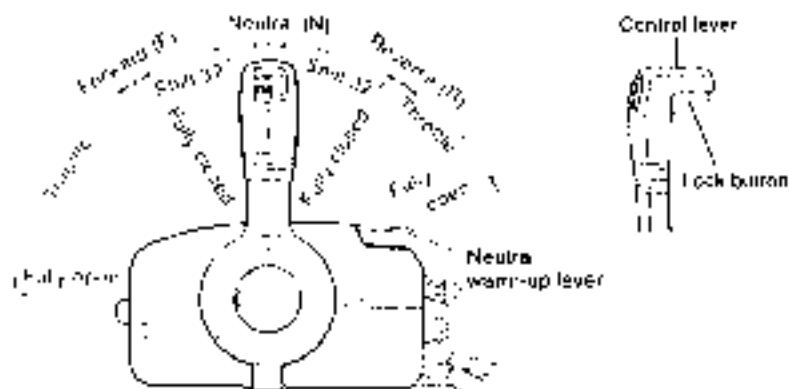

### Note

The Remote Control Lever becomes inoperative unless the neutral warm-up lever is in the fully closed position.

## ▲ CAUTION

- 1 The engine must be at idling speed when the Shift Lever is moved from Forward to Reverse.
- 2 Do not increase the engine speed unnecessarily while reversing.


## 2 Shallow water running

### **▲ CAUTION**

- When in shallow water running, take care that the water strainer is submerged at all times and that water is continuously running out of the cooling water check port.
- Be sure to run slowly when using the shallow water drive. Running at higher speeds will result in lack of control, and may cause damage to the gear case.
- Make sure that the motor does not strike the bottom, especially when running in REVERSE. If the motor strikes the bottom while reversing, the impact is transmitted to the transom, risking damage to both the motor and the boat.

#### 11 EFO

- 1 Set the Reverse Lock Lever provided on the starboard side to 'Release' by turning it downward.

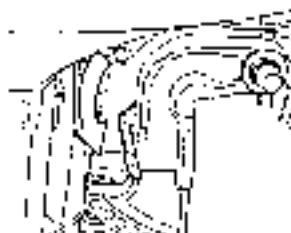


- 
2. Tilt the engine up approx. 15° and lower it. The engine will now be set to the shallow water setting.



• Releasing the shallow water setting

1. Turn the Reverse Lock Lever upward to set them in "LOCK" position.
2. Tilt up the engine slightly and then let it go down. The shallow water setting is then released.
3. The engine is released from shallow water setting, and locked at normal running position.

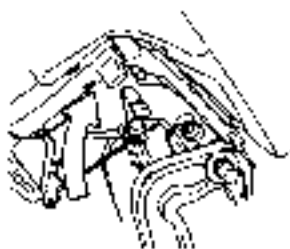

• EFTO • EPTO

Tilt up the engine using the Power Trim & Tilt system.


### 3 Stopping the engine

#### **▲ CAUTION**

NEVER stop the engine immediately after a full throttle run. Keep it running for two or three minutes at idling speed (Shift Lever set to Neutral) to allow it to cool down.


#### 1. I EFO • EFTO

- 1 Reduce the engine speed to idling rpm.
- 2 Turn the Main Switch to "OFF". The engine will then stop.

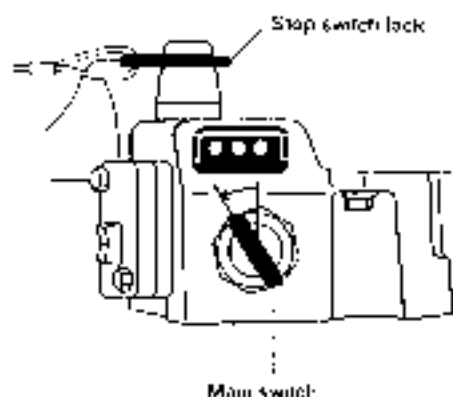


#### 2. I EPTO

- 1 Move the Retrive Control lever to Neutral, and let the engine idle for 2 - 3 minutes to allow it to cool down.

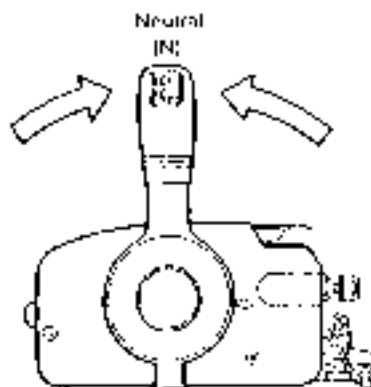

- Turn the main switch key counter-clockwise.  
The engine will stop.

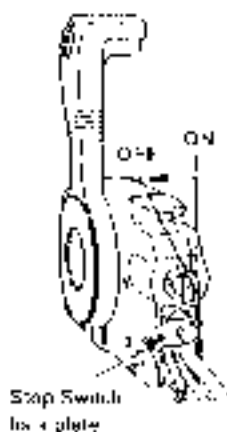


**EFO • EFTO • EPTO**

**Note:**

After the engine has stopped:

Disconnect the cables from the battery if the engine will not be used for an extended period of time.

- Disconnect the fuel connector from the engine.

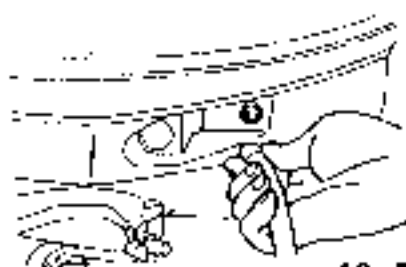

**40•50**



**70•90**

- Close the air vent screw on the fuel tank cap.



## 8. TRIM ADJUSTMENT

The following instructions explain how to set the best trim angle of the boat.

### 1 EFO

The trim angle is adjusted by setting the thrust rod in the correct thrust rod hole.

#### ■ Proper Trim Angle

The trim angle is optimum when the boat is parallel to the water surface while cruising.




#### ■ Improper Trim Angle (bow rises too high)

If the trim angle is excessive, the bow will rise out of the water and the speed will decrease.

Furthermore, the bow may sway or the bottom may slam the water while cruising.




In this case, decrease the trim angle by setting the thrust rod in a lower hole.

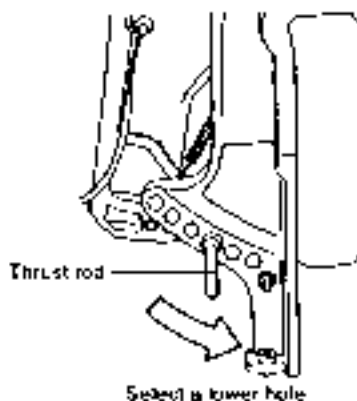

- In proper trim angle (bow dips into the water)

If the trim angle is too small, the bow will dip into water, the speed will decrease, and water may enter the boat.

In this case, the trim angle should be increased by setting the thrust out in a higher hole.

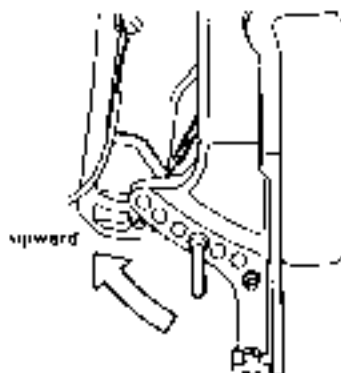

Select a higher hole

## 2 EFTO + EPTO


The provided Power Trim & Tilt can be adjusted to set the desired trim angle of the engine in relation to the transom shape, planing speeds and load. It is imperative that the trim angle is adjusted correctly. Incorrect adjustment will cause the boat to sway, deteriorate engine performance and may cause unsafe steering conditions.

### **▲ CAUTION**

The Power Trim & Tilt can be set to any trim angle, however, avoid cruising with the engine tilted in the tilt range. Operating the boat in this manner, the engine may ingest air into the water cooling system, resulting in engine overheating.



- How to use the trim meter.**  
 When the trim angle is set as desired, take a reading off the trim meter, and record it for future reference.

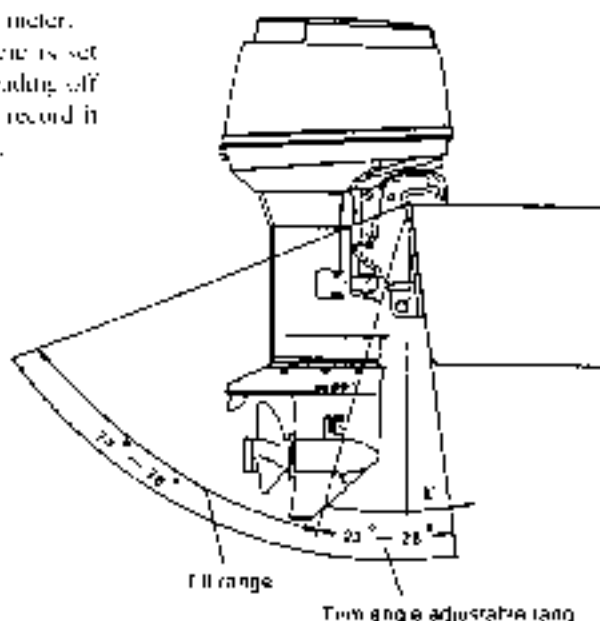

- Improper Trim Angle (bow rises too high)**

If the trim angle is excessive, the bow will rise out of the water and the speed will decrease.

Furthermore, the bow may sway on the bottom ring when the water while cruising.

In this case, decrease the trim angle by pressing the switch on the Remote Control Level to "DN".



---

■ **Improper Trim Angle (bow dips into the water)**

If the trim angle is too small, the bow will dip into the water, the speed will decrease, and water may enter the boat. In this case, the trim angle should be increased by pressing the switch on the Remote Control Lever to "UP".



■ **Proper Trim Angle**

The trim angle is optimum when the boat is parallel to the water surface while running.

## 9. MOORING WITH THE ENGINE TILTED UP

When the engine has been stopped and it will not be used for a long time or when mooring in shallow water, tilt the engine up to prevent damage to the propeller and gear case.

### 1) EFO

1. Do connect the fuel connector from the engine.




40•50



70•90

2. Set the Reverse Lock Lever on the starboard side to "RELEASE" by turning it downward.

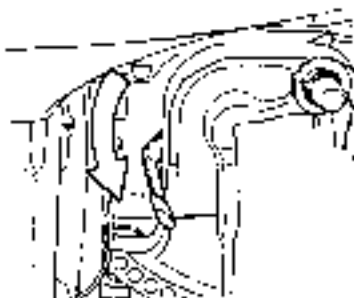

### **▲ WARNING**

#### Tilt Up or Down


When tilting up or down, your finger or hand is not placed in between the swivel bracket and stern bracket.

Be sure to tilt down the outboard slowly.

- 
- Tilt the engine up entirely. The tilt will lock in the raised position.



- To tilt the engine down: Turn the Reverse Lock Lever upward (toward "LOCK"). Tilt the engine up slightly and then let it go down. The Reverse Lock will be set automatically.

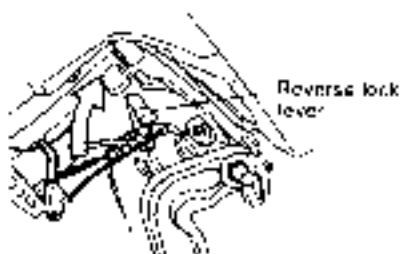


## 12. EFTO • EPTO

1. Disconnect the fuel connector from the engine.



40•50

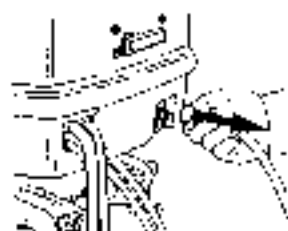


70•90


2. Operate the Power Trim & Tilt switch and tilt the engine up. (The Main Switch must be "ON".)



The engine can also be tilted up using the switch provided under the Lower Engine Cover. (The Main Switch need not be turned "ON" in this case.)

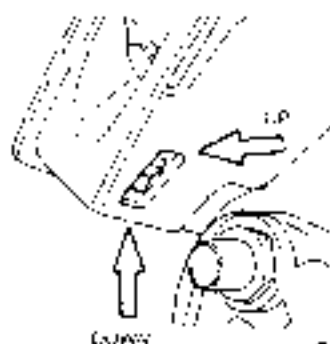

40•50

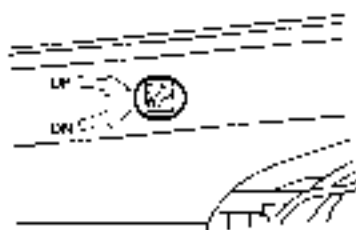

70•90•115

3. Lock the tilt with the Tilt stopper after the engine has been tilted up:



**40•50**




**70•90•115**

4. Manual tilting

If the battery is dead, and the Power Trim & Tilt Switch has inoperative, turn the manual valve a few turns in the Manual direction. This will allow manual tilting of the engine.



**40•50**

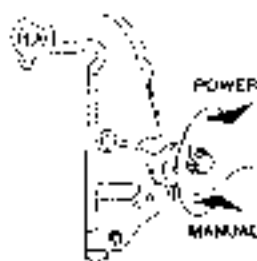

**70•90•115**

## 10. REMOVING AND CARRYING THE MOTOR

### (1) Removing the motor

1. Stop the engine.
2. Disconnect the fuel connector, the remote control cable, the battery leads, bracket fixing bolts and nuts etc.
3. Remove the motor from the hull and completely drain the water from the gear case.

### (2) Carrying the motor

Be sure to keep the engine vertical whenever you carry the motor.



#### ● EFTO • EPTO

When carrying or putting the engine up for storage, make sure the side with the electric motor of the Power Trim and Tilt is down otherwise air will enter the pump system for the Power Trim and Tilt operation.



#### ● EFO

Lay the engine with the shift lever up.

### (3) Storing the motor

Keep the motor in a vertical position when you store it.

**Note:**


If you store the motor in a horizontal position, lay the motor as shown in figure of last page.

### EFO

## ▲ WARNING

When taking the motor from package or removing the motor from the boat, never release the reverse lock lever. If the reverse lock lever is released, it will be very easy for the clamp bracket to spring up to the tilting direction because it is not fixed.

- Tie the clamp bracket to the outboard with a rope.
- Pay attention to the tilting direction not to be injured by the springing clamp bracket.

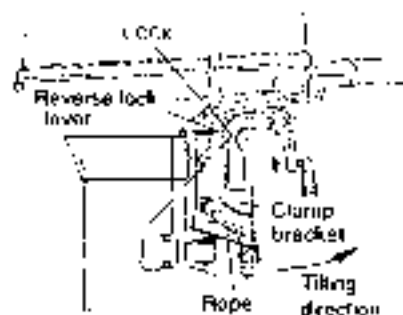



#### (4) Trailering

### **▲ CAUTION**

When trailering the engine should be in a vertical (normal running) position, fully down. Trailering in the tilted position may cause damage to the motor, boat, etc.

If trailering with engine fully down is not available (the gear case skeg is too close to the road in a vertical position), fix the motor securely using a device (like a transom saver bar) in the tilted position.



### **▲ CAUTION**

The tilt support device supplied on your outboard is not intended for trailering. It is intended to support the engine while the boat is docked, beached, etc.

# 11. ADJUSTMENT

## 1 Remote Control Lever Load (EPTO only)

(Throttle friction adjustment screw)

To adjust the load of the Remote Control Lever, turn the throttle friction adjustment screw on the front of the Remote Control box. Turn clockwise to increase the load and counter clockwise to decrease it.




Throttle friction adjustment screw

## 2 Trim Tab Adjustment

If straight-line cruising can not be achieved, adjust the trim tab located under the anti-ventilation plate.

- If the boat veers toward the right, direct the trim tab towards A.
- If the boat veers toward the left, direct the trim tab towards B.

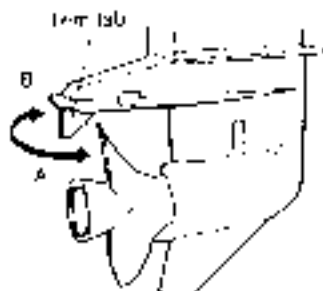

### Notes

1. The trim tab also acts as an anode to prevent electrolytic corrosion. Therefore do not paint or grease this part.
2. After adjustment securely tighten the trim tab fixing bolt.
3. Check for looseness of the bolt and the trim tab at regular intervals. Due to corrosion, the trim tab will wear down over time.

---

### 3 Steering Load Adjustment (40 - 50)

Steering load can be adjusted by turning the steering adjust bolt on the Swivel Bracket.

Turn clockwise to increase the load.

Turn counter-clockwise to decrease the load.

EFO




EFTO - EPTO



### 4 Throttle Grip Turning Load Adjustment (EFO - EFTO)

Turn the friction adjustment screw on the steering handle to adjust the turning load of the throttle grip.

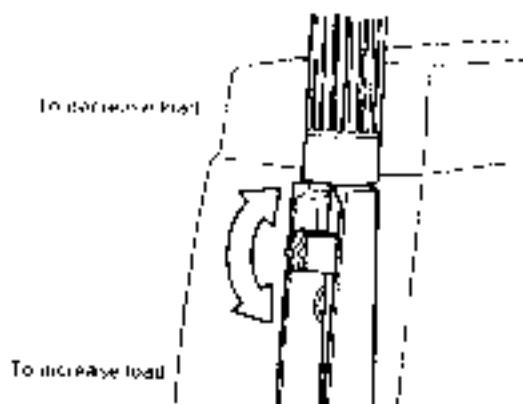

## 12. INSPECTION AND MAINTENANCE

### Care of your outboard motor

To keep your motor in the best operating condition, it is very important that you perform daily, and periodic, maintenance as suggested in the maintenance schedules that follow.

#### ▲ CAUTION

- Your personal safety and that of your passengers depends on how well you maintain your outboard motor. Carefully observe all of the inspection and maintenance procedures described in this section.
- The maintenance intervals shown in the check list apply to an outboard motor in normal use. If you use your outboard motor under severe conditions such as frequent full throttle operation or frequent operation in brackish water, maintenance should be performed at shorter intervals. If in doubt, consult your dealer for advice.
- We strongly recommend that you use only genuine replacement parts on your outboard motor. Damage to your outboard arising from the use of other than genuine parts is not covered under the warranty.

### EPA Emissions Regulations

EPA (United States Environmental Protection Agency) has emission regulations and is controlling air pollution from new outboard motors. All new motors manufactured by us are certified to EPA as conforming to the requirements of the regulations. This certification is depend upon factory standards. Therefore, factory specifications must be followed when servicing emission related controls, or making adjustments.

**Maintenance, replacement, or repair of the emission control devices and systems may be performed by any marine SI (Spark Ignition) engine repair establishment or individual.**

## 1 Daily Inspection

Perform the following checks and inspection before and after use.


Item	Points to Check	Action
Fuel System	<ul style="list-style-type: none"> <li>● Check the amount of fuel in the tank.</li> <li>● Check for dust or water in the fuel filter.</li> <li>● Check rubber pipes for oil leakage.</li> </ul>	Replenish Clean Replace
Lubrication System	<ul style="list-style-type: none"> <li>● Check the amount of engine oil in the oil tank.</li> <li>● Check for dust or water in the oil filter.</li> </ul>	Replenish Clean
Electrical Equipment	<ul style="list-style-type: none"> <li>● Check the spark plugs for dirt, wear and carbon build-up.                      Spark plugs (10 - 50) NGK PZFR6H (0.8 mm gap) (0.015 in)                      Spark plugs (70 - 90 - 115) NGK IZFR6J (0.8 mm gap) (0.0315 in)</li> <li>● Check if the main switch functions normally.</li> <li>● Check if the battery electrolyte level and specific gravity are normal.</li> <li>● Check for loose connections on battery terminal.</li> <li>● Check if the stop switch functions normally and make sure the lock plate is present.</li> <li>● Check cords for loose connections and damage.</li> </ul>	Clean or replace  Remedy or replace  Replenish or recharge  Tighten  Remedy or replace  Connect or
Throttle System	<ul style="list-style-type: none"> <li>● Check if the throttle works normally when turning the throttle grip, and also check links for looseness.</li> </ul>	Correct  Adjust
Clutch and Propeller System	<ul style="list-style-type: none"> <li>● Check if the clutch engages correctly when operating the Remote Control (or Shift lever).</li> <li>● Check the propeller for bent or damaged blades.</li> <li>● Check if the propeller nut is tightened and the split pin is present.</li> </ul>	Adjust  Replace
Installation of Motor	<ul style="list-style-type: none"> <li>● Check all the motor installation bolts with the boat.</li> <li>● Check the thrust rod installation.</li> </ul>	Tighten Tighten
Power Trim & Lift	<ul style="list-style-type: none"> <li>● Check working of the lift up and down of the motor.</li> </ul>	

Item	Points to Check	Action
Cooling Water	<ul style="list-style-type: none"> <li>● Check that cooling water is discharged from the cooling water check port after the engine has started.</li> </ul>	
Tools and Spares	<ul style="list-style-type: none"> <li>● To be prepare tools and spare parts for replacing spark plugs, propeller, etc.</li> <li>● Check if the spare tools is provided.</li> </ul>	
Steering Devices	<ul style="list-style-type: none"> <li>● Check working of steering handle and remote control.</li> </ul>	
Other Parts	<ul style="list-style-type: none"> <li>● Check if the anode and trim tab are securely installed.</li> <li>● Check the anode and trim tab for corrosion and deformation.</li> </ul>	Repair if necessary Replace

#### 1. Washing with fresh water

When the engine has been used in salt water or polluted water, wash the exterior and flush the cooling passage with fresh water using the flushing attachment.

Screw the included flushing attachment into the wash hole on the gear case. Connect a water hose to the flushing attachment and flush out with water. (Be sure to secure the water strainer and sub-water strainer on the gear case before use.)

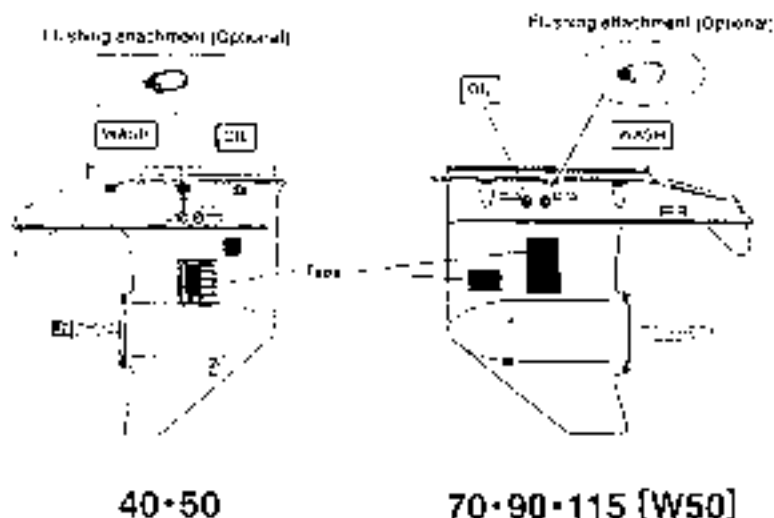

<b>⚠ WARNING</b>
To prevent rotation of the propeller, remove it before flushing the passage.


Wash the engine before long term storage.

Rinse the engine at low speed with the Remote Control lever (or Start) lever set to Neutral to flush out fresh water from the cooling system and in the process remove salt, mud and other foreign particles.

### Washing (continued) (for 115 model)

- Stand the engine upright. (Don't put the engine in the tilt-up condition.)
- Remove the flushing connector cap located in the left side of the bottom cowel.
- Install the flushing attachment (these parts supplied as an accessory to the Flushing connector) and then connect a rubber hose to the flushing attachment. Connect the other end of the rubber hose to a faucet (water tap) and turn on the faucet to wash the engine.
- It is not required to run the engine during this washing.

## 115

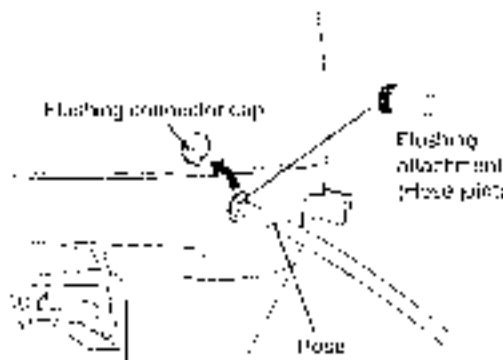

### **⚠ WARNING**

To prevent rotation of the propeller, remove it before flushing the passage.




**Note:**

Run the engine at low speed when flushing the cooling system.

**2 Replacing the propeller**

A worn or bent propeller will affect engine performance and may cause engine failure.


- 1 Pull out the split pin and remove the propeller nut and washer.
- 2 Remove the propeller by pulling toward you.
- 3 Apply marine grease to the propeller shaft before mounting the new propeller.
- 4 Fit the washer, securely tighten the nut and insert the split pin.

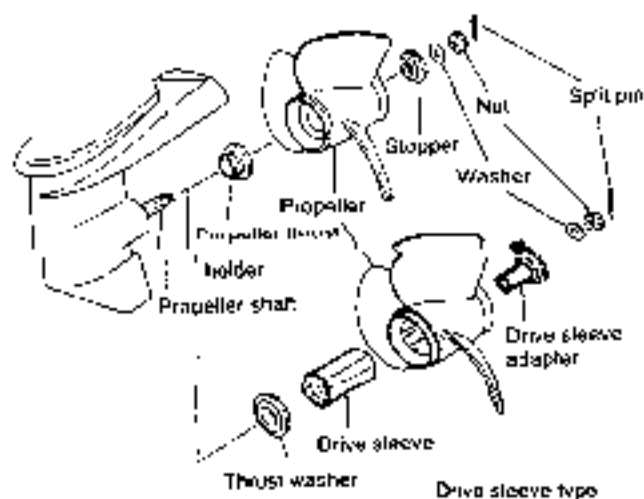**▲ CAUTION**

Before removing the propeller, remove the spark plug caps from the spark plugs for your safety.

### 3. Replacing the spark plugs

1. Remove the top cover.
2. Remove the spark plugs by turning counter clockwise with the socket wrench (16mm / 5/8 in) fitted with the handle. Tap lightly on the spark plugs if they are hard to turn.

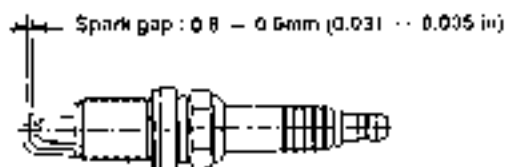

## **▲ CAUTION**

Do not touch the high tension cords running from the ignition coil to the spark plugs while the engine is running or is turned by the electric starter motor, not even for testing the high tension cords or the spark plugs.

The high tension cords and the spark plugs generate very high electric voltage, which can cause a serious electric shock if touched.

## 2 Periodic Inspection

It is important to inspect and maintain your outboard motor regularly. At each interval on the chart below, be sure to perform the indicated servicing. Maintenance intervals should be determined according to the number of hours or number of months, whichever comes first.

For periodic inspection and maintenance, consult your servicing dealer.

### Note:


Your outboard motor should receive careful, and complete inspection at 200 hours. This is the best time for major maintenance procedures to be carried out.

Item		Servicing interval					Action	Remarks
		10 hours or 1 month	50 hours or 3 months	Every 100 hours or 6 months	Every 150 hours or 1 year	Every 200 hours or 2 years		
Fuel System Control System	Fuel filter	✓	✓	✓	✓	Replace	Check and clean	For high pressure
	Piping				✓	Replace	Check and clean	
	Fuel tank		✓			✓	Clean	Including filter
	Air filter			✓		Replace		
	Purge (oil)			✓		Replace		
	Fuel pressure Air pressure					✓		
Ignition	Spark plugs	✓	✓	✓	✓	✓	Check gaps. Remove carbon deposits.	
Starting System	Starter (oil)	✓	✓	✓	✓	✓	Check for oil deposits and battery cable condition.	
	Battery	✓	✓	✓	✓	✓	Insulation (if any) quantity greatly	

Item		Servicing Interval					Action	Remarks
		10 hours or 1 month	50 hours or 3 months	Every 100 hours or 6 months	Every 150 hours or 1 year	Every 200 hours or 2 years		
Lower Unit	Inspect	••	••	•	••		Bend or blades damage, wear	
	Check oil	•••••		•	•	•	Change of oil or replenishment and water tank	
	Water pump			•	Replace	•	Check for wear or damage	Replace impeller every 12 months
Bolt and Nut		•	•	••	•	•	Tighten	
Siding and Peeling Parts: Various Nipples						•	Apply and paint in grease	
Fuses, Taps & Tap		•		•	•	••	Check power and oil level and add. Check function of manual release valve	
Engine Oil System	Oil tank						Check for leakage, damage, position of plug and filter conditions	Repair or replace
	Oil pipe							
	Oil filter							
Warning System			•	•	•			
Anode						•	Check corrosion and colonization	Replace

## 1) Changing Gear Oil


- Remove the oil plugs (upper and lower), and drain the gear oil completely.

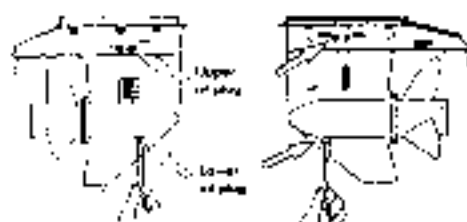


40•50

70•90•115  
[W50]

- Insert the oil tube nozzle into the lower oil plug hole, and squeeze the tube until the oil flows out of the upper plug hole.

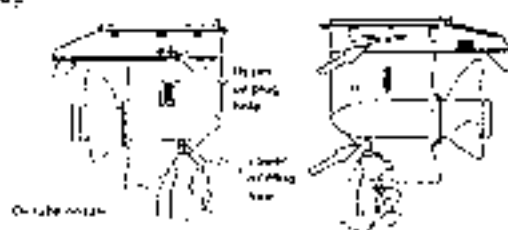

- Install the upper oil plug. Then remove the oil tube nozzle and install the lower oil plug.

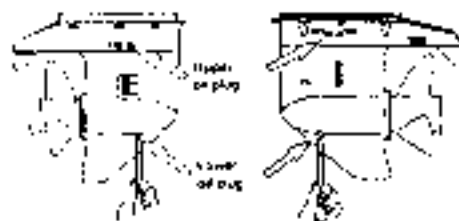

### Note:

Use only genuine or recommended gear oil or, if not available, an API (American Petroleum Institute) oil grade of GL5 SAE #80 ~ SAE #90.

Required volume: 40 - 50 approx. 500mL (16.69 U.S. fluid oz)


: W50 approx. 700mL (23.65 U.S. fluid oz)

: 70 • 90 • 115 approx. 900mL (30.40 U.S. fluid oz)

## 2) Cleaning Tanks and Filters

- 1) Fuel filters are provided inside the fuel tank and on the engine.

Loosen a Fuel Pick-up Elbow and remove it.  
Then clean the Fuel Filter.

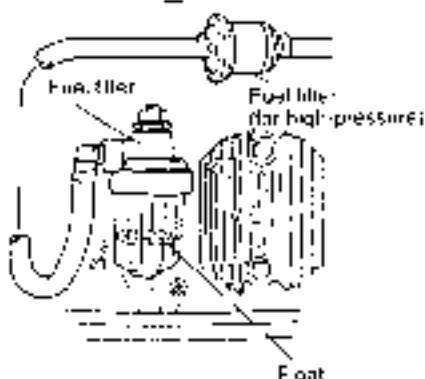


### Cleaning Fuel Tank

Water or dirt in the fuel tank may cause engine trouble.

Clean the tank at special times or after long time storage (over three months).

Clean the filters on the engine after removing the fuel filter cases.

If the red float is floating in the fuel filter, water is present. In such the case, immediately remove the cap and drain out the water.

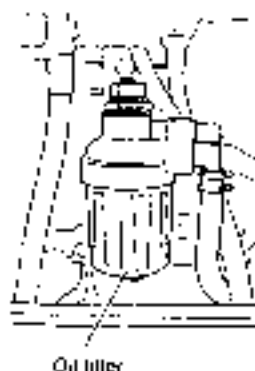


2. Oil filter and oil tank. Check the oil tank and/or filter for entrapped water and dirt.
  1. Disconnect all pipes between the oil tank and oil pump.
  2. Clean out foreign matter.
  3. Re-fit the pipes to the oil tank and pumps, and then fill up with new engine oil.
  4. For air purging, refer to Item No. 5 Fuel and Engine Oil.


### 3) Checking and Refilling Oil in the Power Trim & Tilt.

1. Check the oil level of the reservoir tank as shown on the right while the tank is kept in a vertical position. Tilt the engine up to check the oil level in the tank.
 

Remove the oil cap by turning counter-clockwise, then check if the oil level reaches the bottom line of the plug hole.

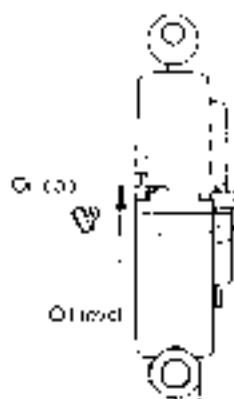

40•50

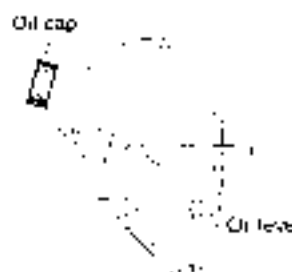

70•90•115

## ▲ CAUTION

Do not fully unscrew the oil plug with the engine tilted down. Pressurized oil in the oil tank may spurt out.

## 2. Recommended Oil

Use an automatic transmission fluid or equivalent.  
Recommended oil is as shown below.


## 3. How to Drain Oil

### 1. Air purging from the Power Trim and Tilt unit.

Entrapped air in the Power Trim & Tilt unit will cause poor tilting movement. With the engine mounted on the boat, set the manual release valve to the Manual side, and tilt the engine manually up/down 3-6 times while checking the oil level. When done, close the valve by turning it clockwise towards the Power side.



**40-50**

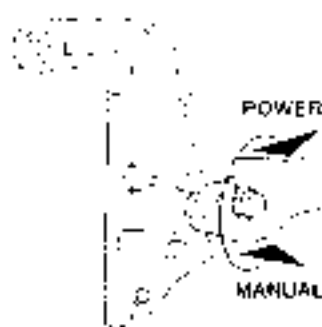

**70-90-115**



## 13. OFF-SEASON STORAGE

---

### **▲ WARNING**

1. When the motor is out of the water, being transported, or in storage, always remove the negative ( - ) battery cable to prevent accidental starting of the engine. Accidental starting when the motor is out of the water will cause water pump failure, overheating and damage to the engine due to a lack of cooling water.
2. Remove all spark plug connectors from the spark plugs when servicing the engine or propeller.

When your outboard motor is in storage, this is a good opportunity to have it serviced or overhauled by your dealer.

#### **1 Engine**

1. Wash the engine exterior and flush the cooling water system thoroughly with fresh water. Let the water drain completely.  
Wipe off any surface water with an oily rag.
2. Drain the fuel out of the fuel tank and clean the inside of the tank and fuel filter.
3. Clean the engine fuel filter.
4. Clean the oil filter.
5. Remove the spark plugs and feed genuine Engine Oil or storage fogging oil through the spark plug holes.  
Turn the engine over several times while feeding the oil into it and make sure it is evenly distributed.
6. Apply grease to the propeller shaft.
7. Change the gear oil in the gear case.
8. Apply grease to all sliding parts, joints, nuts and bolts.
9. Use a dry cloth to completely wipe off water and salt from the electrical components.
9. Stand the engine vertically in a dry place.

---

## 2 Battery

1. Disconnect the battery cables.
2. Clean the exterior of the battery with fresh water or compressed air. Wipe off any chemical deposits, dirt and grease from the battery.
3. Apply grease to the battery terminals.
4. Charge the battery completely before storing it for the winter.
5. Recharge the battery once a month to prevent it from discharging and the electrolyte from deteriorating.
6. Store the battery in a dry place with its cover attached.

### **▲ CAUTION**

1. Do not allow the battery to discharge, since it can be damaged by freezing.
2. When storing your outboard for the winter, open up all the water drain holes in the gear case to permit any remaining water to drain out. If a speedometer is installed, disconnect the pickup tube and allow it to drain, then reconnect it after draining. Trapped water may crack the gear case or water pump case as a result of expansion when frozen. Check and replenish the gear case with case specified Gear Oil before storing the motor, to avoid water leakage into the gear case due to a loose lubricant vent plug or grease fill plug. Inspect the gaskets under the lubricant vent and grease plugs, replace them if necessary, and reinstall the plugs.

## 3 Electric Starter Motor

1. Coat the pinion gear and shaft of the electric starter motor with grease.

## 14. PRE-SEASON CHECK

Have your dealer check the engine before the season starts, or if you prefer, be sure to check the following items yourself.

1. Check the electrolyte level, and measure the voltage and specific gravity of the battery.

Specific Gravity at 20°C	Terminal Voltage (V)	Charge Condition
1.120	10.5	Fully discharged
1.160	11.1	1/4 charged
1.210	11.7	1/2 charged
1.250	12.0	3/4 charged
1.280	13.2	Fully charged

2. Check that the battery is secure and the battery cables installed properly.
3. Clean the engine oil filter.
4. Purge air in the vinyl pipe connecting the oil tank to the oil pump.
5. Check that the shift and throttle function properly.  
(Be sure to turn the propeller shaft when checking the shift function or else the shift linkage may be damaged.)
6. If the engine has been kept with oil running for a long time, the following operation is required before starting it:
  - Air purging for oil line – Refer to Item No. 5 Fuel and Engine Oil, Oil pump (p. 57).
  - Forced fuel feeding – Refer to Item No. 6 Running, 7 Starting.
  - Forced engine oil feeding – Refer to the same as above.

## 15. CHECKING AFTER STRIKING UNDERWATER OBJECT

---

- Striking sea bottom or underwater object may severely damage the outboard. Immediately bring the outboard to your dealer and ask for the following checks:
- (1) Presence or damage of power unit installation bolts, gear case and extension case bolts, propeller shaft housing bolts, upper and lower in-suit rubber bolts and nuts, power trim and tilt belts, and in-suit rubber cap bolts.
  - Ask to tighten loose bolts and nuts, and to replace damaged parts.
  - (2) Deformation and damage of in-suit rubber, tilt stopper, thrust pad, gears and clutch and propeller.
  - Ask to replace damaged or deformed parts.

## 16. IF THE ENGINE BECOMES SUBMERGED IN WATER

---

After picking up, immediately bring the outboard to your dealer.

Following are the emergency measures to be taken on the submerged outboard:

- 1. Take it out of water immediately and wash it with fresh water to remove all traces of salt and dirt.
- 2. After picking up the engine, ask the dealer to perform the necessary actions to make sure the engine is brought back to a safe operating condition.

## **17. PRECAUTIONS IN COLD WEATHER**

---

When motoring in cold weather at sub-zero temperatures the water in the cooling water pump may freeze and severely damage the pump, impeller, and associated parts. To avoid this, submerge the lower half of the engine into the water or fill the engine and operate the electric starter motor for 5 seconds with the stop switch lock plate given away to allow the water to drain completely.

## **18. TROUBLESHOOTING**

---

If you encounter a problem with the engine, check the list below and locate the problem you are experiencing. Then follow the suggested remedies.

Do not hesitate to contact your dealer, as professional advice and assistance is the best way to keep the engine in optimum condition.

Does the engine start?	Engine runs smoothly	Engine will not idle	50-100 RPM fuel pump	Power Turn & Kill	Possible Causes
●					Empty fuel tank
●	●				Incorrect connection of fuel system
●	●				Air enters fuel line
●	●				Defunct or damaged fuel pipe
●	●				Closed or vent or fuel tank cap
●	●				Fuel filter fuel pump is clogged with dust
●	●				Use of improper gasoline
●	●				Incorrect vented fuel leading by primer bulb
●	●				Poor condition of compression system
●	●				Use of non-specified spark plugs
●	●				Out of spec. electrodes on spark plugs
●	●				No sparking or poor sparking (failure in component of igniter system)
●	●				Insufficient cooling water flow

Difficulty starting engine	Engine runs erratically	Local engine overheats	Battery will not hold charge	Starts normally but won't crank	Power Trim & Kill switches inoperative	Possible Causes
•	•	•				Proper ventilation
	•	•				Overcrowded in bilge or gelcoat
	•	•				Overheated or vent plugged
	•	•				Maintained too long Overload
	•	•				Transom is too high/low
•	•	•				Bilge or the boat is strained or damaged
	•	•				Insufficient or only emergency
•				•	•	Battery is charged insufficiently
•			•	•	•	Battery is nearly dead. Poor connection of battery terminal. Low level of electrolyte
				•	•	Power Trim & Kill switch is defective.
•				•	•	Wrong positioning of shut lever at kill switch/trim position
•			•	•	•	Main switch is defective
•						Lock plate is not inserted or poorly inserted into stop switch
•			•	•	•	Wiring wrong, disconnection, poor connection
•				•	•	Faulty operation of starter motor starter solenoid
					•	A great deal of air is contained in the pump

## 19. TOOL KIT AND SPARE PARTS

### 40•50•70•90

Name			Remarks
Serving Tools	Tool Bag	1	
	Socket Wrench (11mm)	1	
	Socket Wrench (11 x 13)	1	
	Socket Wrench Handle	1	
	Pliers	1	
	Screwdriver (Phillips type and flat head)	1	Adaptor-type
Spare Parts	Rope (1 600mm)	1	
	Spark Plug (40 - 50)	3	NGK PZFRCH
	Spark Plug (70 - 90)	3	NGK IZFR5J
	Split Pin	1	Diameter & length 3 x 25mm
Parts Packaged with Engine	Bracket Fixing Bolts	4	12 mm
	Bracket Fixing Nuts	4	12 mm
	Washers A, B	4 each	A (large) B (small)
	Fuel Tank (with primer tube)	1	
	Remote Control Box	1	} for EPTO
	Clng Link	1	
	Tachometer	1	
	Trim motor	1	
Lead Wire for Meter	1		

⊖ Not included as standard accessories in some markets.



	Name		Remark
Service Tools	Tool Bag	1	Adaptor-type
	Socket Wrench (16mm)	1	
	Socket Wrench (10 x 13)	1	
	Socket Wrench Handle	1	
	Pliers	3	
	Screwdriver (Phillips-type and flat head)	1	
Spare Parts	Spark Plug (115)	4	NISK (ZFHSJ)
	Split Pin	1	Diameter x length 3 x 20mm
Parts Packaged with Engine	Bracket Fixing Bolt	4	12 mm
	Bracket Fixing Nut	4	12 mm
	Washers A, B	4 each	A (large), B (small)
	Drag Link	1	
	Pushing attachment (Loss joint)	1	For washing

\* Fuel tank, remote control box, tachometer, turn meter, meter lead wire and pre-celler are not enclosed in the engine package.

## 20. PROPELLER TABLE

To ensure optimum performance, the propeller should match the boat type and its load.

Heavier Load ↑	Mark	40	50	Mark	W50
		CS7			9
	CS9			10	
	CS11			11	
	CS12	S-L-UL transom		12	L-UL transom
	CS13		S-L-UL transom	13	
	CS14			14	
	CS15			15	
				16.5	
Lighter Load ↓				17.5	

NOTE: CS12 shows propeller with four blades.

### PROPELLER

Use a genuine propeller.

A propeller must be selected so that the engine rpm measured at wide open throttle, while cruising, is within the recommended range:

5,150 to 5,850 rpm

To ensure optimum performance, the propeller should match the boat type and its load.

Hull Load	Mark	70 - 90	Mark	≥115
	↑	M-11		M-11
	M-13		M-13	
	M-15	L-UL transom	M-15	
	M-16		M-16	
	M-17		M-17	
	M-19		M-19	
	M-21		M-21	
↓				
Lighter Load				

#### PROPPELLER

The 115 model is supplied with no standard propeller. It is shipped from the factory without a propeller.

Select a propeller properly to the max. operating range 45 150 to 5,850 rpm of the engine.

## 21. OPTIONAL ACCESSORIES

---



Speedometer  
(50MPH)



Speedometer  
(75MPH)



Water Pressure  
Meter



Voltmeter



Hour Meter  
(engine operation  
hour counter)




Fuel Meter



Tachometer




Flushing attachment

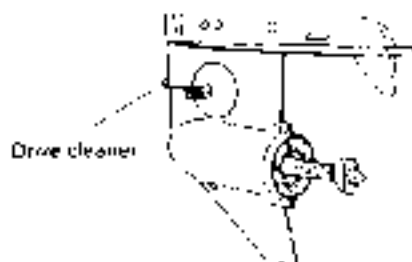

Drive cleaner




Twin Control Bar Kit  
(for twin engine operation)

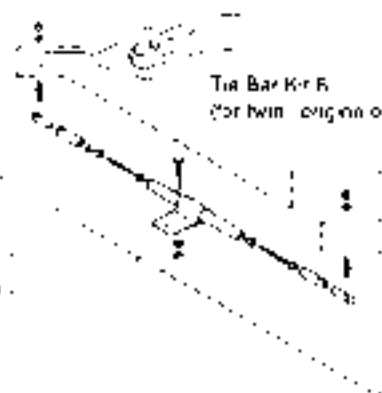


Tie Bar Kit B  
(for twin engine operation)



Propeller

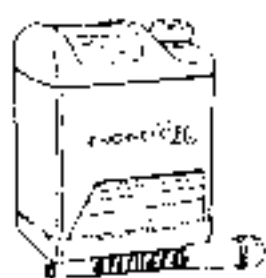

Engine Oil  
(4L)

 

Grease  
(250g)



Grease Oil  
(500mL)



Touch-up Spray Paint

NISSAN MARINE CO., LTD

Printing: Mar. 2006

No.: 003N11075-5

Printed in Japan

<https://www.boat-manuals.com/>