

SILVERTON



OWNER'S MANUAL






SILVERTON

MARINE CORPORATION AN EMPLOYEE OWNERSHIP COMPANY

# Thank you!!

from your  
Silverton Team!

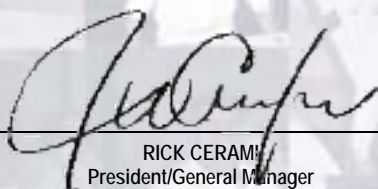


---

RICK CERAMI  
President/General Manager



---

 BOB CERAMI  
Vice President of Operations

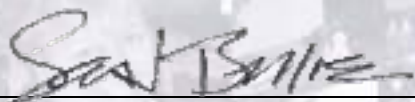


---

SEAN BERRIE  
Director of Design & Engineering



---

 WALT SHARP  
Chief Engineer

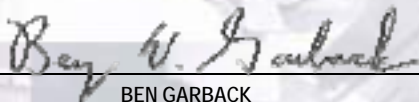


---

BEN GARBACK  
Comptroller




---

 JENNEY PETERSEN  
Accounting Manager

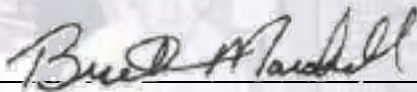


---

 BRETT MARSHALL  
Director of Sales

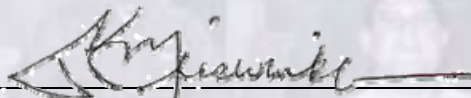


---

 BOB MEISWINKLE  
Regional Sales Manager

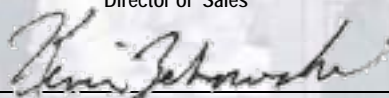


---

 KEN ZEBROWSKI  
Customer Service Manager

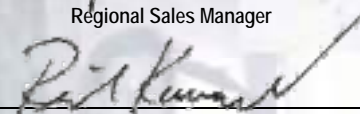


---

 RICH KARRASCH  
Quality Assurance Manager

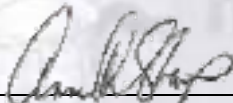

---

 ANNE SHARP  
Human Resources Manager

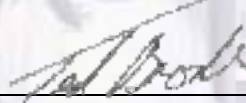


---

TED BRODE  
Purchasing Manager




---

 KEN SHARRETTS  
Production Manager

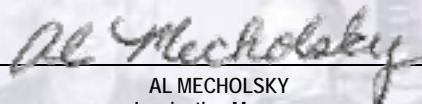

---

 AL MECHOLSKY  
Lamination Manager

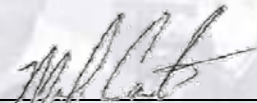

---

MIKE CARTER  
Mill Manager





# TABLE OF CONTENTS

## **Introduction**

Letter from the President.....	5
The Silverton Story.....	7
Introduction to your Owner's Manual.....	9
Warranty Information.....	13
Recommended Reading.....	19
Record Keeping.....	19
Accident Reporting.....	19

## **Getting Familiar**

Hull.....	1
Deck.....	5
Bridge.....	9
Interior.....	13
Engine Compartment.....	21

## **Boating Safety**

Boating Safety.....	1
Safety Equipment.....	1
Fire Equipment.....	2
Navigation Rules of the Road.....	7
Basic Rules of Safe Boating.....	8
Carbon Monoxide Safety.....	11
Fuel Safety.....	15
Emergency Situations.....	15
Hazardous Weather Conditions.....	16
Fire Safety.....	16

## **Systems Operation**

Air Conditioning/Heating System.....	1
Anchor System.....	3
Bilge Pump System.....	7
Bilge Ventilation System.....	9
Bonding System.....	11
Carbon Monoxide (CO) Detector System.....	13
Electrical Systems.....	15
Entertainment System.....	27
Automatic Fire Extinguisher System.....	29
Portable Fire Extinguisher System.....	31
Fresh Water System.....	33
Fuel System.....	37
Generator System.....	47
Hot Water System.....	49
Propulsion System.....	51
Marine Sanitation System.....	55
Shower Sump Pump System.....	59
Steering System.....	61
Shift/Throttle Control System.....	63
Trim Tab System.....	65
Oil X-Changer System (Optional).....	67
Icemaker Unit (Optional).....	69
Spotlight (Optional).....	71
SeaKey.....	73

## **Cleaning and Maintenance**

Interior.....	1
Exterior.....	2
Canvas Enclosure (Optional).....	4
Winterization and Storage.....	5

## **Operating your Yacht**

Engine Startup Preparation.....	1
Engine Startup.....	2
Shakedown Cruise.....	3
Getting Underway.....	4
Daily Engine Shutdown.....	4
16 Ways to Reduce Fuel Costs.....	5

## **Glossary**

Warning Labels.....	5
Identification Labels.....	7
Maintenance Log.....	9
Maintenance Schedule.....	11
Boat Record.....	13
Boating Accident Report.....	15
Float Plan.....	19

## **SYSTEM SCHEMATICS.....**

# SPECIFICATIONS

## 33 CONVERTIBLE

Overall Length - 31' - 6"  
Length at Waterline - 28' - 3"  
Beam - 12' - 6"  
Beam - Waterline - 11' - 8"  
Draft (Maximum) - 2' - 6"  
Displacement (dry) - 15,586 lbs.  
Displacement (full fluids) - 18,049 lbs.  
Transom Deadrise - 14 degrees

Fuel Capacity - 200 Gallons  
Fresh Water Capacity - 80 Gallons  
Waste Water Capacity - 30 Gallons  
Water Heater Capacity - 10.5 Gallons  
Average Headroom - 6' - 4"  
Sleeping Capacity - 4 to 6 persons

---

---

# INTRODUCTION

---

---

*Thank You!*  
*From the President*

Dear Silverton Owner,

Congratulations and welcome to the Silverton Family! As a Silverton owner, you will enjoy the quality and the attention to detail for which our Silverton yachts are renowned. Silverton and your dealer are committed to your service and total satisfaction.

This Owner's Manual will acquaint you with the proper operation and maintenance of your new Silverton yacht, as well as boating safety; which is our primary concern, whether docked or at sea.

Please mail in all manufacturers' registration and warranty cards to ensure that your Silverton and Original Equipment Manufacturer (O.E.M.) warranties are valid. The individual warranty cards are contained in the Owner's Packet along with all of the O.E.M. Manuals. Please remember that all

information contained in the O.E.M. Manuals supersedes the information contained in this Owner's Manual.

Finally, if you are new to boating, be certain to learn the proper rules of seamanship to ensure your safety and the safety of your passengers. Refer to Chapman's Piloting, Seamanship, and Small Boat Handling Manual for important and useful information concerning this aspect of boating. Attend a safe boating course offered by the United States Coast Guard Auxiliary, United States Power Squadron, or any enterprise experienced in conducting safe boating courses.

Thank you for choosing a Silverton. I am confident your new yacht will provide you and your family with years of enjoyable cruising.



Richard Cerami, President  
Silverton Marine Division



---

---

# THE SILVERTON STORY

---

---

SILVERTON YACHT OWNERS AND FOUNDERS

## WARREN LUHRS & JOHN LUHRS

Hailing from East Orange, New Jersey, John and Warren Luhrs' ancestry goes back to their great-grandfather, Henry, who helped pioneer the development of railroading and clipper ships in America, and to their great-uncle, John, who helped build the famous St. Petersburg-to-Moscow Railroad for Russian Czar Alexander II.

Henry Luhrs owned shares in twenty-two different ocean-going vessels - barques, brigs, and schooners - and was the principal owner of the barque, Sophia R. Luhrs, named after his wife. He was also a partner with Albert Sprout, who managed a shipyard in Melbridge, Maine, where the Sophia R. Luhrs was built.

The Luhrs' family sea tradition was carried on during the Great Depression by John and Warren Luhrs' father, Henry, who worked at a small boat manufacturer in Morgan, New Jersey, and later started his own company. When war broke out in Europe, the United States Coast Guard asked Henry Luhrs to repair their boats and install ice sheathing on their bows.

After World War II, Henry built 27-foot fishing boats and, in 1948, he began to construct custom-built pleasure craft. He then turned to skiffs and, in 1952, incorporated as "Henry Luhrs Sea Skiffs". He constructed lap strake sea skiffs using assembly-line techniques. Henry personally "shook down" his prototypes with family trips up the Hudson River to Lake Champlain.

Henry Luhrs' basic philosophy was to emulate the late Henry Ford in building an inexpensive boat for the average man, thus enabling him to enjoy the luxury of boating. He was both designer and engineer, creating innovative and progressive new models. He designed the change in the line of the bow from straight to curved at a time when all boats were being built with the straight, square effect. It is believed he was also the first designer-builder to popularize a small boat with a flybridge.

In 1960, Henry Luhrs acquired the Ulrichsen Boat Company, located in Marlboro, New Jersey. It was here, too, that the Luhrs Alura Fiberglass Division was located. In 1965, Henry sold his company to Bangor Arrostock Railroad, which was to become the recreational conglomerate, Bangor-Punta. It was also during this period that the Silverton Company in Toms River, New Jersey, was purchased by his sons, John and Warren Luhrs.

Today, John and Warren own Silverton Marine Corporation, Hunter Marine Corporation, Mainship Motor Yachts Corporation, and Luhrs Fishing Boats Corporation, known as the "Luhrs Marine Group."

In January 1996, John and Warren transferred a portion of the Luhrs Marine Group to its employees through an Employee Stock Ownership Program, ensuring a personal interest in the construction of your Silverton yacht.





# INTRODUCTION TO YOUR YACHT

# OWNER'S MANUAL

---

We appreciate your selection of the Silverton yacht. We have designed and manufactured this yacht to bring you a strong, safe, and attractive yacht that will provide you with many years of pleasure and pride in ownership.

All Silverton yachts are built in compliance with applicable United States Coast Guard regulations and recommendations. In addition, our yachts meet or exceed all standards developed by the National Marine Manufacturer's Association for its "Yacht Certification Program".

This Owner's Manual includes general information concerning the operation, handling, and maintenance of your yacht. In addition, the various systems, both standard and optional, and factory installed equipment are described.

**Please note that the information contained in this Owner's Manual summarizes the detailed information contained in the Original Equipment Manufacturer's (O.E.M.) Manuals contained in the Owner's Packet and is only intended to be a convenient reference for your daily use.** Refer to the appropriate O.E.M. Manual for detailed information concerning the operation and maintenance of its respective piece of equipment.

Maintain your Owner's Manual and the Owner's Packet together in a safe, convenient location that is easily accessible for readily available reference.

General information designed to assist you in understanding the contents of your Owner's Manual is as follows:

## HAZARD COMMUNICATION

This Owner's Manual contains certain signal graphics designed to call your attention to important and specific information. These graphics are shown as follows:



DANGER calls attention to immediate hazards that WILL result in severe personal injury or death.



WARNING identifies hazards or unsafe practices that COULD result in severe personal injury or death.



CAUTION indicates hazards or unsafe practices that COULD result in minor personal injury, product, or property damage.

## OWNER ADVISORY STATEMENTS

This Owner's Manual contains certain advisory statements designed to alert you to conditions affecting equipment operation and maintenance practices and they are as follows:

**Important:** *This is an advisory statement or procedure intended to prevent damage to equipment or its associated components.*

**Note:** *This is a general advisory statement relating to equipment and maintenance procedures intended to call your attention to important information that is not contained within the normal text describing the specific issue.*

## SUMMARY OF OWNER'S MANUAL CONTENTS

Brief summaries of each section of this Owner's Manual are as follows:

### Introduction

This section includes general information about your yacht, warranty information, your responsibilities as the owner and/or operator, laws and regulations, logs and records.

### Getting Familiar

This section is like a tour; showing you the various accessories and appliances, both standard and optional, that are found on your yacht. In addition, the Hull, Deck, Interior, and Engine Compartment will be described.

### Boating Safety

This section discusses potential hazards associated with boating, safety recommendations, safety information, and safety practices. It also discusses safety equipment necessary to provide a reasonably safe operating environment.

**Note:** *For your safety, this Owner's Manual has specific safety warnings and comments where appropriate. Be certain to read and have an understanding of the entire manual.*

## Systems Operation

This section explains the various systems found on your yacht and their operation and maintenance procedures.

## Cleaning / Maintenance

Preventive maintenance is the key to trouble-free operation and helps to protect your investment. This section explains what you should do to maintain your yacht and how to make basic adjustments and repairs. A Maintenance Chart summarizes maintenance tasks by frequency. Included are procedures for winterizing and storing your yacht.

## Operation of Your YACHT

This section explains what procedures you should follow before, during and after your boating excursion to make it an enjoyable and safe experience.

## Glossary of Terms

The Glossary defines common nautical terms associated with your yacht.

## Systems Schematics

This section displays schematic drawings, such as the Mechanical Layout, Electrical Schematic, and Fresh Water Schematic that may be useful to you in understanding the general layout of the systems described.

## ORIGINAL EQUIPMENT MANUFACTURER'S MANUALS

Silverton purchased various items of equipment from other manufacturers and installed them on your yacht while it was being built. Examples of this equipment include, but are not limited to, the engines, generator (if so equipped), and appliances. The Original Equipment Manufacturers (O.E.M.) have provided operation and maintenance manuals describing their specific piece of equipment. **Although this Owner's Manual summarizes the information contained in the O.E.M. Manuals, it does not replace them. In the event of a conflict between the information contained in this manual and the information contained in the O.E.M. Manual, the O.E.M. Manual takes precedence.** Maintain all O.E.M. Manuals with this Owner's Manual in a safe, convenient location and be certain to pass them on to the new owner in the event you sell or trade your yacht.



# WARRANTY INFORMATION

---

## Silverton Yacht Dealers

Your Silverton yacht dealer is a trained professional with facilities and resources available to serve you to your complete satisfaction. Your dealer can assist you in all phases of yacht service and you should bring to his attention any problems you may not be able to correct. All warranty claims and subsequent service must be approved through your Silverton Dealer. The Silverton warranty is reproduced in its entirety at the end of this section.

## Pre-Delivery Service Record

Your Silverton yacht was thoroughly inspected before it was shipped from the factory. Your dealer also inspected it during the pre-delivery service inspection. Please take time to discuss these inspections, the Silverton warranty, component warranties, and operation of your yacht with your dealer.

Your Silverton Dealer completes a Pre-Delivery Service Record before you take delivery of your yacht. It is the dealer's responsibility to both you and to Silverton to give your yacht a final inspection. The purpose of this inspection is to assure the proper adjustment and operation of all components installed on your yacht. Your dealer should provide you with the Pre-Delivery Service Record at the time of delivery. After you and your dealer have signed the form, the original copy and your warranty card is forwarded to Silverton.

Silverton will not pay warranty costs for items that should have been corrected during the pre-delivery service inspection and recorded on the Pre-Delivery Service Record.

## Warranty Registration

All Silverton yachts are shipped to the dealer with a warranty registration form for the yacht. The warranty card should be completed and returned to Silverton, together with signed copies of the Pre-Delivery Service Record, within ten (10) days of delivery. **Failure to do so may void the warranty.**

## Warranty Conditions

To avoid any misunderstanding of Silverton's warranty policy, we suggest that you discuss the following with your Silverton yacht dealer:

- All customer warranty claims and subsequent repairs must be approved through your Silverton Dealer.
- Your yacht must be returned to your selling dealer for warranty repairs unless other arrangements between the dealer and the customer have been made before delivery. Silverton will not pay travel time or mileage for warranty claims.
- Silverton allows a set hourly rate for labor. If you use any service facility other than a Silverton Dealer for warranty repairs, either the owner or the dealer must absorb any difference between what Silverton allows and what the "service contractor" may charge.
- Silverton will not assume any responsibility or liability for parts replaced or labor completed by anyone other than an authorized Silverton Dealer without prior authorization from Silverton.
- Silverton will not warrant items that should have been covered during the pre-delivery service inspection.
- Silverton will not be responsible for any problems or inconveniences that may be caused as a result of a defect.
- Silverton will not be responsible for any losses caused as a result of a defect for any reason.

## **Second Owner's Warranty**

Some Silverton yacht owners trade up to a newer or larger yacht before the warranty on their current yacht has expired. Silverton will transfer the remaining warranty on your new yacht to its new owner. Conditions of the warranty transfer are stated in their entirety at the end of this section.

## **Owner's Responsibilities**

Silverton service and support does not end after you purchase your yacht. Our dealers are committed to your total satisfaction with your yacht. They cannot accomplish this objective without your assistance. You are responsible for:

- Obtaining state registration or federal documentation.
- Providing and maintaining all safety equipment required by the United States Coast Guard.
- Completing and forwarding all Original Equipment Manufacturer's warranty registrations.
- Performing and completing required OEM maintenance.

## LIMITED WARRANTY

According to the U.S. Public Law No. 93-637, effective July 4, 1975, the following limited warranties apply to all 2002 and newer Model Year boats produced by SILVERTON MARINE CORPORATION.

### LIMITED TWO-YEAR WARRANTY

Silverton Marine Corporation ("Silverton") warrants to the first-use purchaser and any subsequent registered owner during the warranty period, that any part manufactured by Silverton in its 2007 Model Silverton Yacht purchased from an authorized Silverton Dealer will be free of defects caused by faulty workmanship or materials for a period of twenty-four (24) months from the date of delivery to the first-use purchaser, provided the part is properly used and maintained and subject to the following exclusions, limitations, and conditions. As the sole and exclusive remedy, Silverton's obligation under this warranty is limited to repair or replace any such defective part.

### LIMITED FIVE-YEAR BOTTOM BLISTER WARRANTY

Silverton warrants to the first-use purchaser and any subsequent owner during the warranty period that the boat will be free from gelcoat blistering on underwater, exterior gelcoat surfaces of the hull, for a period of five (5) years from the date of delivery to the first-use purchaser, provided the hull has been properly used and maintained and subject to the following exclusions, limitations, and conditions. During this period, Silverton will supply or reimburse an authorized Silverton Dealer the parts and labor required to repair a blistered underwater surface of the hull. It is recommended that the blister repair be done during a seasonal haul out for service or storage.

Silverton's obligation for the cost reimbursement pursuant to this warranty is based on the prorated schedule described hereafter during the five-year period. During the first two (2) years of the first-use purchaser's ownership, Silverton will pay for 100% of the repair cost. During the third year of the first-use purchaser's ownership, Silverton will pay for 75% of the repair cost. During the fourth year of the

first-use purchaser's ownership, Silverton will pay for 50% of the repair cost. During the fifth year of the first-use purchaser's ownership, Silverton will pay for 25% of the repair cost.

The following will void this bottom blister limited warranty:

1. If the hull gelcoat has been sanded, sandblasted, and subjected to abrasion, impact or damage and/or such conditions being repaired.
2. If Silverton's required bottom preparation procedures described in the Silverton Owner's Manual are not followed.
3. If the hull gelcoat has been altered in any way by repairs or coatings other than the proper application of anti-fouling bottom paint.

### LIMITED HULL AND DECK STRUCTURE FIBERGLASS WARRANTIES

Lifetime Limited Warranty Coverage to First-Use Purchaser (Non-Transferable): Silverton warrants to the first-use purchaser, who is not a corporation, limited liability entity, partnership or business entity, that the hull and deck of each boat will be free from structural defects in fiberglass materials and workmanship for the lifetime of the hull beginning with the date of delivery.

Five Year Limited Warranty Coverage (Transferable to Subsequent Registered Owner): Silverton warrants to the first-use purchaser and any subsequent registered owner during the warranty period the hull and deck of each boat shall be free from structural defects in fiberglass materials and workmanship for a period of five (5) years from the date of delivery to the first-use purchaser and subsequent registered owner under normal use and service.

These limited warranties apply only to the structural integrity of the deck and hull and the supporting pan/grid or stringer system. Hulls, pan/grid, or stringers modified in any way, or powered by engines other than the type and size installed or specified by Silverton, are not covered by these limited warranties. As the sole and exclusive remedy, Silverton's obligations under these limited warranties are limited to the repair or replacement of any such structurally defective part.

## **CONDITIONS ON THE APPLICABILITY OF LIMITED WARRANTY COVERAGE**

The limited warranties contained herein apply only to covered defects first arising and reported in writing to Silverton or its authorized dealer within the applicable warranty coverage. If the Silverton Yacht is used for commercial, rental, charter or any other non-consumer, individual or recreational services, then the above warranty periods are limited to sixty (60) days from the date of purchase. These limited warranties shall not be effective unless the Silverton warranty registration form and pre-delivery service record are duly completed and signed by the first-use purchaser within ten (10) days of the date of delivery of a Silverton Yacht. The warranty registration form and the pre-delivery service record must be returned to Silverton, and they must be appropriately completed and signed by both the authorized Silverton Dealer and owner. Warranty coverage shall not be initiated until the completed form is received at Silverton. The Silverton Dealer is responsible for submitting the warranty registration form and pre-delivery service record to Silverton.

The Silverton Dealer is to be used by the Silverton Yacht owner for reporting, claiming, and receiving any warranty service from Silverton. All repairs covered by these limited warranties must be pre-approved by Silverton. Normally, all repair requests and approvals are to be communicated through an authorized Silverton Dealer. To obtain warranty service for your Silverton Yacht, including any allegedly defective part, you, as owner, must make a specific and detailed claim in writing to an authorized Silverton Dealer within the applicable warranty period. Warranty repairs may be performed at the authorized Silverton Dealers servicing location or at an otherwise Silverton approved servicing facility at Silverton's discretion. The owner is responsible for all expenses associated with transporting the Silverton Yacht and/or the defective part to and from the Silverton selected service location. Silverton may also, at its option, choose to conduct any repairs or replacements at the Silverton plant. If repairs or replacements are determined to be performed at the Silverton plant, then the transportation costs to and from the Silverton plant are the obligation of the owner.

The Silverton Yacht owner shall report to Silverton any Silverton Dealer failures in the performance of warranty repairs.

The sole and exclusive remedy under this warranty, including any applicable implied warranty, is the repair or replacement as determined by Silverton at its option of defects in materials and workmanship covered by the limited warranties. The labor cost reimbursement will be based on the Labor Allowance Schedule established by Silverton from time to time. Repairs are not to be performed by a non-Silverton Dealer and the repair cost MUST be authorized by Silverton in advance and be based on a reasonable number of hours as determined by Silverton. Transportation, hauling, launching, bottom paint, storage, dockage, cradling rental, rigging and de-rigging, or other similar costs are not part of Silverton's obligation under the limited warranties and shall not be paid for by Silverton.

## **LIMITED WARRANTY EXCLUSIONS**

- \* Silverton does not provide any warranty coverage nor shall it have any liability or responsibility for any defects, costs, expenses or damages related to the following:
- \* Any yacht purchased from any party who is not an authorized Silverton Dealer.
- \* Damage or deterioration of the gelcoat surface finishes, including cracking, fading or oxidation of gelcoat.
- \* The cost to remove, disassemble, or reinstall any part not installed by Silverton which is needed to be removed before any warranty work approved by Silverton may be conducted.
- \* Engines, transmissions, or generator(s).
- \* Any component covered by its own specific warranty (such as, appliances or furniture not manufactured by Silverton).
- \* Any glass breakage.
- \* Speeds, fuel consumption, range or handling, or performance characteristics.
- \* Exterior fabrics, carpet, upholstery, canvas, and enclosures.
- \* Any parts or components not installed by Silverton.



\* Any damage caused by collision, grounding, act of nature, accident, or abuse.

\* Any loss of use, loss of time, maintenance cost, travel expenses, towing, transportation, survey expenses or other items not specifically covered within this document.

\* Any Silverton that has been used for charter, rental or commercial, racing or military purpose (See 60-day limitation specified herein).

\* Any Silverton that has been misused, used for commercial purpose, operated without required maintenance or operated contrary to instructions in the Silverton owner's manual, modified or altered from factory specifications or subject to improper maintenance.

\* Damage, deterioration, and failure to maintain interior fabrics and finishes.

\* Any Silverton product identified by Silverton to an authorized dealer as too damaged to be warranted.

\* Paint, gelcoat, upholstery damage, plastic finishes, engines, engine parts, bilge pumps, stoves, blowers, pressure water pumps, propellers, shafts, rudders, controls, instruments.

\* Problems caused by improper operation and maintenance, storage, cradling, blocking, normal wear and tear, misuse, neglect, accident, corrosion, electrolysis, or improper operation.

### **LIMITATION/EXCLUSION OF ANY APPLICABLE IMPLIED WARRANTIES**

These limited warranties from Silverton are your sole and exclusive remedies and are expressly in lieu of any and all other remedies, including tort/negligence theories and warranties of merchantability and fitness for a particular purpose. Whether arising by law, custom, conduct, or usage of trade. Some states do not allow limitations on an implied warranty, so the above limitation may not apply to you. In the event that implied warranties are found to exist under the law of a particular state, notwithstanding the exclusion contained herein, the duration of any such implied warranty shall be limited to one year from the date of purchase by the first-use purchaser.

All implied warranties, if any, including merchantability and fitness for a particular purpose, are excluded and disclaimed in their entirety after one year from the date of purchase by the first-use purchaser. No other warranties from Silverton Marine extend beyond the description of the warranties contained herein. Please note that some states do not allow limitations on the applicable time period for implied warranties, so the one-year time limitation which is contained here may not apply to you. Your specific legal rights will vary from state to state.

The purchaser acknowledges that no other representations were made to him or her with respect to the quality or function of the boat. Any oral statement or printed material advertising the boat which speaks to any performance characteristics of the boat or any of its components shall be considered and construed as an estimated description only and should not be relied upon as an express warranty or as the basis of the bargain for the boat or any of its components.

Any consequential, indirect, or incidental damages which may be incurred are excluded and purchaser(s) remedy is limited to repairs or replacement of any defective part(s). Some states do not allow the exclusion of limitation of incidental or consequential or indirect damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### **TRANSFER OF LIMITED TWO-YEAR AND FIVE-YEAR BOTTOM BLISTER WARRANTIES**

The unexpired portions of the two-year limited warranty and the limited five-year bottom blister warranty and the limited five-year hull and deck structure fiberglass warranty may be transferred to a second owner upon purchase of the Silverton Yacht from an authorized Silverton Dealer. An inspection report from an accredited marine surveyor and written request to transfer these warranties must be made within fifteen (15) days from date of resale. A non-refundable recording fee of \$250.00 must accompany any transfer request. Silverton reserves the right to reject any warranty transfer request for a Silverton Yacht that has been damaged

or neglected. Silverton will confirm all warranty transfers in writing to the Silverton dealer and the second owner. The limited lifetime hull and deck structure fiberglass warranty is not transferable to any owner subsequent to the first use purchaser.

### **OWNER'S PROBLEM WITH WARRANTY SERVICE**

In the event the first-use purchaser or registered subsequent owner has any problems or questions regarding the Silverton warranty or the Silverton warranty service being provided by an authorized Silverton Dealer, please forward that question or problem directly to the authorized Silverton Dealer in writing explaining your problem and asking for their assistance in resolving the problem. Generally speaking, the owner of the authorized dealership, which is an independent contractor of Silverton, is in the very best position to assist you because of their familiarity with the warranty work that was performed on your behalf. In addition, Silverton expects its dealers to be concerned with your continued satisfaction and, as a result, should be given an opportunity to provide that assistance.

If, after contacting the dealer in writing and you, as the first-use purchaser or registered subsequent owner, are unhappy with the dealer's response or if you feel that you require any further assistance, please write to the address below. In communicating to Silverton, please provide Silverton with a copy of the warranty claim which is the subject of your need for assistance, and any correspondence which you exchanged with the dealer. Please be certain that the forwarded information includes your hull identification number and name as well as the hours of usage on your engines. If at all possible, provide a chronological description of the problems which you confronted as well as the repair attempts. Include the dealer name and dealer personnel consulted. It is much appreciated if you would concisely describe your problem or question and any comments that you might have regarding the dealer's efforts to conduct the repair. Upon receipt of your correspondence, Silverton will begin its analysis and investigation into the circumstances. Silverton may contact you directly and the dealer if any further information is necessary. Silverton will also contact the dealership so as to assist both the dealer and you in resolving the question or concern.

The above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### **WARRANTY REGISTRATION**

These limited warranties shall not be effective unless the SILVERTON Warranty Registration Form and Pre-Delivery Service Record; which are furnished with each new boat, are filled out completely and returned to SILVERTON within ten (10) days of delivery.

The return to SILVERTON of the fully signed Warranty Registration Form is critical. Warranty coverage cannot be initiated until the completed form is received at SILVERTON.

All repairs and/or replacements will be made by an authorized SILVERTON Dealer, or at the option of SILVERTON, at the SILVERTON plant. If the repairs are of such a nature that the warranty work must be performed at the SILVERTON plant, transportation costs to and from the SILVERTON plant shall be paid by the owner. The labor cost reimbursement will be based on the Labor Allowance Schedule established by SILVERTON and, where not applicable, on a reasonable number of hours as determined by SILVERTON. Any repairs and replacements must be approved in advance by an authorized SILVERTON Service Representative.

### **TRANSFER OF LIMITED WARRANTIES**

Effective with 2007 model year boats, these limited warranties will be transferred to a subsequent purchaser of the boat if:

1. Purchased from a Silverton Dealer.
2. A notice of the transfer of ownership of the boat is given by the subsequent purchase in writing to SILVERTON within thirty (30) days of the transfer.
3. The notice shall include the name, address, and telephone number of the subsequent purchaser, the date of purchase, the hull number, and the name of the seller of the boat.

4. A non-refundable recording fee of \$250.00.
5. An inspection report by an accredited marine surveyor.

SILVERTON will mail to the subsequent purchaser notice of the expiration dates of the limited warranties (See sample). The transfer of the ownership of the boat will not extend the expiration dates of the limited warranties.

## BOOKS AND PUBLICATIONS

Silverton recommends you purchase and read the following publications:

*Piloting, Seamanship and  
Small Boat Handling*

By Chapman  
(Included with this manual; compliments  
of Silverton Marine Corporation)

*Boatman's Handbook*

By Tom Bottomly  
Motorboat and Sailing  
P.O. Box 2319, FDR Station  
New York, New York 10002

*The Complete Book of Maintenance  
and Repair*

By Dave Kendall  
Doubleday and Company  
Garden City, New York 11530

*Pleasure Boating and Seamanship*

United States Coast Guard Auxiliary  
306 Wilson Road Oaklands  
Newark, Delaware 19711

## RECORD KEEPING

### Boat Record

Use the **Boat Record** (included at the end of the Glossary Section of this manual) to record all important information concerning your yacht and its equipment. After your dealer has recorded all the information, remove the record from your Owner's Manual and store in a safe, convenient location. **Do not** keep this form aboard your yacht.

### Float Plan

The **Float Plan** (included at the end of the Glossary Section of this manual) provides a record of your destination, departure and return times, yacht description, passenger list and other information about the trip you have planned. At the bottom of the form is a space for listing emergency telephone numbers in case your return is delayed past the expected time. It also has space for indicating information about the person filing this report. Leave a copy of the completed form ashore with a responsible person. Carry the original form with you on your cruise and if you deviate from your original plan, be certain to notify the person with whom you left the copy of your change in plans. Silverton recommends you make several copies of this form each yachting season to ensure you have an adequate supply.

### Maintenance Log

The **Maintenance Log** (included at the end of the Glossary Section of this manual) provides the means to keep maintenance records in one location. Using this log will allow you to track maintenance work completed. Your Silverton Dealer will also find this information helpful if you decide to sell or trade your yacht. The maintenance record will make your yacht a more desirable purchase because it tells prospective buyers that you have maintained the proper care of the vessel on a regular basis.

### Accident Reporting

No one likes to think about having a boating accident, but unfortunately, they do occur. You must file an **Accident Report** after a boating accident just as you would after an automobile accident. A copy of the United States Coast Guard Accident Report is included with this Owner's Manual. You can obtain more copies of the report by calling the

United States Coast Guard Boating Safety Hotline at 1-800-368-5647.

You are required to file an accident report with the United States Coast Guard within forty-eight (48) hours after the occurrence of an accident resulting in any one of the following:

- Loss of life.
- A person disappears from a vessel under circumstances that indicate the possibility of death or injury.
- Personal injury requiring medical treatment beyond first aid.
- Damage to the vessel or damage to property.\*
- Complete loss of the vessel.

*\* State statutes determine whether you must file an accident report in this case. An accident report must be filed if the damage exceeds a threshold dollar value as established by the state in which the accident occurred. In most states, the threshold is \$2,000.00. Contact the United States Coast Guard Boating Safety Hotline to verify the threshold for a particular state.*


**Note:** *State and local agencies may also have accident reporting requirements. Check with local enforcement agencies or with your local Silverton Dealer regarding local requirements.*

## GETTING FAMILIAR with Your 33 CONVERTIBLE


This section of your Owner's Manual will give you a Virtual Tour of your new 33C.

The following areas will be described:

- Hull
- Deck
- Interior
- Bridge
- Engine Compartment

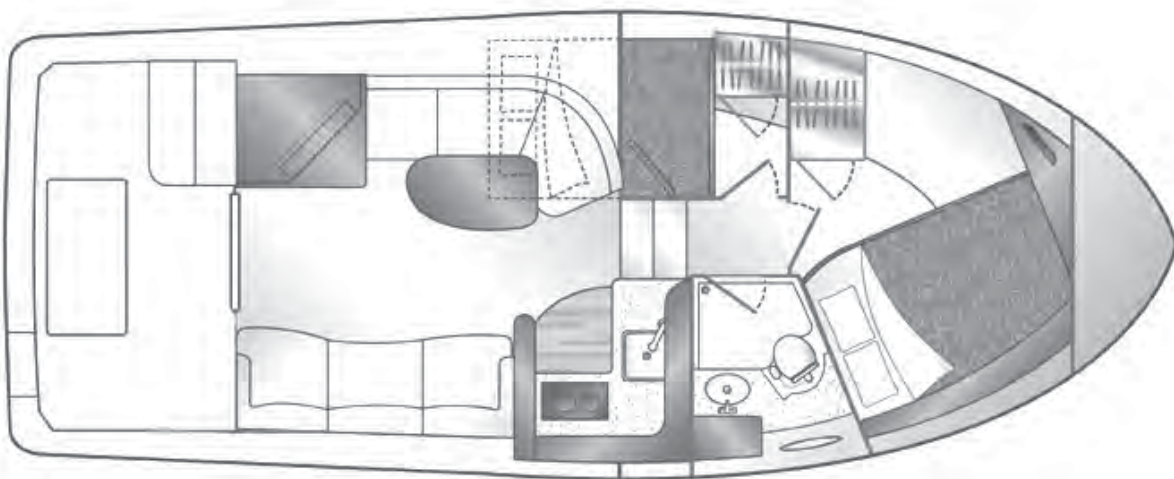

# HULL

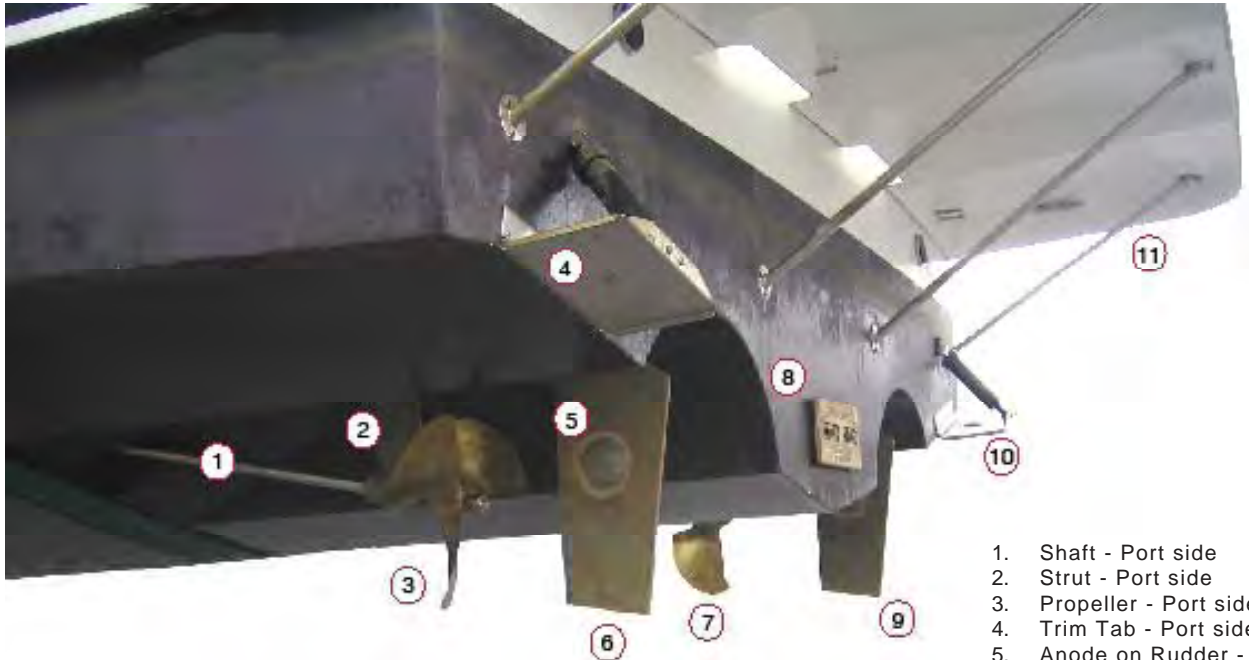

1. Shaft - Port side
2. Strut - Port side
3. Propeller - Port side
4. Trim Tab - Port side
5. Anode on Rudder - Port
6. Rudder - Port side
7. Propeller - Starboard
8. Anode Plate - Stern
9. Rudder - Starboard side
10. Trim Tab - Starboard side
11. Swim Platform (Optional)

The **Shaft** is connected to the engine transmission with a coupling and extends through the bottom of the hull.

The **Propeller** is attached to the end of the shaft. The Shaft is supported forward of the propeller by a **Strut**. The Struts support and stabilize the Shafts.

The rotation of the **Propellers** propel the yacht in the selected direction, controlled from the Helm Station.

The **Rudders** provide steering for the yacht to port or starboard, depending on the direction they are turned by the operator from the helm station steering wheel.

The **Zinc Anodes** are dealer installed on the trim tabs, shafts, rudders and transom for the purpose of preventing electrolysis and galvanic corrosion, which is discussed in the Winterization and Storage pages in the Cleaning and Maintenance section of this manual.

## ENGINE SEAWATER PICKUP

The photograph below displays the **Engine Seawater Pickup** as shown on the starboard side. The Engine Seawater Pickups are located on the bottom exterior of the hull forward of the engines and are used for “scooping” water for the engine cooling system.



## TRANSOM ANODE PLATE

The photograph below displays the **Transom Anode Plate**, which is a sacrificial zinc anode that is bolted to the transom and connected to the electrical bonding system. Its purpose is to help in reducing the effects of electrolysis and galvanic corrosion of the underwater components in your yacht, which is discussed in the Bonding System pages in the Systems Operation section of this Owner's Manual.





## TRIM TABS

The photograph below displays the Port **Trim Tab**, which is factory installed on the lower edge of the transom (The starboard trim tab is located in the same location on the opposite side of the transom). The purpose of the Trim Tabs is to assist in controlling the angle, both longitudinally and athwartships, that your yacht rides in the water during forward movement. The control panel for the Trim Tabs is located at the Helm Station.



## PROPELLERS

The photographs below display the **Propeller** rotation for the Port and Starboard sides.

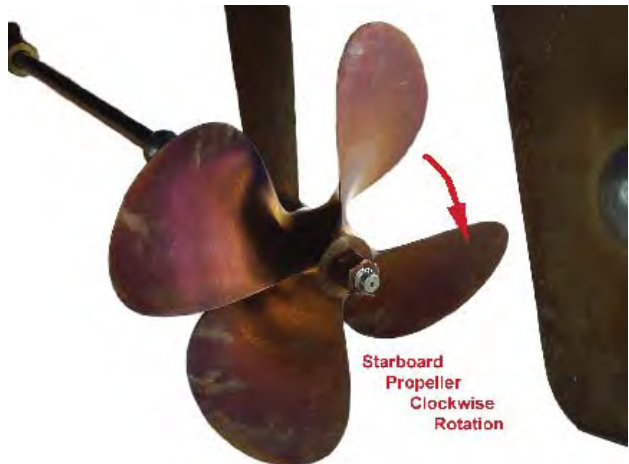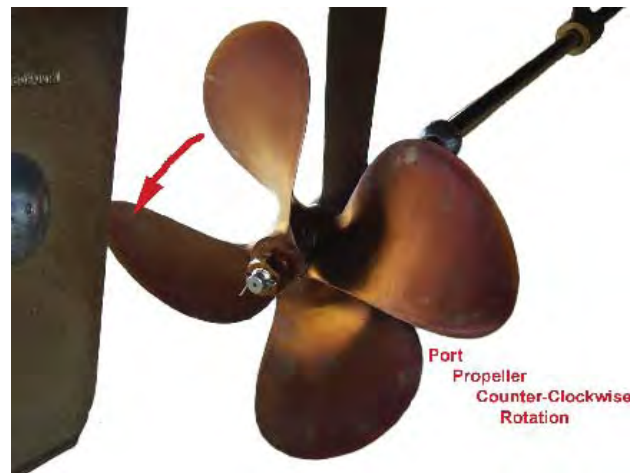

## ENGINE EXHAUST PORTS

There are two **Engine Exhaust Ports**; one for each engine. The Port Engine Exhaust Port is located on the Port side of the Hull, forward of the Transom. And the Starboard Engine Exhaust Port is located on the Starboard side of the Hull, forward of the Transom.

The photograph below displays the port side Engine Exhaust Port. The Starboard Engine Exhaust Port is in the identical location on the starboard aft side of the hull.



### GENERATOR EXHAUST PORT

The photograph below displays the **Generator Exhaust Port**. It is located on the starboard aft side of the hull, aft of the engine exhaust.



### DISCHARGE PORTS


The various **Discharge Ports** (also known as thru-hull ports) are located on the starboard and port sides of the Hull.

**Refer to the Thru-Hull Schematic Drawings in the SCHEMATICS SECTION of this manual.**

### FUEL TANK VENTS

The photograph in the top, right-hand corner of this page displays the **Starboard Fuel Tank Vent** as


shown on the starboard side of the hull. The **Port Fuel Tank Vent** is located in the identical location on the port side of the hull.

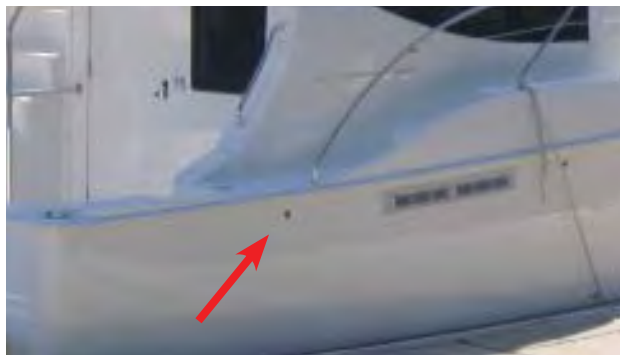

***Note:** Please refer to the Thru-Hull Location Schematics in the SCHEMATICS SECTION of this Owner's Manual.*

### BILGE VENTS


Your **33C** has ventilation vents from the Engine Room. The amount of venting and the location depends upon the engine configuration of your **33C**. There are large vents located on both sides of the hull. The photo below shows the **Starboard Engine Room Vent**.

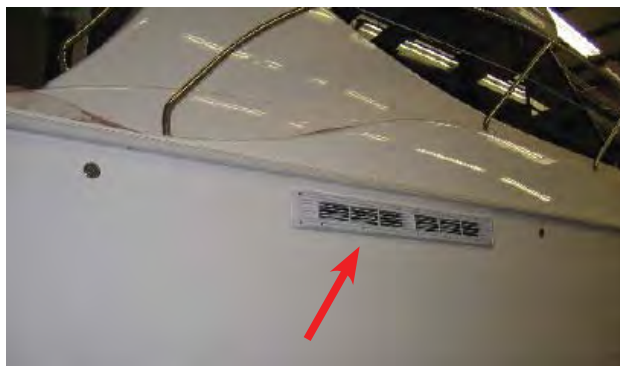

The **Bilge Ventilation System** pages in the Operations Systems Section of this manual discusses the ventilation system. Be certain to read and have a thorough understanding of this section. It contains important information concerning the safe operation of your yacht. The photograph above displays the Engine Room Vent and Blower Vent on the starboard side of your yacht. There is also a vent on the port side of the boat.



# DECK

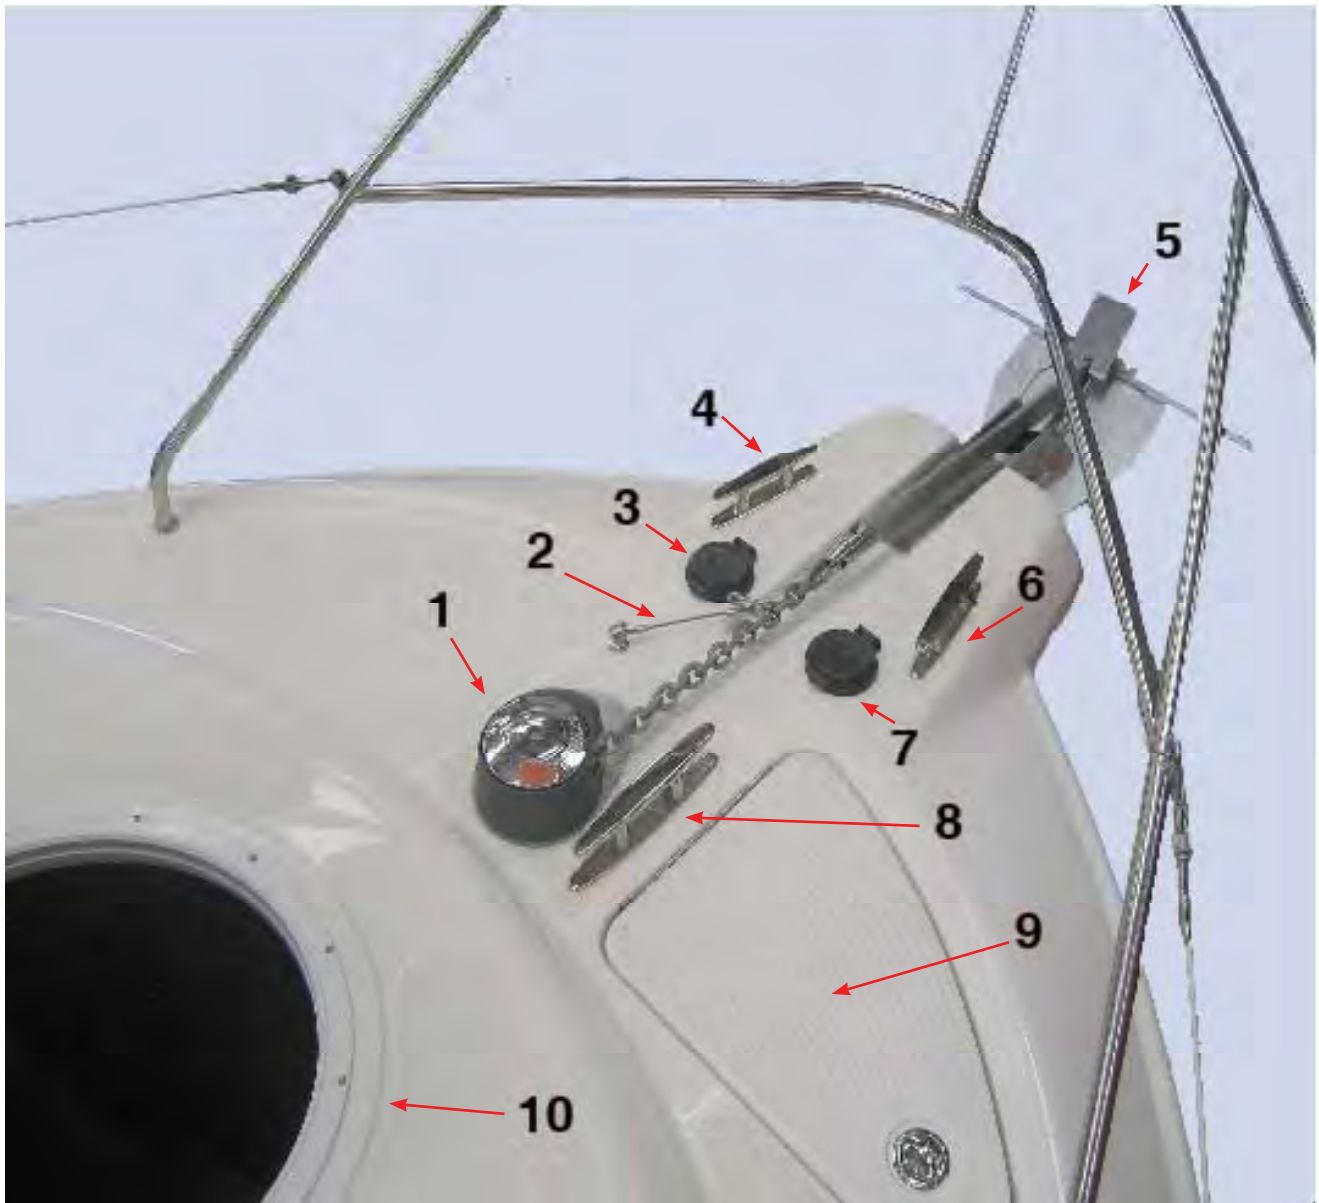

1. Windlass
2. Anchor Safety Chain
3. Port Windlass Foot Control
4. Port Cleat
5. Anchor
6. Starboard Cleat
7. Starboard Windlass Foot Control

8. Windlass Cleat
9. Rope Locker Hatch
10. Forward Escape Hatch - V-Berth

## **ANCHOR SYSTEM**

The photograph below displays the location of the **Anchor**, which is located in its bracket above the pulpit.



The photograph below displays the optional **Anchor Windlass**, which is located on the forward section of the deck, immediately aft of the pulpit.



Be certain to keep hands and feet away from any moving parts while operating the Anchor System. Becoming entangled in the anchor line may result in serious injury or death.

The photo below shows the **Windlass Anchor Wench Control** located at the Helm.



## **SEARCH LIGHT**


The 33C may be equipped with an optional **Search Light**.

The actual control switch for the **Search Light** is an omni-positional switch. It controls the kind of light that comes out of your search light. It can be either spot (S) or flood (F). The photo below shows the control, which is located at the Helm.




## DECK DRAIN

The photograph below displays the **Cockpit Deck Drain**, located on the port side of the cockpit. There is an identical drain on the starboard side of the Cockpit in the same location (See proceeding photograph).

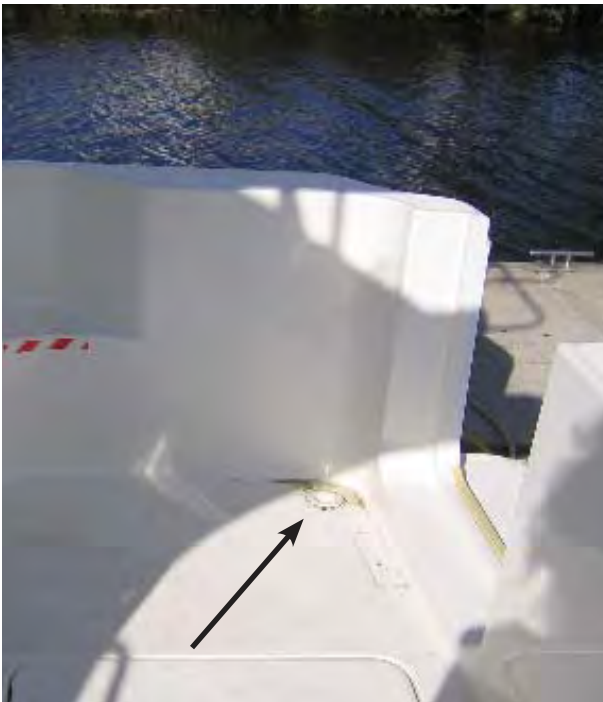



# BRIDGE

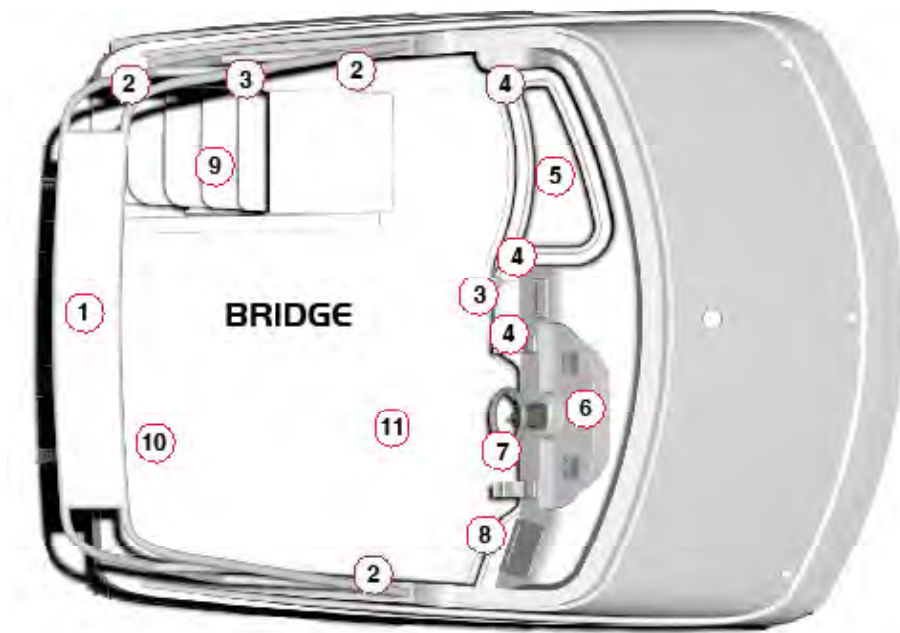

1. Radar Arch
2. Stereo Speaker
3. Courtesy Light
4. Cupholder
5. Forward Bridge Lounge
6. Helm
7. Access Hatch
8. DC Outlet 12VDC
9. Bridge Access Steps
10. Aft Bridge Lounge
11. Captain's Chair

## HELM

The **Helm**, located on the Bridge of your **33C**, is where your yacht is piloted.



## AFT BRIDGE LOUNGE

Located in the aft part of the Bridge is the **Aft Bridge Lounge**.



## CAPTAIN'S CHAIR

Aft of the Helm is the **Captain's Chair**. With its built-in, adjustable leg-roll, this chair allows the captain better visibility to maneuver the vessel while maintaining a more comfortable sitting and standing position at the helm (See photos below for both raised and lower positions).



## FORWARD BRIDGE LOUNGE

Located in the fwd part of the Bridge is the **Forward Bridge Lounge**. The seat portions are removable and have storage underneath.



## ELECTRIC HORNS

The factory installed **Electric Horns** are mounted on the forward section of the Bridge.



The button for the Electric Horns is located at the Helm. The photo below shows the location of the button that sounds the Electric Horns.



## NAVIGATION LIGHTS

The photographs below display the location of the Port, Starboard, and the Transom **Navigation Lights**.



The Port Navigation Light is RED.



The Starboard Navigation Light is GREEN.



The Transom Light is WHITE.



The Navigation/Anchor Light switch is located at the Helm Station.

## ACCESS STEPS

On both the starboard and port sides of your **33C**, you have **Access Steps** from the Aft Deck to the Bow. There are also access steps from the Aft Deck to the Bridge. The photograph below displays the Aft Deck to **Bridge Access Steps** and outboard of those steps are the port side Aft Deck to Bow Access.









# INTERIOR

The following section will show the Interior Layout of your Silverton yacht.

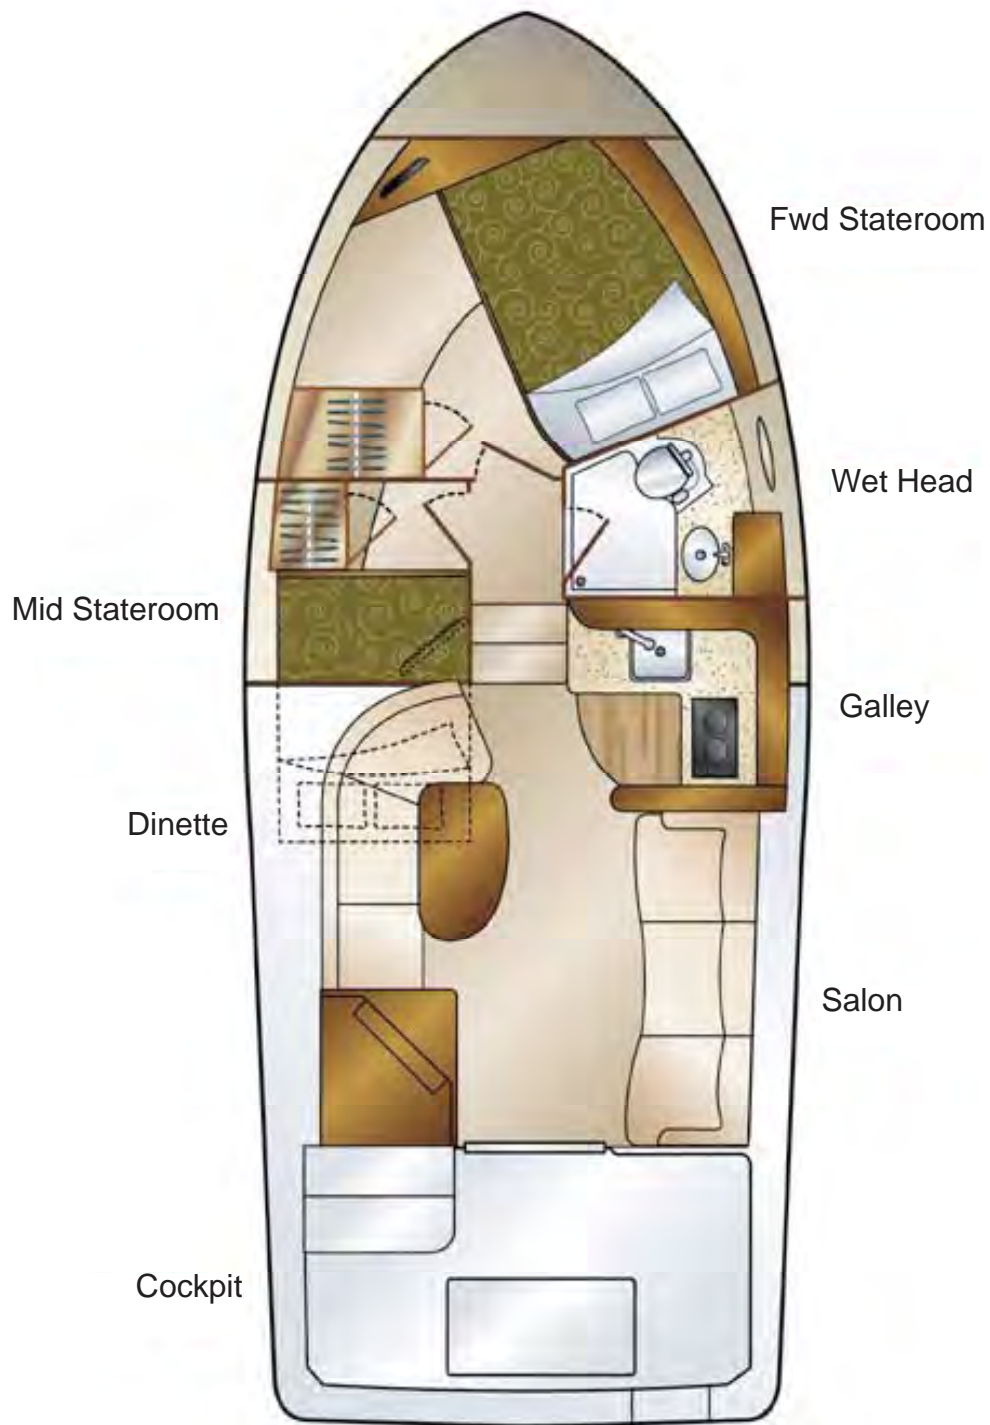


# SALON

1. Light Switch, Glomex Control Panel, CO Monitor, & Phone Jack
2. DC Power Panel / Storage Cabinet
3. Vent Outlet
4. AC/DC Electrical Panel
5. Stereo / CD Player
6. Safe-T-Alert, 120 Volt Outlets (2), Air Conditioning Control Panel
7. Access Hatch - Engine Room
8. Access Hatch - Bow Thruster Batteries
9. Laminate Covered Halfwall
10. 120 Volt Outlets (2)
11. Sleeper/Sofa with hidden Storage Rack underneath
12. Stereo Speaker (Port & Stbd)
13. Salon Window - Aft
14. Entry Door

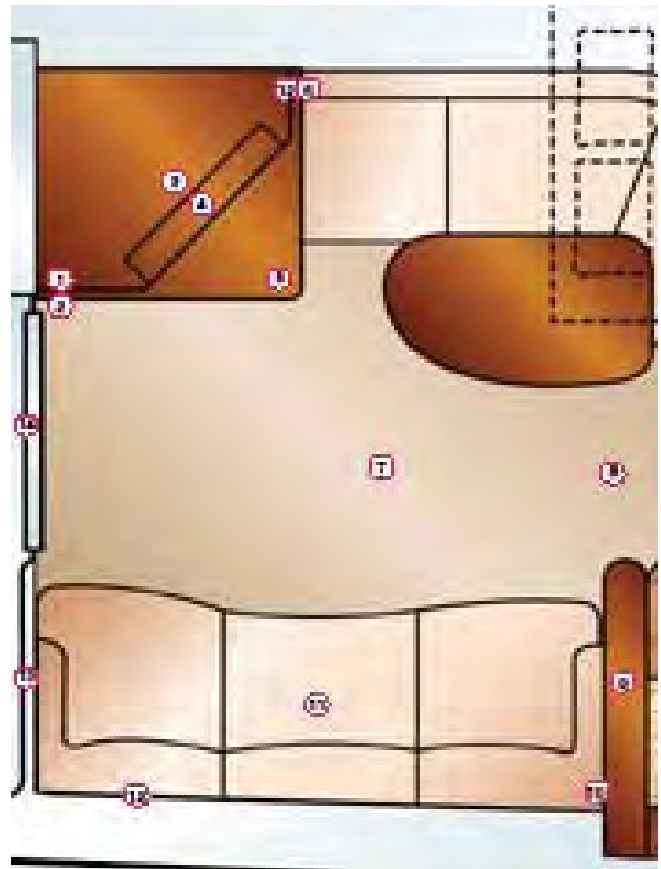


# DINETTE

1. Stereo Speaker - Port side
2. Safe-T-Alert, 120 Volt Outlets (2), Air Conditioning Control Panel
3. Dinette Settee with under Cushion Storage
4. Access Panel behind Cushion
5. Map Deck
6. Television / DVD Player
7. Access Hatch - Bow Thruster Batteries
8. Access Hatch - Engine Room
9. Dinette Table
10. Stereo / CD Player

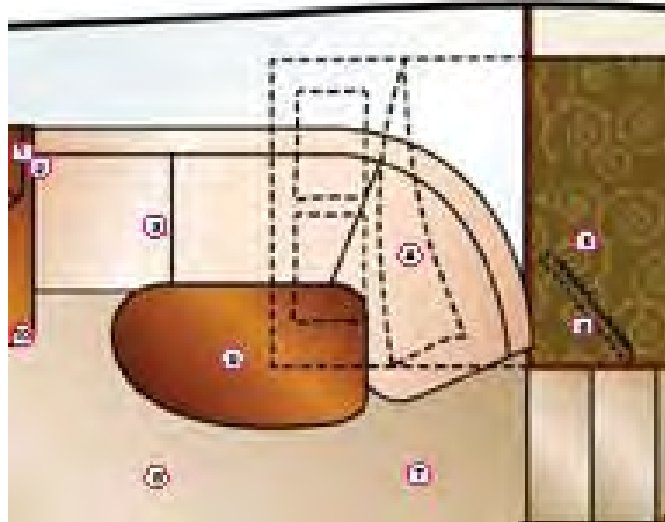


# GALLEY

1. Galley Halfwall
2. Storage Cabinet
3. Light Switch
4. 120 Volt Outlets (2)
5. Microwave
6. 4-Drawer Storage
7. Galley Sink
8. Soap Dispenser
9. Countertop Storage Cubby
10. Stovetop
11. Refrigerator / Freezer
12. Storage Cabinet

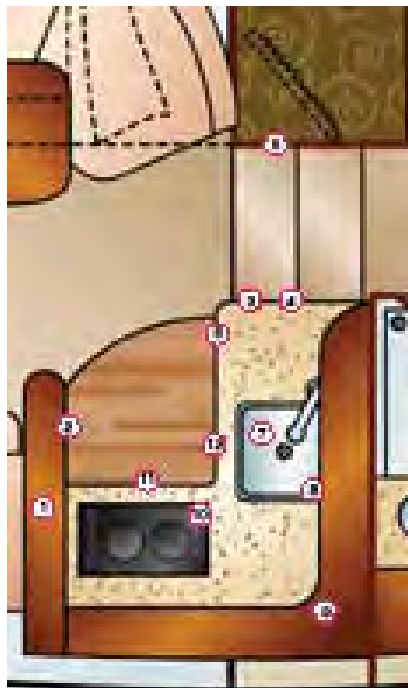

# WET HEAD

1. Wethead Shower Floor
2. Exhaust Vent
3. Flush Controls for Toilet
4. Toilet
5. Towel Bar
6. Port Hole - Stbd side
7. Towel Ring
8. Vanity Mirror & above Sink Storage Cabinet
9. Waterproof 120 Volt Covered Outlets (2)
10. Wethead Sink
11. Under Counter Storage Cabinet
12. Shower Curtain
13. Waterproof Covered Light Switch
14. Robe Hook

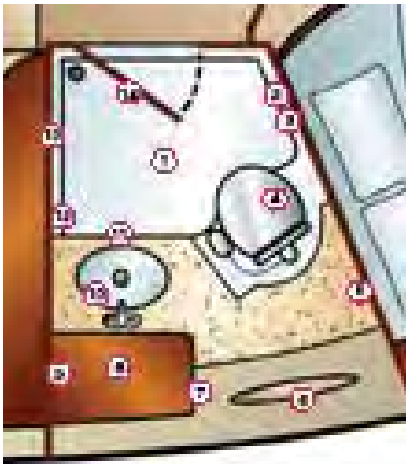


# FORWARD STATEROOM

1. Hanging Storage Locker
2. Stereo Speaker - Port side
3. CO Monitor & Air Conditioning Control Panel
4. Vent Outlet
5. DVD Player
6. Television
7. Cabin Mirror
8. Access Hatch under Mattress
9. Forward Escape Hatch (above)
10. 120 Volt Outlet (2)
11. Stereo Speaker - Stbd side
12. Reading Light with individual switch
13. Storage Cabinet
14. 3-Drawer Storage
15. Access Hatch under Carpet
16. Robe Hook
17. Light Switch




# MID STATEROOM

1. Reading Light with individual switch
2. Vent Inlet
3. Storage Shelf
4. Port Hole - Port side
5. CO Monitor
6. Hanging Storage Locker
7. 120 Volt Outlet (2)
8. Access Hatch under Mattress
9. 1-Drawer Storage
10. Light Switch
11. Access Hatch in Companionway
12. Companionway Steps

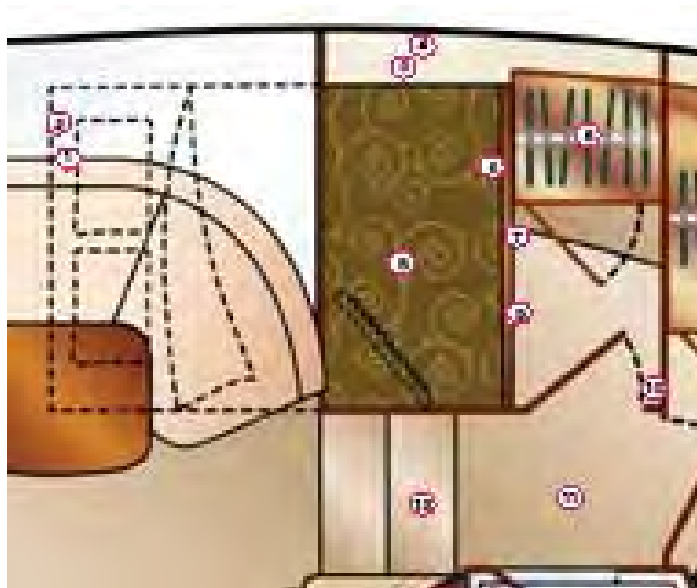


# COCKPIT

1. Cleat
2. Deck Drain
3. Transom Door
4. Navigational/Courtesy Light - Aft
5. Swim Platform (Optional)
6. Shore Power, Shore Water Hookup & Phone Jack / Television Shore Hookup
7. Fuel Fill - Port side
8. Water Fill
9. Grab Bar
10. Stereo Speaker - Port side
11. Bridge Access Steps
12. Hand Rail
13. Entry Door
14. Access Hatch - Generator
15. Access Hatch - Power Steering, Water Tanks, & Bilge Pump Valves
16. Overhead & Courtesy Light Switch
17. Cabin Window
18. Stereo Speaker - Stbd side
19. Grab Bar
20. Fuel Fill - Stbd side

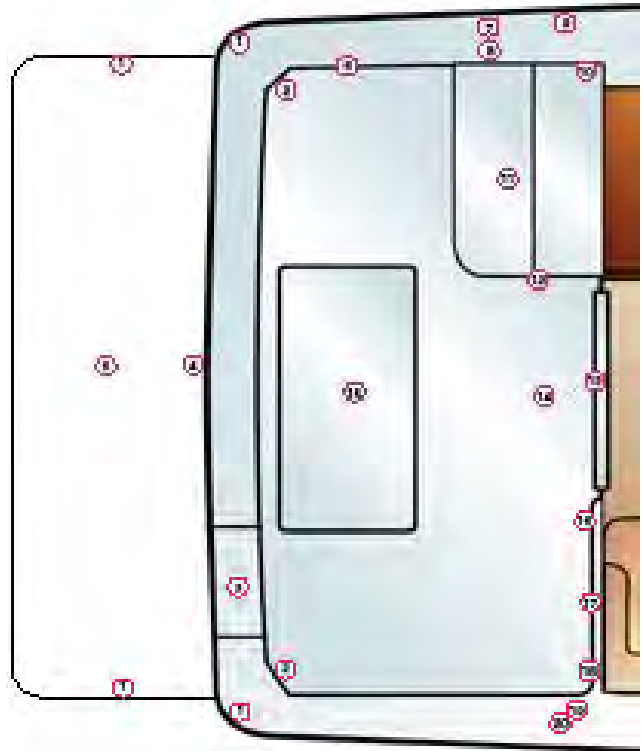





# ENGINE COMPARTMENT

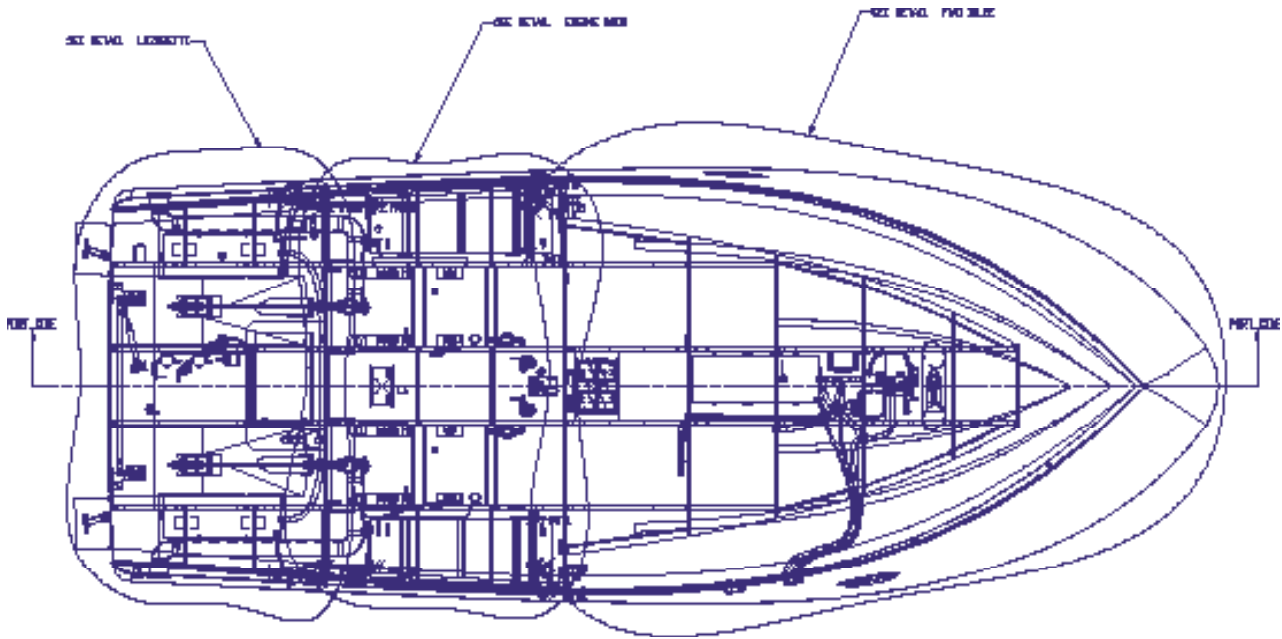


# LAZARETTE

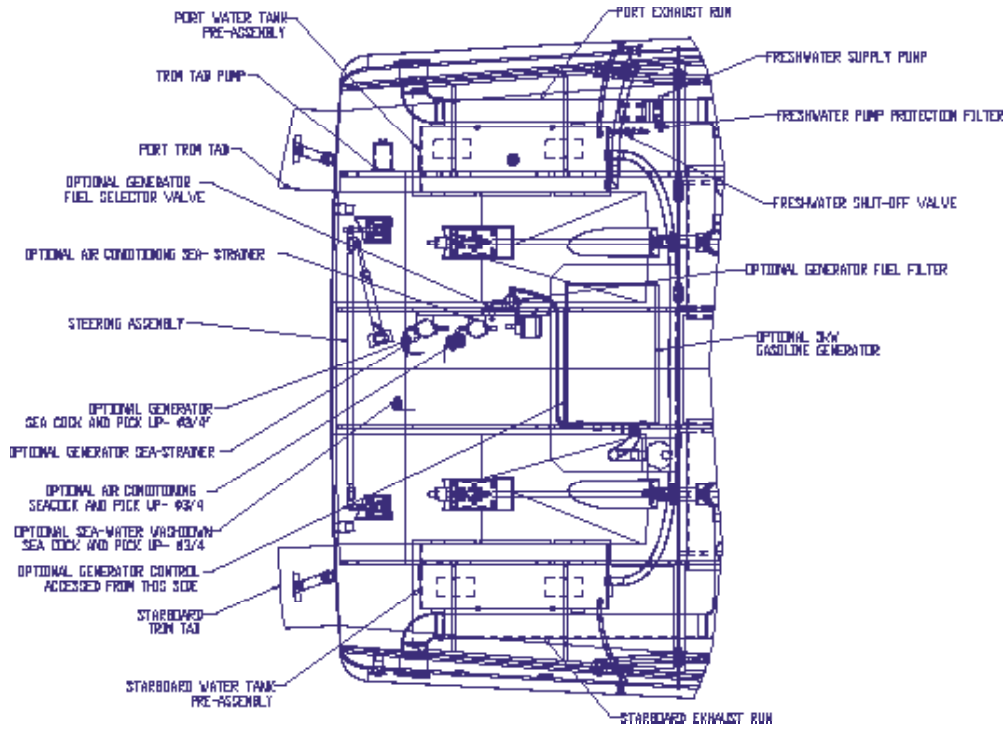

# ENGINE ROOM

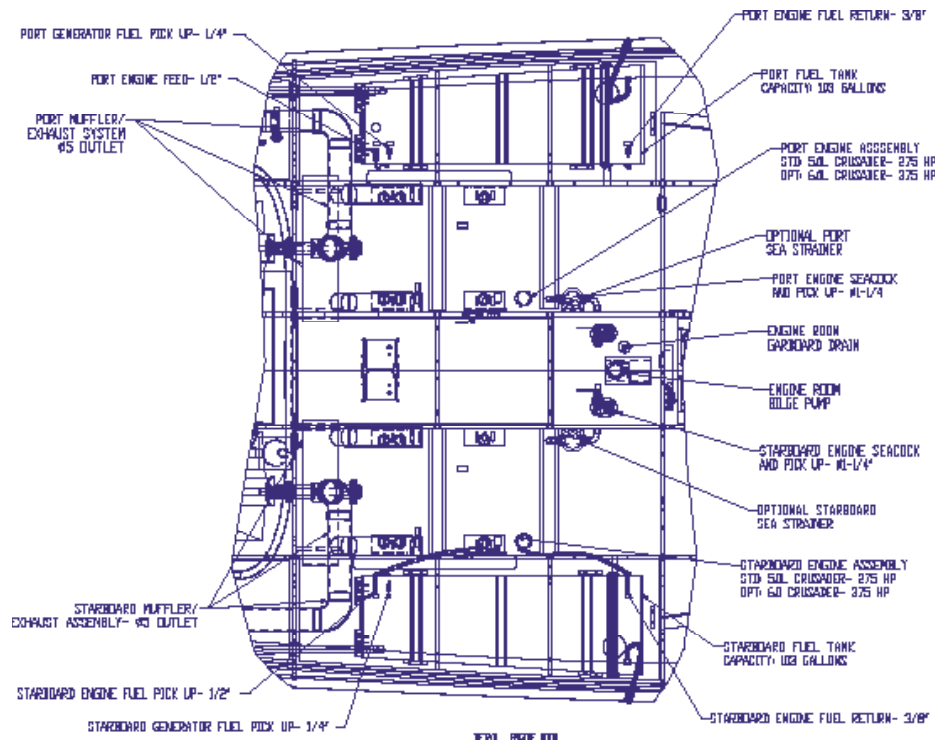

# FORWARD BILGE

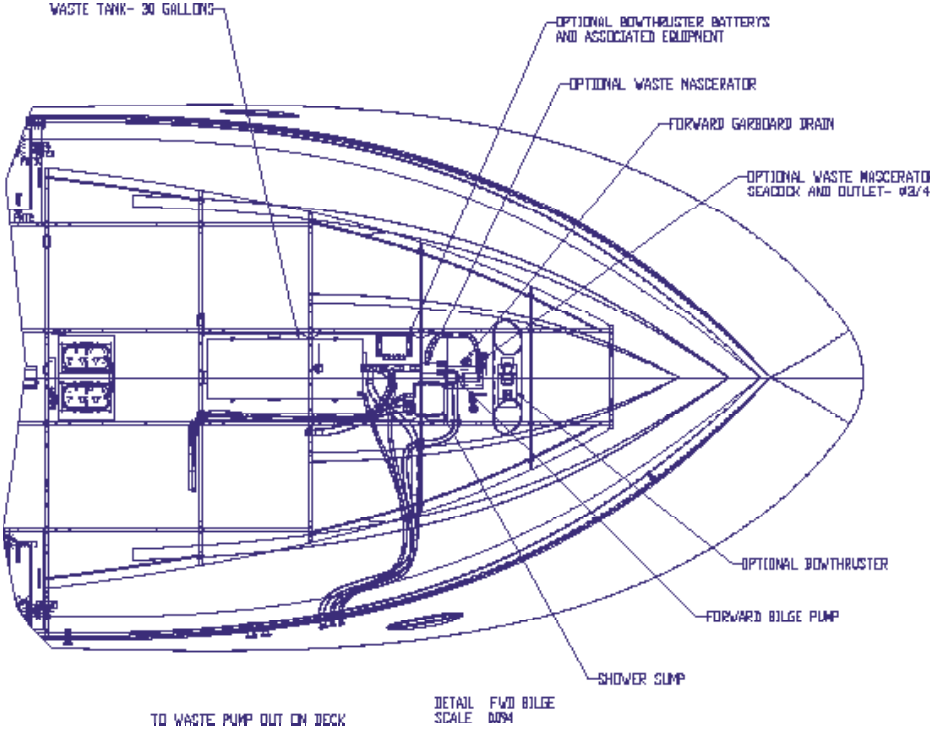



# BOATING SAFETY

Silverton believes your safety aboard your yacht, whether cruising or moored at your dock, is extremely important. A yacht operated in a safe manner will provide you, your passengers and other boaters many pleasurable hours of cruising and peace of mind. This section discusses the potential hazards that may be associated with boating for your awareness so they may be avoided, if possible. Be certain to read and have a thorough understanding of this section.

Silverton recommends completing a safe boating course if you are new to boating. Even if you are an experienced boater, you should consider enrolling in one of these courses as they will provide you with updated information that will prove to be valuable and enhance your cruising pleasure. Your local United States Coast Guard Auxiliary and United States Power Squadrons offer comprehensive safe boating classes several times a year. You may contact them for a course schedule in your area or the Boat/U.S. Foundation at 1-800-336-BOAT, or in Virginia, at 1-800-245-BOAT.

## Safety Equipment

**Important:** Federal Law requires you provide and maintain certain safety equipment on your yacht. As the yacht owner, you are responsible for providing all required safety equipment. Consult the United States Coast Guard and your state and local regulations to ensure your yacht is in complete compliance with all requirements concerning safety equipment on board. Additional safety equipment may be recommended for your safety and the safety of your passengers. Be aware of its availability and specific use.

### Minimum Recommended Safety Equipment

- Required life saving equipment; including personal flotation and throwing devices
- Required fire-extinguishing equipment
- Required visual distress signal devices
- First Aid Kit
- Emergency position indicating radio beam (EPIRB)
- Manual bailing device
- Anchor with sufficient line/chain
- Flashlight with fully charged batteries
- Binoculars
- Whistle
- VHF Radio
- Navigational charts for your cruising areas
- Fog Bell (boats over 39.4 feet)

If you need assistance, please feel free to contact our Customer Service Hotline at 1-800-882-9266.

## Personal Flotation Devices (PFD's)

United States Coast Guard regulations require you to have at least one (1) approved Type I, Type II or Type III **Personal Flotation Device** (PFD) for each person on board. The PFD's must be of suitable size for each person aboard and must be maintained in serviceable condition and readily accessible. A minimum of three (3) PFD's (two wearable and one throwable) are required, regardless of the number of persons on board. Each of these Personal Flotation devices, commonly known as "Life Jackets", are described as follows:

### TYPE I (Wearable):

This off-shore PFD has the greatest buoyancy. It is most effective for all waters where rescue may be delayed. Its design allows for turning most unconscious persons in the water from a face down position to a face up position, assisting in the prevention of drowning.



SAFETY-1

### **Type II (Wearable):**

This near-shore PFD provides less buoyancy than a Type I PFD. It is intended for use in calm, inland waters or waters where there is a greater chance of a quick rescue. It turns its wearer to a face up position as does the Type I PFD, but the turning action is not as pronounced. A Type II PFD may not turn as many persons to a face up position under the same conditions as would a Type I PFD.




**Type III (Wearable):** Classified as a flotation aid, the Type III PFD permits the wearer to place himself in a vertical or face up position, but it will not do it automatically as would a Type I or Type II PFD. The Type III PFD has the same minimum buoyancy as a Type II PFD, but it has little, or no, turning ability. It is intended for use in calm, inland waters where immediate rescue is probable. The Type III PFD is used most often by people participating in water sports, as it is generally the most comfortable type for continuous wear.



**Type IV (Throwable):** United States Coast Guard regulations require at least one (1) throwable Type IV PFD to be on board, regardless of the number of passengers. The Type IV PFD is not intended to be worn; it is intended to be thrown to a person who has fallen overboard and is conscious. The Type IV PFD is held by the user until rescued. The most common examples of Type IV PFD's are buoyant cushions or ring buoys and they are required to be immediately available for use and in serviceable condition.



*Note: United States Coast Guard regulations for the number and type of PFD's are the minimum required. Silverton recommends exceeding the minimum requirements for your safety and the safety of your passengers.*

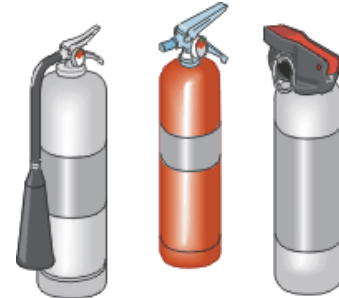

## **Fire Extinguishing Equipment**

As a yacht owner, you are responsible to maintain a minimum number and type of portable fire extinguishers on board. All fire extinguishers must be approved by the United States Coast Guard and be readily accessible and in serviceable condition. United States Coast Guard classification includes foam, carbon dioxide and chemical fire extinguishing materials, which are described in detail in the **Portable Fire Extinguisher System Section** of this Owner's Manual. Be certain to read and have a thorough understanding of the portable fire extinguishing equipment. United States Coast Guard minimum requirements for portable fire extinguishers maintained aboard your yacht are as follows:

- **Yachts longer than 26 feet and shorter than 40 feet:** Two (2) Type B-I or at least one (1) Type B-II portable, hand-held fire extinguisher. If your yacht has a fixed fire extinguishing system approved by the United States Coast Guard, one (1) Type B-I portable fire extinguisher is required.
- **Yachts longer than 40 feet and shorter than 65 feet:** Three (3) Type B-I or one (1) Type B-I and one (1) Type B-II portable, hand held fire extinguishers. If your yacht has a fixed fire extinguishing system approved by the United States Coast Guard, two (2) type B-I or one (1) Type B-II portable fire extinguisher is required.

*Note: United States Coast Guard regulations are the minimum requirements. Silverton recommends exceeding the minimum requirements for your safety.*

## Fire Safety

Fire safety is something that everyone who owns or operates a boat should practice. Each year, boating fires and explosions injure hundreds of boaters and cause millions of dollars in property damage. While there is a greater chance of a fire or explosion on a boat than on land, most of these accidents can be prevented. With a little effort on your part, fire prevention and fire safety are very attainable goals.

As owner of your yacht, it is your responsibility to:

- Have fire-fighting equipment inspected at regular intervals.
- Replace fire-fighting equipment, if expired or discharged, with devices of equal or greater fire-fighting capacity.
- Inform members of the crew and guests about:
  - the location and operation of fire-fighting equipment.
  - the location and operation of escape hatches.
- Ensure that fire-fighting equipment is readily accessible.
- Keep all passageways to exits and escape hatches clear of obstructions.
- Never allow the use of gas lights on board.
- Never leave the boat unattended when cooking or heating appliances are in use.
- Never modify any of the boat's systems (especially electrical, fuel, and ventilation).
- Never handle fuel of any type when machinery is running, when cooking, or heating appliances are in use.
- Follow proper fueling procedures (discussed in the fuel safety section of this publication).
- Never smoke while handling fuel.
- Keep machinery and bilge areas clean and free of debris.
- Always sniff for fuel vapors before starting engines or generator.

*If you need assistance, please feel free to contact our Customer Service Hotline at 1-800-882-9266.*

Other good ways to prevent fire aboard your yacht is to keep the bilge areas clean, check for fuel, and gas vapors at regular intervals, and not to fit free hanging curtains or other fabrics in the vicinity of, or above, cookers or other open flame devices. Also combustible material should not be stored in the engine compartment. If non-combustible materials are stowed in the engine space they shall be secured against falling into machinery and shall cause no obstruction to access in or from the space.



**Fire prevention is something that you as the yacht owner are responsible for. Too much fire prevention is not possible. This is an area that is unfortunately often overlooked by boat owners. However, as long as this area is an important part of your boating safety preparation, you can help to make your journeys safer for not only for you, but your crew and family as well.**

## Visual Distress Signal Devices

The United States Coast Guard requires all boats operating on the coastal waters of the United States to maintain visual distress signal equipment (flares) on board. Coastal waters are defined as all waters, except rivers, streams and inland lakes. The Great Lakes and any river mouth greater than two (2) miles wide are considered coastal waters. All boats owned in the United States and operating on the high seas are required to carry visual distress signal equipment on board.

All visual distress signal devices are required to be maintained in serviceable condition and stowed in a readily accessible location. Equipment displaying a useful service life date must be within the specified usage date shown. Both pyrotechnic and non-pyrotechnic equipment must be United States Coast Guard approved.


**Pyrotechnic** visual distress signal devices and their associated equipment include the following:



- Red Flares - Hand held or aerial
- Orange Smoke - Hand held or floating
- Launchers for aerial red meteors or parachute flares

**Non-pyrotechnic** visual distress signal devices include the following:

- Orange Distress Flag
- Dye Markers
- Electric Flashing Distress Light

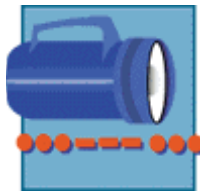

No single visual distress signal device is perfect for all conditions or purposes. Silverton recommends carrying various types of devices as described above.

Careful selection and the proper stowage of visual distress signal equipment is extremely important. If young children are frequently aboard, you should select devices with packaging which children, but not adults, will find difficult to open.

SAFETY-4

## Sound Signaling Devices



The United States Coast Guard requires all boats over 16 feet in length to have a device that is capable of producing a sound signal when conditions require. Boats greater than 26 feet and less than 39 feet, 4 inches, must have a sound signaling device that is capable of producing a four (4) second blast, which can be heard at least one-half mile away. The device may be either hand held or power operated. Boats greater than 39 feet, 4 inches must have in addition to the above sound signaling device, a whistle and a bell, which must meet or exceed the requirements of the Inland Navigational Rules Act of 1980.

Refer to the United States Coast Guard publication "*Navigational Rules, International-Inland*" for specific requirements of sound signaling devices.

## Navigation Lights

The United States Coast Guard requires all boats that are operated during the hours of darkness or when visibility is impaired, be equipped with navigation lights that are illuminated. Observe all rules of navigation when meeting or passing another vessel. **DO NOT** operate your yacht at high speeds during night operation or when visibility is impaired. A good rule to follow is to **NEVER** operate your yacht at a greater speed than that which would prevent you from stopping within the distance of your visibility.

Always use common sense and good judgement when operating your yacht at night or during restricted visibility.

Refer to the United States Coast Guard publication "*Navigational Rules, International-Inland*" for specific navigational lighting requirements.



## Additional Safety Equipment

You should consider having additional equipment on board your yacht to help make your cruising experience safer and more enjoyable. Some examples of this additional equipment are as follows:

- ✓ Anchor with chain and/or line
- ✓ Boat hook
- ✓ Bucket and sponge
- ✓ Commonly used spare parts; such as hose clamps, spark plugs, etc.
- ✓ Compass
- ✓ Docking lines
- ✓ Engine and accessory manuals
- ✓ Extra keys
- ✓ Extra V-belts
- ✓ Fenders
- ✓ First Aid Kit
- ✓ Flashlight with extra batteries
- ✓ Manually operated bilge pump
- ✓ Navigational charts for your cruising area
- ✓ Owner's Manual
- ✓ Replacement light bulbs
- ✓ Ship-to-Shore radio
- ✓ Spare fuel and oil filters
- ✓ Spare propeller with fastening hardware
- ✓ Tool kit

SAFETY-6

# NAVIGATION RULES OF THE ROAD

Navigating your yacht is much the same as driving an automobile. Operating either one responsibly means complying with a set of rules intended to prevent accidents. Just as you assume other automobile drivers know the rules of the road and expect them to abide by them, other boaters assume the same of you. As a responsible yachtsman, you must comply with the “**Rules of the Road**”; the marine traffic laws enforced by the United States Coast Guard.

There are two (2) sets of rules: The **United States Inland Navigational Rules** and the **International Rules**. The United States Inland Navigational rules apply to all vessels operated within the demarcation lines separating inland and international waters. The United States Coast Guard publishes the “**Rules of the Road**” in its publication “*Navigational Rules, International-Inland*”. You can obtain a copy of this publication from your local United States Coast Guard Unit or the United States Coast Guard Headquarters, 1300 “E” Street NW, Washington, D.C. 20226.

Other helpful publications available from the United States Coast Guard include, “*Aids to Navigation*” (Pamphlet #123), which explains the significance of various lights and buoys; “*Boating Safety Training Manual*”; “*Federal Requirements For Recreational Boats*”. Be certain to check with your local United States Coast Guard station, your Silverton Dealer or a local marina concerning navigational aids unique to your yachting area.

It is impossible to establish rules for every type of yachting situation. Therefore, it is extremely important to use common sense and good judgement when operating your yacht. Some of the basic rules to follow are:

- Always adhere to navigational rules to avoid collisions.
- Less maneuverable boats generally have the right-of-way. Always steer clear of the Stand-on vessel (boat having the right-of-way) and pass to its stern in a crossing situation.
- If a collision appears unavoidable, **BOTH** vessels must act **IMMEDIATELY**. Prudence **ALWAYS** takes precedence over the right-of-way rules if a collision is imminent.

- **NEVER** send a “**MAYDAY**” message unless there is a serious emergency and you are in need of immediate assistance.

Be certain you understand important terminology distinctions:

## Power Driven Vessel

A boat propelled by an engine, including a sailboat propelled by an engine and sails.

## Sailing Vessel

A boat propelled by sail only, with no engine in operation.

## Vessel Engaged In Fishing

A commercial fishing boat with apparatus that restricts its maneuverability (does not include trolling lines or other apparatus that does not restrict its maneuverability).

## Vessel With Restricted Maneuverability

Any vessel, due to its size, draft or cargo, that is restricted in its ability to maneuver in a certain waterway.

## Underway

Any vessel not anchored, not made fast to shore and not aground, whether or not it is under power or sail.

## Basic Rules of Navigation

### **Power driven vessels must give the right of way to the following:**

- A vessel unable to maneuver.
- A vessel whose maneuverability is restricted.
- A sailing vessel.

### **Sailing vessels must give the right of way to the following:**

- A vessel unable to maneuver.
- A vessel whose maneuverability is restricted.
- A vessel engaged in commercial fishing.

### **Vessels engaged in commercial fishing must give the right of way to the following:**

- A vessel unable to maneuver.
- A vessel whose maneuverability is restricted.

## Basic Rules of Safe Boating

- **Drugs and/or Alcohol and Boating DO NOT Mix.** Drugs and/or alcohol decrease your reaction time, impair your judgement, and inhibit your ability to safely operate your yacht. As a responsible boater, you will refrain from using drugs or alcohol (singly or combined) while you are operating your yacht. Operation of motorized vessels while under the influence of drugs and/or alcohol carries a severe penalty.
  - Always maintain your yacht and its equipment in safe operating condition. Inspect the hull, engines, safety equipment and all boating accessories on a regular basis.
  - Stow all loose items properly to prevent injury or damage caused by heavy sea conditions.
  - Be certain lifesaving and fire extinguishing equipment is on board. This equipment must meet or exceed regulatory standards and it should be noticeable, easily accessible and in proper operating condition. Your passengers should know where this equipment is located and how to use it.
  - Be certain you have sufficient fuel on board for your anticipated cruising requirements. In general, anticipate using 1/3 of your fuel supply to reach your destination and 1/3 of your fuel supply to return. Always maintain 1/3 of your fuel supply in reserve for changes in your plans due to unforeseen weather conditions or other circumstances.
  - Use **EXTREME CAUTION** while fueling your yacht. Be certain you know the capacity of the fuel tank (s) and the amount of fuel you consume when operating at your normal cruising speeds. Read and have a thorough understanding of the **Fuel System Pages** in the Systems Operation Section of this Owner's Manual. It contains valuable information and warnings that, if strictly adhered to, will enhance your yachting pleasure and safety.
  - Check the weather forecast before getting underway. DO NOT venture out if the weather is, or expected to be, threatening. While underway, always be cognizant of changing weather conditions by frequently checking the local forecast.
- Monitor strong winds and electrical storms closely and head for sheltered waters or your marina BEFORE they are encountered.
- Always maintain accurate, updated charts of your cruising area on board and refer to them frequently. DO NOT rely on your memory of an area. All waters, particularly tidal waters, are subject to constant changes, such as shoaling and underwater hazards.
  - Always file a Float Plan with a responsible person before you depart on your cruise. A blank Float Plan is in the back of the Owner's Manual.
  - Instruct at least one other person on board your yacht in its basic operating procedure. This person can take over the operation of your yacht if you unexpectedly become unable to do so.
  - DO NOT permit your passengers to ride on parts of your yacht that are not intended for passenger use, such as the gunwales or the bowrail.
  - Ask all persons to remain seated while your yacht is in motion, particularly during inclement weather.
  - DO NOT use the swim platform or boarding ladder while the engines are in operation, whether or not your yacht is in motion.
  - Always maintain a good lookout. Keep away from swimmers, divers and water-skiers. They should display a flag when engaged in these types of water sports, but DO NOT rely upon it; if you suspect that type of activity, it is best to avoid that area, if possible.
  - Understand and obey the "Rules of the Road".
  - Understand and obey all local boating laws.
  - Always maintain complete control of your yacht.
  - Finally, ALWAYS operate your yacht with care, courtesy, and common sense.

## Voluntary Safety Inspections

The United States Coast Guard Auxiliary and boating officials in many states offer courtesy safety inspections of your yacht at no charge to you. They will examine your yacht for compliance with all safety standards and required safety equipment. You may voluntarily consent to one of these inspections and you are given sufficient time to make necessary corrections without fear of prosecution for any discrepancies found. Contact your local United States Coast Guard Auxiliary or appropriate state agency for details concerning these courtesy safety inspections.



# CARBON MONOXIDE SAFETY

## **CARBON MONOXIDE CAN KILL!**

This section is intended to provide educational information about carbon monoxide relative to boats and boating. Carbon Monoxide accumulation is affected by boat geometry, hatch, window and door openings, ventilation openings, proximity to other structures and boats, wind direction, boat speed, boat maintenance and a multitude of other variables. This section discusses many of these and enables the boat owner to better understand some of the more predictable effects. However, this information is limited in that it cannot cover all conceivable variables. Therefore, the boat owner is cautioned not to exclusively rely on it to prevent the accumulation of carbon monoxide.

## WHAT IS CARBON MONOXIDE?

Carbon monoxide is a highly poisonous gas formed by the combination of carbon and oxygen. Commonly referred to as CO, its chemical formula, "C" for carbon and "O" for oxygen. CO is a colorless, odorless, and tasteless gas that, by itself, can not be detected by human senses. CO diffuses in the air much more rapidly than any other gases that are detectable by the human senses. The weight of CO is about the same as air so it does not rise or fall like other gases but will distribute itself throughout the boat. CO is produced any time a material containing carbon is burned. In boating these materials include, but are not limited to, gasoline, diesel fuel and propane. All carbon based fuels produce varying amounts of CO, depending on their carbon content. Gasoline is high in carbon and therefore produces high levels of CO. Diesel fuel is low in carbon and therefore produces lower levels of CO. However, the exhaust of all engines and generators as well as any open flame device produce CO and the same precautions should be taken regardless of the type of fuel.

## HOW IS A PERSON AFFECTED BY CARBON MONOXIDE?

When breathed, carbon monoxide is absorbed by the lungs and reacts with the blood hemoglobin to form carboxyhemoglobin, which reduces the oxygen carrying capacity of the blood. The result is a lack of oxygen for the tissues with the subsequent tissue

death and, if prolonged, death of the individual. Carbon monoxide in high concentrations can be fatal in a matter of minutes. Even lower concentrations must not be ignored because the effects of exposure to CO are cumulative and can be just as lethal. Certain health related problems and age increase the effects of CO. People, who smoke or are exposed to high concentrations of cigarette smoke, consume alcohol, or have lung or heart disorders are particularly susceptible to an increase in the effects from CO. However, the health of all of the boat's occupants should be considered. Physical exertion accelerates the rate at which the blood absorbs CO. The early effects of CO poisoning are easy to overlook because they are similar to the effects of other boating related stresses such as eye strain, fatigue, sun exposure, seasickness, or alcohol consumption. But as the concentration of CO in the air increases, it has increasingly adverse effects on your health.

One or more of the following symptoms can signal the adverse effects of carbon monoxide accumulation. The order of this list is generally the sequence of symptoms. However, the number of symptoms and the order of appearance may change for different people:

- Watery and Itching Eyes
- Flushed Appearance
- Throbbing Temples
- Inattentiveness
- Inability to think coherently
- Ringing in the Ears
- Tightness across the Chest
- Headache
- Drowsiness
- Incoherence
- Nausea
- Dizziness
- Fatigue
- Vomiting
- Collapse
- Convulsions

## WHAT TO DO WHEN SOMEONE IS OVERCOME WITH CARBON MONOXIDE

When someone falls victim to carbon monoxide poisoning, fast and responsive action is crucial. Know the symptoms. The earlier effects of CO are detected the better the chance for recovery. The following list

shows the sequence of events that must be done in an effort to revive a CO victim:

- Evacuate, Ventilate, Investigate, Take Corrective Action
- Move the person to fresh air
- Administer oxygen if available
- Contact medical help
- If the victim is not breathing, perform artificial respiration per approved CPR procedures until medical help arrives and takes over. Prompt action can make the difference between life and death.
- Ventilate area
- Investigate the source of CO and take corrective actions.

## HOW DOES CARBON MONOXIDE ENTER YOUR BOAT?

Any device that burns fuel creates carbon monoxide. For example, a propane cooktop or a space heater are both potential sources for CO. But the most serious danger comes from the gasoline engines and generators aboard your own and neighboring boats. There are four basic ways that CO from a running engine or generator can enter your boat:

The “station wagon effect” results from the aerodynamics of deck cabins and flying bridges. With the boat under way, the air flow over the top forms a low pressure area behind the cabin or transom which can suck exhaust gasses into the cockpit and the cabin. Inefficient trim angles also can cause the station wagon effect.

Obstructions are principally a problem when boats are rafted together or tied to a dock or seawall. Against an obstruction, exhaust gasses which normally dissipate may instead be directed back to your boat. Beware of open windows, hatches, doors and the location of the engine intake. Exhaust contains particularly high concentrations of CO when an engine is cold; so to protect yourself and your neighbors, minimize the time spent getting underway. Pay particular attention

to potential obstructions when running a generator for long periods.

Infiltration of CO from a neighbor’s exhaust can be a problem aboard any boat at any time. Infiltration can happen any time your neighbors are running a generator or engine, even when they are many slips away.


Leaks in your own exhaust system from the engines or generator can allow harmful levels of CO to accumulate at a surprising rate. Good maintenance practices are critical to avoid this.

There are many variables that combine to affect the accumulation of carbon monoxide. Some of these variables are; the presence of weather enclosures and covers, boat layout and configuration, location of ports, hatches, windows, doors, and vents, proximity and types of structures and other boats, wind speed and direction, speed of the boat, etc. Although it would be impossible to identify every variable or combination of variables that may affect the accumulation of carbon monoxide, the boat operator must remain aware at all times of the possibility of CO accumulation.

The following illustrations show some of the ways that carbon monoxide gas can accumulate in your boat while at dock and underway. Become familiar with these examples to prevent exposure to this poisonous gas.




**Blocked hull exhaust outlets near a pier, dock, seawall, bulkhead, or any other structure can cause excessive accumulation of Carbon Monoxide Gas (CO) within the cabin areas of your yacht. Be certain hull exhaust outlets are not blocked in any way.**

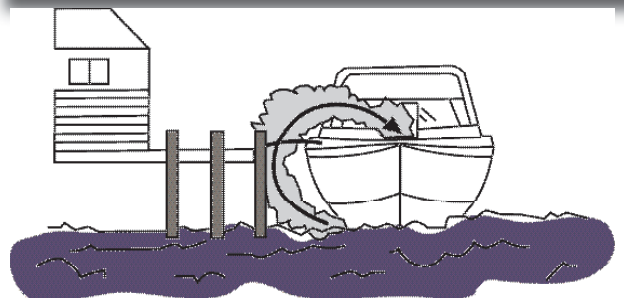



**⚠ DANGER**

Engine and generator exhaust from other vessels alongside your yacht, while docked or anchored, can cause excessive accumulation of Carbon Monoxide Gas (CO) within the cabin and cockpit areas of your yacht. Be alert for exhaust from other vessels.

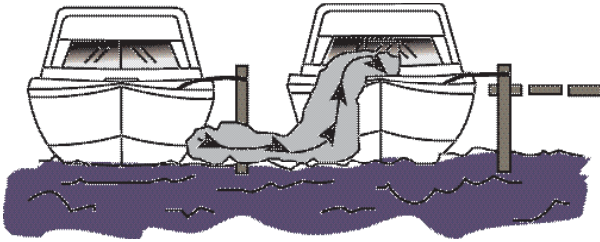


**⚠ DANGER**

Engine or generator exhaust from your yacht while underway at a slow speed can cause excessive accumulation of Carbon Monoxide Gas (CO) within the cabin and cockpit areas of your yacht. A tail wind can increase the accumulation. This is often referred to as the “Stationwagon Effect”. Always provide adequate ventilation or increase your speed, if possible.




**⚠ DANGER**

When protective weather coverings are in place, engine or generator exhaust from your yacht, while docked, at anchor, drifting or underway can cause excessive accumulation of Carbon Monoxide Gas (CO) within the cabin and cockpit areas of your yacht. Always provide adequate ventilation when the weather coverings are in place and either the engine or the generator are running.

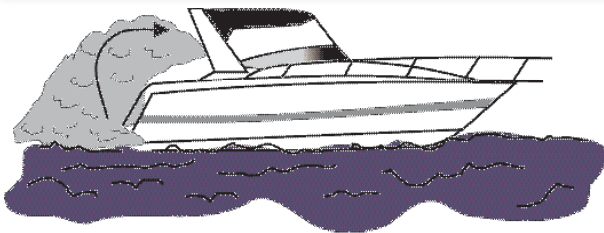

**⚠ DANGER**

Engine or generator exhaust from your yacht while underway and operating with a high bow angle can cause excessive accumulation of Carbon Monoxide Gas (CO) within the cabin and cockpit areas of your yacht. Always provide adequate ventilation and redistribute the load to lower the bow angle.

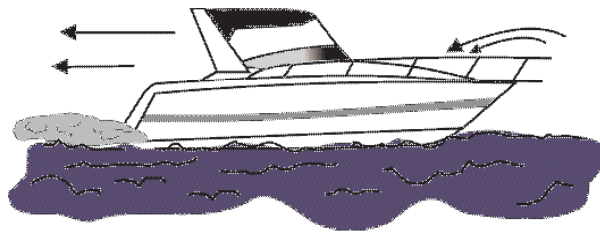

## HOW TO MINIMIZE THE ACCUMULATION OF CARBON MONOXIDE

- Practice good inspection and maintenance habits.
- Be certain hull exhaust outlets are not blocked or restricted in any way.
- Be alert for exhaust gasses from other boats.
- Always provide adequate ventilation when weather enclosures are in place and engines or generator is running.
- Do not run with a high bow angle. Use trim tabs or redistribute the load to maintain a low bow angle.
- Orient your boat to maximize the dispersion of CO.
- Be aware of the effects of your actions on other boats.
- Be aware of the effects of the actions of others on your boat.
- Provide adequate ventilation when open flame appliances are used in the cabin.

## PREVENTIVE MAINTENANCE

Frequent inspections and proper maintenance of the engine, generator, and exhaust systems as well as other various areas of your boat are critical in preventing the accumulation of carbon monoxide. It is the owner's responsibility to make sure that the entire boat is inspected and maintained against CO.

The exhaust systems of your engines and generator are under constant attack from salt water, gasses, vibration, and normal wear. Inspect every exhaust system component often. Start with a visual inspection. Check each joint for discoloration, carbon buildup, stains, water leaks or other signs of damage. Inspect all metal parts for corrosion, discoloration, or flaking. Check that all hose clamps are in good condition and properly tightened. Carefully inspect all exhaust and cooling hoses for signs of wear, dry rot, cracking, discoloration, chafing, or swelling. If

any of these conditions exist, have the entire system inspected and corrected by a qualified technician before starting the engines or generator.

Next, start each engine and generator one at a time. Follow the full run of the exhaust system, listening and looking for leaks. While doing this, make sure there is adequate ventilation and that your CO detector is on.

Other items to inspect are as follows: Check that access panels around the engine and exhaust are in place and fit snugly to minimize the opportunity for CO to enter the cabin. There should be no large openings where CO could enter the cabin. Ensure that all ventilation systems are in good working order, and not blocked or punctured. Check all sink drains to assure that they have a good water trap to prevent CO from coming in from the outside.

Finally, because poor running engines produce excessive CO, make sure engines and generator are tuned up. They should run smoothly and not produce black smoke. The spark plugs and ignition systems should be maintained regularly, and the fuel system and air filters should be in good order.

## CARBON MONOXIDE DETECTORS

If you carefully avoid potential CO accumulation and maintain your systems properly, you have made great strides towards protecting yourself and others from the dangers of carbon monoxide. Another important line of defense is a CO Detector, used whenever you're aboard your boat. A detector is the only way to properly detect the presence of CO. There is a CO detector located in every living area on your Silverton Yacht. These CO detectors are UL Approved for Marine Use. If you replace the CO detectors at any time, they must be replaced with marine CO Detectors, not residential detectors. Most CO detectors require specific maintenance procedures to remain accurate and functional. Follow the manufacturer's instructions supplied to you in your owner's packet. Carbon Monoxide Detectors should be installed in all boats and the operation of them should be known by all aboard.

## Fuel Safety



**Gasoline and Diesel Fuel are extremely flammable. Proper handling is necessary to provide for the safety of you and your yacht.**

- DO NOT smoke while fueling.
- Make sure that all accessories, both engines and generator, are turned off before beginning to fuel your yacht.
- When fueling your yacht in warm weather, allow for expansion of the fuel and do not top off the fuel tanks. The tanks may overflow when the fuel expands after being pumped out from cool, underground tanks, or when the air temperature is cool, such as early morning or evening.
- Always handle fuel with care.
- Never store fuel in portable containers aboard your yacht.

## Emergency Situations

### Swamped or Capsized Yacht

If your yacht becomes swamped or capsizes, immediately put on a PFD and set off a visual distress signal. A swamped or capsized yacht will normally stay afloat. **DO NOT** leave your yacht or attempt to swim to shore, except under extreme conditions, such as fire or explosion. A capsized yacht is much easier to see by a potential rescuer than a person swimming, resulting in a greater chance of rescue. If you attempt to swim to safety, the shore may be farther away than it appears and you may tire and not be able to reach your destination, resulting in possible drowning.

### Hypothermia

If a person falls overboard or is in the water due to a swamped or capsized yacht, hypothermia may be an immediate concern. Hypothermia exists when the body loses heat faster than it can replace it. If not rescued within a short period of time, the person will

become exhausted and likely drown. In general, the colder the water, the shorter the time for survival. If the person is wearing a PFD, it will greatly increase his survival time as they act as an insulator and will also keep the person afloat even if he is unconscious.

### Collision

If a collision occurs, the following procedure should be strictly adhered to:

- Be certain all passengers put on their PFD. If a passenger is unable to put on his own PFD due to a disabling injury, assist him.
- Examine all persons on board for any injuries and administer first aid, if necessary.
- If your yacht has a VHF radio, contact the United States Coast Guard and any other potential rescue vessel and advise of your situation and location. VHF radio contact may be made on Channel 16 and Citizen's Band (CB) radio contact may be made on Channel 22. If you have SeaKey services, you should send a "MAYDAY" Signal and mark your location. For details on these procedures refer to your SeaKey Operators Guide.
- Inspect your yacht to determine the extent of damage and its potential for sinking.
- Prepare to assist the other craft and its passengers, if possible.
- If the collision resulted in penetration of your hull, prepare to quickly plug the fracture with a spare life jacket or bunk cushion once the vessels are separated.
- Before plugging the fracture, trim the yacht to place the damaged section above the water level.
- Remain with your yacht until assistance arrives.

### Running Aground

- If your yacht runs aground, examine everyone on board for injuries and render first aid, if necessary.

- Examine your yacht for damage to the hull and running gear. If no serious damage is noted, attempt to free the yacht by shifting weight to the bow to raise the stern and then reverse the engines and back out of the shallow water into deeper water.
- If towing is necessary, **DO NOT** attach the tow line to the deck cleats. They are not designed to take the full load of the yacht under pressure.

**Silverton recommends using a commercial towing service for your safety and to decrease the potential for additional damage to your yacht as a result of removing it from the underwater obstruction.**



**NEVER attach a tow line to a deck cleat or anchor windlass. The cleat or windlass may pull free from the deck and cause serious personal injury or property damage.**

## Hazardous Weather Conditions

### Storms

Storms rarely appear without some advance warning. Check the local weather forecast before you leave port, but be aware that weather conditions can change rapidly. If you have a VHF radio, listen to the continuous weather reports issued by the National Weather Service. If you have a portable radio, keep it tuned to a station that broadcasts frequent weather reports. If you are tuned to an AM frequency, listen for static; it often means an electrical storm is approaching. Many boating clubs fly weather signals in the form of flags or lights. Learn to recognize these signals.

Your surroundings can also be a good indicator of changing weather conditions. Watch for changes in wind direction or cloud formations. There is no substitute for a good understanding of typical weather conditions and what to do when it takes a turn for the worse.

### Fog

Fog is the result of either cold air passing over a warm earth surface or warm air passing over a cold earth surface. You can judge the likelihood of fog formation by periodically measuring the air temperature and the Dew Point temperature (the temperature at which moisture in the air will develop), which is given during a normal weather forecast. If the difference between these two temperatures is small, fog is likely to develop. Always remember the following guidelines if you encounter fog conditions:

- Unless your yacht is well equipped with charts, head for shore at the first sign of fog and wait until conditions improve before continuing your cruise. If you have charts on board, take your present location bearings as the fog sets in, mark your position and continue to log your course and speed.
- **REDUCE YOUR SPEED.**
- Be certain all persons on board are wearing their PFD.
- Station a person forward as a lookout.
- Sound your horn or fog bell at the appropriate intervals to warn other vessels of your presence. Refer to the *“Rules of the Road”* for information concerning the proper duration and interval of the fog signal.
- Listen for fog signals from other vessels and be aware of their presence. If possible, determine their proximity to your yacht, but remember, sound carries a long distance over water and can be deceiving.
- If there is any doubt concerning the safety of continuing your excursion, anchor your yacht. Listen for other fog signals while continuing to sound your fog bell or horn. Continue your cruise when conditions improve.

### Fire Safety

Fire aboard your yacht is always serious, but it can usually be brought under control if you are prepared and act quickly. Fire extinguishers required by the United States Coast Guard are the minimum necessary. Silverton recommends exceeding the minimum

requirements by placing additional fire extinguishers where they may be needed. Inspect all fire extinguishing equipment frequently and review emergency plans on a regular basis.

As a yacht owner, you should develop a **Fire Response Plan** and familiarize all passengers with this plan before departing on your cruise. The Fire Response Plan will identify the type of fire you may encounter and the appropriate reaction to quickly extinguish it before it gets out of control. Having a Fire Response Plan in place and the assignment of certain responsibilities to your passengers will result in faster and more accurate decisions and reactions in the event of a fire aboard your yacht.

**Important:** *All passengers on board your yacht should know the location of your fire extinguishers and be familiar with their use.*

In the event a fire does start aboard your yacht, follow these guidelines:

- If you detect a fire or suspect a fire aboard your yacht, immediately turn OFF your engines and electrical power supply. DO NOT turn OFF power to your VHF radio.
- Be certain all persons on board put on their PFD.
- If the fire is in the engine/generator compartment, DO NOT open the hatch. The fire will flare with the sudden introduction of fresh air.
- If you are able to get to the source of the fire, aim your fire extinguisher at the base of the flames and use a sweeping action to extinguish it. Concentrating your fire extinguisher in one location may cause the fire to spread.
- If the fire becomes out of control, send a distress signal and call for assistance on your VHF radio. Be certain to provide any potential responders with your location and a description of your situation. If you have SeaKey Services, you should send a "MAYDAY" Signal and mark your location. For information on these procedures, refer to your SeaKey Operators Guide.

Deciding whether to stay on board your yacht or abandon ship may be difficult and depends on the extent of the fire and the weather conditions. If you

decide to abandon ship, all persons on board should jump, not dive, overboard and swim a safe distance away from the burning yacht. Be certain all persons stay together after abandoning ship.

Be certain to read and have a thorough understanding of the Portable Fire Extinguisher System Section and the Automatic Fire Extinguisher System Section of this Owner's Manual. They contain valuable information and warnings for your safety.

Prevention is the safest and most effective method of fighting fire aboard your yacht. Always follow these guidelines:

- Use extreme caution and refrain from smoking while fueling your yacht.
- Use only marine safety approved cooking and heating systems and follow the manufacturer's directions concerning their operation.
- Open flames demand constant attention. DO NOT leave any open flame unattended.
- Ensure ventilation systems are unobstructed.
- Always provide adequate ventilation when cleaning and painting.
- Use extreme caution when using liquefied petroleum gas (LPG) or compressed natural gas (CNG). Close valves to cylinders and supply lines when not in use.
- Operate exhaust blower motors at least five (5) minutes before starting the engines or generator.
- Use your sense of smell to check for fumes in the bilge and engine/generator compartment before starting engines or generator.
- Always store flammable material in approved containers and in a locker sealed from the interior of your yacht and vented overboard.
- Remove the canvas enclosure, at least partially, before starting engines.
- Ensure there are no leaks in any fuel system, including LPG/CNG.

- Extinguish smoking materials carefully. Check cleaning materials for flammability and store as you would any flammable material.
- Always disconnect electrical power before performing any maintenance on electrical appliances.
- Always replace electrical breaker switches or fuses with the same recommended amperage. NEVER exceed the recommended amperage.
- Electrical service to your yacht should only be performed by a qualified marine electrical technician.

## AIR CONDITIONING / HEATING SYSTEM (Optional)


The **Air Conditioning/Heating System** in your **33C** is factory installed. The purpose of this system is to maintain a comfortable cabin temperature and humidity level, regardless of ambient temperature and humidity. Each Air Conditioning/Heating Unit in your **33C**, which operates on the A/C Electrical System, is self-contained and manufactured by Marine Systems. The two (2) Air Conditioning/Heating System units are described as follows:

### 20,000 BTU Total Capacity

This system utilizes two (2) self-contained Air Conditioning Units. The forward unit is 10,000 BTU's, and the Salon Unit is 10,000 BTU's. The **Forward**

**Unit** is located under the bed in the forward stateroom. The **Salon Unit** is under the aft section of the Dinette Lounge.

Each Air Conditioning Unit is controlled by an independent thermostatic control panel ("Elite Control"), which is located within the respective cooling/heating zones. The desired zone temperature is manually set on the "Elite Control" and the Air Conditioning Unit is activated to supply cooling or heating as required to constantly maintain the temperature selected.

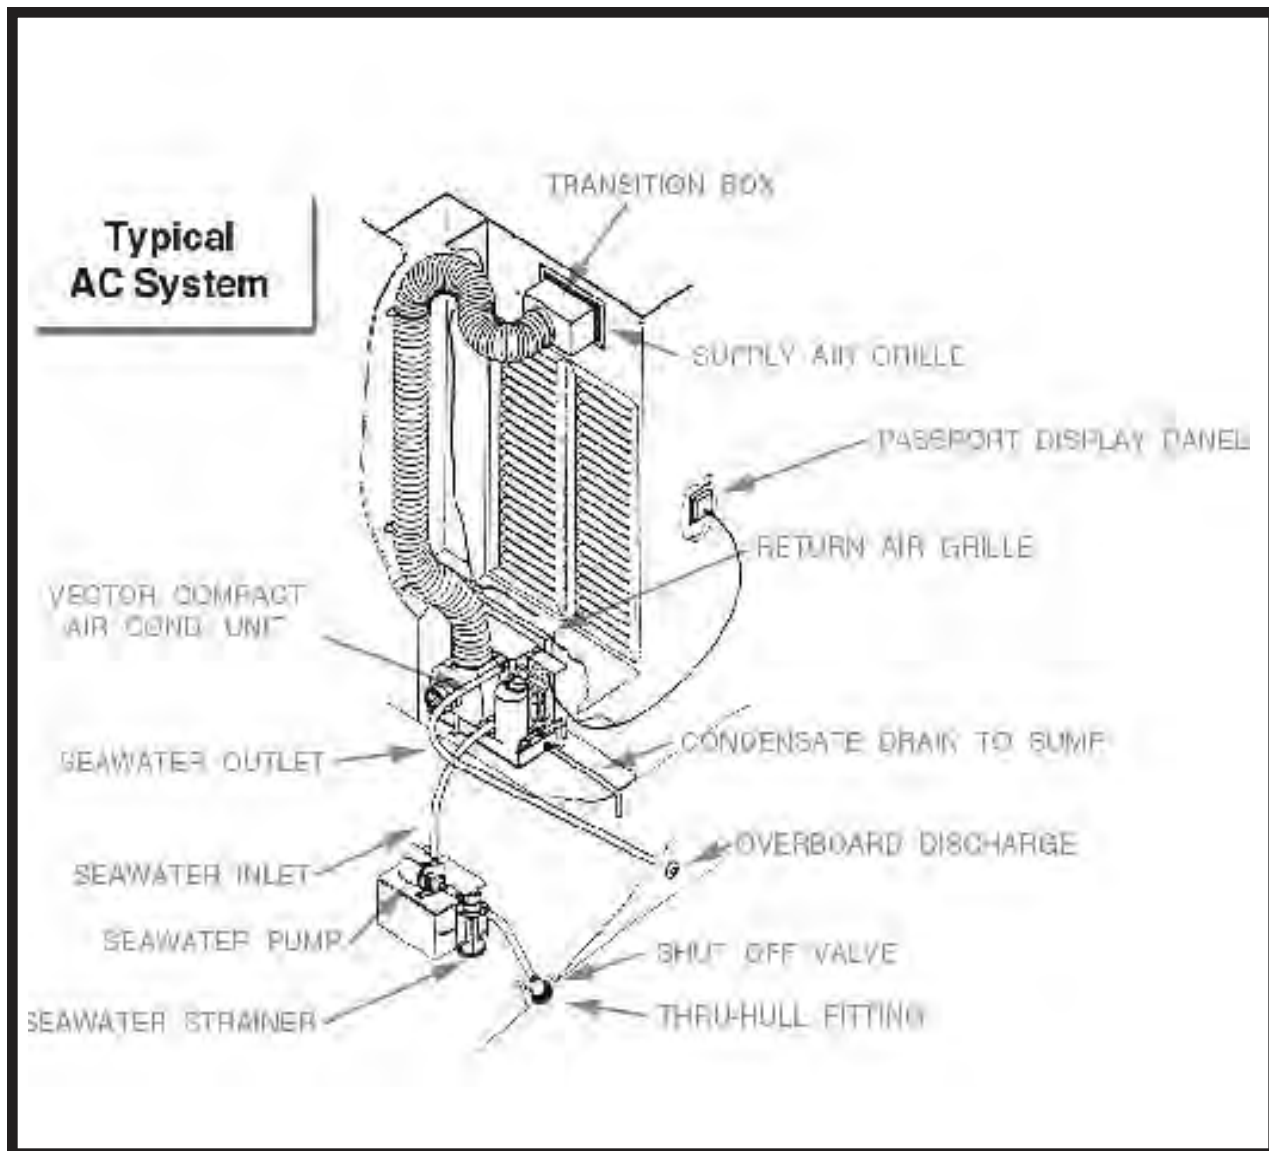

The photo below shows the Unit Control Panel.



Each Air Conditioning Unit will operate in a “**Dehumidification**” mode upon demand and is controlled by the “Elite Control”. Refer to the Marine Systems Operation and Maintenance Manual for a complete description and instruction in the operation of this mode.

Only certified and trained service technicians should perform maintenance of your Air Conditioning/Heating System. Contact your Silverton dealer for general maintenance and winterization of the system on your **33C**. Untrained persons may carefully perform routine maintenance, such as the cleaning of filters and the exterior surfaces of the condensing coils.

**Refer to the Marine Systems Operation and Maintenance Manual for technical information concerning your Air Conditioning/Heating System.**

Operation of the **Air Conditioning/Heating System** in your **33C** is as follows:

- Turn ON the respective Air Conditioner Breaker Switch, located on the AC/DC Electrical Panel (See **AC/DC Electrical Pages** in the **System Operations Section** of this manual).
- Make sure Seawater Intake is open and Seawater Pump is operating properly.
- Refer to the Marine Systems Operation and Maintenance Manual for a detailed description of the function of each button located on the “Elite Control”.
- Both Air Conditioning Units create condensation, which creates water that has to be drained. The forward unit drains into the Shower Sump Pump. Make sure Shower Sump Circuit Breaker is turned on when operating the Air Conditioning.
- Turn ON the power button, located on the respective air conditioning unit “Elite Control”.
- Press the fan speed button on the “Elite Control” until the desired speed is obtained.
- Press the appropriate temperature control button (Down/Up) to obtain the desired temperature.



## ANCHOR SYSTEM

The purpose of the **Anchor System** is to make fast your yacht to the ground surface below the water level. You may want to anchor your yacht for a variety of reasons, such as an overnight stay in a harbor, stationary fishing, or if your yacht becomes disabled to remain in one identifiable location until assistance arrives. The equipment used in anchoring your yacht, also known as “ground tackle”, is as follows:

- Anchor
- Anchor Chain or Line (Rode)
- Anchor Chock
- Anchor Cleat
- Anchor Safety Chain
- Anchor Windlass (Optional)
- Rope Locker

### Anchor

Your **33C** is equipped with a **Anchor**, weighing 17 pounds. This universal type of anchor is very efficient for a variety of bottom terrain. This is not a storm anchor. Please refer to *Chapman's* for the recommended need for a storm anchor.



### Anchor Chain or Line (Rode)

The **Anchor Rode** on your **33C** may be chain, rope, or a combination of both, and, depending on the option you selected when you purchased your yacht from your Silverton dealer, the length is as follows:

- Standard Equipment: One hundred and fifty (150) feet of nylon rope, 1/2 inch in diameter.
- Optional Windlass Equipped (Standard): Fifteen (15) feet of chain coupled to three hundred (300) feet of nylon rope, 9/16 inch in diameter.
- Optional Windlass Equipped (Optional): Three hundred (300) feet of chain.

### Anchor Chock

The **Anchor Chock** on your **33C** is located on the underside of the bow Pulpit. The Anchor is pulled into the chocks on the Pulpit, to steady the Anchor.



### Anchor Cleat

Your **33C** is equipped with an **Anchor Cleat** and its purpose is to hold the rope that secures the anchor, after the anchor is set. If your **33C** is equipped with the optional **Windlass Anchor Winch**, the cleat will help relieve constant pressure on the winch. Once the proper scope is determined, the cleat keeps the rope at a constant length.

The Anchor Cleat is located next to the **Anchor Hatch**. The photo below shows the cleat next to the Access Hatch Hinge.



### **Anchor Windlass (Optional)**

Your **33C** may be equipped with an optional power **Anchor Windlass**, which is located under the Anchor Hatch.

The purpose of the Anchor Windlass is to assist in lowering and raising the anchor with a minimum of manual effort.

The Anchor Windlass operates on DC Electrical Power and may be operated from either the Helm Station or foot controls, which are located on the bow Pulpit. There is no battery switch to operate; however, there is a breaker on the DC Panel labeled "Windlass" that must be in the ON position for the windlass to be operatable. There is also a re-set breaker in the bilge, located over the port battery.

The Helm Station Control consists of a manual rocker-type switch, located on the helm switch panel (Refer to the Electrical Pages of this section of this Owner's Manual for the location of the switch).

The foot controls, located adjacent to the Anchor Windlass, consist of two (2) foot depressed switches: one switch lowers the anchor; the other switch raises the anchor (See photograph above, which illustrates the location of the **Anchor Windlass**, the foot depressed control switches, the **Anchor Cleat** and the **Rope Locker**).



### **Rope Locker**

Your **33C** is equipped with a **Rope Locker**, which is located on the Starboard side of the bow.

The purpose of the Rope Locker is to store the anchor rode in a convenient location removed from the deck surface.

The Rope Locker is accessed by a hatch, which covers the locker and prevents you or your passengers from accidental falls into the storage well (See previous photograph, which illustrates the location of the Rope Locker). This Rope Locker has a drain in the bottom. It is recommended that you wash off the salt water with fresh water after use of your anchor and rope.

### **Scope**

**Scope** is defined as the ratio of the length of the anchor rope to the vertical distance from the anchor chock to the bottom surface (water depth plus the height of the anchor chock above the water). Under favorable current, tidal, and weather conditions, a Scope ratio of 8:1 is considered satisfactory. If using chain, the ratio may decrease to 5:1 under the same favorable conditions. It may be necessary to increase the scope ratio under unfavorable weather conditions, such as severe wind and tidal currents, to hold your yacht fast to the bottom. Scope ratio is very important. Please refer to your Chapman's book for all details on anchor rope.

## [Anchor Safety Chain](#)

Attached to the anchor chain is an **Anchor Safety Chain**. This safety chain must be released before you can use your anchor. This safety chain must be released manually. This safety chain will ensure that the anchor is not released when not being used.

## [Proper Anchoring Technique](#)


**Proper Anchoring Techniques** are required for safe anchoring of your boat. Please refer to Chapman's book for complete instructions for anchoring your boat.



## **BILGE PUMP SYSTEM**

The purpose of the **Bilge Pump System** is to remove any water that may accumulate within the bilge area of your yacht. Although a small amount of water in the bilge area is expected, the water should never be above the bilge switch. However, if water is above the bilge switch, then the switch is not working correctly. Make sure they are not turned off. If the problem continues, please contact a service technician to solve the problem.

The bilge area is defined as the interior area of the hull below the designed waterline. Your **33C** is equipped with two (2) bilge pumps that are capable of pumping 1250 gallons of water per hour. The bilge water is pumped directly overboard.

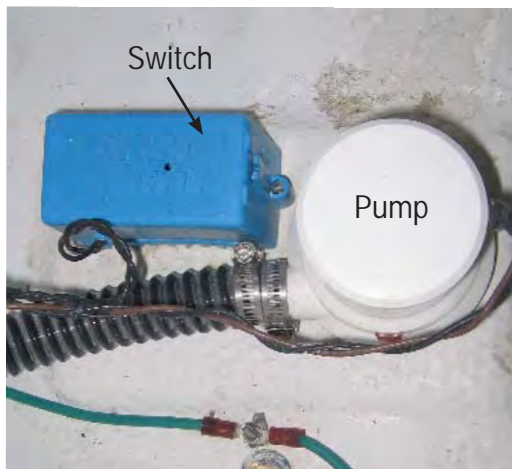

Normal operation of the bilge pumps is automatic. Each bilge pump is equipped with a float-type switch that will automatically activate the pump when the bilge water reaches a certain level.

The automatic switches are connected directly to the batteries and will operate even if the battery switch is turned OFF. Each of the bilge pumps can also be activated manually by individual switches located on the AC/DC Electrical Panel (See the Electrical Pages in this section of your Owner's Manual for the location of the Bilge Pump Switches). The bilge pump will operate continuously until the manual switch is turned OFF. The battery switch must be turned ON to operate the bilge pumps manually.

Periodic maintenance of the bilge pumps should consist of the following:

- Visually inspect each bilge pump for any debris that may have accumulated. Remove any debris noted.
- Manually test each bilge pump by activating the manual switches located on the AC/DC Electrical Panel. Listen to each bilge pump as it is manually activated. They should emit a quiet "whirring" sound. If any abnormal sounds are noted, contact your Silverton dealer for further inspection and replacement, if necessary.
- *IMPORTANT: After testing each bilge pump by turning ON the manual switches, be certain they are turned OFF. The constant operation of the bilge pumps will eventually discharge the batteries.*

Location of the Bilge Pumps is as follows:

- **FORWARD BILGE PUMP** - Access to the forward pump is through the hatch opening located on the Forward Stateroom Floor.
- **MIDSHIP BILGE PUMP** - Access to the midship pump is through the engine room. The pump is located in the forward section of the engine room.



## BILGE VENTILATION SYSTEM

### **WARNING**

The engine and generator compartments on your 33C are enclosed areas and are subject to the accumulation of dangerous fuel fumes. If these fumes are not ventilated or properly exhausted from the engine/generator compartment, they may be ignited, resulting in fire or explosion, and possibly cause injury or death.

Your 33C is equipped with **Intake Vents** for the Engine Room. These vents are located on the port and starboard side of your 33C. The purpose of these vents is to ventilate the Engine Room area of your 33C. The photo below shows the vent on the starboard side of your 33C.



For quicker evacuation of air from the Engine Room, your 33C is equipped with two (2) **Bilge Blowers**. The blowers are located in the engine compartment and exhaust out through the hull on the port and starboard sides of your 33C.

The photo below shows the **Blower Exhaust** on the starboard side of your 33C.



Operation of the Bilge Blowers is as follows:

- The Battery Switch must be turned to the ON position. The Battery Switches are located below the AC/DC Panel in the Salon.
- The Bridge Electrical Breaker Switch at the Ships AC/DC Panel must be turned ON.
- Depress the **Blower Motor Switch**, located on the Helm Switch Panel (The switch location is shown in the Electrical Pages of this section of your Owner's Manual). The small light located on the blower switch will illuminate to indicate the **Blower Motors** are in operation. The blowers can also be turned on at the AC/DC Panel. The Electrical Pages in this section of this Owner's Manual shows the location of the switch on the AC/DC Panel (There is also a schematic of the AC/DC Panel in the Schematics Section of this Owner's Manual).

## **WARNING**

To reduce the risk of fire or explosion within the engine/generator compartments of your 33C, the bilge blower motors should **ALWAYS** be operated under the following conditions:

- Operate the blower motors for a minimum of five (5) minutes prior to starting the Engines or Generator.
- Operate the blower motors continuously while your yacht is traveling less than cruising speed.

The photo below shows the **Blower Unit** attached to the exhaust hose.



Located right under the blower is the fuse for the blower.



## **BONDING SYSTEM**

The purpose of the **Bonding System** is to protect your yacht's underwater components from electrolysis and galvanic corrosion. Examples of underwater components would be the Propellers, Propeller Shafts, Rudders, Engine/Generator, and Seawater Intake Valves.

Electrolysis and galvanic corrosion occurs primarily in salt water, but can occur to a lesser degree in fresh water. Salt water allows electric current to flow from anodic to cathodic material. Any two metals from two components and their relative positions in the galvanic rating table will determine which metal loses material (anode) and which metal remains largely undisturbed (cathode). The distance apart on the galvanic table of the two metals determines the rate of wear.

To help prevent corrosion, **Sacrificial Zinc Anodes** are fitted to the underwater components of your yacht, such as the propeller shafts and rudders.



A large sacrificial zinc anode plate is also attached to the underwater area of the transom.



The anodes on the Rudder, Shaft, and Trim Tabs are installed by your Silverton Dealer.

The purpose of these Sacrificial Zinc Anodes is to attract any destructive electrical currents away from the metallic underwater components; thereby preventing their eventual corrosion and allowing the corrosion of the sacrificial zinc anodes. The sacrificial zinc anodes are considerably easier and cheaper to replace and their deterioration will not affect the performance of your yacht, as would the deterioration of a propeller or rudder.

The Bonding System is a network of wires (color coded green) that are connected to all metallic underwater components within the interior of the hull, which makes them one unit for electrical current purposes. This network of wires is then attached to the Sacrificial Zinc Anode, located on the Transom, which allows corrosion of the anode but prevents corrosion of the underwater components.

General maintenance of the Bonding System consists of yearly replacement of the Sacrificial Zinc Anode, located on the transom. All other zinc anodes located on the Propeller Shafts, Rudders, etc., should be completed during the spring launch procedure. Depending on your docking location and the length of your boating season, the anodes may require more frequent replacement. If possible, check the anodes for excessive corrosion midway through your boating season. If excessive corrosion is noted, have your dealer or a competent technician replace the sacrificial zinc anodes. Periodically check the continuity wiring connections to make sure they are tight and free of corrosion. Tighten and clean connections as necessary.

*NOTE: Silverton recommends placing Sacrificial Zinc Anodes on the following components:*

- Propeller shafts
- Rudders
- Trim Tabs

*IMPORTANT: DO NOT paint any of the Sacrificial Zinc Anodes as it will retard the flow of electric current through them and render them ineffective.*



## CARBON MONOXIDE (CO) DETECTOR SYSTEM

### **⚠ DANGER**

Carbon Monoxide Gas (CO) is colorless, odorless, and tasteless. It is highly poisonous, endangering lives even at very low levels of concentration. Mild exposure causes headaches and fatigue, often resembling “flu-like” symptoms. Medium exposure causes severe headaches, drowsiness, nausea, and rapid heart rate. Extreme exposure results in unconsciousness, convulsions, cardiorespiratory failure, and death. If Carbon Monoxide Gas (CO) is detected in your yacht, immediately contact a qualified technician to locate and repair the source of the poisonous gas. **DO NOT** enter your yacht until repairs have been made and the Carbon Monoxide Gas (CO) is lowered to an acceptable level. Refer to the Carbon Monoxide Safety pages in the Boating Safety section of this Owner’s Manual.

Your **33C** is equipped with three (3) *SAFE-T-ALERT* Carbon Monoxide Gas (CO) Detector Monitors, which are located within the interior as follows:

- Forward Stateroom



- Salon



- Mid Stateroom



Each **CO Monitor** is operated by DC Electrical Power and they are connected directly to the batteries. It is not necessary for the battery switch to be turned ON for them to operate. The fuses for the monitors are located behind the AC/DC Panel.



Operation of the CO Monitors requires a ten (10) minute warm-up period; during which time, the sensor element is cleaned and the unit is stabilized. During this ten minute warm-up period, the GREEN indicator light will flash ON and OFF. The GREEN indicator light will remain ON after the completion of the warm-up period until the presence of Carbon Monoxide Gas is detected. If the GREEN indicator light does not illuminate, check all wiring connections; clean and tighten, if necessary. If the GREEN indicator light still fails to illuminate, contact your Silverton Dealer for inspection and replacement. **DO NOT** attempt to make any repairs to the unit(s) yourself.

When Carbon Monoxide Gas is detected by the CO Monitor, the following visual and audible signals will appear:

### Low CO Warning

YELLOW flashing indicator light accompanied by a "BEEP" sound every five (5) minutes. The YELLOW indicator light will continue to flash until the presence of CO has lowered to an acceptable level. If the CO level has not been lowered to an acceptable level, an alarm will sound in approximately fifteen (15) minutes. Contact a qualified technician to locate and repair the source of the Carbon Monoxide Gas. DO NOT enter your yacht until repairs have been made and the CO has been brought to an acceptable level.

### CO Alarm

RED flashing indicator light accompanied by a pulsed alarm sound. This indicates the presence of a dangerous level of Carbon Monoxide Gas and **IMMEDIATE ACTION IS REQUIRED**. Contact a qualified technician to locate and repair the source of the Carbon Monoxide Gas. DO NOT enter your yacht until repairs have been made and the CO has been brought to an acceptable level. After depressing the "Reset" switch, the RED indicator light will continue to flash and the alarm will produce a "BEEP" sound every thirty (30) seconds until the CO is lowered to the **Low CO Warning** level. If the CO is not lowered to this level, the pulsed alarm will resound in approximately six (6) minutes. The **Low CO Warning** alarm will activate if the Carbon Monoxide Gas is lowered to the low concentration level.

### CO Monitor Malfunction

Indicator light flashes alternating RED/GREEN accompanied by a "BEEP" sound every fifteen (15) seconds. Depressing the "Test/Reset" switch will not discontinue the visual and audio signal. See your Silverton Dealer for inspection and replacement of the unit(s), if necessary.

Maintenance of your CO Monitors is as follows:

- Test each monitor after removing your yacht from storage, prior to departing on each cruise, and on a weekly basis. Refer to the User's Manual

included with your Owner's Packet for the proper test procedure.

- Frequently observe the color of the indicator light on each CO Monitor and during testing to be certain the light is functioning properly.
- Vacuum the dust off the CO Monitor cover with the brush attachment of your vacuum cleaner at least once a year and more frequently if your yacht is maintained in a dusty climate.
- Frequently clean the CO Monitor cover with a damp cloth to remove all dirt and grease that may accumulate. Dry with a soft, dry cloth.
- DO NOT spray cleaning agents or waxes directly onto the CO Monitor cover.

**Refer to the Boating Safety Section of this Owner's Manual for more important Carbon Monoxide Safety Information.**

**Refer to the User's Manual for additional technical information concerning the use and maintenance of your CO Monitors.**

## DC ELECTRICAL SYSTEM

### DC ELECTRICAL SYSTEM COMPONENTS

- Batteries
- Battery Switches
- Fuse Box - Salon
- Fuse Box - Bridge
- Panel - Main - Salon
- Helm Accessory Switches
- Battery Charges

### **BATTERIES:**

The DC Electrical System obtains its power from the batteries. The batteries are located in the Engine Room. There are the Generator Batteries, the Starboard Batteries, and the Port Batteries. The quantity of each group depends on the engine option. All batteries are 12 volt.

### NEGATIVE GROUND SYSTEM

The negative terminal of each battery is attached to a grounding stud on each engine. This is known as a **Negative Ground System** and is the approved system for marine DC electrical systems. The battery wiring system has two color-coded wires. The yellow wire is the ground (negative) wire and the red wire is the positive (hot) wire.

### **BATTERY SWITCHES:**

The batteries are directly connected to the Battery Switches. The battery switch has two positions - ON and OFF. When the battery switches are in the OFF position, the entire DC Electrical System is OFF (except for the memory).

#### Generator Battery Switch:

The Generator Battery Switch is located forward of the Generator in the Engine Room. This switch determines if the battery power is ON or OFF to the generator. The Generator supplies AC Power, not DC Power.

#### Starboard and Port Battery Switches:

The Starboard and Port Battery Switches are located inside the Salon, to the lower port side of the entry door. The photo above shows the battery switches.



These switches control the entire DC System. If the switches are OFF, no DC Power at all is activated on your boat.

**NOTE:** *The Bilge Pumps, Carbon Monoxide Monitors, and Radio Memory are **NOT** disconnected from their power source when the battery switch is turned to the OFF position. These accessories are connected directly to the battery and do not require a switch for operation. There is also a breaker between the battery and the memory section of the fuse box. This breaker is located between the battery switches. You would need to turn this breaker OFF to service only these items.*

The power from the Starboard Switch goes to:

- Main Battery 2 Breaker on the DC Panel.
- Bridge Electric Breaker on the DC Panel.
- Parallel Start Switch at the Helm.

The power from the Port Switch goes to:

- Main Battery 1 Breaker on the DC Panel.
- Helm Accessory Breaker on the DC Panel.
- Parallel Start Switch at the Helm.

## DC PANEL

The right side of the AC/DC Panel is the DC Section. At the top of the DC Section are four (4) breakers; two (2) breakers on the right and two (2) breakers on the left.

Breakers on the Left:

- Helm Accessory - The DC Power comes from the battery switch to this breaker. From this breaker the power goes to the Helm Accessory Switches at the Helm. All power to the Helm Switches can be turned ON and OFF at this breaker.
- Main Battery 1 - The DC Power comes from the battery switch to this breaker. From this breaker the power goes to all breakers directly below this breaker. All power to the left hand column of breakers can be turned ON and OFF from this breaker.

Breakers on the Right:

- Bridge Electric - The DC power goes from the battery switch to this breaker. From this breaker the power goes to the Bridge.

### Activating the DC Power

There are two (2) sets of switches that must be ON to activate the DC Power on your **33C**. One set of switches are the battery switches located by the entry door in the Salon. The other set of switches are the Main Breakers on the AC/DC Panel. On the DC section of the AC/DC Panel are two columns of breakers. Each Main Breaker controls that column of switches below it. To supply power to one of the switches listed on the left side of the panel, the Main Breaker on the left hand side must be on.

### **WARNING**

Fuel fumes in the engine compartment can explode. Before working on any electrical wiring, ventilate the engine compartment and disconnect the batteries to prevent sparking.

### **CAUTION**

**NEVER** reset a breaker switch, which has tripped automatically, without first locating and correcting the problem. The electrical system and devices may be damaged.

### **CAUTION**

Alterations or extensions to the electrical system can cause electrical shock or fire. **ONLY** competent marine electricians should make system changes according to U.S. Coast Guard regulations.

### **FUSE BLOCK - Salon**

There is a Fuse Block located behind the AC/DC Panel. There is also a FUSE CARD located on the wall by the Fuse Block. This card will indicate all fuse positions and size of fuses. Remember, there are memory sections (constantly ON) of the Fuse Block.

### **FUSE BLOCK - Bridge**

There is also a Fuse Block behind the Helm. The fuse card behind the DC Panel has the location and size information for these fuses. Remember, there are memory sections (constantly ON) of the Fuse Block.

### **CAUTION**

Turn off all electric power to your AC/DC Panel when opening the door to the electrical cabinet. The power can be turned off by the two (2) Main DC Switches at the top of the panel, and the Main AC Switch in the AC portion of the Panel. In addition, make sure to remove all Shore Power Cords, and shut down the Generator. Do not forget the breaker for the memory.

## HELM ACCESSORY SWITCHES

There are switches located at the Helm on your 33C. These switches are 12 Volt DC. The photo below shows the switches at the Helm.



Above each switch is the reset button. The power for these switches come from the AC/DC Panel. The breaker marked Helm Accessory are for these switches.

- ANCHOR/NAV LIGHTS - This switch is a three (3) position switch. The three (3) positions are OFF, Navigation Lights, and Anchor Lights.
- HORN - This is a push button switch. To activate the horn, press the top of the switch.
- PARALLEL - If starting your Engines, you need increased amperage to your Engine. This switch will parallel the batteries to achieve this.
- COURTESY LIGHTS - This switch controls the courtesy lights on the Bridge.
- ACCESSORY - This is an extra switch for any option that has been added.
- PANEL LIGHTS - This switch controls the panel lights at the Helm.
- BLOWER - This switch controls the blowers in the Engine Room.



## Electrical Accessories

You may have purchased optional electronic accessories such as a VHF Radio, GPS System, or Autohelm System with your **33C**. These units are controlled by the switches marked ACC. located on the Helm Switch Panel. These accessories are powered through the DC Electrical Panel. The switches used to control them are marked "ACC".

## Lower Portion of DC Panel

Below the DC Volt section of the DC Panel is the Bilge Pump section of the DC Panel. There are three (3) sets of breakers and switches. Each Bilge Pump (forward, mid, and aft) has a breaker switch and an ON/OFF Switch. Although the Bilge Pumps always have power to them, to operate the Bilge Pumps manually you must have the battery switches ON.

**BREAKER SWITCHES:** The breaker switches are your safety switches. They work just like a fuse, but are re-settable. If the breaker switch is activated, before resetting the switch, locate the problem. The breaker is reset by pushing in the white button.

**MANUAL SWITCH:** This is the ON/OFF Switch.

## Battery Charging System

The batteries maintain their charge from alternators, which are located on each Engine. The alternators supply charging power to the batteries only while the Engines are running. Your **33C** also has a converter, located in the bilge, which converts 120 Volt AC Electrical Power from either the Generator or Shore Power into 12 Volt DC Electrical Power that will charge your batteries.



# TROUBLESHOOTING GUIDE

## DC ELECTRICAL SYSTEM


PROBLEM	CAUSE	SOLUTION
12 Volt DC equipment not operating	Battery Selector switch turned OFF.	Check Battery Selector Switches to ensure they are turned ON.
	Main breaker at DC Control center OFF.	Switch Breaker to ON.
	Weak or Dead Battery.	Change Battery selector switch position; recharge battery.
	Main Breaker at battery switch has been tripped.	Reset Breaker.
Battery not charging (engine running)	Engine Alternator Belt Loose.	Tighten Belt.
Battery not holding a charge	Defective Battery.	Replace Battery.
12 Volt Device not working	Circuit Breaker for device is OFF.	Switch Breaker to ON.
	Weak or Dead Battery.	Change Battery selector switch position; Recharge Battery.
	Faulty Electrical Connection.	Check 12 Volt DC Connections. Tighten or repair as needed.
Cabin Lights not working (off or dim)	CABIN LIGHTS breaker OFF.	Switch breaker to ON.
	Weak or Dead Battery.	Recharge or replace battery.
	Light Bulb burned out.	Replace bulb.



## AC ELECTRICAL SYSTEM

The AC Electrical System is a three-wire grounded system powered by either the Generator (if so equipped) or Shore Power.

### AC PANELS

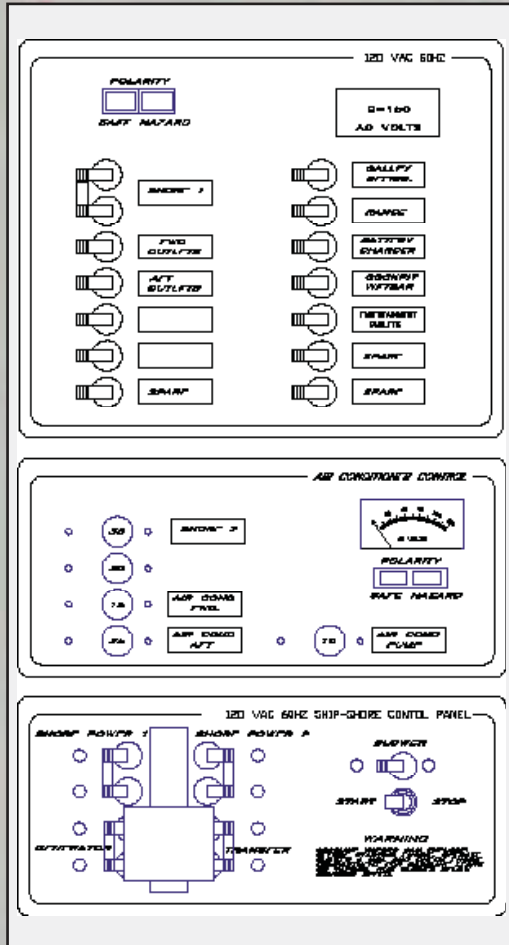

#### 120 Volt AC Panel

This is the main AC Panel. All AC Power (except Air Conditioning goes to this panel. The AC Power goes to the AC Main breaker switch. If the AC Main breaker switch is OFF, all breaker switches on this panel are OFF. The two meters on the panel read the voltage and amperes coming into the panel.

#### Air Conditioning Panel (optional)

All power to the air conditioners goes to the AC Main breaker switch. If the AC Main breaker switch is OFF, then all breaker switches on this panel are OFF. The meter reads the voltage coming into the panel.

#### Generator Control Panel (optional)

Slide Switch on left side determines what power source will be used when the generator is installed. On the right is the engine room blower switch and the generator Start/Stop switch (DC).

Remember, if the Generator or the Air Conditioning was not selected as an option, there will be no panels.

#### Generator/Shore Power Slide Switch

The Generator section of your AC/DC Panel has a Slide Switch. This slide allows only one source of AC Current to enter your AC Panels. This switch will

allow the source of AC Power to come from either the Generator or the Shore Hook-Ups. The Panel has four (4) sets of breaker switches. The four (4) sets are: Generator, Transfer, Shore Power 1, and Shore Power 2. Each set of switches will be described on the following page.

#### Generator:

The Generator set of switches have the power from the Generator coming into these switches then going out to the 120 Volt AC Panel. The power goes directly to the AC Main Switch at the 120 Volt AC Main Section.

#### Transfer:

This set of switches get their power from the Generator. The power then goes from here to the AC Main Breaker Switch at the Air Conditioning Section of the AC Panel.

*NOTE: Both the Generator and the Air Conditioning is an option. You may not have either on your boat.*

#### Shore Power 1:

This set of switches gets its power from the Upper Shore Power Hook-Up located in the Cockpit Storage Compartment. The power then goes from here to the AC Main Breaker Switch at the 120 Volt AC Section of the AC Panel. The photo below shows the Shore Power Hook-Up on the port side of the Cockpit.



The Shore Power 1 Hook-Up is the Upper Hook-Up. The Shore Power 2 Hook-Up is below the Shore Power 1 Hook-Up.

The breakers for each are to the right of the Hook-Ups.

#### Shore Hook-Up 2:

The power to this set of switches comes from the shore Hook-Up at the Cockpit Storage Compartment. The power goes from here directly to the AC Main Breaker Switch at the Air Conditioning Section of the AC Panel.

*NOTE: Shore Power 2 is an optional set of switches for your Air Conditioning System. If you did not choose Air Conditioning as an option, there is no need for the sets of switches on the right-hand side (Transfer and Shore Hook-Up 2).*

If there is no Generator, Shore Hook-Up 1 goes directly to the AC Main Switch at the 120 Volt AC Section of the AC Panel and Shore Hook-Up 2 goes directly to the AC Main Switch at the Air Conditioning section of the AC Panel.

#### GENERATOR (OPTIONAL)

The Generator is located below the Cockpit floor. The photo below shows the Generator.



There is a breaker for the Generator power on the Generator.

## STARTING THE GENERATOR

- Turn ON the Generator Blowers.

### **WARNING**

The blower must be run for five (5) minutes before starting the Generator.

- Start the Generator (Refer to “Starting Instructions” section in the Generator Manual included with your owner’s packet). Be sure that it is operating properly.
- Turn OFF all 115 VAC breakers.
- Turn OFF the Shore Power Switch on the Shore Power/Generator Switch.
- Slide the slide bar to the top position of the Shore Power Switches. With the slide bar up, you should be able to switch ON the Generator and Transfer Switches.

### **WARNING**

Fuel fumes in the Engine Compartment can explode. Before working on any electrical wiring, ventilate the Engine Compartment and disconnect the batteries to prevent sparking.

### **CAUTION**

NEVER reset a breaker switch, which has tripped automatically, without first locating and correcting the problem. The electrical system and devices may be damaged.

### **CAUTION**

Alterations or extensions to the electrical system can cause electrical shock or fire. ONLY competent marine electricians should make system changes according to U.S. Coast Guard regulations.

### Shore Power

Follow the procedures below to connect Shore Power to your yacht:

- Turn OFF all 115 Volt Circuit Breakers at the AC portion of the AC Panel. Shut down the Generator if it is in operation.

### **WARNING**

Using a damaged or improper cord for shore power connection can cause electrical shock and serious personal injury. Use a cord specifically designed for Shore Power connection. DO NOT use a household extension cord.

- Connect the female end of the Shore Power cord to the yacht’s inlet receptacle. Be certain the lock ring is tightly secured. If there is a cord already supplied at the dock, be sure to unhook the cord from the dockside outlet.

## **WARNING**

**A LIVE CORD END IS DANGEROUS! Never leave a Shore Power Cord on the dock with only the plug end connected. DO NOT connect the Shore Power Cord to the dockside electrical source first. You can accidentally drop the cord into the water; which may result in electrical shock and serious personal injury.**

- Connect the Shore Power Cable to power supply. When connecting the Shore Power Cable to the dockside outlet, be certain the cable has sufficient slack to prevent stretching during tidal changes.
- Slide the SHORE POWER/GENERATOR slide bar over on top of the generator side of the switch. With the slide in the lower position, turn on the Shore Power Switch.

The Shore Power side of the distribution panel should now be operable.

If there is no power to the electrical distribution panel, check the following:

- Breaker Switch at dockside power supply.
- Main Breaker switch on Shore Power side of distribution panel, and the Main Breaker located in the Cockpit area.

Follow the procedures below to **disconnect** Shore Power from your yacht:

- Turn OFF all 115 Volt Circuit Breakers on the main distribution panel.
- Turn OFF the dockside circuit breaker switch.
- Disconnect the Shore Power Cord from the dockside outlet.
- Disconnect the Shore Power Cord from the yacht's inlet receptacle.
- Store your Shore Power Cable in a safe, dry location.

You should periodically check the Shore Power Cord for the following:

- Cuts, cracks, or severe abrasions on the yellow cord covering.
- Bent, broken, or loose plug blades.
- Plug blades or connector slots that show signs of overheating or arcing, such as brown or black discoloration, on insulation around blades or slots. Discoloration and/or erosion of blade material.
- Do not allow cords to be pinched by a closed door or hatch. Pinch points create resistance and generate heat that can cause a fire.
- Spray all contacts monthly with an electrical contact cleaner, corrosion inhibitor, and lubricant, such as LPS-1 made by Holt Lloyd Corp. *Note that "WD-40" or silicone sprays are not appropriate because the film they leave increases contact resistance.* The proper spray types can be found at electrical supply houses or stores such as Radio Shack.
- If a Shore Power Cord should become immersed with water, it should be immediately sprayed with fresh water, THOROUGHLY dried, and blades and contact slots sprayed with a moisture displacement before re-using.

**Refer to the individual Electronic Equipment Manuals included with your Owner's Packet for specific information on the operation of your electronic accessories.**

# TROUBLESHOOTING GUIDE

## AC ELECTRICAL SYSTEM

PROBLEM	CAUSE	SOLUTION
No 120 Volt Power	Main breaker(s) in engine compartment tripped or OFF on generator.	Turn breakers ON or reset.
	Breaker(s) at AC Control Center tripped or OFF.	Turn breakers ON or reset.
	Shore power breaker tripped.	Turn Breakers ON or reset.
	Shore power cord not connected.	Check cord; plug in, if necessary.
	Loose or disconnected wire.	Tighten connections. See your dealer.
No power to 120 Volt devices.	Breaker(s) at AC Control Center tripped or OFF.	Turn breakers ON or reset.
	Shore power cord not connected.	Check cord; plug in, if necessary.
	Loose or disconnected wire.	Tighten connections. See your dealer.
Inadequate power to 120 Volt devices (generator running)	Electrical demand greater than generator output.	Switch OFF devices and equipment not needed.
		Increase generator RPM. Refer Generator Manual.
		Use shore power AC line, if available.

# TROUBLESHOOTING GUIDE

## AC ELECTRICAL SYSTEM

PROBLEM	CAUSE	SOLUTION
Continuous tripping of main.	Cause of problem not determined.	Determine cause and correct problem before resetting breaker.  See your dealer if problem persists.
No power at AC outlets.	Outlet breakers in AC Control Center OFF.  Ground Fault interrupter tripped.	Switch breakers to ON.  Reset button on outlet and test.



## ENTERTAINMENT SYSTEM

### SALON



The **33C** offers an optional Entertainment Package. In the Salon, the photo above displays is the Flat Panel 15" Television with DVD Player as positioned on the Mapdeck, adjacent to the Dinette.

### FORWARD STATEROOM



Shown in the photo above is the optional Flat Panel 15" TV/ and DVD Player for the Master Stateroom, also part of the Entertainment Package.

### BRIDGE



The photo above shows the AM/FM/CD Stereo with Remote that is also available as part of the Entertainment Package and is located on the Bridge.

### SURROUND SOUND

Surround Sound Speakers are available as part of the Entertainment Package. The speakers are located in the Salon, Cockpit and Bridge.





## AUTOMATIC FIRE EXTINGUISHER SYSTEM

Your **33C** is equipped with a **Automatic Fire Extinguisher System**, which is permanently mounted under the Salon floor in the Engine Compartment.



The **Automatic Fire Extinguisher System (AFE)** is designed for use in enclosed compartments that are not normally occupied by passengers and are not normally subject to weather or water exposure. The Automatic Fire Extinguisher is designed to extinguish Class B fires (flammable liquids) and Class C fires (electrical), which would be the type that would normally occur within the confined area of the engine/generator compartment.

*NOTE: The Automatic Fire Extinguisher System DOES NOT replace the need for additional portable-type fire extinguishers required by the United States Coast Guard.*

The Automatic Fire Extinguisher is activated when the Engine/Generator compartment reaches 165° Fahrenheit/74° Celsius. The system releases HALON 1301 into the compartment, which immediately converts to a safe, odorless, and electrically non-conductive vapor that will not harm the components in the Engine/generator Compartment. In contrast to other fire extinguishing materials, HALON 1301 leaves no residue, assisting in the eventual cleaning of the compartment.

The Automatic Fire Extinguishing System on your **33C** is equipped with a GREEN indicator light, located on the Helm Switch Panel.



The purpose of this indicator light is to alert the operator of the charge/discharge status of the **Automatic Fire Extinguishing System**. The indicator light will illuminate when the ignition switch is turned to the ON position, if the system is fully charged. If the indicator light fails to illuminate after turning on the ignition switch, carefully examine the exterior of the engine/generator compartment for evidence of a fire that may have discharged the system by looking for signs of "scorching" and by your sense of smell.

### **WARNING**

**If the Green indicator light does not illuminate after turning on the ignition switch or if it turns off at any time during operation of your yacht, either at dockside or while underway, DO NOT open the engine compartment for at least ten (10) minutes. Opening the engine compartment immediately will allow air to enter and may cause a fire "flashback", possibly resulting in serious injury or death. The sudden rush of air into the Engine Compartment may also render the Automatic Fire Extinguishing System ineffective.**

If you do not observe or smell any evidence of a fire, and you have waited the recommended ten (10) minutes, open your Engine Compartment and examine the Halon 1301 container actuator to determine if it has been discharged. Refer to the Manual, which

illustrates the charged and discharged positions of the actuator. If the system has been discharged or appears charged, but the indicator light does not illuminate, see your Silverton Dealer for further inspection and repair, if necessary.

In the event of an engine/generator compartment fire, the following steps should be taken to avoid the likelihood of personal injury or death and to minimize property damage:

- Remain calm and avoid panic.
- Immediately turn OFF all electrical power, including the Engine Ignition and the Engine Compartment Ventilation Blowers. *NOTE: Do NOT turn OFF power to your VHF Radio.*
- DO NOT open the Engine/Generator Compartment for at least ten (10) minutes to allow the Halon vapor to extinguish the fire.
- Remove your portable fire extinguisher from its mounting bracket and prepare it for use, if necessary.
- Instruct all passengers to put on their Personal Flotation Devices (PFD's) and move away from the source of the fire.
- Contact the United States Coast Guard on your VHF Radio and advise of your situation and location. Maintain radio contact until the crisis has ended and assistance has arrived.
- If the fire is successfully extinguished, examine the Engine Compartment components for damage. DO NOT start your Engines if any damage is noted. Request towing assistance to a safe harbor and contact your Silverton Dealer for a thorough inspection and repairs.
- When replacing parts of the fire fighting installation, only matching components shall be used; bearing the same designation or being equivalent in their technical and fire resistant capabilities.

**REFER to the Manufacturer's Manual for a detailed description of your AUTOMATIC FIRE EXTINGUISHER SYSTEM. Be certain to complete the Warranty Card and mail to the manufacturer within ten (10) days of your purchase.**

## **PORTABLE FIRE EXTINGUISHER SYSTEM**

As a yacht owner or operator, you have the responsibility of having the required quantity of United States Coast Guard approved **Portable Fire Extinguishers** aboard at all times, except during storage. The Portable Fire Extinguishers must be operational and of the proper classification.

The classification of Portable Fire Extinguishers and their appropriate use is as follows:

### **CLASS A**

Fires in ordinary combustible materials, such as wood, paper, and cloth, where the quenching-cooling effect of quantities of water or high water content solution cools the burning material below the ignition temperature.

### **CLASS B**

Fires in flammable petroleum products or other flammable liquids, greases, etc., where the blanket-ing-smothering effect of oxygen-excluding media is most effective.

### **CLASS C**

Fires involving electrical equipment where the electrical conductivity of the extinguishing media is the first consideration.

Your **33C** is equipped with two (2) Class B/C Portable, Handheld Fire Extinguishers. Class B/C Fire Extinguishers will effectively fight fires of the Class "B" and Class "C" type. The Class B/C Portable Fire Extinguisher contains pressurized dry powder, which when released, will leave a powder residue that smothers the fire and removes its source of oxygen. Once the source of oxygen is removed, the fire cannot continue to burn and it will be extinguished.

The fire extinguishers shipped with your **33C** should be mounted in a readily accessible location away from the Engine Compartment; but in a relative position to potential fire hazards, such as the Galley. The fire extinguishers should be mounted within plain view and all passengers on board should be familiar with their location and operation before departing your dock.

Maintenance of your Portable Fire Extinguishers should consist of periodic cleaning of the canisters and making certain they are easily seen and readily

accessible. Periodically examine the gauge on each fire extinguisher to be sure they are fully charged. If the gauge indicates the fire extinguisher is not fully charged, contact your Silverton Dealer for replacement. **DO NOT** test the charge of your Portable Fire Extinguishers by operation of them; it will discharge them unnecessarily.

**Refer to the operating instructions displayed on the Fire Extinguisher Canisters for a detailed description of their operation and use.**





## FRESH WATER SYSTEM

The purpose of the **Fresh Water System** is to provide a supply of pressurized potable hot and cold water to the appliances on demand and as needed.

### WATER SOURCE

Your **33C** has two (2) separate sources that supply cold water to your system:

- **Fresh Water Pump System**
- **Dockside Water Supply System**

### Fresh Water Pump System:

The **Fresh Water Pump System** on your **33C** would be the water source that supplies water when underway. The water source is Water Tanks and a water pump.

### Fresh Water Tanks (80 gallon capacity):

The **Fresh Water Tanks** are located under the Cockpit of your **33C**. There are two (2) tanks (80 gallons each). The photo below shows the Starboard Fresh Water Tank.



The Mechanical Schematic in the SCHEMATICS SECTION of this manual shows the location of the fresh water tanks. They are filled through a fill fitting that is marked "WATER" on the fill cap, which is located on the port side of the Deck.

The photo below shows the Water Fill.



The Deck Layout in the Schematics Section of this manual will show the location of the Fresh Water Fill.

### **! WARNING**

**Fill the Fresh Water Tank ONLY with potable water that is safe for drinking. DO NOT fill with water that may be of questionable quality as serious illness or death may occur.**

### Fresh Water Pump:

The **Fresh Water Pump** is located on the forward bulkhead of the area under the Cockpit. The Fresh Water Pump operates on DC Electrical Power controlled by a breaker switch located on the AC/DC Electrical Panel. The Fresh Water Pump is equipped with an automatic pressure switch and, when it is supplied with electrical power, it will operate until the entire Fresh Water System is pressurized to a preset level. Once the required pressure is obtained, the Fresh Water Pump will automatically shut off. The Fresh Water System should maintain the preset level of water pressure until one of the faucet or shower valves is opened. When the required pressure is lowered below the preset level, the Fresh Water Pump will automatically return to operation.

### **Fresh Water Filter:**

The water pumped from the Fresh Water Tank flows through a filter located on the suction side of the Fresh Water Pump. Its purpose is to remove impurities that may be present in the Fresh Water System prior to its consumption. The filter is easily removed from the Fresh Water Pump and should be cleaned on a regular basis.


The photo below shows Fresh Water Pump and the Filter.



### **Dockside Water Supply:**

The other source for water is the **Dockside Water Supply**. This water source is for when you are docked and have potable water as a source at the dock. Your 33C is equipped with a dockside water inlet located in the transom storage compartment.

The photo below shows the **Fresh Water Inlet** at the Cockpit.

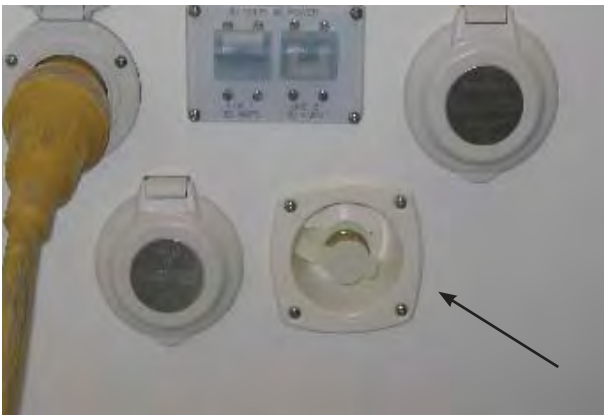

This system operates independently of the Fresh Water Pump System and simply depends on its connection to a suitable garden-type water hose for its supply of fresh water. When the water supply is connected to the water inlet and turned ON, the system is automatically pressurized without the need for the Fresh Water Pump. The water entering this system will not fill the fresh water tank; a check valve, located in the pressure line of the Fresh Water Pump, prevents the water from entering the Fresh Water tank. Be sure to turn OFF the Fresh Water Pump at the AC/DC Panel when connected to the shore water supply.

### **⚠ WARNING**

Connect this system **ONLY** to a potable water system that is safe for drinking. **DO NOT** use water that may be of questionable quality as serious illness or death may occur.

When you are connecting your system to a dockside water supply, be certain to examine all connections and water lines for any leaks. If any leaks are noted, turn OFF the water supply immediately and make the necessary repairs before you turn ON the water supply again. Remove any trapped air from the water system by opening all faucets until the air is exhausted and there is a steady flow of water. Close the faucets after the air is removed.

### **⚠ CAUTION**

Always turn OFF the dockside water supply source when leaving your yacht unattended. A leak in the system could result in flooding and may cause your yacht to sink.



### **Fresh Water Lines (Cold Water and Hot**

**Water):** The **Fresh Water Lines** carry the water from the fresh water sources, the water heater, and the various faucets located in the Galley and Head areas of your **33C**. They are constructed of polybutylene plastic material and are 1/2 inch inside diameter. The COLD WATER lines have pale blue manufacturer's lettering and the HOT WATER lines have pale red manufacturer's lettering for identification purposes. The Fresh Water Lines require minimal maintenance, but they should be visually examined on a regular basis for any leaks, chafing, or cracking. Tighten any loose connections as necessary. See your Silverton Dealer for inspection of any suspected defective fresh water lines and their replacement, if necessary.

**Refer to the WINTERIZATION AND STORAGE PAGES in the Cleaning and Maintenance Section of this Owner's Manual for the proper preparation and maintenance of your FRESH WATER SYSTEM prior to seasonal storage of your yacht.**



## FUEL SYSTEM

### **WARNING**

**Fuel, especially gasoline, is extremely flammable. Failure to follow these recommendations and the rules of good common sense could result in fire or explosion, which could cause personal injury or death.**

The purpose of the **Fuel System** is to maintain the necessary supply of fuel to the Engines and Generator upon demand and as needed. The Fuel System on your **33C** is comprised of the following components, which will be described separately:

- Fuel Tanks
- Fuel Tank Fills and Vents
- Fuel Tank Grounding System
- Fuel Distribution Hoses
- Fuel Supply Valves
- Fuel Filtration
- Generator Fuel Selector Valve
- Fuel Gauge and Selector Switch


### Fuel Tanks



Your **33C** is equipped with two (2) Fuel Tanks, each having a capacity of 100 gallons, for a total fuel capacity of 200 gallons. The photo above shows the Starboard Side Fuel Tank. The Port Side Fuel Tank is in the same location but on the port side. Both Fuel Tanks are located in the Engine Room and access is through the hatch in the Salon floor. One tank is located on the port side and one tank is located on the starboard side (See the Mechanical Schematic in the

SCHEMATICS Section of this Owner's Manual). The port side Fuel Tank supplies fuel to the Port Engine and the Starboard Fuel Tank supplies the Starboard Engine. Either tank can supply the Generator, if so equipped.

Each Fuel Tank is equipped with a **Fuel Level Sending Unit**, which provides an electrical signal to the fuel gauge to indicate the fuel level. The photo below shows the Sending Unit on the Fuel Tank.

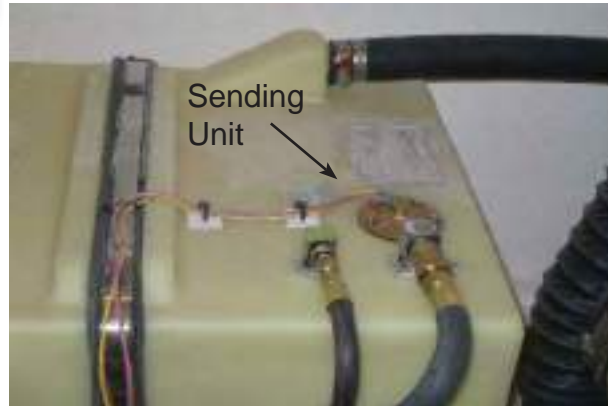

The Fuel Tanks should be inspected for signs of leaks at least once a year. If any leaking is present, have an authorized Silverton Service Technician inspect the tank immediately. If a leak is found, immediately turn off battery switches, disconnect shore power (instructions in the Electrical pages of this section of the Owner's Manual), and disable any possible source of ignition. Notify your Silverton Dealer or Silverton's Customer Service Department immediately.

### **WARNING**


**NEVER operate your boat if a fuel leak is present!**

## Fuel Tank Fill and Vent

The Fuel Tank is filled through the Fuel Fill Fitting and the cap is marked GAS or DIESEL, depending on the type of Engines that power your **33C**.

### CAUTION

Using the wrong type of fuel will result in severe damage to the Engines.

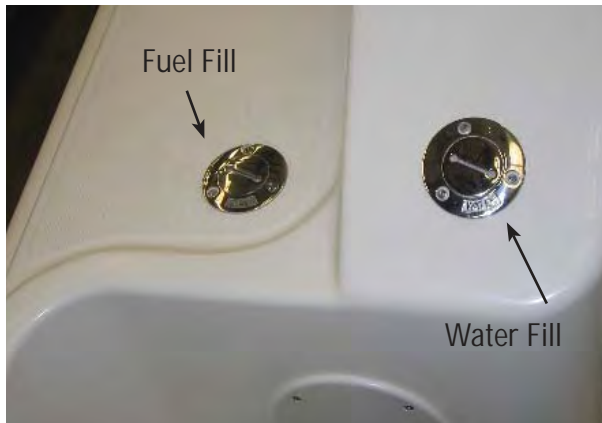

The photo above shows the Port **Fuel Tank Fill**. It is located on the walkdeck, forward of the Cockpit. The Starboard Fuel Tank Fitting is located in the same position, but on the starboard side. The Fuel Fill Fittings are connected to the Fuel Tanks with the fuel hoses.

Each Fuel Tank has a hull vent fitting. These fittings are located on the port and starboard sides of the Hull. The photo below shows the Starboard Side **Fuel Vent**.



The port side vent is in the same location on the other side of the hull. The vent fittings are connected to the fuel tanks with the fuel vent hoses. These vents allow air to pass through them when fueling and when the Engines are drawing fuel from the tanks.

The fuel fill and fuel vent hoses, fittings and connections, should be inspected for leaks and signs of dry rot or swelling at least once a year. If any of these conditions are present, have an authorized Silverton Service Technician inspect the entire fuel system immediately. If a leak is found, turn OFF the battery switches, disconnect the shore power (Refer to the electrical pages in this section of the Owner's Manual), and disable any possible source of ignition. Contact your Silverton Dealer or Silverton's Customer Service Department immediately.

### WARNING

Leaking fuel is a fire and explosion hazard; personal injury or death could occur.

If any Fuel Fill or Vent Hoses are in need of replacement, be certain that ONLY USCG TYPE A1 or A2 are used.

### WARNING

The use of any hose other than USCG TYPE A1 or A2 could result in fuel leakage. Leaking fuel is a fire and explosion hazard; personal injury or death could occur.

## Fuel Tank Grounding System


The Fuel Tank and Fuel Fill on your **33C** are electrically grounded (or bonded) to the ground buss of the Bonding System. The **Grounding System** is designed to prevent the discharge of static electricity, which could cause a spark, especially when fueling your yacht. An authorized Silverton Service Technician should inspect this system at least once each year.

## **WARNING**

While fueling, a spark caused by static electricity could result in fire or explosion; which could cause personal injury or death.

### Fuel Distribution Hoses

Each Engine has a **Fuel Supply Hose** that runs from the pickup tube in the Fuel Tank to the Engine. Also, each Engine has a **Fuel Return Hose** that runs from the Engine to the Fuel Tank. The Generator has a fuel supply hose that runs from the Fuel Tank to the fuel selector valve. See the photo below which show the **Fuel Distribution Hoses** at the Fuel Tank.

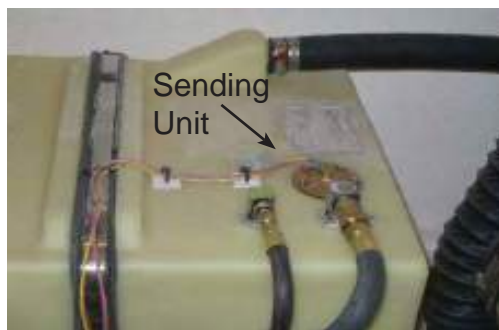

The fuel distribution supply and return hoses, fittings and connections, should be inspected often for leaks and signs of wear, dry rot, cracking, chafing, or swelling. A good way to examine the fuel hoses is to run your hand along the length of the hose, including the fittings. Small leaks will be revealed as wet spots on your hand. If any evidence of hose deterioration is present, have a qualified technician replace all of the hoses with USCG TYPE A1 hoses immediately. If a leak is found, turn OFF battery switches, disconnect shore power, and disable any possible source of ignition. DO NOT start your Engines, the Generator, or any devices that could create a spark. Contact your Silverton Dealer or Customer Service Department immediately. If hoses need to be replaced, make sure that only USCG TYPE A1 are used. TYPE A2 is not acceptable for fuel distribution.

## **WARNING**

The use of any hose other than USCG TYPE A1 or A2 could result in fuel leakage. Leaking fuel is a fire and explosion hazard; personal injury or death could occur.

### Fuel Supply Valves

Your **33C** is equipped with an Anti-Siphon Valves, located on each Fuel Supply Hose at its connection to its respective Fuel Tank Pickup Tube. The purpose of the Anti-Siphon Valve is to immediately stop the flow of fuel from the Fuel Tank in the event of a break in the Fuel Supply Hose. The **Anti-Siphon Fuel Supply Valves** are automatic and do not require manual operation.

### Fuel Filtration

The fuel that is supplied to the Engines and Generator (if so equipped) may contain impurities found in the Fuel Tanks or contained in the fuel from your supplier. If these impurities are not removed prior to entering the Engines/Generator, performance may be seriously affected. Removal of the fuel impurities is accomplished by external **Fuel Filters**, which are located within the fuel supply line.

In your **33C**, each Engine has its own separate Fuel Filter, located on the forward inboard side of the Engine.

If your **33C** is equipped with a Generator, a remote Fuel Filter with a fuel shut-off valve is located in the main generator fuel supply line, separate from the engine fuel supply lines. The photo below shows the Generator Fuel Filter.


An Authorized Silverton Service Technician should replace all Fuel Filters annually prior to spring launch.





## Generator Fuel Selector Valve

If your **33C** is equipped with a Generator, a **Fuel Tank Selector Valve** is located on the aft bulkhead of the Engine Compartment. This valve determines the tank from which the Generator will draw its fuel from. The photo below shows the Fuel Selector Valve.

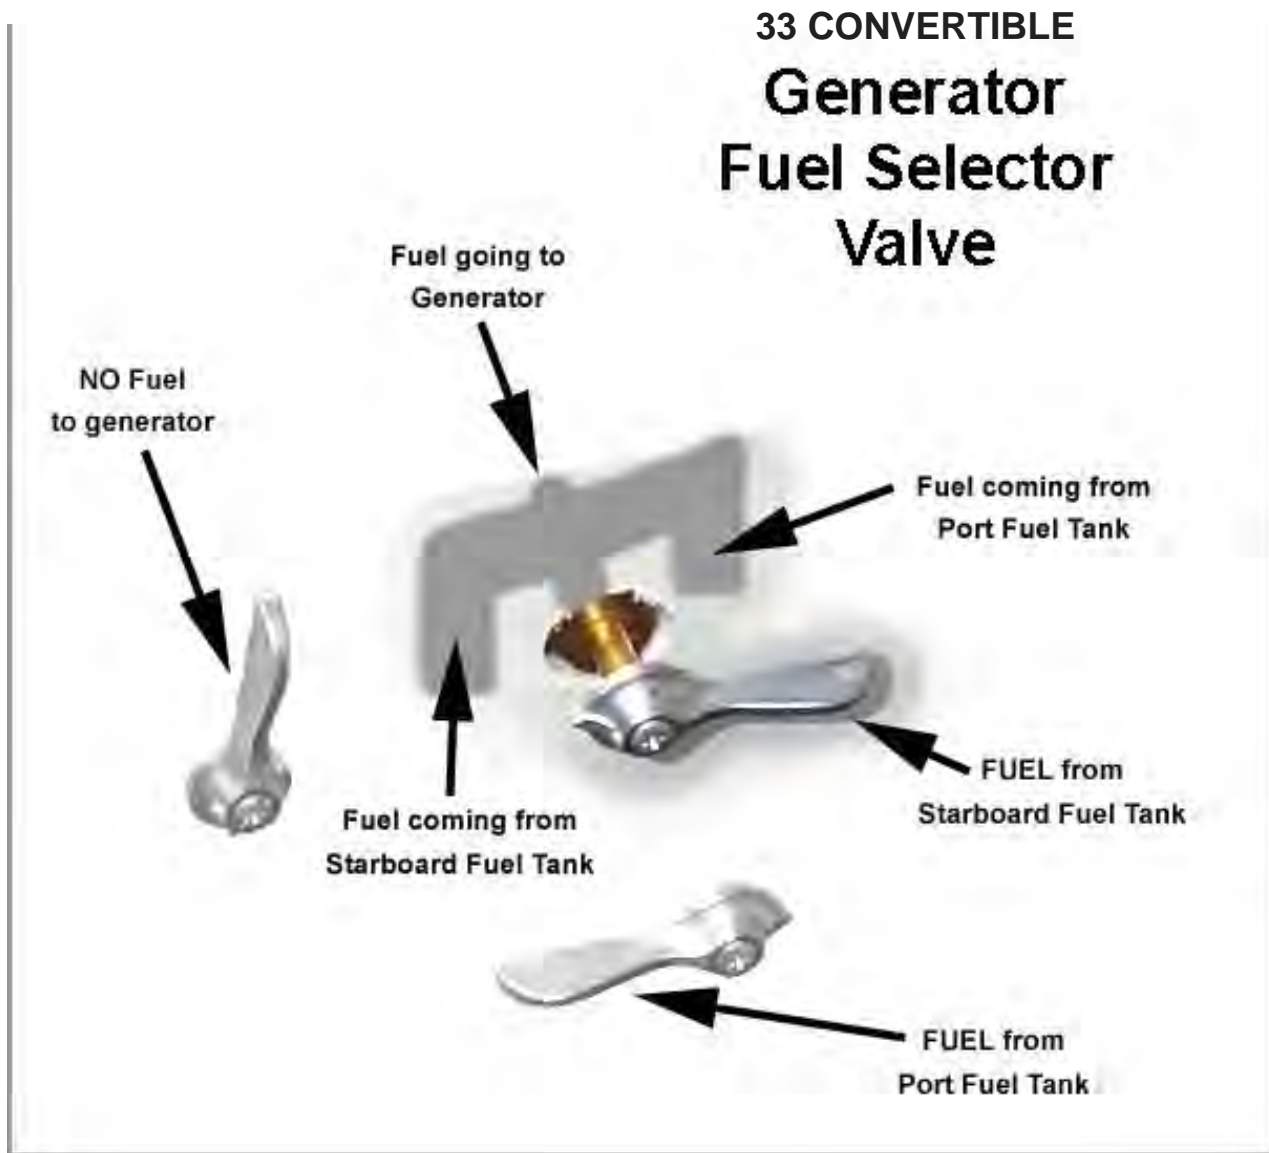

The Fuel Tank that is selected to supply the Generator will display a lower fuel level than the other Fuel Tank when the Generator is used for an extended period of time. The Generator Fuel Selector Valve can be set so that the Generator will start taking fuel from the other Fuel Tank.

### Fuel Gauge

The purpose of the **Fuel Gauge** is to allow you to constantly monitor the fuel level in the Fuel Tanks. The Fuel Gauges on your **33C** are located at the Helm Station on the starboard and port side of the Helm Gauge Panel. The photo below shows the starboard and port fuel gauges at the Helm Panel.



## Fueling Your 33 Convertible


### Fuel Quality

Refer to your **Engine Manual**, included with your Owner's Ppacket, for specific fuel requirements for your engine, i.e., recommended octane level.

### Fuel Additives

Refer to your **Engine Manual** for recommendations concerning fuel additives.

Refer to the **Winterization and Storage Pages** in the Cleaning and Maintenance Section of this Owner's Manual concerning the use of fuel stabilizers. Always follow the manufacturer's recommendation when using fuel additives or stabilizers.

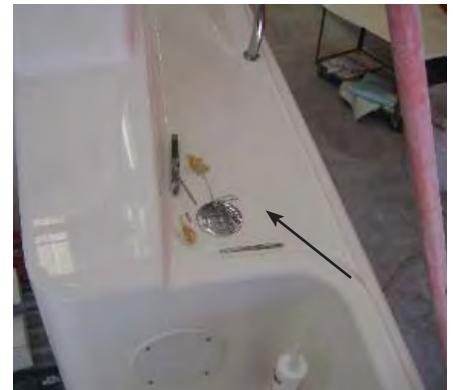

Starboard Side Fuel Fill



Port Side Fuel Fill



## General Guidelines For Fueling Your Yacht

Improper fueling procedures can cause boat fires and explosions. It is imperative that the following procedures be followed every time you fuel your boat:

### **WARNING**

**Leaking fuel is a fire and explosion hazard; personal injury or death could occur.**

- ✓ Before fueling, check the fuel system for leaks and repair or replace any components prior to fueling, or starting your Engines, Generator, or any Electrical Device.
- ✓ If possible, fuel your boat during daylight hours. Check fuel vents to assure the fuel tanks are not over-filled. Fuel spills are easier to detect when visibility is good.
- ✓ In very warm weather, DO NOT “top off” the fuel tanks; as the fuel will expand as it heats up and spill out the vents.
- ✓ Make sure you are using the correct fuel type required by the Engine manufacturer.

### **CAUTION**

**Using the wrong type of fuel will result in severe damage to the Engines.**

- ✓ Be sure to turn OFF all Engines, the Generator, and all devices that could create a spark prior to fueling. Battery Switches should also be shut OFF to prevent sparks from any Electrical Device.
- ✓ Disconnect Shore Power.
- ✓ Extinguish all smoking materials and any other items that may create a spark.
- ✓ Completely close all doors, ports, hatches, and windows. Ask guests to leave the boat during fueling.

✓ Before fueling, touch the fuel nozzle to the fuel fill cap to discharge any static electricity. Open the designated fill pipe, insert the nozzle while maintaining contact with the side of the fill pipe.

✓ After pumping several gallons, STOP. Inspect Engine and tank compartments for any signs of leakage.

✓ DO NOT continue fueling if leaks or the smell of fuel are present. Contact a qualified technician to inspect your boat and repair it before continuing to fuel.

✓ If no leaks are noted, continue fueling; allowing for expansion in warmer weather. Slow the flow as approaching full to avoid overflow.

✓ Once full, remove nozzle, replace fill cover tightly, and clean up any spills.

✓ After fueling has been completed, open all hatches, doors, and compartments. Visually check all fuel fittings, lines, and tanks for leakage; including Engine and Generator fuel lines. Immediately notify a qualified technician of any problems and correct them before proceeding.

✓ Turn Main Battery Switches ON to operate Bilge Blower. Ventilate all bilges for at least five (5) minutes.

✓ Make a final inspection of the Engine and/or Generator space and smell for fumes. If they are present, open all doors and ports, and evacuate the boat. Notify the Dockmaster and request a qualified technician to correct the problem. If it is clear, follow the recommended Engine Starting Procedure. When storing your boat for extended periods, it is preferable to “top off” the tanks and add fuel conditioner and/or stabilizer. Please refer to the Engine Owner’s Manual for recommendations.

## FUEL SYSTEM MAINTENANCE

Maintenance of your fuel system must also be a high priority. As boats get older, maintenance may be done by people with varying degrees of expertise. Materials and methods previously used may also change.



# FUEL SAFETY CHECKLIST FOR BOARDING

This Fuel Safety Checklist is designed to be used as a quick reference to minimize the risks associated with fuel hazards. You should refer to this checklist every time you board your yacht. Read your Owner's Manual so that you have a full understanding of the fuel system on your yacht.



**Fuel, especially gasoline, is extremely flammable. Failure to follow these recommendations, and the rules of good common sense, could result in fire or explosion; which could cause personal injury or death.**

- ✓ Before approaching your boat, extinguish all smoking materials and make certain there are no other devices on or near your boat that could create a spark and start a fire or cause an explosion.
- ✓ Approach your boat alone to make the initial inspection. Have your guests and crew standby at a safe distance away from your boat.
- ✓ Visually inspect your boat from the dock for any fuel leaks from the deck fills or hull vents, and take notice if there is any odor of fuel. Also, check the water surface around your boat for signs of fuel.
- ✓ Once onboard, open the cabin door and sniff at the doorway, and then inside the cabin for fuel odor.
- ✓ Open the Engine Compartment Hatch and sniff for fuel odor.
- ✓ Inspect the Engine Compartment and all Bilge Compartments for fuel leaks and sniff for fuel odor.
- ✓ If there are any signs of fuel leakage, either visually or by odor, open doors, hatches, and windows; but most importantly, **DO NOT** start the Engines, the Generator, or any other device that could create a spark. Shut OFF all Battery Switches. Evacuate the boat and inform the Dock Master. Have a qualified technician determine the source of the leak. **NEVER** operate your boat if a fuel leak is suspected or present!
- ✓ If no signs of a fuel leak are present, board your guests and crew.
- ✓ Run exhaust blowers for five (5) minutes before starting the Engines or Generator.
- ✓ Always be aware of the hazards associated with fuel and follow all safety and maintenance procedures in this publication, the Safety Manual, and Chapman's.

*“HAPPY SAFE BOATING”*

**FROM THE SILVERTON TEAM**



## **GENERATOR SYSTEM (Optional)**

As an option on your **33C**, a **Generator System**, manufactured by Kohler Company, was factory installed at the Silverton plant. Your **33C** is equipped with a gasoline powered Generator with a 5.0 kilowatt rating. As discussed in the Fuel System Pages of the Systems Operations section of this Owner's Manual, fuel is supplied to the Generator from either the starboard or port fuel tank. The **Generator System** is controlled by a Breaker Switch, located on the AC/DC Electrical Panel (Check the Electrical Pages of the Systems Operations Section of this manual). The system START and STOP switch is also located on the AC/DC Electrical Panel as is a slide bar switch that permits you to change from Generator Electrical Power to Shore Electrical Power as desired. The **Generator System** is located aft of the Engine Room, accessible through the Cockpit Access Hatch.



Operation of the **Generator System** is as follows:

- ✓ Turn ON the Generator System Battery Switch.
- ✓ Check Sea Strainer for debris and remove, if noted.
- ✓ Be certain the Seawater Intake Valve that services the Generator is in the OPEN position. The valve is open when the handle is parallel to the valve body. Although the photos on the upper right-hand side of this page are of the Seawater Intake Valves for the Engine, and not the Generator, the photos show the OPEN and CLOSED positions of this type valve.

The photo below shows the valve CLOSED.



The photo below shows the valve OPEN.



- ✓ Turn ON the breaker located on the Generator.
- ✓ Move slide bar switch to Generator Power Mode.
- ✓ Operate Generator Compartment Blower Motor for at least five (5) minutes before starting Generator and continue to run while operating your yacht below cruising speed.
- ✓ Check for presence of Gasoline odor in the Bilge.



**Gasoline vapors in the Bilge can cause explosion and fire aboard your yacht.**

✓ Start the Generator (Refer to “Starting Instructions” section in the Generator Manual included with your Owner’s Packet).

✓ Depress START switch on AC/DC Electrical Panel until Generator starts.

**⚠ CAUTION**

**DO NOT depress START Switch for more than thirty (30) seconds as damage to the Generator Starter Motor may result. If the Generator does not start within 30 seconds, release the START switch and allow the Starter Motor to cool for at least sixty (60) seconds before again attempting to start the Generator.**

To cease operation of the Generator System, depress the STOP switch on the AC/DC Electrical Panel. After the Generator stops running, release the STOP switch. Continue to operate the Blower Motor for several minutes to be certain the Generator compartment is completely evacuated of any fuel fumes. Return the slide bar switch to the Shore Power Mode and turn OFF the Breaker Switch. Turn OFF the Generator System Battery Switch.

**Refer to Generator in the Electrical System pages in this section of this manual for using the Generator output to power the boat.**

**⚠ DANGER**

**While operating your Generator System, always be certain there is adequate ventilation in the cabin areas of your yacht to avoid the potential accumulation of Carbon Monoxide Gas (CO). Carbon Monoxide Gas is colorless, odorless, and tasteless. It is highly poisonous; endangering lives even at very low levels of concentration. Mild exposure causes headaches, and fatigue; often resembling “flu-like” symptoms. Medium exposure causes severe headaches, drowsiness, nausea, and rapid heart rate. Extreme exposure results in unconsciousness, convulsions, cardio-**

**respiratory failure, and death. If Carbon Monoxide Gas is detected in your yacht, immediately contact a qualified technician to locate and repair the source of the poisonous gas. DO NOT enter your yacht until repairs have been made and the Carbon Monoxide Gas is lowered to an acceptable level. Refer to the Carbon Monoxide Gas (CO) Detector System Section of this Owner’s Manual for additional information and cautions concerning this deadly gas.**

**Refer to the KOHLER COMPANY Generator Manual included with your Owner’s Manual for additional technical information concerning the operation and maintenance of your Generator system.**

**⚠ CAUTION**

**Your Generator may not be able to operate all equipment at one time.**

**⚠ DANGER**

**Due to the risks related to Carbon Monoxide poisoning, NEVER sleep on board your boat while the generator is running.**

## HOT WATER SYSTEM

Your **33C** is equipped with a 10.5 gallon **Hot Water Heater**, which is operated on the A/C Electrical System. Cold water is supplied to the Water Heater via the Fresh Water Pump, which is then heated for distribution when desired. Similar to the water heater in your home, there is always a continuous supply of water to maintain a full tank at all times. The Water Heater in your **33C** is a “high recovery” model, meaning the cold water entering the tank is heated very quickly to replace the hot water as it is used.



The photo above shows the Water Heater.

Operation of the Water Heater is as follows:

✓ Be certain the Water Heater is full of water. You can easily check this by turning ON a hot water faucet. If water flows from the faucet, the Water Heater is full.



**If the Water Heater is not full of water, damage to the heating elements may result when electrical power is turned ON to the unit.**

✓ Turn ON the Water Heater Breaker Switch, which is located on the AC/DC Electrical Panel. The Electrical Pages in this section of this manual explain the location of this switch.


*NOTE: The Water Heater will operate on AC electrical current only. You must either plug in your Shore Power Cord or operate your Generator (if so equipped) for the Water Heater to function.*

✓ Allow sufficient time for the Water Heater to heat its contained water before using (approximately 1/2 hour).

General maintenance of the Hot Water System is as follows:

✓ Inspect all water lines and their connections at regular intervals. Tighten connections as needed. If the water lines appear worn or are not flexible, see your Silverton Dealer for replacement.

✓ Manually operate the pressure relief valve on the Water Heater at least once a year (See photograph below, which illustrates the location of the valve).

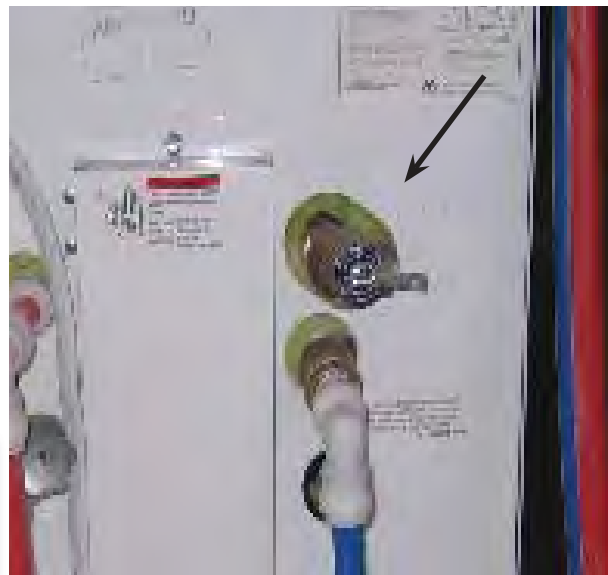



**DO NOT** operate the pressure relief valve while the Water Heater contains hot water. Serious burns or injury could result.

- ✓ Flush out the Water Heater tank at least once a year, if not used regularly.

**Refer to the Winterization and Storage pages in the Cleaning and Maintenance section of this Owner's Manual for proper preparation for seasonal storage of the Water Heater.**



## PROPULSION SYSTEM

Propulsion of your **33C** is accomplished by two (2) inboard Engines, located within the Engine Compartment. The Engines are fueled by either gasoline or diesel fuel. Each Engine transmits its power to a separate transmission, which rotates the attached Propeller Shaft and the Propeller, providing forward or reverse movement of your yacht as selected from the shift control unit located on the port side of the Helm. The photo below shows the Throttle and Shift Control at the Helm.



The transmissions are counter-rotating. This is defined as when in the forward shift mode and viewing forward from Aft, the Port transmission rotates the Port propeller counterclockwise, and the Starboard transmission rotates the Starboard propeller clockwise.

The Engine Starting Procedure is as follows:

- ✓ Open and inspect the Engine Compartment. Use your sense of smell to detect the presence of fuel fumes. Access to the Engine Compartment in your **33C** is provided through the hatch located in the floor of the Salon.
- ✓ Turn Battery Switch ON.

- ✓ Operate the Bilge Blower Motors for at least five (5) minutes. Listen to make sure blowers are on.
- ✓ Check the Bilge water level. If it appears above normal, turn ON the Bilge Pump(s) and remove the water. Determine the source of the excess water and repair, if necessary, before starting the Engines.
- ✓ Check the Bilge for the presence of any oil. Determine the source of the oil and repair, if necessary, before starting the Engines.
- ✓ Open both Engine Seawater Intake Valves (location of these valves are shown on the Mechanical Layout in the Schematics Section of this Owner's Manual). The valves are open when the handles are parallel to the valve body (See photograph below and the adjacent photograph, which illustrates the open and closed positions of the Engine Seawater Intake Valves).



The OPEN position is above on the left.

- ✓ Visually examine both Seawater Strainers (Optional) to ensure they are free of debris. Clean, if debris is noted.
- ✓ Check all cooling and lubricating fluids (See photograph below, which illustrates the location of the Engine oil "dipstick"). Add Engine oil or transmission oil, if needed; but DO NOT overfill.



 **WARNING**

**DO NOT** remove the Cooling System Filler Cap when the Engine is hot. Allow the Engine to cool and then remove the pressure cap slowly, allowing the pressure to vent. Hot coolant, under pressure, may discharge violently, and result in serious personal injury and burns.

- ✓ Place the transmission shift controls at the Helm Station in the neutral position. The feel of a “detent” midway between the forward and reverse positions indicates the neutral position.
- ✓ Place the throttle controls in the idle or “down” position.
- ✓ Turn the ignition key to ON, but not to START. The Engine alarm buzzer should sound and the Automatic Fire Extinguisher System Indicator Light should illuminate.
- ✓ Turn the ignition key to START and hold in this position until the Engine starts. If the Engine Starter Motor does not operate, the neutral safety switch may be out of adjustment. Slowly and carefully move the transmission shift control lever up and down until the starter motor operates. See your Silvertown Dealer or a competent technician as soon as possible to obtain the proper adjustment for the neutral safety switch. Release the ignition switch as soon as the Engine starts. The Engine alarm buzzer should turn OFF when the Engine oil pressure reaches normal operating range. The Automatic Fire Extinguisher indicator light should remain illuminated.

 **CAUTION**

**If the Engine fails to start within thirty (30) seconds, release the ignition switch. Allow the Starter Motor to cool for at least sixty (60) seconds and then try again to start the Engine. Prolonged starting attempts may result in Starter Motor overheating and damage.**

 **CAUTION**

Failure to release the ignition switch from the START position after the Engine starts may result in serious damage to the Starter Motor and/or Engine Flywheel.

 **CAUTION**

If the engine alarm buzzer **DOES NOT** turn OFF, turn OFF the Engine immediately if the oil pressure gauge displays no, or very low, oil pressure. See your Silvertown Dealer for inspection and repair, if necessary. No, or very low, oil pressure may cause serious damage to the internal mechanism of your Engine(s).

 **WARNING**

If the Automatic Fire Extinguisher Indicator Light **DOES NOT** remain illuminated, turn OFF the engine(s) immediately and follow the proper procedure to check for fire aboard your yacht as detailed in the Automatic Fire Extinguisher System Section of this Owner’s Manual. A fire aboard your yacht may result in serious personal injury or death.

- ✓ If one of the batteries is “dead” or not sufficiently charged to start your Engine, depress the “Parallel Start Switch” simultaneously while turning the ignition switch to START. The parallel start switch draws power from both batteries during the starting procedure and it is located on the Helm Switch Panel (Refer to the Electrical pages of this section of your Owner’s Manual for a location of the Switch). Release both switches immediately after the Engine starts.

## **CAUTION**

**DO NOT continue to depress the “Parallel Start Switch” after the Engine has started. Damage to the alternator(s) may result.**

After you have started both Engines and determined they are running properly, the “warm-up” procedure should be followed before departing the dock/mooring. The proper “warm-up” procedure is as follows:

✓ Check the oil pressure gauges to be certain each engine has sufficient oil pressure. Gasoline engines should have between 30 and 50 psi (pounds per square inch) and diesel engines should have between 35 and 70 psi. If the oil pressure is lower than the normal operating range, turn OFF the respective engine and contact your Silverton Dealer for further inspection and repair, if necessary.

✓ Start and allow engines to run at specified RPM until they reach proper operating temperature. Warm-up RPMs are listed in the engine operator’s manual. Normal operating temperature for gasoline and diesel engines are 165° F – 175° F depending on manufacturer’s specifications.

In gasoline engine applications, if the engine temperature rises above the normal operating range (a maximum of 200° F) an audible warning alarm and indicator light will come on indicating the engine is overheating. Turn OFF the respective engine immediately.

In a diesel engine application, if the engine temperature rises significantly above the normal operating range (a maximum of 200° F), the affected engine will send a code to the engine panel display when the engine is overheating. Again, if this occurs, turn OFF the respective engine immediately; contact your Silverton Dealer for inspection and repair, if necessary.

✓ Check the exhaust outlets for the presence of water. Water coming from the exhaust outlets indicates proper water circulation in the Engine Exhaust System. Water should start coming out of the exhaust outlet shortly after the engine is started. If you do not observe any water coming from the exhaust outlet(s),

turn OFF the respective Engine and contact your Silverton Dealer for inspection and repair.

✓ Visually inspect the Engine Compartment for fuel, oil and water leaks. If leaks are found, refer to your Fuel Section of this manual. Also, contact your Silverton Dealer for inspection and repair, if necessary.

✓ Visually inspect the exhaust system for leaks. If any leak is observed, immediately turn OFF the Engines and contact your Silverton Dealer for inspection and repair, if necessary.

✓ Check the transmission fluid level. The Engines should be not running. The transmission fluid should read FULL on the “dipstick”. If the fluid level is low, add sufficient transmission fluid to raise the level to the FULL mark or slightly lower. DO NOT overfill. If the fluid level is low, check the transmission(s) for leaks and contact your Silverton Dealer for repairs if leaks are noted.

**Refer to the ENGINE MANUAL included with your Owner’s Packet for additional technical information concerning maintenance requirements for the specific Engines with which your 38C is equipped.**

### **BOW THRUSTER**

**Refer to the Bow Thruster User and Maintenance Manual for technical information concerning your Bow Thruster System. This manual is provided by your Silverton Dealer and located in your Owner’s Packet.**



Photo to the left is the Bow Thruster’s Joystick Control and the photo below is the Bow Thruster location at the forward area of the hull.



### **Batteries**

The bow thruster batteries provide power to the thruster motor and controls. The batteries are two (2) 31 Series AGM batteries wired in series to make 24VDC and are located under the Galley Floor Hatch. The batteries must only be replaced with AGM batteries.

### **Battery Charger**

The bow thruster's battery charger, along with the 355 Amp DC Fuse, is located under the Galley Floor Hatch. The purpose of the charger is to maintain the battery voltage level. The charger breaker is located in the Main AC Distribution Panel and is a 15 Amp AC.

### **Joystick**

The bow thruster is operated with a joystick, which is located at the Helm. The motor and control box for the joystick are located under the Forward Stateroom Floor Hatch.

### **Operation**

The following information refers to the operation of your Bow Thruster.

- To engage the bow thruster, press the ON/OFF Switch. When the bow thruster is not in use, make sure to disengage the bow thruster by pressing the ON/OFF switch.
- To maneuver your vessel, simply push the joystick on the control panel to the left and the boat will move to port. To move to the right, push the joystick to the right and the boat will move to starboard.
- Turn OFF the bow thruster's main switch when the system is not in use and always when leaving the boat.

*Warning! Look out for swimmers before operating the bow thruster.*

*Warning! Do not operate the bow thruster without the belt cover installed.*

*Warning! Only operate the bow thruster when its propellers are fully submerged.*

**Refer to the Bow Thruster User and Maintenance Manual for technical information concerning your Bow Thruster System.**

### **Electronic Protection**

**Refer to the Bow Thruster User and Maintenance Manual for technical information concerning the Electrical Protection of your Bow Thruster System.**

### **Test Running**

**Refer to the Bow Thruster User and Maintenance Manual for technical information concerning a Test Run of your Bow Thruster System.**

### **Maintenance**

*Warning! When working on the bow thruster, always turn OFF the main switch.*

**Refer to the Bow Thruster User and Maintenance Manual for technical information concerning the Maintenance of your Bow Thruster System.**

## MARINE SANITATION SYSTEM

All vessels with fixed toilets that are operated on the waterways of the United States and some foreign countries are required to be equipped with an operable Marine Sanitation Device (MSD). The **Marine Sanitation System** in your **33C** is a Waste Tank System, defined by the United States Coast Guard as a Type III System. Type III Systems permit operation of the toilet without the direct discharge of untreated waste after every flush. Type III Systems can be discharged at marina dockside pump-out stations or, if in coastal waters, at least three (3) miles offshore.

*NOTE: Overboard discharge capability must remain inoperative while within the 3 mile limit. This is accomplished by closing the macerator discharge thru-hull valve (Refer to the Mechanical Layout Schematic in the Schematic Section of this Owner's Manual for the location of the valve).*

Your **33C** is equipped with one of the following **Marine Sanitation Systems**, depending on the option you chose from your Silverton Dealer at the time of purchase:

- Vacu-Flush Toilet
- Quiet-Flush Electric Toilet (Fresh Water)
- Electric Toilet (Raw Water)

### SeaLand Vacu-Flush Toilet

This system is operated by vacuum, combined with a small quantity of water supplied by the pressurized fresh water system (approximately one (1) pint per flush) and is controlled by DC Electrical Power. Each toilet is equipped with an integral vacuum breaker that prevents a backflow of contaminated water into the potable water supply. Vacuum energy, supplied by the **Vacuum Pump**, is stored in a **Vacuum Tank** and is monitored to maintain a certain level. The Vacuum Pump is controlled by an electrical breaker switch, located on the DC Electrical Panel (Refer to the Electrical Pages of this section in this Owner's Manual for the location of the switch). As the toilet is flushed, vacuum energy is depleted and the Vacuum Pump will automatically activate to restore the required level. The Vacuum Pump will operate

for approximately 30 to 90 seconds until the system reaches the required operating vacuum level. Toilet waste, both liquid and solid, is removed by the vacuum energy and water combination to a Waste Tank having a capacity of forty (40) gallons (The Mechanical Layout in the Schematics Section of this Owner's Manual shows the location of the Tank).

This waste is stored in the **Waste Tank** until pumped out at a proper facility. The photo below shows the Waste Tank. It is located under the Forward Stateroom.



The Waste Tank is equipped with an electronic Waste Level Gauge, which monitors the volume of waste in the tank for your convenience in determining when pump-out is required.

Maintenance of your Vacu-Flush Sanitation System consists of periodic cleaning of the toilet bowl with a mild nonabrasive cleaner. The Waste Tank should be thoroughly rinsed after each pump-out and a sanitation system deodorizer should be added to the Waste Tank by flushing through the toilet.



**DO NOT use chlorine-based or caustic cleaning agents or chemicals, such as drain opening products, in your SeaLand Vacu-Flush Sanitation System. Use of these products may cause serious damage to the system's seals and hoses.**

Refer to the **SEALAND VACU-FLUSH SANITATION SYSTEM MANUAL** included with your **Owner's Packet** for additional information concerning the use and maintenance of this system, including the proper procedure for winterization and storage.

### Jabsco Quiet-Flush Electric Toilet (Fresh Water)

This system is operated by water supplied by the pressurized fresh water system (approximately 1 - 2 quarts per flush) and is controlled by DC Electrical Power. Each toilet is equipped with a push button switch, that when depressed, activates both the rinse water supply and the macerator discharge pump simultaneously. In addition to the push button switch, a separate rocker-type switch may be used to control the rinse water supply, independent of the macerator. This feature allows conservation of your fresh water supply as well as the ability to raise the water level, if needed, for proper evacuation of the toilet bowl under all conditions. To prevent contamination of the fresh water supply, this system is equipped with an anti-siphon breaker contained in the water control solenoid valve. The water control solenoid valve of each toilet is controlled by an electrical breaker switch, located on the AC/DC Electrical Panel (Refer to the Electrical Pages of this section of this Owner's Manual for the switch location). Toilet waste, both liquid and solid, is flushed from the toilet by the macerator to a Waste Tank having a capacity of forty (40) gallons (See **Mechanical Layout** in the Schematics Section of this Owner's Manual for the location of the Waste Tank). This waste is stored in the Waste Tank until pumped out at a proper facility. The Waste Tank is equipped with an electronic Waste Level Gauge, which monitors the volume of waste in the tank for your convenience in determining when pump-out is required.

### Jabsco Quiet-Flush Electric Toilet (Raw Water)

This system is identical to the fresh water system in its operation, but uses raw water pumped from the sea as its rinse water source instead of fresh water supplied by the pressurized fresh water system. This system is not equipped with a separate rocker-type switch to control the rinse water level and the volume is consistent (approximately 1 - 2 quarts per flush). As with the fresh water system,

to prevent contamination of the raw water supply, this system is equipped with an anti-siphon breaker contained in the water control solenoid valve. The water control solenoid valve of each toilet is controlled by an electrical breaker switch, located on the DC Electrical Panel (See the Electrical Pages in this section of this Owner's Manual for the location of the breaker switches). Toilet waste, both liquid and solid, is flushed from the toilet by the macerator to a Waste Tank having a capacity of forty (40) gallons (refer to the Mechanical Schematic in the Schematics Section of this Owner's Manual for the location of the Macerator and the Waste Tank). This waste is stored in the Waste Tank until pumped out at a proper facility. The Waste Tank is equipped with an electronic Waste Level Gauge, which monitors the volume of waste in the tank for your convenience in determining when pump-out is required.

Maintenance of your Quiet-Flush Electric Toilet Sanitation System consists of periodic cleaning of the toilet bowl with a mild nonabrasive cleaner. The Waste Tank should be thoroughly rinsed after each pump-out and a sanitation system deodorizer should be added to the Waste Tank by flushing through the toilet.



**DO NOT use chlorine-based or caustic cleaning agents or chemicals, such as drain opening products, in your Jabsco Quiet-Flush Sanitation System. Use of these products may cause serious damage to the system's seals and hoses.**

Refer to the **JABSCO Quiet-Flush Toilet Manual** included with your **Owner's Packet** for additional technical information concerning the use and maintenance of both systems; the fresh water and raw water. Refer to the **Winterization and Storage Section** of this **Owner's Manual** for the proper preparation procedure for extended storage in cold climates.

## Waste Filter

Your Waste System is installed with a **Waste Filter**. This Waste Filter is located in the vanity cabinet, accessible through the vanity doors. The Waste Filter should be changed at the beginning of every season.

The photo before shows the Macerator, Waste Filter, and the Shower Sump Pump located in the Forward area of the Engine Compartment.







## **SHOWER SUMP PUMP SYSTEM**

Your **33C** is equipped with a shower; it is located on the starboard side (See **Interior Layout** in the Schematics Section of this Owner's Manual, which illustrates the location of the shower). The shower is equipped with a separate Automatic Sump Pump (Refer to the Mechanical Schematic in the Schematics Section of this Owner's Manual for the location of the Shower Sump Pump). As the water drains from the shower into the Sump Pump to a certain level, it raises an automatic switch lever, which activates the Shower Sump Pump and the water is pumped overboard. The photo below shows the **Shower Sump Pump System**.



Access to the Shower Sump Pump is through a hatch located on the deck of the Forward Stateroom. The photo below shows the panel removed.



The Shower Sump Pump System operates on DC

Electrical Power, controlled by a breaker switch located on the DC Electrical Panel (Refer to the Electrical Pages of this section of this Owner's Manual for the location of the switches).

General maintenance of the Shower Sump Pump System involves periodic cleaning to remove any accumulated debris. Remove the six (6) screws securing the top cover for access to the debris basket and automatic float switch. If you notice that the shower does not drain properly, check the pump basket for debris and clean, if necessary. If the shower still does not drain properly, check the operation of the pump by manually raising the automatic float switch. If the sump pump is operable, but will not drain properly, check all drain lines for debris and clean as needed. See your Silverton Dealer for further inspection and repair if the shower continues to drain improperly.

### **CAUTION**

**When operating the Air Conditioner on your 33C, the Sump Pump Breaker Switches must be turned ON. Condensation from the Air Conditioner drains into the Shower Sump Pump System and this water is pumped overboard by the Sump Pumps.**

**Refer to the Winterization and Storage section of this Owner's Manual for the proper preparation and maintenance of the SHOWER SUMP PUMP SYSTEM prior to seasonal storage.**



## STEERING SYSTEM

The **Steering System** in your **33C** is hydraulically assisted. Hydraulic assisted steering is similar to the power steering system in your automobile and greatly reduces the manual effort necessary to steer your yacht and maintain the desired course.

The **Hydraulic Steering System** in your **33C** differs from your automobile, as a separate pump is not used to circulate the hydraulic fluid contained in the system; the system is completely filled with hydraulic fluid and is free of air. As you turn your steering wheel, the hydraulic fluid is pumped by the steering head into the appropriate fluid line, Port or Starboard, resulting in movement of the steering cylinder in the respective direction. The steering cylinder is connected to the rudders and they are subsequently turned, which enables your yacht to turn in the desired direction; to Port or Starboard (See photograph below which illustrates the location of the steering cylinder and its connection to the rudders).



The **Hydraulic Steering System** in your **33C** utilizes an fixed-type steering head.



The steering head contains a vented fill cap. The vented cap is located on the top of the steering head and forward of the steering wheel. The photo below shows the vented cap.



Maintenance of the **Hydraulic Steering System** should only be performed by your Silverton Dealer or a qualified technician, who is experienced in marine hydraulic systems. Periodically examine all connections and hydraulic lines for any signs of leakage. If any leaks are noted, contact your Silverton Dealer for further inspection and repair, if necessary.

Refer to the **SEA STAR Manual** included with your **Owner's Packet** for the specific type of hydraulic fluid required and technical information concerning the **Hydraulic Steering System**.



## **SHIFT/THROTTLE CONTROL SYSTEM** **(Ultra-Flex Controls) (OPTIONAL)**

You may have chosen as an option when you purchased your **33C**, an electronically controlled **Shift/Throttle Control System**, factory installed at the Silverton plant. The purpose of this system is to provide the operator with smooth, positive shift and throttle operation requiring minimal manual effort. With this system, only one (1) shift/throttle control lever is required per engine; the left control lever operates the Port Engine and the right control lever operates the Starboard Engine.

The **Ultra-Flex Shift/Throttle Control System** is operated on DC Electrical Power, controlled by a breaker switch located on the DC Electrical Panel and described as "Accessory" (Refer to the Electrical Pages in this section of this Owner's Manual for the switch location).

**Refer to the Ultra-Flex Controls Manual included with your Owner's Packet for additional technical information concerning the operation and maintenance of the ULTRA-FLEX SHIFT/THROTTLE CONTROL SYSTEM.**





## TRIM TAB SYSTEM

The purpose of the **Trim Tab System** on your **33C** is to assist in reaching planing speed as soon as possible and to maintain a proper “running attitude” while in forward motion. “Running Attitude” is defined as the level of the boat, both fore and aft and athwartships, while the vessel is underway. Your yacht, upon reaching planing speed, should rise slightly in the bow and should not list to either side for the greatest stability and fuel economy. Your **33C** is equipped with two (2) *Bennett* Trim Tabs, each measuring 12” x 24”, which are mounted on the trailing edge of the transom (See photograph below, which illustrates the location of the Port trim tab).



Each Trim Tab operates independently of each other and they are controlled by separate rocker-type switches, located on the Helm Switch Panel (Refer to the Electrical Pages in this section of this Owner’s Manual for the location of these switches). Each Trim Tab is actuated by a hydraulic cylinder, which moves them in an Up or Down motion.

The position as determined by depressing the rocker-type switches as follows:

- Depressing the TOP of the switch lowers the Trim Tab.
- Depressing the BOTTOM of the switch raises the Trim Tab.

The **Trim Tab System** operates in the following manner:

- ✓ The function of the Trim Tab is to redirect the flow of water beyond the bottom of the Transom. This creates an upward pressure on the hull bottom at the Transom, which results in lowering the bow.
- ✓ When the Port Trim Tab is lowered, the Port stern section is raised, which lowers the Starboard side of the bow.
- ✓ When the Starboard Trim Tab is lowered, the Starboard stern section is raised, which lowers the Port side of the bow.
- ✓ Both Trim Tabs should be lowered/raised as needed to maintain a proper “Running Attitude”.

### **WARNING**

Operation of the Trim Tab System may require practice to attain a level of proficiency. **DO NOT** operate either Trim Tab to its extreme lowered position suddenly. This may cause the bow to lower to an unsafe position while heading into or away from waves, which may cause “swamping” of your yacht, resulting in possible injury or death. **DO** operate the Trim Tab switches with short “bursts” until the desired “Running Attitude” is obtained.

Maintenance of the **Trim Tab System** is as follows:

- ✓ Silverton recommends painting the Trim Tabs with good quality, antifouling bottom paint. **DO NOT** paint any hinges or the moving parts of the cylinders.
- ✓ To reduce the risk of electrolysis and galvanic corrosion, Silverton recommends the installation of Sacrificial Zinc Anodes on the Trim Tab plates at least once a year, preferably during preparation for spring launch. **DO NOT** paint the Sacrificial Zinc Anodes.

- ✓ Periodically examine the Trim Tabs for accumulation of underwater growth and clean as necessary.
- ✓ Periodically examine the **Trim Tab Pump** and hydraulic lines, which are located in the bilge area, for leaks (Refer to the Mechanical Schematic in the Schematic Section of this Owner's Manual for the location of the trim tab pump). Tighten connections if leaks are noted. If the hydraulic lines appear worn or chafed, contact your Silverton Dealer for inspection and replacement, if necessary.

The photo below shows the Trim Tab Pump.



Refer to the **BENNETT TRIM TAB Manual** included with your Owner's Packet for technical information concerning the operation and maintenance of the trim tab system.



## **OIL X-CHANGE-R SYSTEM (Optional)**

You may have chosen as an option when you purchased your **33C**, an **OIL X-CHANGE-R System**, manufactured by *Ray Zager & Company* and factory installed at the Silverton plant. The purpose of the **OIL X-CHANGE-R System** is to automatically drain, fill, and maintain Engine and/or Transmission oil with relative ease and no spilled oil, which is normally associated with your required periodic oil changes. The **OIL X-CHANGE-R System** consists of an enclosed pump, located in the Engine Compartment, which operates on DC Electrical Power. The system pump is controlled by a breaker switch, located on the AC/DC Electrical Panel and described as "Accessory" (Refer to the Electrical Pages in this section of this Owner's Manual for the location of the switch for the **OIL X-CHANGE-R System**). Operation of the system is accomplished by turning ON the toggle switch located on the pump unit.

**Refer to the OIL X-Change-R System Manual included with your Owner's Packet for information concerning the operation and maintenance of this system.**



## ICEMAKER UNIT (Optional)

You may have chosen as an option when you purchased your **33C**, an **Icemaker Unit**, factory installed at the Silverton plant. The purpose of this system is to provide you with a continuous supply of fresh ice upon demand and as needed.

The **Icemaker Unit**, which is located in the cockpit, operates on AC Electrical Power, and is controlled by a breaker switch located on the AC/DC Electrical Panel (See **AC/DC Electrical Panel Layout** in the Schematics Section of this Manual, which illustrates the location of the breaker switch that controls the **Icemaker Unit**). While your **33C** is underway, you must operate your generator (if so equipped) to maintain operation of the **Icemaker Unit**.

Refer to the **ICEMAKER MANUAL** included with your **Owner's Packet** for specific instructions concerning the operation and maintenance of the **ICEMAKER UNIT**.





## REMOTE CONTROLLED SPOTLIGHT (OPTIONAL)

You may have chosen as an option when you purchased your **33C**, a **Remote Controlled Spotlight**, factory installed at the Silverton plant. The spotlight unit operates on the DC Electrical System. The system is controlled by a breaker switch described as “Accessory”, located on the DC Electrical Panel (Refer to the Electrical Pages of this section of this Owner’s Manual for the location of the switch that controls the **Remote Controlled Spotlight**). The Spotlight Control Panel is located at the Helm Station and power to and movement of the spotlight is controlled from this remote location (See photograph below, which illustrate the location of the **Remote Controlled Spotlight Control Panel**).



Refer to the ITT JABSCO Manual included with your owner’s packet for information concerning the operation and maintenance of the remote controlled spotlight.




## SEAKEY

The SeaKey Satellite Communication System is installed on your yacht at the factory. It is comprised of the following items:

- High Water Alarm Switch
- SatCom Sending Unit
- Display Control Unit

Your SeaKey System always has battery power to it. This is a major advantage over the VHF Radio, which may be accidentally turned off.

### HIGH WATER ALARM SWITCH

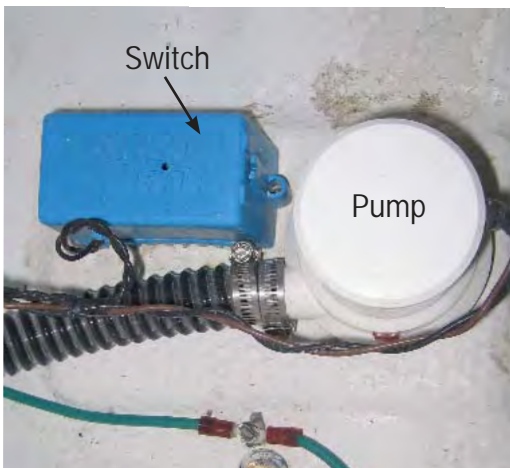

Access to the High Water Alarm Switch is through the access panel in the floor of the Salon. The Switch is in the forward part of the Engine Room. Please be aware this Alarm Switch is about 5" higher than the normal operating bilge switches that are installed on your yacht by Silverton. Please also be advised that the switch is only in the mid compartment. Other compartments could flood first and the switch would not be activated. The switch will only be activated when the normal operating Bilge Pumps have failed and cannot handle the incoming water flow.

### SatCom SENDING UNIT



The SatCom Sending Unit is installed under the flybridge on your yacht. This unit sends out a low frequency signal to the satellite, which in turn sends the signal to the receiving location. You must know the location of the Sending Unit. If anyone is standing in front of the Sending Unit, they could block the signal from going to the satellite (Refer to the SeaKey Owner's Guide for more information).

### DISPLAY CONTROL PANEL



The Control Panel has many functions. Refer to the SeaKey Owner's Guide to understand all the important features of the control panel.

Your SeaKey System draws its power from the batteries in your yacht. If the batteries go dead, or if the batteries are removed from the system, the system will send a signal to the receiving station. Before removing power from your system, we recommend contacting SeaKey Member Services for the proper procedures.





# CLEANING AND MAINTENANCE

A periodic cleaning and maintenance schedule of the interior and exterior surface for your yacht is recommended. Not only will it maintain your yacht in pristine condition, but it will also result in a higher resale or trade-in value when you decide to purchase another Silverton yacht. A clean yacht is both pleasing to the eye and a source of pride in ownership. Cleaning and maintenance of your yacht is described in the following categories:

- \* Interior Cleaning/Maintenance
- \* Exterior Cleaning/Maintenance
- \* Canvas Enclosure Cleaning & Maintenance

## Interior Cleaning / Maintenance

There are several different types of surfaces in the interior of your yacht and all require a different method of cleaning. The surfaces and their respective cleaning and maintenance procedures are as follows:

### Fiberglass

Wash with a mild soap and water solution. Thoroughly dry with a soft cloth and apply a coat of good quality wax designed for marine use.



**DO NOT use abrasive cleaning agents on fiberglass surfaces, as they will scratch and dull the finish.**

### Wood

There are many wood surfaces in your yacht, such as galley cabinets, entertainment cabinets and trim. Care and cleaning of the wood surfaces is identical to the maintenance of the wood surfaces in your home. Frequently remove dust from the wood with a feather duster or similar cleaning tool. Apply a good quality furniture polish, such as *Liquid Gold*, to all wood surfaces on a regular basis to maintain their beauty and lustre.

### Nautolex (Vinyl)

Gently wash with a mild soap and water solution and dry with a soft, lint-free cloth on a regular basis. DO NOT wait for the vinyl surface to appear soiled before you clean it, as stains and ground-in surface dirt may be difficult to remove.



**DO NOT use cleaning agents containing bleach, as they will remove the color tint from the vinyl surface, causing a blotching appearance and will dry the material, resulting in surface cracks.**

### Upholstery

The upholstery in your yacht is high quality and stain resistant. Frequently vacuum the upholstery to remove any dirt before it accumulates and becomes imbedded. Stains may be removed by using a quality household stain remover. Be certain to follow the manufacturer's directions concerning its use.

### Carpeting

The carpet in your yacht is a high quality nylon pile. Normal cleaning and maintenance is accomplished by vacuuming on a frequent and regular basis. Refer to the carpet manufacturer's pamphlet included with your owner's packet for additional cleaning procedures, such as stain removal.

You may have chosen as an option at the time of purchase of your yacht, a "Central Vac" vacuum cleaning system. Similar to the system in your home, only a removable vacuum hose with cleaning attachments is necessary to vacuum any portion of the interior of your yacht. The "Central Vac" system in your yacht is operated on the AC electrical system with a "Ground Fault Interrupter" circuit for your protection. The vacuum motor and canister (stores the vacuumed soil) are self-contained in one unit and located in the lower portion of the dinette seat. Access to the canister is gained through a panel located on the inboard face of the dinette seat. There is one (1) vacuum hose outlet, which is located on the face of the canister access panel. Refer to the manufacturer's pamphlet included with your owner's packet for specific directions concerning operation of the system.

## **Corian**

The galley and head counter tops and head sinks are manufactured of Corian, which is a superior quality, tough, scratch-resistant material. The Corian surfaces in your yacht are a Matte/Satin finish and are easily cleaned and maintained in the following manner:

\* **Cleaning:** Dirt and stains are removed by using a soap and warm water solution. Tough stains may be removed by using an ammonia-based cleaning agent. Watermarks may be removed simply by wiping the surface with a clean, damp cloth and drying with a towel.

\* **Disinfecting:** Occasionally wipe the surfaces with a 50/50 water and bleach solution. Rinse with warm water and dry with a towel.

\* **Sink Cleaning and Disinfecting:** General cleaning of the Corian sinks is the same procedure as described above. For a more thorough cleaning, occasionally fill the sink with a 50/50 water and bleach solution and let soak for fifteen (15) minutes. As the solution drains, wash the bottom and sides, rinse with warm water and dry with a towel.

\* **Cuts and Scratches:** Cuts and scratches may be removed from your Corian surfaces. Refer to the manufacturer's pamphlet included with your Owner's Packet for the proper procedure.

## **Exterior Cleaning / Maintenance**

The exterior surfaces of your yacht consist primarily of fiberglass, stainless steel, aluminum, safety glass, acrylic plastic and anti-fouling bottom paint. As with the interior surfaces, the exterior surfaces demand frequent cleaning and maintenance. The respective procedures are as follows:

### **Fiberglass**

Wash with a mild soap and water solution, particularly if your yacht is used in salt or brackish water. Always thoroughly wash your yacht after each use in addition to a regular, periodic washing schedule. A more frequent washing schedule may be required, depending on the environment where your yacht is normally docked/moored. A soft scrub brush may be used on the non-skid surface areas. Thoroughly dry with a soft cloth and apply a coat of good qual-

ity wax designed for marine use, such as carnauba paste wax. **DO NOT** apply wax to the non-skid surface areas, as it will render them ineffective. If your boating season is year around, it is recommended a coat of wax be applied every three (3) months. If your boating season is restricted to the summer months, it is recommended a coat of wax be applied prior to spring launch and again at the end of the season prior to winter storage.



**DO NOT use abrasive cleaning agents on fiberglass surfaces, as they will scratch and dull the finish.**

### **Stainless Steel**

The bow rail, aft deck rail, mooring cleats and other hardware on your yacht are manufactured of quality 316L grade stainless steel. Stainless steel will not rust under normal conditions, but it must be properly maintained on a regular basis. Thoroughly wash the hardware with a soap and warm water solution and rinse with fresh water. Dry with a soft cloth to remove any water stains. If discoloration or salt deposits are not removed with normal washing, a non-abrasive household cleaner or stainless steel polishing powder may be used with a soft bristle brush. Always scrub in the direction of the polishing lines imbedded in the stainless steel to avoid scratching the surface. For a superior shine, wipe the stainless steel with a light coat of kerosene, followed by a light coat of lemon oil. The kerosene enhances the lustre and protects the stainless steel and the lemon oil removes the unpleasant kerosene odor. Be careful not to spill or wipe kerosene on the fiberglass surfaces, as it will remove the coat of wax.



**DO NOT use abrasive cleaning agents, steel wool pads, or brushes as these products may scratch and damage the stainless steel finish.**

## Aluminum

The windshield and window frames on your yacht are manufactured of aluminum, unless you purchased, as an option, stainless steel frames. The aluminum components are cleaned and maintained in the same manner as the components manufactured of stainless steel.

### CAUTION

**DO NOT use kerosene or lemon oil on any painted aluminum surfaces, as they will soften and remove the paint.**

### CAUTION

**DO NOT use any abrasive cleaning agents or steel wool products when cleaning aluminum. Aluminum scratches very easily and these products will scratch the surface.**

## Safety Glass

The windshield and windows on your yacht are manufactured of safety glass similar to the safety glass found on your automobile. The safety glass on your yacht is much heavier and thicker than the glass on your automobile and meets or exceeds all American Boat and Yacht Council (ABYC) standards. The safety glass may be cleaned with the same soap and warm water solution used for cleaning the exterior surfaces of your yacht and then dried with a soft towel. For a thorough cleaning and to remove all water stains, use a quality window cleaner, such as *Windex*, and dry with a paper towel.

### CAUTION

**DO NOT use any abrasive cleaning agents, abrasive cleaning cloths, or pads when cleaning safety glass surfaces, as they will scratch the surface.**

## Acrylic Plastic

The venturi windshield, which is located on the bridge of your yacht, is manufactured of a tough acrylic plastic. Clean the acrylic plastic surfaces with a mild soap and water solution or non-ammonia based cleaner and dry with a soft cloth.

### CAUTION

**DO NOT use any abrasive cleaning agents or abrasive cleaning cloths or pads when cleaning acrylic plastic surfaces, as they will scratch the surface.**

## RADAR ARCH

Your radar arch (if applicable) is constructed from aluminum to give it strength, rigidity, wire access, and hardware mounting ability. It has a very durable painting finish backed by a 3-5 year limited warranty. In order to maintain the high luster finish and the warranty of this product, please follow these instructions:

### GENERAL CARE:

- Wash your radar arch with mild, non-abrasive soap and water, using a soft cloth on a regular basis. This will help maintain the shine on your radar arch by keeping the salt and atmospheric acids from dulling your finish.
- To add extra shine and durability to your radar arch we suggest you wax the finish after washing the radar arch, with a clear-coat, non-abrasive wax.

## Canvas Enclosure (Optional) Cleaning / Maintenance

The canvas enclosure you purchased as an option from your Silverton dealer consists of canvas fabric, vinyl windows and zippers. An aluminum tubular frame supports the enclosure and it is secured to the bridge and deck with "snaps". Each of these components require a different cleaning and maintenance procedure and they are as follows:

### Canvas Fabric

The canvas should be cleaned on a regular basis before dirt, salt, and other deposits accumulate and become imbedded in the fabric. The canvas may be cleaned, without removal from your yacht, while it is in the normal upright position. Brush off any loose dirt and then rinse with fresh water. Wash the fabric with a mild soap and lukewarm (temperature less than 100° F) water solution, rinse thoroughly with fresh water and allow to air dry.



**DO NOT use any cleaning agents containing detergent, as they will remove the protective coating, resulting in stiffness and eventual cracking of the fabric.**



**DO NOT dry the canvas fabric by any means other than air-drying. Use of heated drying apparatus, such as a hair dryer, will result in stiffness and cracking of the material.**

### Vinyl Windows

The vinyl windows in your enclosure should be cleaned on a frequent basis to extend their life and maintain clarity. Rinse off any loose dirt with fresh water and then wash with a mild soap and cool water solution. After washing, rinse with fresh water and dry with a soft cloth.



**DO NOT use any abrasive cleaning agents or brushes when cleaning your vinyl windows, as they will scratch the material, resulting in poor clarity.**



**DO NOT fold the vinyl windows after removing them from the enclosure. Roll them prior to placing them in storage. Folding the vinyl windows will cause creases and eventual cracking. If you anticipate long-term storage, place a soft cloth over the vinyl window and roll the window with the cloth in place. The cloth barrier will prevent the vinyl from sticking to itself, particularly during warm weather.**

### Zippers

The various sections of your canvas enclosure are secured together with zippers to permit easy removal of any or all sections without the cumbersome weight or size of the entire unit. The zippers are manufactured of high impact plastic coated stainless steel and have large teeth for smooth operation. They should be washed while you are washing the canvas and then periodically lubricated by rubbing a candle on the zipper in the closed position and then opening and closing several times to distribute the wax lubricant.

### Aluminum Tubular Frame

The upper portion of your canvas enclosure is supported by a tubular aluminum frame. The frame is secured by stainless steel pins placed in brackets that are permanently mounted on the fiberglass surface at various locations on the bridge and deck. The aluminum frame is cleaned and maintained in the same manner as the other aluminum components on your yacht as previously described.

## CAUTION

**DO NOT use kerosene or lemon oil on the aluminum frame, as it will stain the canvas fabric. A small amount of lubricant, such as CRC, may be used to lubricate the stainless steel pins.**

### Two-Piece “Snaps”

The lower portion of your canvas enclosure is secured to the bridge and deck by two-piece “snaps”, which are manufactured of chrome-plated brass. The female portion is permanently secured in the lower seam of the canvas and the male portion is permanently secured into the fiberglass surface of the bridge and deck. Frequently examine the snaps for the presence of dirt and remove with a soap and water solution and rinse with fresh water. Periodically lubricate the female portion with a small amount of lubricant, such as *Vaseline Petroleum Jelly*.

## Winterization and Storage

In most cases, the reason for storage of your yacht is winter lay-up. The information contained in this section is a general guide. Your Silverton dealer or a competent boat yard should prepare your yacht for winter storage.

If you are removing your yacht from the water for another reason, use the information in this section as a guideline. Following the procedures in this section will help extend the life of your yacht and its equipment and simplifies recommissioning in the spring.

Indoor storage is beneficial if you are storing your yacht in a climate that produces ice and snow. The storage building should be adequately ventilated and not tightly closed. Ventilation, both around and throughout the yacht, is very important to help prevent the growth of mold and mildew.

If you use outdoor storage facilities, cover your yacht with a cover having provisions for ventilation to keep the yacht from “sweating”. Building a frame over the boat to support the cover will allow the passage of air around the yacht. The frame should be a few inches wider than the yacht so the cover will extend beyond the rubrail. The frame should also support the center

of the cover and cause it to rise in a slight “teepee” position to allow for water runoff.

**NOTE:** *DO NOT seal the cabin tightly to allow proper ventilation throughout.*

Before preparing your yacht for winter storage, thoroughly check the condition of the yacht and its systems and equipment. Note any repairs that may be needed. The need for additional repairs may become apparent during the winterization process. Make arrangements with your Silverton dealer to have the repairs completed.

### Cleaning and Preparation for Storage

Thoroughly clean the hull immediately after removing the yacht from the water. Pressure wash the bottom, if possible, to remove all marine growth. If pressure washing is not possible, thoroughly scrub the hull bottom. Marine growth is much easier to remove while it is still wet.

Thoroughly clean the remainder of the hull and the deck. Silverton recommends a coat of wax be applied to the hull above the waterline and to the deck for added winter protection.

Apply rust inhibitor to all metal parts.

Thoroughly clean the inside of all hull openings, thru-hull fittings and filtration screens (See **Mechanical Layout** in the Schematics Section of this Owner’s Manual, which illustrates the location of the seawater intake valves). Inspect the hull and underwater gear for signs of wear, deterioration or damage and repair, if possible, before covering and storing your yacht.

Fill the fuel tanks to prevent condensation and add a good quality fuel preservative (Refer to the fuel preservative manufacturer’s recommendation for the proper ratio).

**IMPORTANT:** *DO NOT overfill the fuel tanks so fuel flows from the vent(s). Allow sufficient room in the tanks for fuel to expand.*

Prepare the engines for storage. Refer to the engine manual for winterization and storage procedures.

❑ Prepare the generator and air conditioners (if so equipped) for storage. Refer to the generator manual and the air conditioner manual, included with your owner's packet, for the proper winterization and storage procedures.

### **Draining Your Yacht**

Your yacht has drain plugs for draining water from the bilge (See **Mechanical Layout** in the Schematics Section of this Owner's Manual, which illustrates the location of the garboard drain plugs). Some compartments in the bilge may not drain completely due to the position of the yacht. Pump these compartments out with a portable pump and then use a sponge to remove all remaining water.

The procedure for draining and winterizing the fresh water system is as follows:

❑ Drain the fresh water supply tank by opening the hot and cold faucets in the galley for ten (10) minute intervals until the tank is empty.

❑ Open all faucets in the galley, both showers, both head sinks, and the exterior cockpit shower.

❑ Remove the fresh water filter bowl and strainer. Clean, dry and replace strainer bowl.

❑ Drain the water heater, remove the cold water intake hose and hot water output hose, and hook them together.

❑ Remove the inlet hose from the fresh water tank (See **Mechanical Layout** in the Schematics Section of this Owner's Manual, which illustrates the location of the fresh water tank) and insert it into a container of non-toxic, fresh water anti-freeze. Turn the fresh water pump ON and starting at the farthest faucet from the pump, turn ON all faucets until the anti-freeze flows out.

❑ Turn OFF the fresh water pump and reconnect the inlet hose to the fresh water tank.

❑ Pour non-toxic anti-freeze into all sink and shower drains until the liquid is discharged overboard.

Alternate procedure for draining and winterizing the fresh water system is as follows:

❑ Drain all water from the fresh water tank.

❑ Drain all water from the water heater.

❑ Remove hose from the input side of the fresh water pump and allow to completely drain.

❑ Remove hose from the output side of the fresh water pump and turn ON all faucets.

❑ Blow compressed air (15-20 lbs. psi) through the output hose until all water stops flowing from the faucets.

❑ Leave water lines at the fresh water pump disconnected to allow any trapped water vapor to drain and evaporate.

The procedure for draining and winterizing the marine sanitation system is as follows:

❑ Drain all water lines into the waste holding tank. Continue to flush fresh water into the waste holding tank and pump out into an approved waste facility until thoroughly clean.

❑ Add non-toxic, freshwater anti-freeze to the waste holding tank by flushing through the toilet.

❑ Run the macerator pump to allow anti-freeze to flow through the pump and the input/output lines.

❑ Remove the drain plug from the macerator seacock while the valve is closed and allow the line to drain. Replace the drain plug.

❑ Thoroughly clean the toilet and leave the bowl exposed to prevent mildew.

❑ Remove all seacock and strainer drain plugs to prevent from freezing. Close all seacocks.

### **Seacocks**

- Engines
- Head System (Intake)
- Head System (Macerator pumpout)
- Generator
- Air Conditioners (if equipped)

### **Strainers**

- Engines
- Fresh Water System
- Generator
- Air Conditioners (if equipped)

## **Battery Storage**

The procedure for battery winterization and storage is as follows:

- ❑ Turn battery switch to OFF.
- ❑ Remove engine batteries and generator battery (if so equipped) from their respective compartments (See **Mechanical Layout** in the Schematics Section of this Owner's Manual, which illustrates the location of the engine and generator batteries).
- ❑ Place batteries on a wooden pallet or bench and store in an area where temperatures remain above freezing.  
**IMPORTANT: DO NOT** store batteries on a concrete surface, such as a garage floor, as they will tend to discharge.
- ❑ Keep batteries fully charged during storage. Periodic charging (once a month) with a battery charger set on a low amperage charge is recommended. Check the battery electrolyte levels regularly. Add electrolyte, if needed.



**Refer to the battery literature included with your owner's packet for additional information concerning the care and storage of your batteries.**

## **Interior Preparation**

The procedure for preparing the interior of your yacht for winter storage is as follows:

- ❑ Remove all items that will hold moisture (towels, PFD's, blankets, clothing, canvas, etc.) from the interior of the yacht to prevent mold and mildew formation.
- ❑ Remove all electronic equipment and items of value that are detachable.
- ❑ Remove all garbage and trash.
- ❑ Thoroughly clean the interior of your yacht. Clean all cabinets, drawers and cupboards. Allow the cabin area to air dry for at least one day, if possible.

❑ Stand or prop up all mattresses and cushions that are to remain on board during storage to allow air circulation around them.

❑ Place *Mildew Pacs* in various locations within the interior of your yacht to help prevent mold and mildew formation during storage (Refer to the manufacturer's recommendation for the quantity and location required).

## **Lifting Your Yacht**

The following are guidelines that will help prevent damage to your yacht as it is being lifted:

- \* Never lift the yacht with a greater than normal accumulation of water in the bilge. All tanks containing fresh water should be empty.
- \* Place lifting slings where indicated by the sling tab labels on the gunwales (See **Thru-hull Locations Layout-Port and Starboard** in the Schematics Section of this Owner's Manual, which illustrates the location of the sling tab locations). Avoid placing slings where they may lift the propeller shaft or other underwater fittings. Padding, placed under the slings at the chine corners, will help to keep pressure to a minimum at this location.
- \* Disconnect the propeller shafts at the transmissions to prevent damage to the transmissions and shafts.
- \* Use wide, flat, lifting slings made of belting and spreader bars long enough to keep pressure off of the gunwales.



**DO NOT use slings made of cable. Pressure caused by the slings on the gunwales can cause severe gelcoat crazing or more serious hull damage. The spreader bar at each lifting sling should be at least as long as the distance across the widest point the sling surrounds.**

\* If a marine railway or platform hoist is being used, locate and adjust the blocking to distribute the weight over several areas. The weight borne by the keel must not be so great as to cause crushing or distortion of the member.

\* When lifting the yacht, keep the bow higher than the stern so the engine and generator (if so equipped) exhaust lines can drain. This will prevent water from flowing forward through the manifold and into the engine itself, where it may become trapped.

 **CAUTION**

**Always keep the bow higher than the stern every time the yacht is lifted. DO NOT lift the stern higher than the bow at any time as this may cause water to enter the engines. Engine failure is possible if water enters the engine cylinders. The water can cause “hydrostatic lock” and bend the piston rods. “Hydrostatic lock” is a situation where the piston cannot travel to its full upward position due to the presence of a liquid above the piston and extreme pressure is forced downward as the piston moves upward. Even a small quantity of water can cause rust or other internal engine damage.**

***NOTE:** Silverton recommends an optional storage cradle with the purchase of your yacht. The cradle is factory made to conform to the bottom of your yacht for safe storage and minimizes the risk of hull distortion.*



# OPERATING YOUR YACHT

Most people who purchase a Silverton yacht have boat handling knowledge and experience with other types of vessels. This section of the Owner's Manual provides basic information concerning the safe operation of your yacht and is a review of the information contained in each of the "Systems Sections". Be certain to read and have a thorough understanding of all systems described in this Owner's Manual **BEFORE** you operate your yacht. Even if you are an experienced yachtsman, you can benefit from reviewing the information contained in this section.

The first cruise on your new Silverton yacht should be a time for you to become acquainted with the vessel. Before you depart on your first cruise, you should be able to answer **YES** to the following questions:

- ✓ Has your Silverton Dealer completed the "Pre-Delivery Service Inspection"?
- ✓ Have you and your Silverton Dealer signed the "Pre-Delivery Service Record"?
- ✓ Have you completed and mailed all warranty registration cards?
- ✓ Have you read and do you have a complete understanding of this Owner's Manual and the O.E.M. Manuals included with your Owner's Packet?
- ✓ Does your yacht's safety equipment comply with all United States Coast Guard and local regulations?
- ✓ Is your safety equipment in operable condition and accessible, if needed?
- ✓ Has your Silverton Dealer reviewed the operation of your yacht and its systems with you?
- ✓ Has your Silverton Dealer answered all of your questions concerning the operation of your yacht and all of its systems?

If you have completed the above preliminary steps, you are ready to take your first cruise. Before you depart, give some thought to the cruise itself. Choose a calm day, if possible, and take only those people who will be members of your regular crew. Leave guests on shore, so that you are able to concentrate on learning as much as possible about your new Silverton yacht without unnecessary distractions.

## Engine Startup Preparation

Make sure that you have read the Fuel Safety Checklist for Safe Boarding prior to your initial or first seasonal engine startup, and then follow the below listed procedures:

- ✓ Be certain all electrical circuit breaker switches are turned OFF.
- ✓ Raise the engine compartment access hatch and use your sense of smell to detect any fuel fumes.

If **ANY** fuel fumes are detected:

- ✓ Evacuate your yacht **IMMEDIATELY**.
- ✓ Notify the Dockmaster.
- ✓ Open all hatches, doors, and windows to provide natural ventilation.
- ✓ Have a qualified marine technician examine your yacht immediately to determine the source of the fuel fumes.
- ✓ If a leak is detected, have it repaired as soon as possible by a competent technician.
- ✓ If you do not detect any fuel fumes, open all hatches, doors, and windows to ventilate your yacht.
- ✓ Visually examine the engines and generator (if so equipped) for any oil leaks. If leaks are noted, have them repaired by a competent technician.
- ✓ Examine the bilge area for water accumulation. Remove excess water and locate the source of the water. Remember, a small quantity of water in your bilge is normal.

Turn ON the following switches:

- ✓ Both battery switches.
- ✓ DC Electrical Panel main breaker switch.
- ✓ Helm electronics breaker switch.
- ✓ Helm accessory breaker switch.

✓ Visually examine the fire extinguisher system in the engine compartment to be certain it has not been discharged.

✓ Check the engine oil level. Refer to the Engine Manual for specific instructions concerning the proper oil level and filling procedure.

✓ Check the transmission fluid level. If the level is low, add fluid, but **DO NOT** overfill. Be certain the fluid level is below the full mark on the dipstick when the transmission is cold. The fluid will expand as it warms and will overflow if the level is too high. Refer to the Transmission Owners Manual.

✓ Check the generator (if so equipped) oil level. Refer to the Generator Manual for specific instructions concerning the proper oil level and filling procedure.

✓ If your yacht is equipped with fresh water cooled engines, remove the pressure cap from the heat exchangers and check that the coolant is filled to the neck of the filler tube. If coolant is low, refer to the Engine Manual for proper filling instructions.

✓ If your yacht is equipped with diesel engines, refer to the Engine Manual for the proper procedure for checking the coolant level and the proper antifreeze/ water ratio.

✓ Open both raw water intake valves. The valves are in the open position when the handle is parallel to the valve body.

✓ Remove raw water strainer cap and check for debris. Remove any debris noted.

✓ If your yacht is equipped with a generator, be certain there is no debris in the water strainer. Remove any debris noted.

✓ Examine the propeller shaft stuffing boxes for excessive water leakage. One drop of water every sixty (60) seconds is normal.

✓ Open the fuel shutoff valves for the engines and generator. The valve is in the open position when the handle is parallel to the valve body.

✓ Check the oil level in the trim tab reservoir and be certain the level is between the FULL and ADD marks.

## Engine Startup

**IMPORTANT:** Always be very careful when starting your engines. Use common sense and good judgment. Turn OFF the engine(s) immediately if you observe any unsafe operating condition.

The below listed procedures should be followed when starting your engines:

✓ Operate the bilge blower motors for five (5) minutes before starting your engines.

✓ Place shift control levers in the neutral position.

✓ Place throttle control levers in the “down” position.

✓ Turn ignition switch to ON, but not to START. Be certain the engine oil pressure alarm sounds and the Automatic Fire Extinguisher System indicator light is ON.

✓ Turn ignition switch to START and hold until the engine starts. Release the ignition switch immediately after the engine starts. If the starter motor does not operate when you turn the ignition switch to START, the neutral safety switch may be out of adjustment. Carefully move the shift control lever up and down slowly until the starter motor operates. Have a competent technician adjust the neutral safety switch as soon as possible.

### CAUTION

If the engine fails to start within thirty (30) seconds, release the ignition switch. Allow the starter motor to cool for at least sixty (60) seconds and then try again to start the engine. Prolonged starting attempts may result in starter motor overheating and damage.

### CAUTION

Failure to release the ignition switch from the START position after the engine starts may result in serious damage to the starter motor and/or engine flywheel.

✓ If one of the batteries is not sufficiently charged to start the engine, start the engine with the fully charged battery first. Start the other engine using the “Parallel Start” switch, which draws power from both batteries. Release the parallel start switch immediately after the engine starts.

## CAUTION

**DO NOT continue to depress the “Parallel Start Switch” after the engine has started. Damage to the alternator(s) may result.**

✓ Be certain the oil pressure is between 30 and 50 psi (gasoline engines) or 35 and 70 psi (diesel engines). If the oil pressure is low, turn OFF the respective engine immediately.

✓ Allow the engines to operate at the recommended RPM's as specified in the Engine Manual until they reach normal operating temperature. Normal operating temperature for gasoline engines equipped with a fresh water cooling system is 170° F and if equipped with a raw water cooling system, 140° F. Normal operating temperature for diesel engines is between 170° F and 190° F.

✓ Check for water discharging from the exhaust outlets. The presence of water indicates water circulation in the exhaust cooling system. Water should discharge through the exhaust outlets immediately after the engine starts.

✓ After engines reach their normal operating temperature, increase the RPM's to 2000. Be certain the voltmeters read between 13 and 14.5 volts.

✓ Visually inspect the exhaust system for leaks. If any leaks are detected, immediately turn OFF the respective engine and contact a competent technician for repair.

✓ Check the transmission fluid level after the engine is warm. The transmission should be in neutral and the engines operating at idle speed. Transmission fluid should be at or slightly below the FULL mark on the dipstick. Add transmission fluid if the level is low, but **DO NOT** overfill. Refer to the Transmission Owners Manual.

## Shakedown Cruise

Silverton recommends a shakedown cruise after the initial or seasonal startup. This will test the engines and various systems under normal operating conditions. Note any condition that does not meet normal operating performance standards. Repair any condition noted as soon as possible.

*IMPORTANT: Before fueling your yacht, be certain you have read and have a thorough understanding of the information contained in the “Fuel System” Section of this Owner's Manual. It contains valuable information and cautions for your safety and the safety of your passengers.*

Check the following for proper operation during your shakedown cruise:

❑ **Air Conditioner(s):** If your yacht is equipped with an air conditioning system, be certain each air conditioner is operating properly.

❑ **Engines:** Be certain both engines are capable of obtaining their maximum RPM range. Check for fuel, oil, and water leaks. Check the exhaust system for leaks.

❑ **Generator:** If your yacht is equipped with a generator, be certain it starts and operates properly. Check for oil, water, and exhaust system leaks.

❑ **Instruments:** Be certain that all instruments operate properly and provide normal readings.

❑ **Steering:** Check that the steering system is responsive.

❑ **Shift and Throttle Controls:** Be certain the shift and throttle controls operate properly and are in the proper adjustment.

❑ **Transmissions:** Check that both transmissions shift smoothly and positively.

❑ **Trim Tabs:** Check that the trim tabs operate properly and are responsive to your use of the controls.

After completing your shakedown cruise, recheck all fluid levels. Check all drive belts for the proper tension. Generally examine all components to be certain they did not loosen during the cruise. Make all adjustments as necessary.

## **WARNING**

**DO NOT** remove the cooling system filler cap when the engine is hot. Allow the engine to cool and then remove the pressure cap slowly, allowing the pressure to vent. Hot coolant, under pressure, may discharge violently and result in serious personal injury and burns.

### **Getting Underway**

After your engines have warmed to normal operating temperature, you are ready to depart your dock/mooring. Check the wind, tide and current to determine the best way to safely maneuver your yacht away from the dock. Cast off all mooring lines.

Shift the transmissions into forward or reverse, depending on which way you want to depart your dock. Your engines should be at idle speed while departing your dock and power should only be used if necessary for control of your yacht.

Once your yacht has departed the dock and is in open water, accelerate to cruising speed (RPM's) as recommended in the Engine Manual.

Be certain to follow all safety precautions as mentioned in the "Boating Safety" Section of this Owner's Manual while operating your yacht.

### **Daily Engine Shutdown**

After you have completed your cruise and secured your yacht to the dock, shut down the engines in the following manner:

- Reduce engine speed to idle.
- Place transmission controls in neutral.
- Allow engines to operate at idle speed for several minutes.
- Turn ignition switches to the OFF position, to shut down the engines.
- Operate the bilge blower motors for several minutes to circulate fresh air through the engine compartment.
- Turn OFF battery switches.

# SIXTEEN WAYS TO REDUCE FUEL CONSUMPTION

1. Keep the bottom of your yacht clean. A fouled bottom can increase drag up to 10% or more. A 10% increase in drag is equivalent to a 10% increase in fuel consumption.

2. **DO NOT** idle your engines needlessly. Depart your dock/mooring after warm-up.

3. Watch your trim. A well balanced yacht gets on plane faster, handles better, and runs with less surface contact.

4. Navigate better. By plotting courses to your destination instead of just waiting for them to appear somewhere in front of you, you can eliminate miles off of your distance and gallons off of your fuel consumption.

5. Know your fuel consumption. By plotting a fuel consumption/RPM curve for your yacht, you will probably find that reducing your engines' RPM's 10% can often reduce your fuel consumption 30% with only a slight reduction in speed.

6. Remove extra weight. If you are not going to use it, do not carry it aboard. Any extra weight requires more fuel to move your yacht. Do not just stop at the lockers. Remember that water weighs 64 pounds per cubic foot, so keep the bilge areas dry.

7. Improve your yacht handling ability. **DO NOT** let the yacht labor along below a planing attitude. This is the absolute peak of fuel waste.

8. Purchase good quality fuel. Be certain you are using the correct fuel for your engine.

9. Load your yacht correctly. **DO NOT** put all of the heavy gear, such as anchors, chain, canned goods and spare parts exclusively in either the bow or stern. Heavy items should be placed amidships where they will not affect the trim and plane of the yacht.

10. Check the drive train. An inboard engine that is improperly aligned can cost you money. Check to see if the transmission has sufficient fluid (too little increases friction), if the stuffing box is too tight (increases the load on the engine) or if a bent rudder

or propeller are robbing you of economy. Be certain the rudders are properly aligned.

11. Check the engine cylinder compression. Low compression indicates worn piston rings or valves which will consume oil and reduce engine power.

12. Check the engine idle speed. For the times it is necessary to operate at idle speed, be certain the engine is not running too fast and using unnecessary fuel.

13. Check the engine operating temperature. Compare your normal operating temperature with the range specified in the Engine Manual and in this Owner's Manual. An overheating engine will cause excessive wear and will be less efficient.

14. Keep the engine and transmission oil clean. Dirty oil causes varnish to form on the moving surfaces of the engine/transmission. Varnish can cut into the piston ring seal and contribute to fuel waste. Varnish will cause the transmission to "slip".

15. Check for engine air leaks. A leak in the engine intake manifold disturbs the air/fuel mixture and reduces your performance. A leak in the exhaust manifold is DANGEROUS. Carbon Monoxide Gas (CO) could enter the cabin area of your yacht.



**Carbon Monoxide Gas (CO) is colorless, odorless and tasteless. It is highly poisonous, endangering lives even at very low levels of concentration. Mild exposure causes headaches and fatigue, often resembling "flu-like" symptoms. Medium exposure causes severe headaches, drowsiness, nausea, and rapid heart rate. Extreme exposure results in unconsciousness, convulsions, cardiorespiratory failure, and death. If Carbon Monoxide Gas (CO) is detected in your yacht, immediately contact a qualified technician to locate and repair the source of the poisonous gas. DO NOT enter your yacht until repairs have been made and the Carbon Monoxide Gas (CO) is lowered to an acceptable level.**

16. Keep hot water use to a minimum. The less hot water you use, the less time your generator will have to run, resulting in lower fuel consumption.

OPERATION-6

<https://www.boat-manuals.com/>

# GLOSSARY

**ABAFT:** Toward the rear of the yacht.

**ABEAM:** At right angles to the yacht's keel.

**ABOARD:** On the yacht.

**ABREAST:** Side by side.

**ADRIFT:** Loose. Not on a mooring or tow line.

**AFT:** Near or at the stern.

**AGROUND:** Stuck fast on the bottom.

**AHEAD:** In a forward motion.

**ALOFT:** Above the deck, usually in the rigging.

**AMIDSHIP:** (1) The area midway between the bow and the stern of the yacht. (2) The area between the Port and Starboard side of the yacht.

**AMPERE:** The standard unit to measure the strength of electrical current.

**ANCHOR:** A shaped metal device that digs into the ground to hold the boat in place.

**ANTIFOULING:** Paint used on the bottom of the vessel to prevent unwanted adhesions.

**ASTERN:** (1) In the rear area of the yacht. (2) Direction of travel when the yacht moves in reverse.

**ATHWARTSHIP:** Movement from Port to Starboard or Starboard to Port.

**BEAM:** (1) The widest distance across the yacht. (2) A transverse structural member that stiffens and supports a portion of the deck.

**BERTH:** A seaman's name for a bed aboard a boat.

**BILGE:** The interior area of the hull below the waterline.

**BILGE PUMP:** A pump used to remove water that has drained into the yacht's bilge.

**BOW:** The forward end of the yacht.

**BOW LINE:** A docking line leading from the yacht's bow.

**BRIDGE:** Control area of a boat.

**BULKHEADS:** The interior walls of the yacht.

**CABIN:** (1) Structure above the main deck. (2) Area below the deck.

**CAST OFF:** Let go.

**CHINE:** The point where the bottom and side of the hull meet.

**CHOCK:** A fitting or hole through a yacht's deck through which a mooring or anchor line is routed.

**CIRCUIT BREAKER:** A device used to interrupt an electrical current when the current flow exceeds a predetermined level.

**CLEAT:** A fitting on a yacht's deck on which a mooring or anchor line is tied.

**COAMING:** Area around the cockpit that prevents water from coming on the boat.

**COCKPIT:** An exposed aft deck area substantially lower than the forward adjacent deck.

**COME-ABOUT:** A change in direction according to the wind.

**COMPANIONWAY:** The steps or ladder leading from the deck to the cabin of the yacht.

**COMPARTMENTS:** Rooms or spaces divided by bulkheads.

**COMPASS:** (1) Navigation device. (2) Drawing tool used to draw arcs or circles.

**CRADLE:** A wooden framework used to support a yacht when it is on land.

**CURRENT:** The movement of water.

**DAVIT:** A device used to hold up a small boat or an anchor.

**DEAD AHEAD, DEAD ASTERN:** Directly in front of the yacht.

**DINGHY:** A small open boat used for ship to shore transportation.

**DISPLACEMENT:** The weight of the water displaced by the yacht's hull.

**DRAFT:** (1) The depth of a yacht from the actual waterline to the bottom of the lowest part, such as the propeller tip or rudder. (2) The depth of water necessary to float a yacht.

**DRIFT:** Causes the vessel to move with the current of the water.

**EVEN KEEL:** To be floating evenly without listing to either side.

**EXHAUST SYSTEM:** The means by which the hot engine or generator gases are removed from the engine and released into the atmosphere.

**FATHOM:** A nautical linear measurement equal to six (6) feet.

**FENDER:** A rubber or plastic device used to absorb impact between vessels or a vessel and a dock.

**FLARE:** (1) Outward curve of the hull as it rises up the side from the waterline. (2) A pyrotechnic device used for emergency signaling.

**FLOTSAM:** Refuse that floats when discharged overboard. See "Jetsam".

**FLYING BRIDGE:** The uppermost steering station from which a yacht is controlled.

**FORE-AND-AFT:** A line, or anything else, that runs parallel to the longitudinal center of the yacht.

**FOREDECK:** The forward most part of the main deck of a vessel.

**FORWARD:** Toward the bow of the yacht.

**FREEBOARD:** The vertical distance from the waterline to the sheerline (rubrail).

**GALLEY:** The kitchen area of the yacht.

**GASKET:** A strip of sealing material used to make joints fluid tight.

**GARBOARD:** (1) The strake (plank) next to the keel. (2) The continuous band of planking on a ship's hull next to its keel.

**GARBOARD DRAIN:** A drain located at the keel leading out from the bilge area.

**GELCOAT:** The thin outer layer of pigmented plastic-like substance used to cover exposed fiberglass components.

**GIVE-WAY VESSEL:** The boat that does not have the right of way when two boats are crossing paths.

**GLAND:** The moveable part of the stuffing box which compresses the packing when tightened (also referred to as the "packing gland").

**GRAB RAIL:** Grip on the top of a cabin or on the sides of a companion ladder.

**GROUND:** (Electrical) The electrical potential of the earth's surface, which is zero.

**GUNWALE:** The horizontal surface of the deck immediately above where it meets the hull.

**HATCHES:** Covers the openings in a deck or floor.

**HATCHWAY:** Access port through the deck.

**HARDTOP:** A permanent cover over the cabin or cockpit.

**HAWSER:** A heavy rope used for mooring or towing.

**HEAD:** A toilet or bathroom.

**HEADING:** The direction that a vessel is traveling with reference to true, magnetic, or compass north.

**HEADWAY:** The forward motion of a vessel through the water.

**HEEL:** To tip or tilt to one side by means of an external force.

**HELM:** Steering gear for a boat.

**HELMSMAN:** The person steering the yacht.

**HULL:** The main body of the yacht.

**INBOARD:** (1) From either the Port or Starboard side to the centerline of the yacht. (2) The dock side of a moored yacht.

**JETSAM:** Refuse that sinks when discharged overboard. See "Flotsam".



**KEEL:** The centerline of a yacht running fore and aft at the lowest point of the hull.

**KNOT:** (1) A Maritime unit of speed equal to 1.15 miles per hour. (2) A term for hitches and bends in a line of rope.

**LAZARETTE:** Storage compartments below the deck at the stern of the yacht.

**LIST:** A vessel that inclines to Port or Starboard by its own means.

**LOCKER:** A seaman's term for a closet.

**LONGITUDINAL:** Lengthwise.

**MIDSHIPS:** Area in the center of a boat.

**MOORING:** An arrangement for securing a yacht to a mooring buoy or pier.

**NAUTICAL MILE:** An international standard for a mile that measures 6076.12 ft.

**NAVIGATIONAL LIGHTS:** A set of red, green and white lights which indicate the presence of a vessel and must be illuminated between the hours of dusk and dawn and during times of restricted visibility (fog, rain, snow, etc.).

**OVERHEAD:** The ceiling or roof of a yacht.

**OUTBOARD:** (1) From the centerline of a yacht to the Port and Starboard sides. (2) The seaward side of a moored yacht.

**PASSAGEWAY:** A corridor or hallway aboard ship.

**PERSONAL FLOTATION DEVICE (PFD):** Life preserver or life vest.

**PIER:** A loading platform that extends at an angle from the shore.

**PILING:** Support or protection for wharfs, piers, etc.

**PITCH:** (1) The vertical motion of a yacht in a seaway about the athwartship axis. (2) The axial advance in inches of a propeller during one complete revolution.

**PLANING HULL:** At slow speeds, a planing hull will displace water in the same manner as a displacement hull. As speed increases, the hull provides a lifting effect up onto the surface of the water.

**PORT:** (1) Looking forward, the left side of a yacht from bow to stern. (2) A harbor.

**PORT BEAM:** The left center of a yacht.

**PORT BOW:** Looking forward, the front, left side of the bow.

**PORT QUARTER:** Looking forward, the left rear section of a yacht.

**PULPIT:** Rails at the bow of a boat.

**QUARTER:** The sides of a yacht aft of amidships.

**QUARTERING SEA:** Sea (waves) coming from a yacht's quarter.

**RADAR:** An electronic system that uses high frequency radio waves.

**RADIO BEARING:** The direction that is determined by the radio.

**RAIL:** The bars that are found at the edge of a boat to prevent passengers from falling overboard.

**RIGGING:** Equipment used to support and control the spars and sails.

**RODE:** The anchor line or chain.

**RUNNING LIGHTS:** Refer to "Navigational Lights".

**RUBRAIL, STRAKE, OR GUARD:** A protective strip located along the hull.

**RUDDER:** A vertical plate used to steer the yacht.

**SALON:** The main social cabin of a yacht.

**SCOPE:** A ratio used to measure the distance from the bow of the boat to the bottom of the water; according to how much of the anchor was dropped.

**SCREW:** A propeller.

**SCUPPER:** A drain from the edge of the deck or cockpit that discharges overboard.

**SEACOCK:** A positive action shut-off valve connected directly to the hull seawater intake valve.

**SHAFT:** The long round member that connects the transmission to the propeller.

**SHAFT LOG:** A fitting at the hull bottom where the propeller shaft penetrates the hull. The shaft log permits rotation of the shaft while simultaneously preventing water from entering the hull.

**SHEER:** The top of the hull from bow to stern. The point in which the hull meets the deck.

**SHEER STRAKE:** The upper edge of the hull immediately below the deck.

**SHEERLINE:** (1) The curve of the boat when being viewed from the side. (2) A turn off course due to poor helmsmanship or trouble steering.

**SOLE:** Term used to refer to the cockpit floor or floor of the cabin.

**SPRING LINE:** A pivot line used in docking or to prevent the yacht from moving forward or astern while made fast to a dock.

**STANCHION:** The metal posts that help hold up the rails on a boat.

**STARBOARD:** Looking forward, the right side of a yacht from bow to stern.

**STARBOARD BOW:** Looking forward, the front, right side of the bow.

**STARBOARD QUARTER:** Looking forward, the right rear section of a yacht.

**STATEROOM:** A bedroom for guest or the captain.

**STEM:** The leading edge of a yacht's hull.

**STERN:** The rear of a yacht.

**STRINGER:** A fore and aft continuous member located in the bottom of the hull used to provide longitudinal strength.

**STRUT:** A propeller shaft support that is below the hull. The main strut is a large strut that is mounted immediately forward of the propeller. An intermediate strut is smaller than the main strut and is mounted between the main strut and the shaft log.

**SUMP:** A pit or well into which water is drained.

**SUPERSTRUCTURE:** A flying bridge or other structure that extends above the deck.

**SWELL:** Long, large wave that does not break.

**SWIM PLATFORM:** Low platform, used for boarding, found at the back of the boat.

**TOPSIDE:** To go to the uppermost deck.

**TRANSOM:** The stern cross section of a yacht.

**UNDERWAY:** A vessel that is not moored, docked, at anchor or aground.

**V-BERTH:** Small galley consisting of a folding table, tabletop stove, and a basin.

**V-BOTTOM:** A hull with the bottom section that is in the shape of a "V".

**V-DRIVE:** A drive system that has the output of the engine facing forward and is coupled to a transmission, which then changes the output aft.

**VESSEL:** A boat, ship, yacht, or another craft used to travel on water.

**WAKE:** The movement of waves caused by the boat's hull.

**WATERLINE:** The line of water on the hull when the boat is afloat and at rest.

**WEATHER DECK:** A deck with no overhead protection.

**WHARF:** A landing place or pier where ships may tie up and load or unload

**WINCH:** A mechanism used to increase the pull on sheet lines.



**WINDLASS:** A device used to raise and lower an anchor.

**YAW:** To go off course.

**YACHT:** A vessel used for pleasure instead of work.

# Warning Labels


The following Warning Labels appear at various locations on your yacht and are self-explanatory. Be certain to familiarize yourself and your passengers with these Warning Labels and their contents.

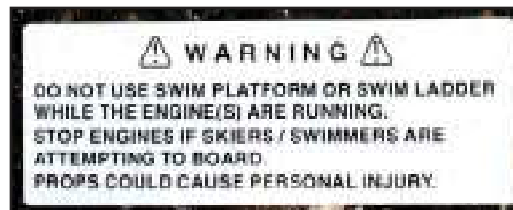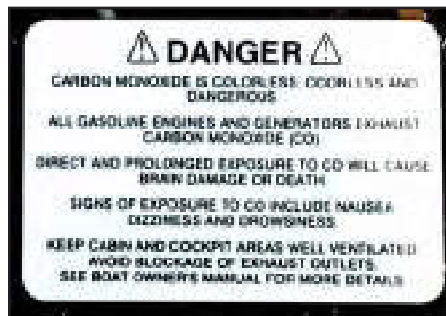



# Identification Labels

The following labels identify the location or operating procedure of certain items on your yacht that are designed to assist you and increase your yachting pleasure.

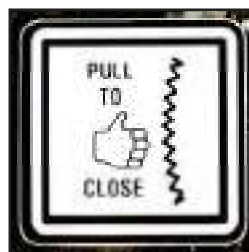









## MAINTENANCE SCHEDULE

GASOLINE ENGINE MAINTENANCE SCHEDULE					
ITEM	DAILY	25 Hr.	50 Hr.	100 Hr.	YEARLY
Check oil levels					
Check fuel sytem for leaks					
Check cooling system for leaks					
Check exhaust system for leaks					
Check for loose or damaged parts					
Change engine oil					
Replace oil filter					
Clean flame arrestor					
Check electrical connections					
Check belt drive tension					
Tighten engine mounts					
Check engine alignment & tighten bolt					
Check condition of zinc anodes					
Check fuel canister for corrosion					
Check condition of spark plugs-NOTE 1					

DIESEL ENGINE MAINTENANCE SCHEDULE					
ITEM	DAILY	75 Hr.	250 Hr.	YEARLY	2 YRS.
Check exhaust system for leaks					
Check for loose or damaged parts					
Check fuel sytem lines for leaks					
Drain water and sediment from primary fuel filter					
Tighten engine mounts					
Check engine alignment & tighten bolt					
Clean or replace air cleaner elements-NOTE 2					
Check oil levels					
Check oil and filters-NOTE 3					
Check cooling system for leaks					
Check zinc anodes					
Clean seawater strainer and inspect and lubricate impeller-NOTE 4					

TRANSMISSION MAINTENANCE SCHEDULE					
ITEM	DAILY	25 Hr.	50 Hr.	100 Hr.	YEARLY
Check Transmission fluid level					
Change Transmission fluid					

PROPELLER MAINTENANCE SCHEDULE					
ITEM	DAILY	25 Hr.	50 Hr.	100 Hr.	YEARLY
Check propeller for dents or gouges-NOTE 5					

MISCELLANEOUS MAINTENANCE SCHEDULE					
ITEM	DAILY	25 Hr.	50 Hr.	100 Hr.	YEARLY
Halon fire extinguishers-NOTE 6					
Check Battery electrolyte level					
Check raw water strainers (generators, engines, AC units)					
Check pumps (bilge & shower sump) for automatic operation					

NOTE 1 - Replace spark plugs yearly  
 NOTE 2 - More often if necessary  
 NOTE 3 - Or once a year

NOTE 4 - More frequently if operated in shallow water  
 NOTE 5 - Retrue if necessary  
 NOTE 6 - Remove and weight every six months



# BOAT RECORD

The Boat Record is provided to record information about the yacht and its components. This record should be filled out by the selling Dealer at the time of delivery.

Owner's Name \_\_\_\_\_ Phone (\_\_\_\_) \_\_\_\_\_

Address \_\_\_\_\_

Dealer \_\_\_\_\_ Phone (\_\_\_\_) \_\_\_\_\_

Address \_\_\_\_\_

Boat Name \_\_\_\_\_ Hull Number\* US STNE \_\_\_\_\_

Delivery Date \_\_\_\_/\_\_\_\_/\_\_\_\_ Registration Number \_\_\_\_\_

Length \_\_\_\_\_ Beam \_\_\_\_\_ Draft \_\_\_\_\_

Approximate Displacement \_\_\_\_\_ lbs.

Approximate Height Above Waterline \_\_\_\_\_

## DOCKSIDE INFORMATION

Fuel Capacity \_\_\_\_\_ Fuel Type \_\_\_\_\_ Fuel Filter \_\_\_\_\_

Engine Oil Type \_\_\_\_\_ Oil Filter \_\_\_\_\_

Generator Oil Type \_\_\_\_\_ Oil Filter \_\_\_\_\_

Transmission Oil Type \_\_\_\_\_ Oil Filter \_\_\_\_\_

## ENGINE AND TRANSMISSION

Engine Manufacturer \_\_\_\_\_ Model \_\_\_\_\_

Engine Serial Number: Port \_\_\_\_\_ Stbd. \_\_\_\_\_

Transmission Manufacturer \_\_\_\_\_ Model \_\_\_\_\_

Transmission Serial Number: Port \_\_\_\_\_ Stbd. \_\_\_\_\_

## GENERATOR

Manufacturer \_\_\_\_\_ Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

## PROPELLER AND SHAFTS

Propeller Manufacturer \_\_\_\_\_ Model \_\_\_\_\_

No. Blades \_\_\_\_\_ Bore \_\_\_\_\_ Diameter \_\_\_\_\_ Pitch \_\_\_\_\_ Cupped \_\_\_\_\_

Shaft Length \_\_\_\_\_ Diameter \_\_\_\_\_

## BATTERIES

Battery Manufacturer \_\_\_\_\_ Model \_\_\_\_\_

Rating: Engine \_\_\_\_\_ Generator \_\_\_\_\_

\* The Hull Identification Number is located on the outside of the transom, on the starboard side, upper corner.

**Note:** The following is provided for your use in recording electronic equipment which you may add to your yacht. All equipment should be recorded so that the information is available in case of repair or for any insurance claim.

## Electronic Equipment

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

Item: \_\_\_\_\_

Manufacturer \_\_\_\_\_ Model no. \_\_\_\_\_ Serial no. \_\_\_\_\_

<b>DEPARTMENT OF TRANSPORTATION</b> <b>U.S. COAST GUARD CG-3885 (Rev. 9/95)</b>	<b>BOATING ACCIDENT REPORT</b>	FORM APPROVED OMB NO. 2115-0010
STATE ASSIGNED CASE NO. _____		

THE OPERATOR/OWNER OF A VESSEL USED FOR RECREATIONAL PURPOSES IS REQUIRED TO FILE A REPORT IN WRITING WHENEVER AN ACCIDENT RESULTS IN: LOSS OF LIFE OR DISAPPEARANCE FROM A VESSEL; AN INJURY WHICH REQUIRES MEDICAL TREATMENT BEYOND FIRST AID; OR PROPERTY DAMAGE IN EXCESS OF \$2000 OR COMPLETE LOSS OF THE VESSEL. REPORTS IN DEATH AND INJURY CASES MUST BE SUBMITTED WITHIN 48 HOURS. REPORTS IN OTHER CASES MUST BE SUBMITTED WITHIN 10 DAYS. REPORTS MUST BE SUBMITTED TO THE REPORTING AUTHORITY IN THE STATE WHERE THE ACCIDENT OCCURRED. THIS FORM IS PROVIDED TO ASSIST THE OPERATOR IN FILING THE REQUIRED WRITTEN REPORT.

COMPLETE ALL BLOCKS (INDICATE THOSE NOT APPLICABLE BY "NA")

**ACCIDENT DATA**

DATE OF ACCIDENT	TIME	AM PM	NAME OF BODY OF WATER	LOCATION (GIVE LOCATION PRECISELY)
NUMBER OF VESSELS INVOLVED	NEAREST CITY OR TOWN		COUNTY	STATE
WEATHER (CHECK ALL APPLICABLE)		WATER CONDITIONS		TEMPERATURE (ESTIMATE)
<input type="checkbox"/> CLEAR <input type="checkbox"/> RAIN <input type="checkbox"/> CLOUDY <input type="checkbox"/> SNOW <input type="checkbox"/> FOG <input type="checkbox"/> HAZY		<input type="checkbox"/> CALM (WAVES LESS THAN 6") <input type="checkbox"/> CHOPPY (WAVES 6" TO 2') <input type="checkbox"/> ROUGH (WAVES 2' TO 6") <input type="checkbox"/> VERY ROUGH (GREATER THAN 6") <input type="checkbox"/> STRONG CURRENT		<input type="checkbox"/> NONE <input type="checkbox"/> LIGHT (0-6 MPH) <input type="checkbox"/> MODERATE (7-14 MPH) <input type="checkbox"/> STRONG (15-25 MPH) <input type="checkbox"/> STORM (OVER 25 MPH)
		AIR _____ °F		WIND
		WATER _____ °F		<input type="checkbox"/> DAY <input type="checkbox"/> NIGHT <input type="checkbox"/> GOOD <input type="checkbox"/> <input type="checkbox"/> FAIR <input type="checkbox"/> <input type="checkbox"/> POOR <input type="checkbox"/>
NAME OF OPERATOR			OPERATOR ADDRESS	
OPERATOR TELEPHONE NUMBER (    )	DATE OF BIRTH MO   DAY   YR		OPERATOR'S EXPERIENCE	INSTRUCTION IN BOATING SAFETY
<input type="checkbox"/> MALE <input type="checkbox"/> FEMALE			<input type="checkbox"/> NONE <input type="checkbox"/> UNDER 100 HOURS <input type="checkbox"/> > 100 HOURS	<input type="checkbox"/> STATE COURSE <input type="checkbox"/> U.S. POWER SQUADRON <input type="checkbox"/> USCG AUXILIARY <input type="checkbox"/> AMERICAN RED CROSS <input type="checkbox"/> NONE
NAME OF OWNER			OWNER ADDRESS	
OWNER TELEPHONE NUMBER (    )	NUMBER OF PEOPLE ON BOARD	NUMBER OF PEOPLE BEING TOWED	RENTED BOAT? <input type="checkbox"/> YES <input type="checkbox"/> NO	

**BOAT NO. 1 (THIS VESSEL)**

BOAT REGISTRATION OR DOCUMENTATION NUMBER	STATE	HULL IDENTIFICATION NUMBER	BOAT NAME
BOAT MANUFACTURER		LENGTH	MODEL
YEAR BUILT			
TYPE OF BOAT		HULL MATERIAL	ENGINE
<input type="checkbox"/> OPEN MOTORBOAT <input type="checkbox"/> CABIN MOTORBOAT <input type="checkbox"/> AUXILIARY SAIL <input type="checkbox"/> SAIL (ONLY) <input type="checkbox"/> ROWBOAT <input type="checkbox"/> CANOE/KAYAK <input type="checkbox"/> PERSONAL WATERCRAFT <input type="checkbox"/> PONTOON BOAT <input type="checkbox"/> HOUSEBOAT <input type="checkbox"/> OTHER (SPECIFY)		<input type="checkbox"/> WOOD <input type="checkbox"/> ALUMINUM <input type="checkbox"/> STEEL <input type="checkbox"/> FIBERGLASS <input type="checkbox"/> RUBBER/VINYL/CANVAS <input type="checkbox"/> RIGID HULL INFLATABLE <input type="checkbox"/> OTHER (SPECIFY)	<input type="checkbox"/> OUTBOARD <input type="checkbox"/> INBOARD <input type="checkbox"/> INBOARD- STERNDRIVE (JO) <input type="checkbox"/> AIRBOAT
		PROPULSION	PERSONAL FLOTATION DEVICES (PFDs)
		<input type="checkbox"/> PROPELLER <input type="checkbox"/> WATER JET <input type="checkbox"/> AIR THRUST <input type="checkbox"/> MANUAL <input type="checkbox"/> SAIL	WAS BOAT ADEQUATELY EQUIPPED WITH COAST GUARD APPROVED PFDs? <input type="checkbox"/> YES <input type="checkbox"/> NO WERE PFDs ACCESSIBLE? <input type="checkbox"/> YES <input type="checkbox"/> NO
		FUEL	NUMBER OF ENGINES
		<input type="checkbox"/> GASOLINE <input type="checkbox"/> DIESEL <input type="checkbox"/> ELECTRIC	TOTAL HORSEPOWER
		FIRE EXTINGUISHERS ON BOARD? <input type="checkbox"/> YES <input type="checkbox"/> NO USED? <input type="checkbox"/> YES <input type="checkbox"/> NO	
		WHAT CONTRIBUTED TO ACCIDENT? (CHECK ALL APPLICABLE)	

OPERATION AT TIME OF ACCIDENT (CHECK ALL APPLICABLE)	ACTIVITY AT TIME OF ACCIDENT (CHECK ANY IF APPLICABLE)	TYPE OF ACCIDENT	<input type="checkbox"/> WEATHER <input type="checkbox"/> EXCESSIVE SPEED <input type="checkbox"/> IMPROPER LOOKOUT <input type="checkbox"/> RESTRICTED VISION <input type="checkbox"/> OVERLOADING <input type="checkbox"/> IMPROPER LOADING <input type="checkbox"/> HAZARDOUS WATERS <input type="checkbox"/> ALCOHOL USE <input type="checkbox"/> DRUG USE <input type="checkbox"/> HULL FAILURE <input type="checkbox"/> MACHINERY FAILURE <input type="checkbox"/> EQUIPMENT FAILURE <input type="checkbox"/> OPERATOR INEXPERIENCE <input type="checkbox"/> OPERATOR INATTENTION <input type="checkbox"/> CONGESTED WATERS <input type="checkbox"/> PASSENGER/SKIER BEHAVIOR <input type="checkbox"/> DAMLOCK <input type="checkbox"/> OTHER (SPECIFY)
<input type="checkbox"/> CRUISING <input type="checkbox"/> CHANGING DIRECTION <input type="checkbox"/> CHANGING SPEED <input type="checkbox"/> DRIFTING <input type="checkbox"/> TOWING <input type="checkbox"/> BEING TOWED <input type="checkbox"/> ROWING/PADDLING <input type="checkbox"/> SAILING <input type="checkbox"/> LAUNCHING <input type="checkbox"/> DOCKING/UNDOCKING <input type="checkbox"/> AT ANCHOR <input type="checkbox"/> TIED TO DOCK/MOORED <input type="checkbox"/> OTHER (SPECIFY)	<input type="checkbox"/> FISHING <input type="checkbox"/> TOURNAMENT <input type="checkbox"/> HUNTING <input type="checkbox"/> SWIMMING/DIVING <input type="checkbox"/> MAKING REPAIRS <input type="checkbox"/> WATERSKING/TUBING/ETC. <input type="checkbox"/> RACING <input type="checkbox"/> WHITEWATER SPORTS <input type="checkbox"/> FUELING <input type="checkbox"/> STARTING ENGINE <input type="checkbox"/> NON-RECREATIONAL <input type="checkbox"/> OTHER (SPECIFY)	<input type="checkbox"/> GROUNDING <input type="checkbox"/> CAPSIZING <input type="checkbox"/> FLOODING/SWAMPING <input type="checkbox"/> SINKING <input type="checkbox"/> FIRE OR EXPLOSION (FUEL) <input type="checkbox"/> FIRE OR EXPLOSION (OTHER) <input type="checkbox"/> SKIER MISHAP <input type="checkbox"/> COLLISION WITH VESSEL <input type="checkbox"/> COLLISION WITH FIXED OBJECT <input type="checkbox"/> COLLISION WITH FLOATING OBJ. <input type="checkbox"/> FALLS OVERBOARD <input type="checkbox"/> FALLS IN BOAT <input type="checkbox"/> STRUCK BY BOAT <input type="checkbox"/> STRUCK BY MOTOR/PROPELLER <input type="checkbox"/> STRUCK SUBMERGED OBJECT <input type="checkbox"/> OTHER (SPECIFY)	<input type="checkbox"/> HIT AND RUN
ESTIMATED SPEED			
<input type="checkbox"/> NONE <input type="checkbox"/> UNDER 10 MPH <input type="checkbox"/> 10 - 20 MPH <input type="checkbox"/> 21 - 40 MPH <input type="checkbox"/> OVER 40 MPH			

DECEASED (IF MORE THAN 2 FATALITIES, ATTACH ADDITIONAL FORMS)			
NAME OF VICTIM		ADDRESS OF VICTIM	
DATE OF BIRTH		DEATH CAUSED BY	DISAPPEARANCE
[ ] MALE [ ] FEMALE		[ ] DROWNING [ ] OTHER	[ ] DISAPPEARANCE
NAME OF VICTIM		ADDRESS OF VICTIM	
DATE OF BIRTH		DEATH CAUSED BY	DISAPPEARANCE
[ ] MALE [ ] FEMALE		[ ] DROWNING [ ] OTHER	[ ] DISAPPEARANCE
INJURED (IF MORE THAN 2 INJURIES, ATTACH ADDITIONAL FORMS)			
NAME OF VICTIM		ADDRESS OF VICTIM	
DATE OF BIRTH		MEDICAL TREATMENT BEYOND FIRST AID?	DESCRIBE INJURY
[ ] MALE [ ] FEMALE		[ ] YES [ ] NO	[ ] YES [ ] NO
WAS PFD WORN?		PRIOR TO ACCIDENT?	AS A RESULT OF ACCIDENT?
[ ] YES [ ] NO		[ ] YES [ ] NO	[ ] YES [ ] NO
WAS IT INFLATABLE?			
[ ] YES [ ] NO			
NAME OF VICTIM		ADDRESS OF VICTIM	
DATE OF BIRTH		MEDICAL TREATMENT BEYOND FIRST AID?	DESCRIBE INJURY
[ ] MALE [ ] FEMALE		[ ] YES [ ] NO	[ ] YES [ ] NO
WAS PFD WORN?		PRIOR TO ACCIDENT?	AS A RESULT OF ACCIDENT?
[ ] YES [ ] NO		[ ] YES [ ] NO	[ ] YES [ ] NO
WAS IT INFLATABLE?			
[ ] YES [ ] NO			
OTHER PEOPLE ABOARD THIS BOAT (IF MORE THAN 2 PEOPLE, ATTACH ADDITIONAL FORMS)			
NAME		ADDRESS	
DATE OF BIRTH		WAS PFD WORN?	PRIOR TO ACCIDENT?
[ ] MALE [ ] FEMALE		[ ] YES [ ] NO	[ ] YES [ ] NO
AS A RESULT OF ACCIDENT:		WAS IT INFLATABLE?	
[ ] YES [ ] NO		[ ] YES [ ] NO	
NAME		ADDRESS	
DATE OF BIRTH		WAS PFD WORN?	PRIOR TO ACCIDENT?
[ ] MALE [ ] FEMALE		[ ] YES [ ] NO	[ ] YES [ ] NO
AS A RESULT OF ACCIDENT:		WAS IT INFLATABLE?	
[ ] YES [ ] NO		[ ] YES [ ] NO	
BOAT NO. 2 (IF MORE THAN 2 VESSELS, ATTACH ADDITIONAL IDENTIFYING INFORMATION)			
NAME OF OPERATOR		OPERATOR ADDRESS	
OPERATOR TELEPHONE NUMBER ( )		BOAT REGISTRATION OR DOCUMENTATION NUMBER	STATE
NAME OF OWNER		OWNER ADDRESS	
OWNER TELEPHONE NUMBER ( )			
PROPERTY DAMAGE			
ESTIMATED AMOUNT:	THIS BOAT AND CONTENTS:	OTHER BOAT(S) AND CONTENTS:	OTHER PROPERTY:
	\$	\$	\$
DESCRIBE PROPERTY DAMAGED			
WITNESSES NOT ON THIS VESSEL			
NAME	ADDRESS	TELEPHONE NUMBER ( )	
NAME	ADDRESS	TELEPHONE NUMBER ( )	
PERSON COMPLETING REPORT			
NAME	ADDRESS	TELEPHONE NUMBER ( )	
SIGNATURE	QUALIFICATION	DATE SUBMITTED	
	[ ] OPERATOR [ ] OWNER		
	[ ] INVESTIGATOR [ ] OTHER		
FOR AGENCY USE ONLY			
CAUSES BASED ON (CHECK ONE) [ ] THIS REPORT [ ] INVESTIGATION [ ] INVESTIGATION AND THIS REPORT [ ] OTHER			
NAME OF REVIEWING OFFICE	DATE RECEIVED	RECREATIONAL [ ] COMMERCIAL [ ]	NON-REPORTABLE [ ]
PRIMARY CAUSE	SECONDARY CAUSE		

ACCIDENT DESCRIPTION

DESCRIBE WHAT HAPPENED (SEQUENCE OF EVENTS, INCLUDE FAILURE OF EQUIPMENT, INCLUDE A DIAGRAM IF NEEDED, CONTINUE ON ADDITIONAL SHEETS IF NECESSARY, INCLUDE ANY INFORMATION REGARDING THE INVOLVEMENT OF ALCOHOL AND/OR DRUGS IN CAUSING OR CONTRIBUTING TO THE ACCIDENT, INCLUDE ANY DESCRIPTIVE INFORMATION ABOUT THE USE OF PFD'S.)

An agency may not conduct or sponsor and a person is not required to respond to an information collection, unless it displays a currently valid OMB Control Number. The Coast Guard estimates that the average burden for this report form is 30 minutes. You may submit any comments concerning the accuracy of this burden estimate or any suggestions for reducing the burden to: Commandant (G-CPB-1), U.S. Coast Guard, Washington, DC 20593-0001 or Office of Management and Budget, Paperwork Reduction Project (2115-0010), Washington, DC 20503.

Call the Coast Guard Infoline 1-800-368-5947 for information on **Federal Requirements for Recreational Boats**





## Float Plan

Complete this form before going boating and leave it with a reliable person who can be depended upon to notify the Coast Guard or other rescue organization, should you not return as scheduled.

Do not file this plan with the Coast Guard.

### 1. Person Report Overdue

Name   Phone   
Address

### 2. Description of Boat

Registration/ Documentation No.   
Length  Make  Type   
Hull Color  Trim Color   
Fuel Capacity  Engine Type  No. of Engines   
Distinguishing Features

### 3. Operator of Boat

Name  Age   
Health  Phone   
Address   
  
Operator's Experience

### 4. Survival Equipment (Check as Appropriate)

#  PFDs  Flares  Mirrors  
 Smoke Signals  Flashlights  Food  
 Paddles  Water  Anchor  
 Raft or Dinghy  EPIRB  
 Other

### 5. Marine Radio

Yes  No  
Type  Freqs.

**6. Trip Expectations**

Depart from

Departure Date  Time

Going to

Arrival Date  Time

If operator has not arrived/returned by: Date  Time

call the Coast Guard or Local authority at the following number:

**8. Persons on Board**

Name	Age	Phone	Medical Conditions
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>


**7. Vehicle Description**

License No.  Make

Model  Color


Where is vehicle parked?

**9. Remarks**

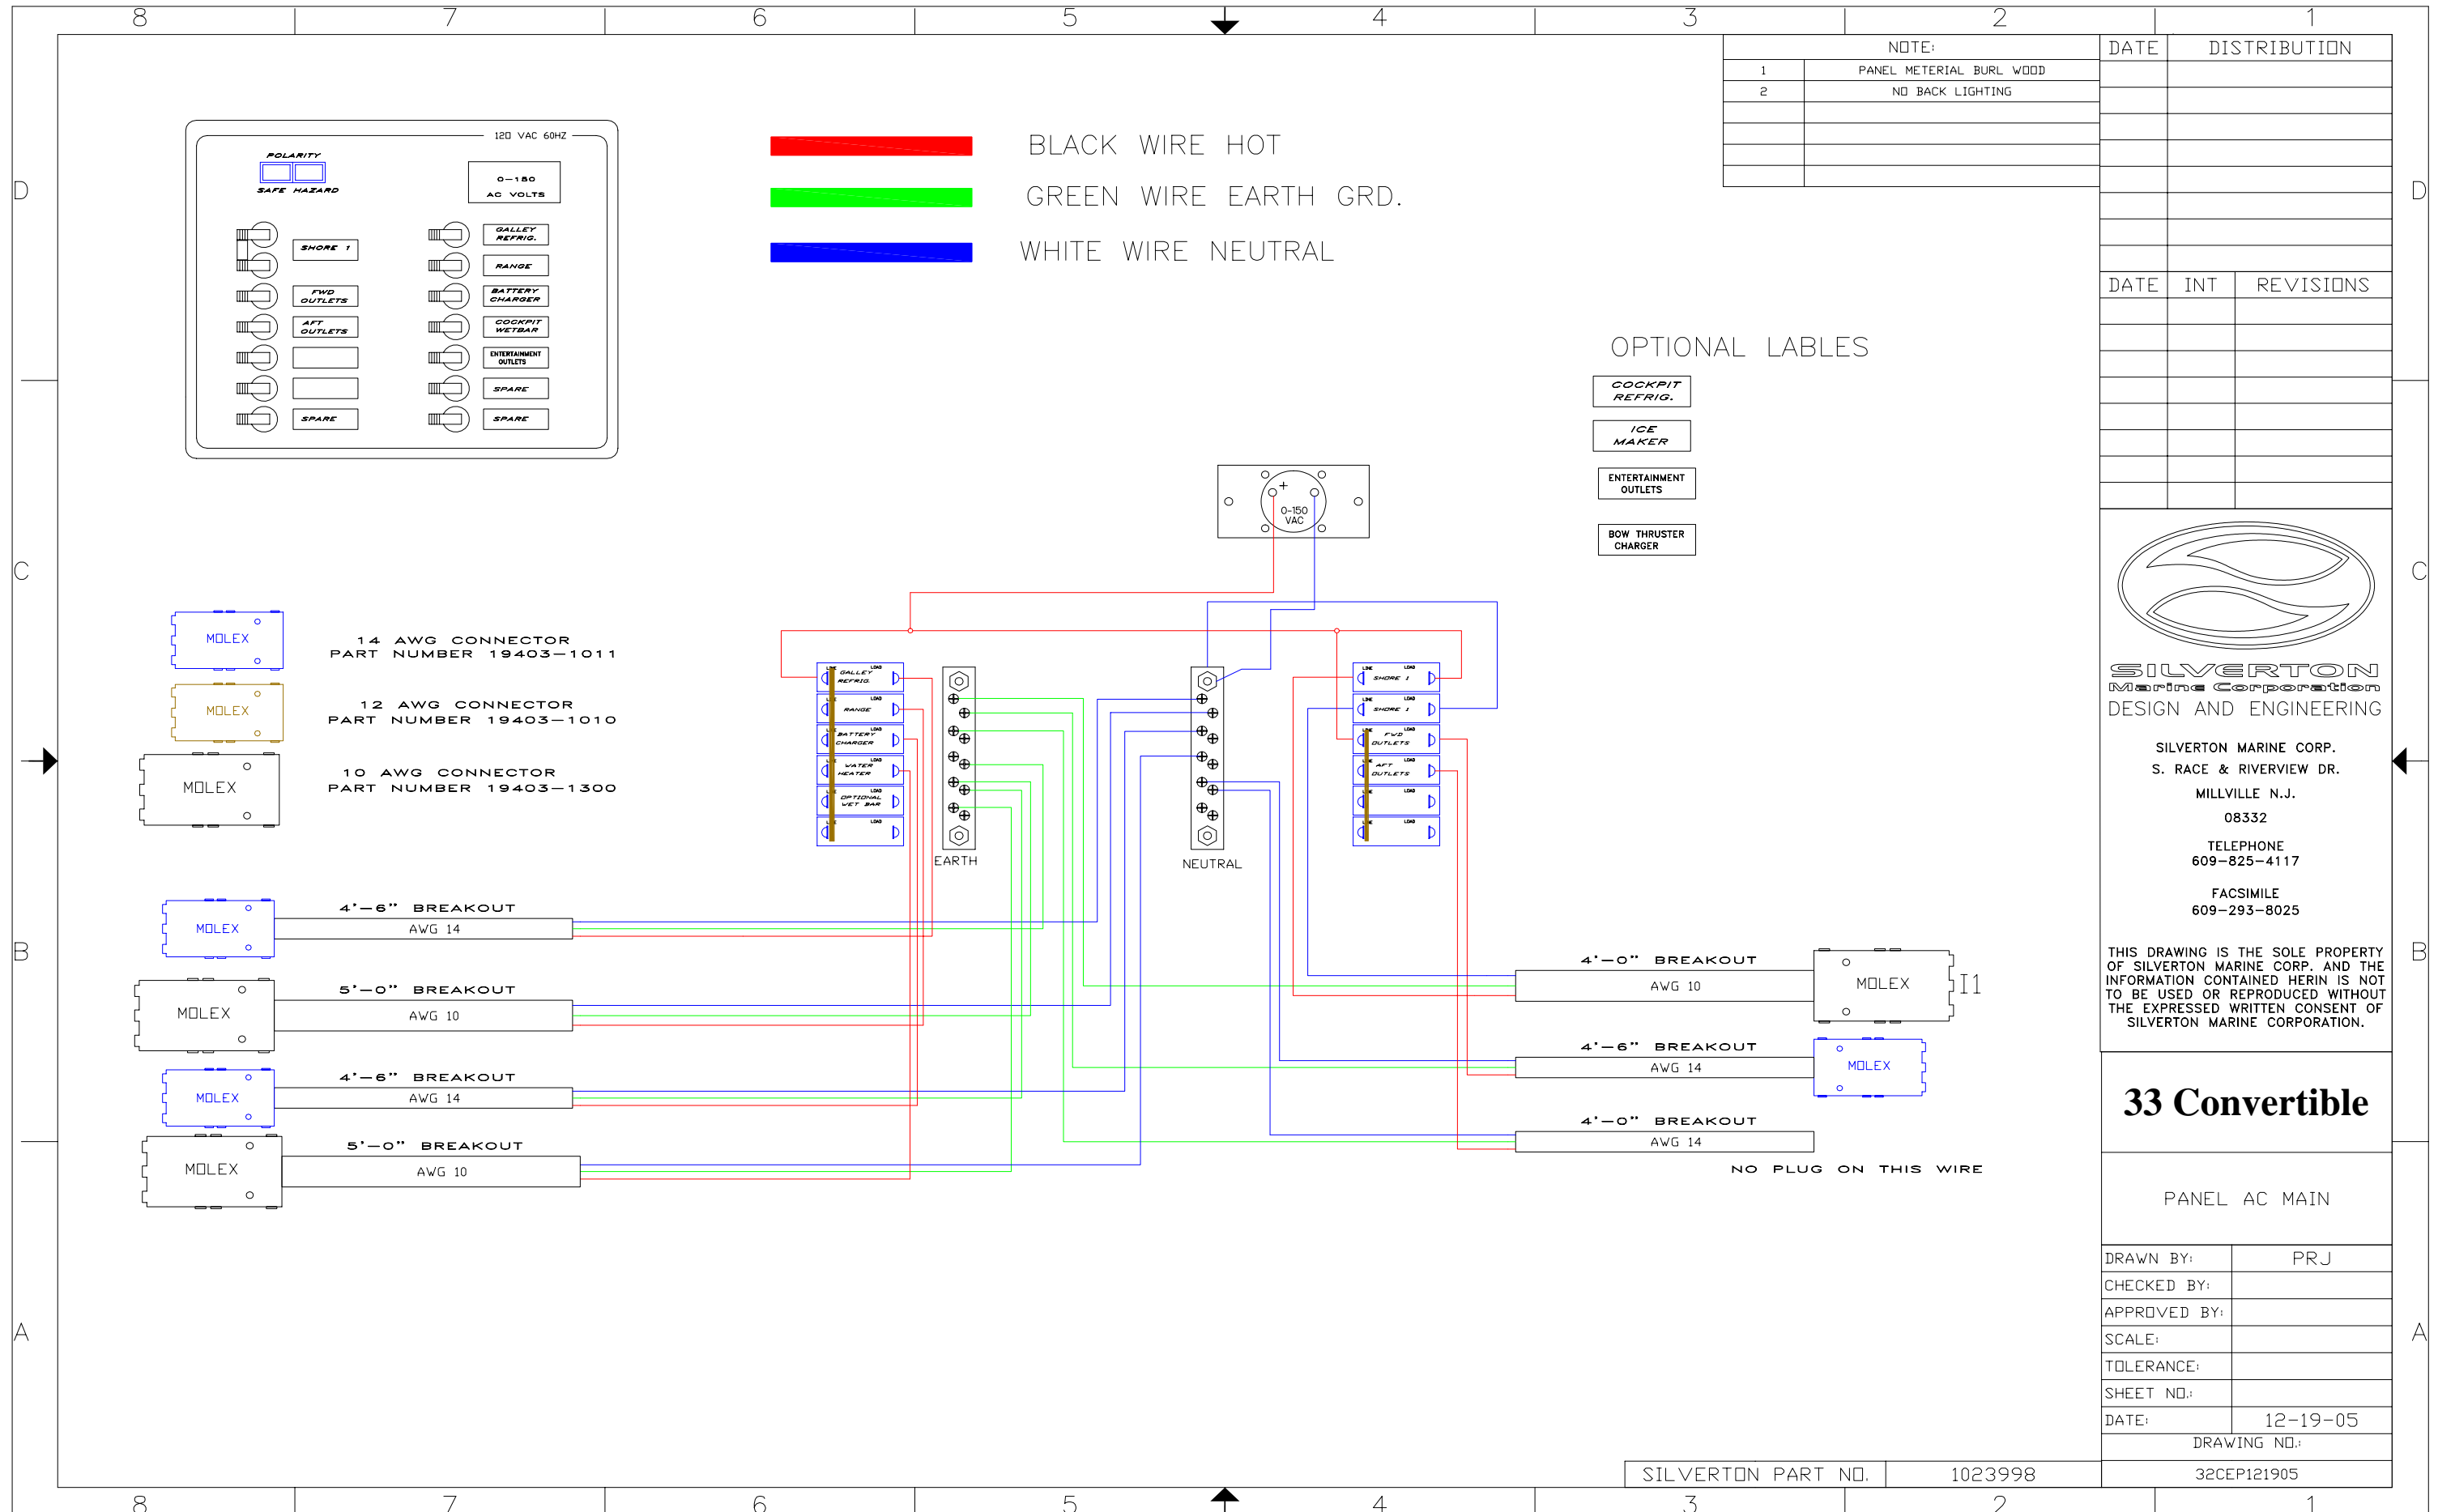

NOTE:		DATE	DISTRIBUTION
1	PANEL METIERAL BURL WOOD		
2	NO BACK LIGHTING		

DATE	INT	REVISIONS

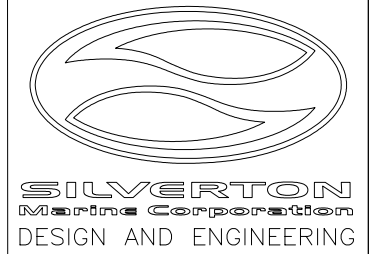

SILVERTON MARINE CORP.  
 S. RACE & RIVERVIEW DR.  
 MILLVILLE N.J.  
 08332  
 TELEPHONE  
 609-825-4117  
 FACSIMILE  
 609-293-8025

THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

## 33 Convertible


PANEL AC MAIN


DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	12-19-05
DRAWING NO.:	
32CEP121905	

SILVERTON PART NO. 1023998

PLUG BL				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	PASPK +	18/2	CLEAR	PORT AFT SPK +
2	PASPK -	18/2	CLEAR	PORT AFT SPK -
3	SASPK +	18/2	CLEAR	STBD AFT SPK +
4	SASPK -	18/2	CLEAR	STBD. AFT SPK -

DATE	REVISIONS	DATE	DISTRIBUTION

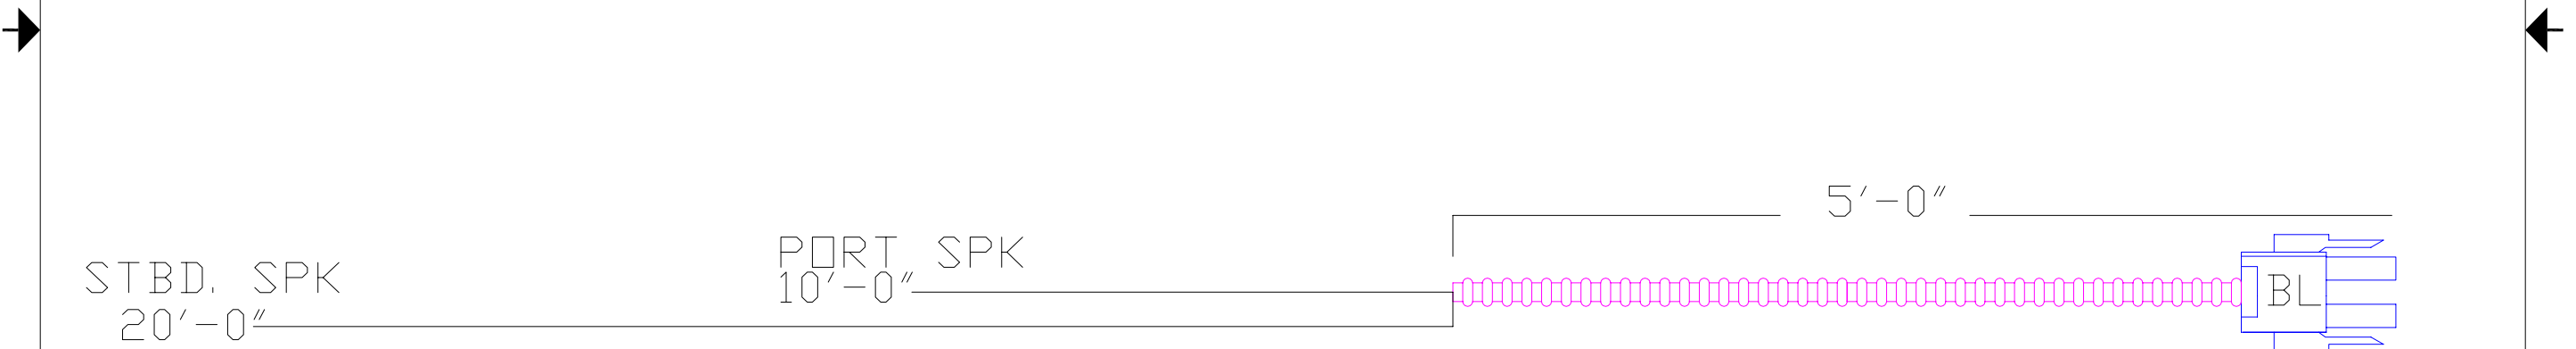

 S. RACE & RIVERSIDE DR. MILLVILLE N.J. 08332 609-825-4117 (FAX) 609-293-8025	<b>33 Convertible</b>			
	AFT BRIDGE SPK HARNESS			
SIZE	DWN BY	PRJ	DWG NO.	REV
			32CEH041106	
SCALE	SCALE	DATE:	4-11-06	SHEET NO. # OF #


CAP NAA				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	34	12	GRAY	BOW LIGHT
2	33	12	GRAY/WHT	ANCHOR LIGHT
3	30	12	YELLOW	GROUND
PLUG NA				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	34	12	GRAY	BOW LIGHT
2	33	12	GRAY/WHT	ANCHOR LIGHT
3	30	12	YELLOW	GROUND

DATE	REVISIONS	DATE	DISTRIBUTION

HARNESS USED WITH NO ARCH OPTION  
 PLUG IN WITH CAP NA BRIDGE HARNESS




		<b>33 Convertible</b>			
		AFT MAST LT HARNESS			
S. RACE & RIVERSIDE DR. MILLVILLE N.J. 08332 609-825-4117 (FAX) 609-293-8025	SIZE	DWN BY	PRJ	DWG NO.	REV
	SCALE	SCALE	DATE:	4-10-06	SHEET NO. # OF #

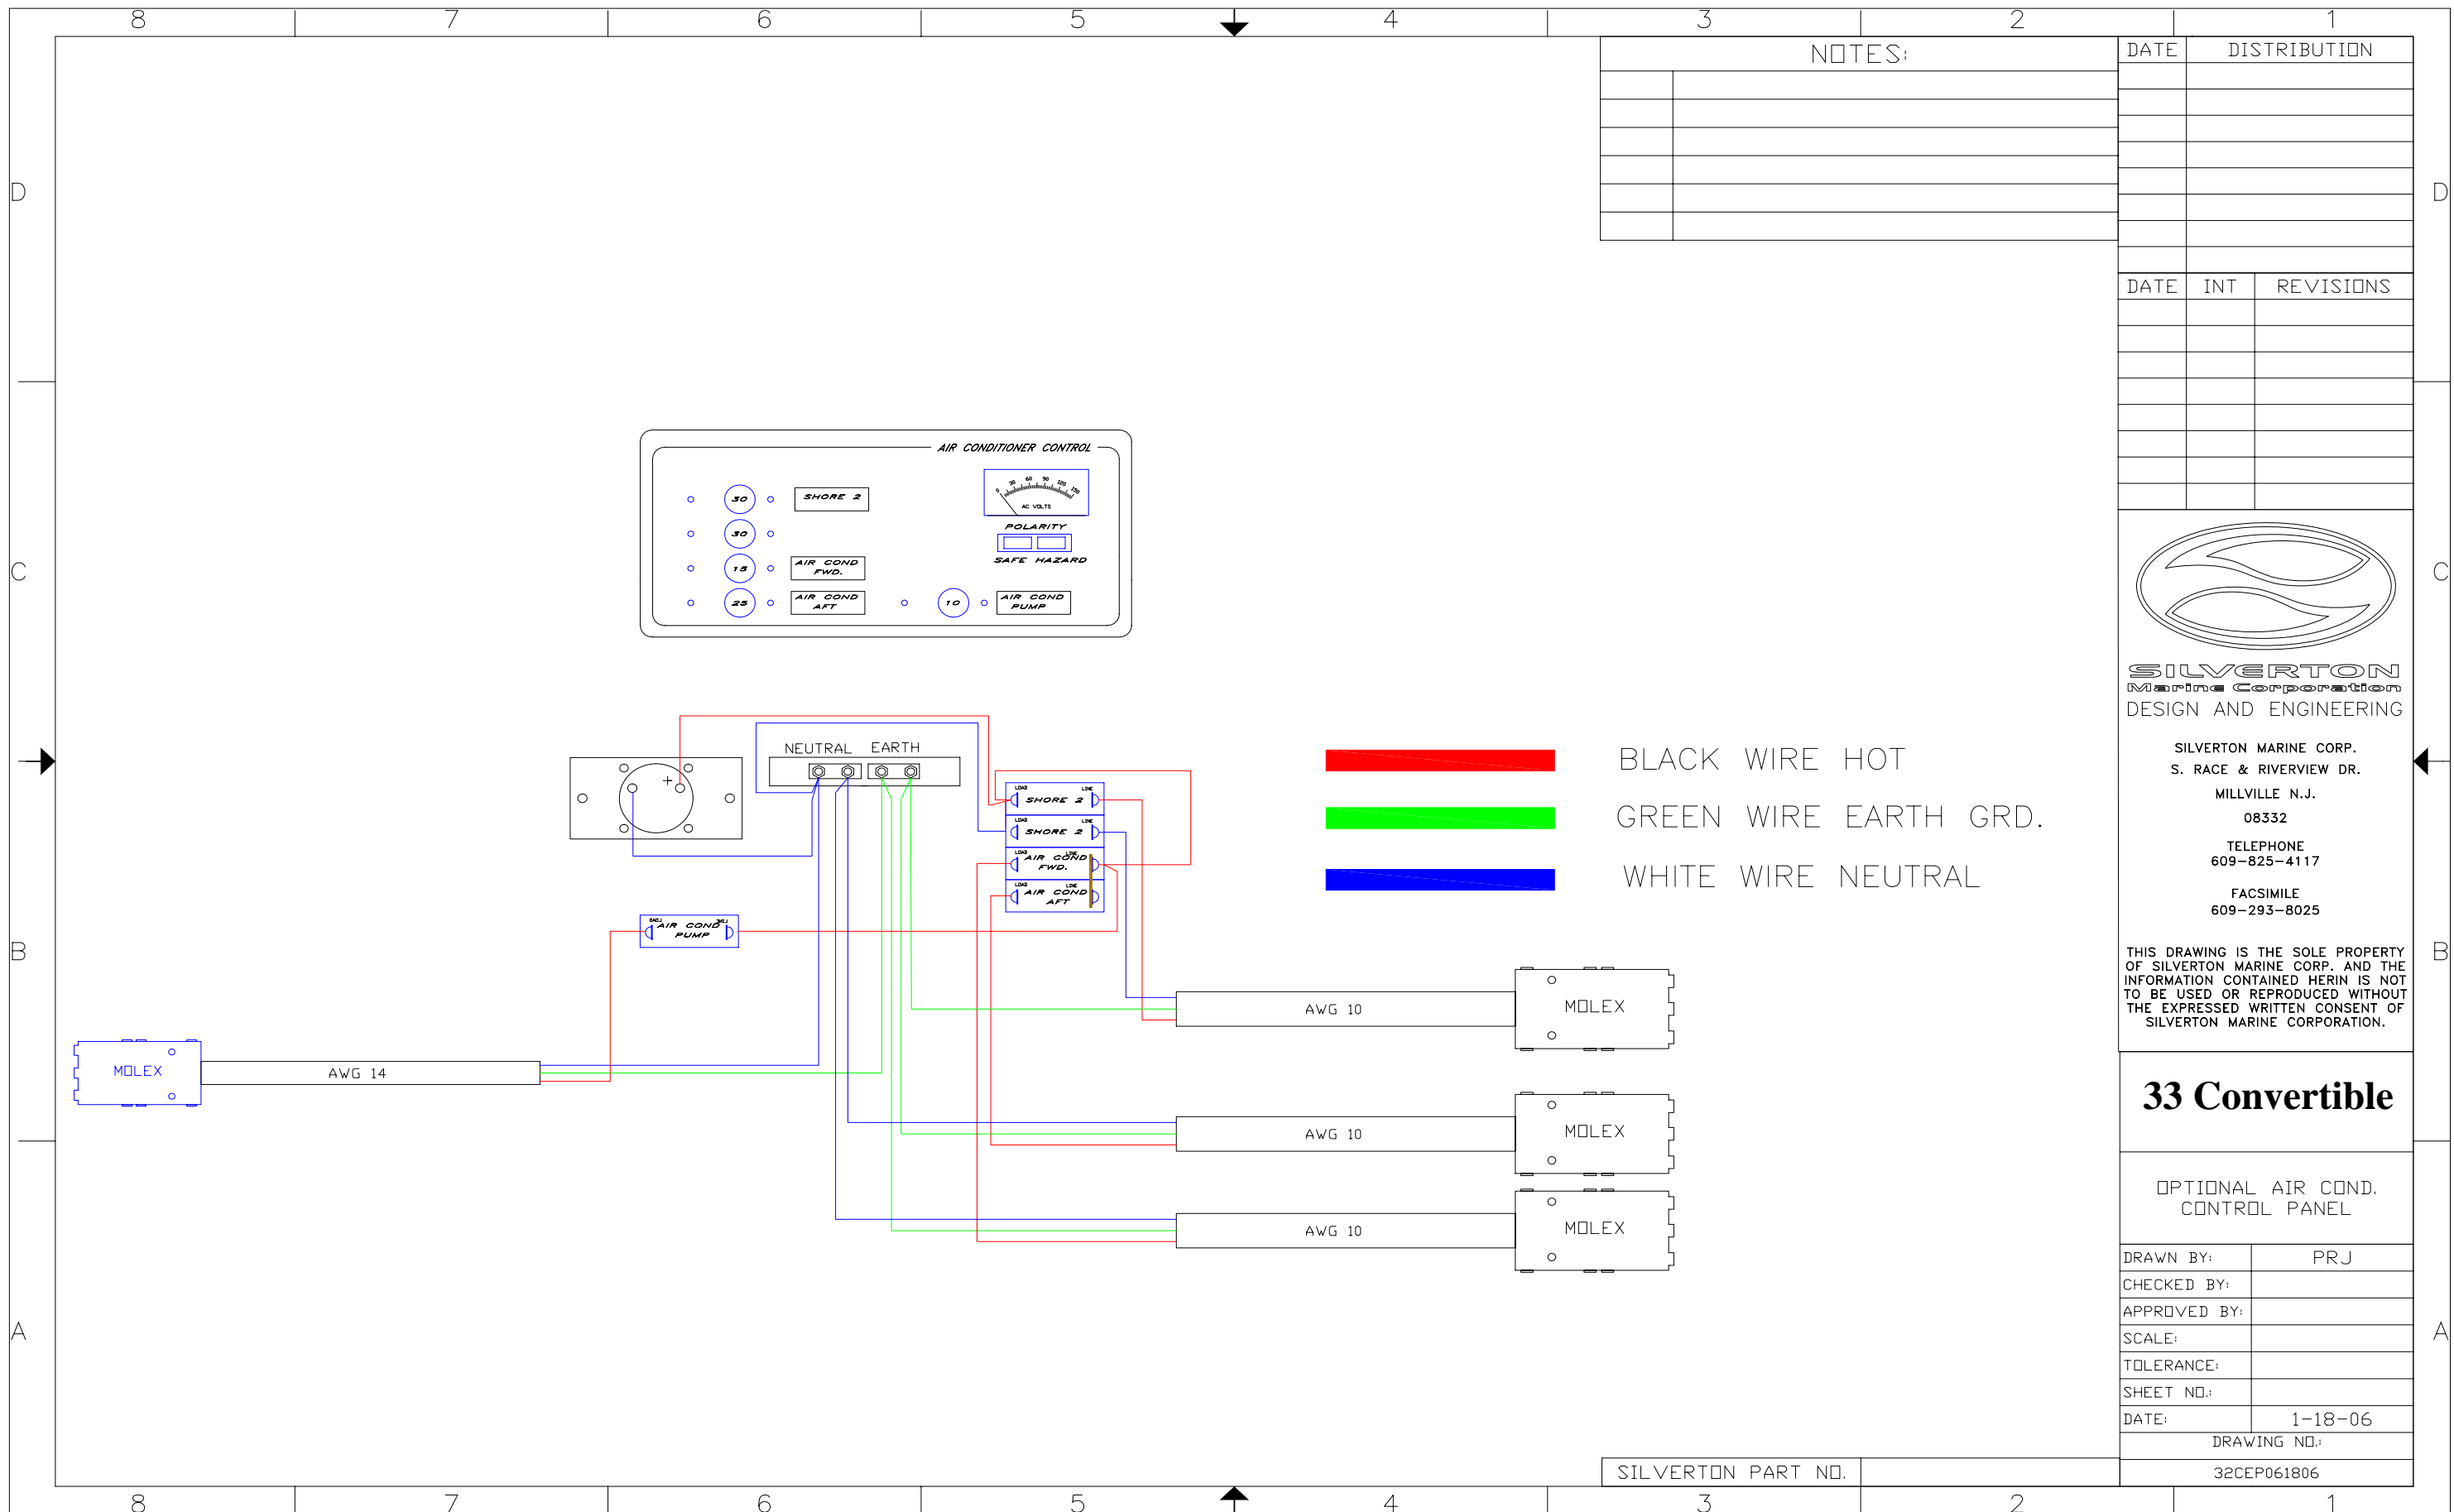

NOTES:


DATE	DISTRIBUTION	

DATE	INT	REVISIONS

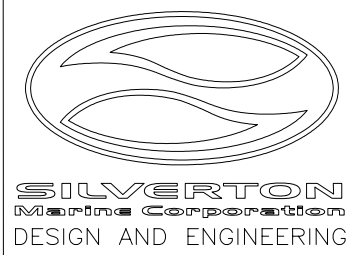

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025


THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

### 33 Convertible

OPTIONAL AIR COND.  
CONTROL PANEL


DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	1-18-06
DRAWING NO.:	
32CEP061806	


SILVERTON PART NO.

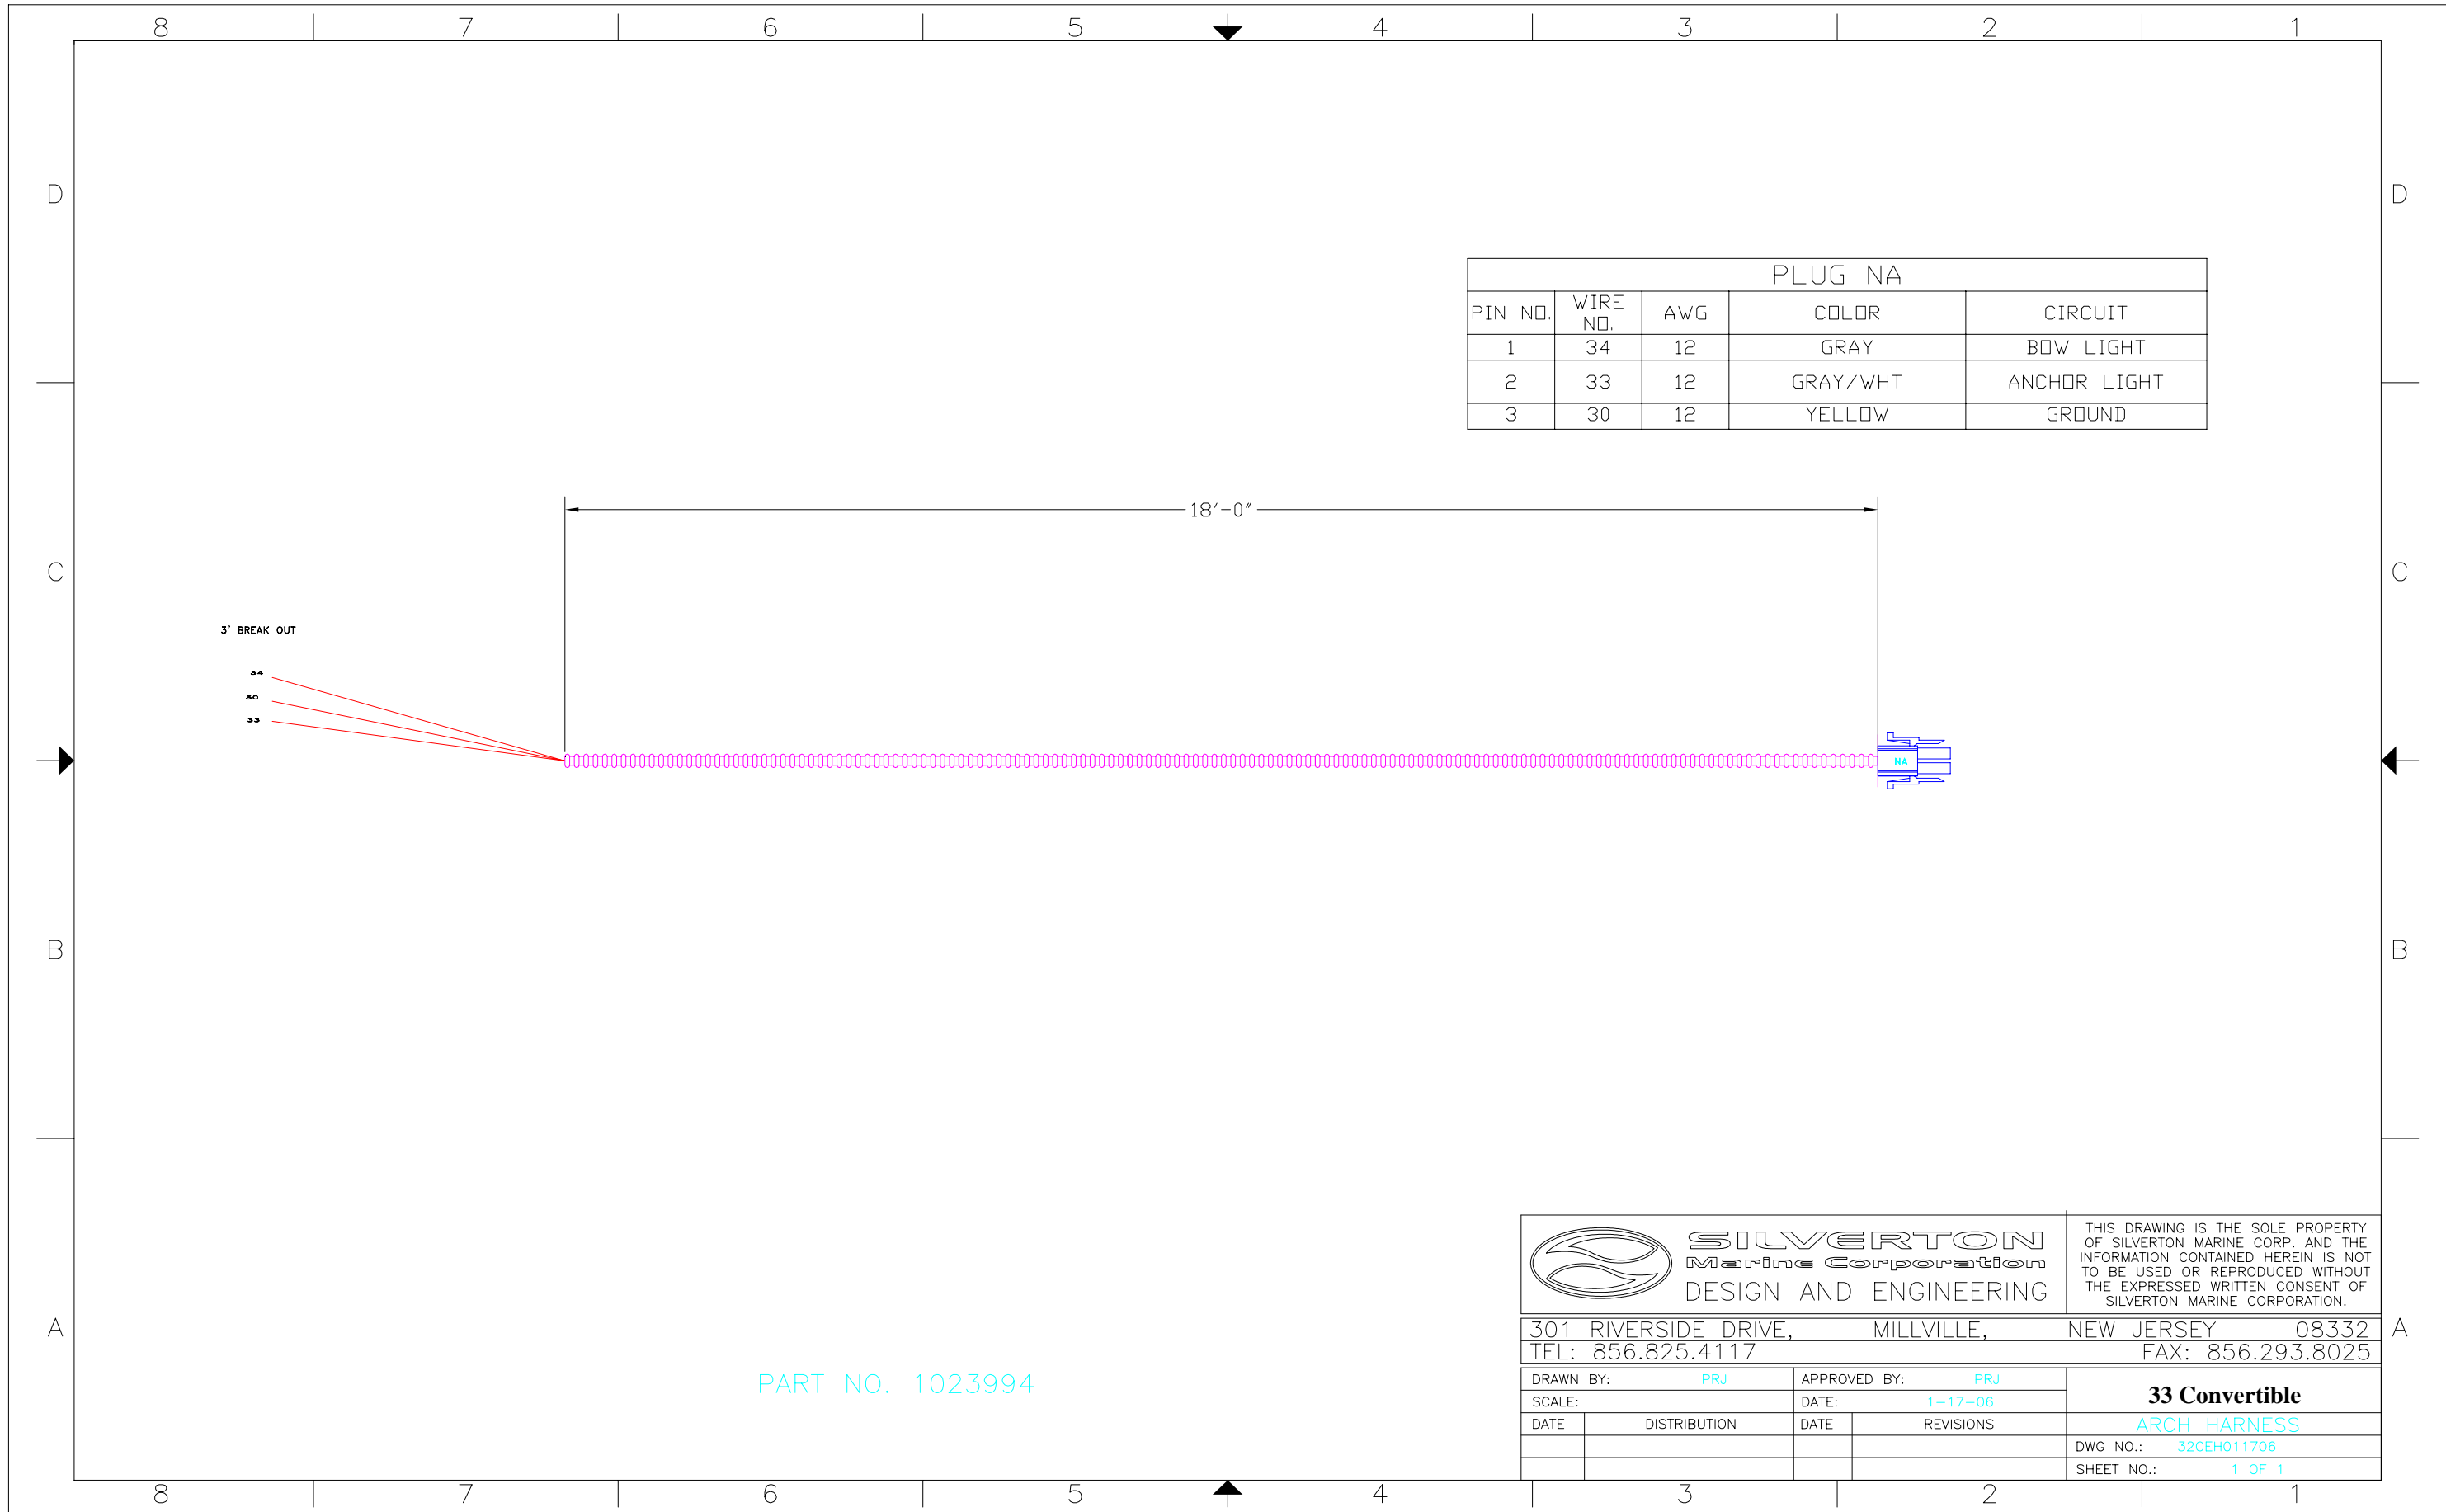

PLUG NA				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	34	12	GRAY	BOW LIGHT
2	33	12	GRAY/WHT	ANCHOR LIGHT
3	30	12	YELLOW	GROUND

PART NO. 1023994


 <b>SILVERTON</b> Marine Corporation DESIGN AND ENGINEERING		THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.
301 RIVERSIDE DRIVE, MILLVILLE, NEW JERSEY 08332 TEL: 856.825.4117		FAX: 856.293.8025
DRAWN BY: PRJ SCALE:	APPROVED BY: PRJ DATE: 1-17-06	<b>33 Convertible</b> ARCH HARNESS
DATE:                      DISTRIBUTION	DATE:                      REVISIONS	
		DWG NO.: 32CEH011706 SHEET NO.: 1 OF 1

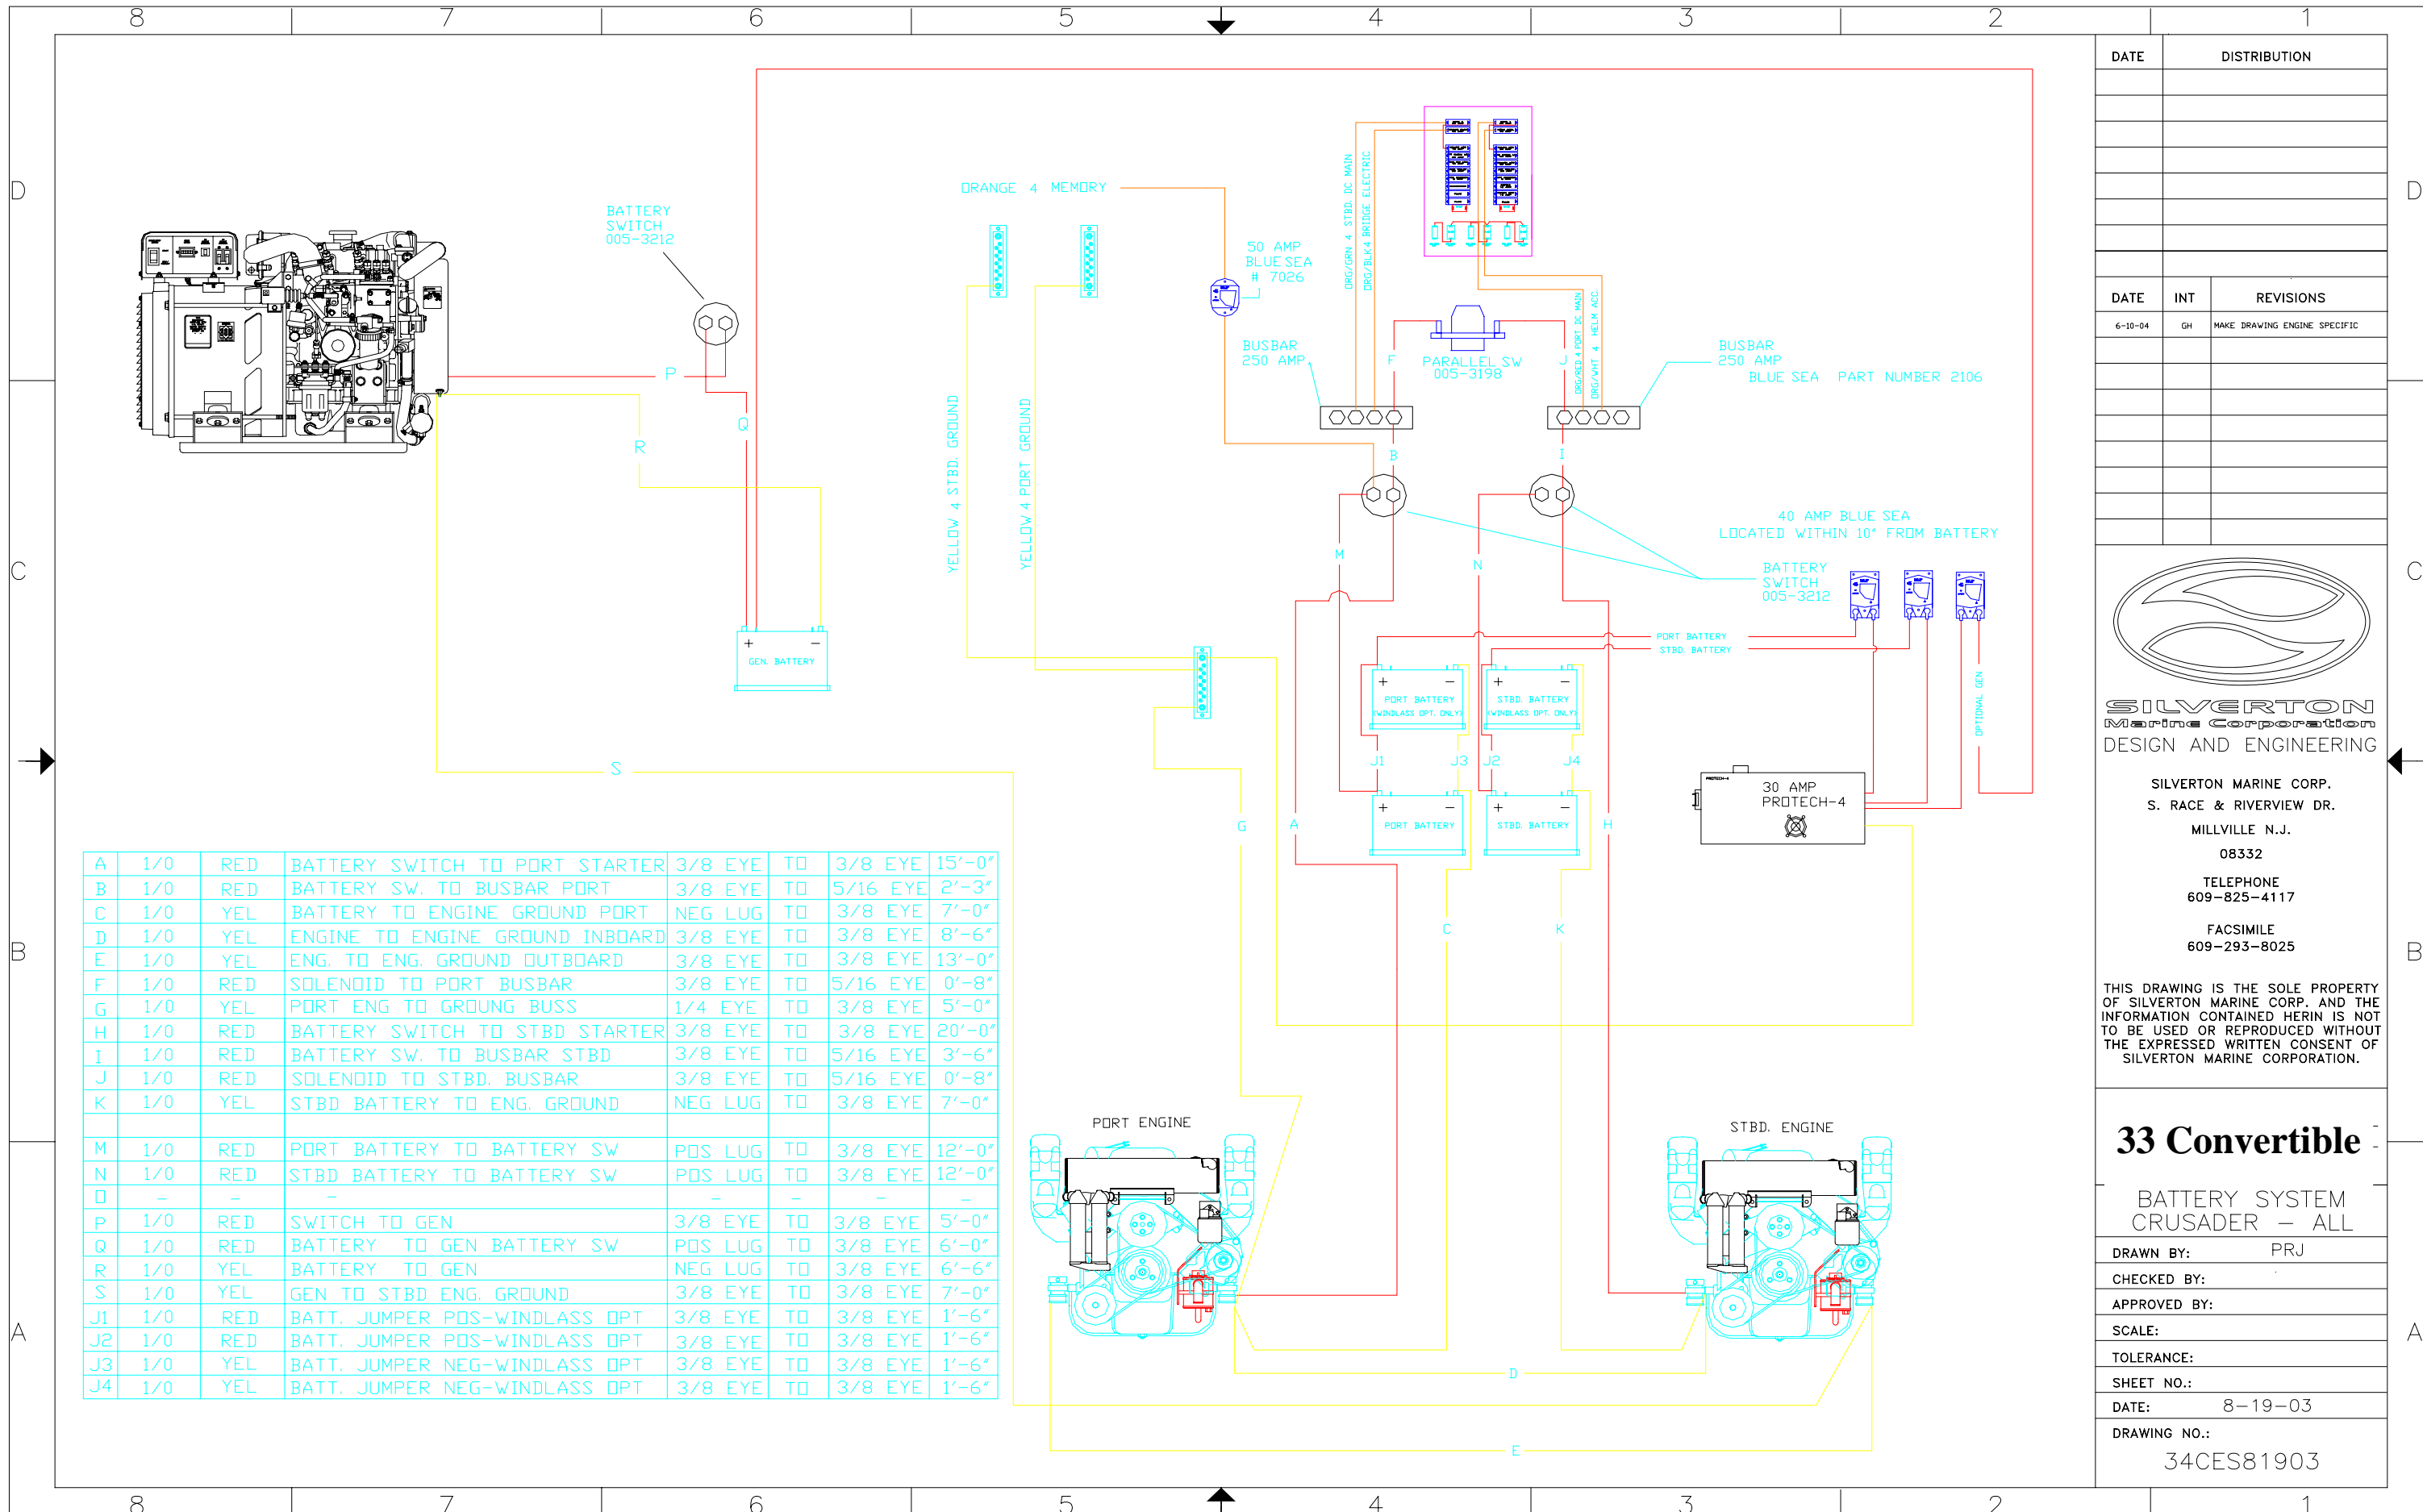

A	1/0	RED	BATTERY SWITCH TO PORT STARTER	3/8 EYE	TO	3/8 EYE	15'-0"
B	1/0	RED	BATTERY SW. TO BUSBAR PORT	3/8 EYE	TO	5/16 EYE	2'-3"
C	1/0	YEL	BATTERY TO ENGINE GROUND PORT	NEG LUG	TO	3/8 EYE	7'-0"
D	1/0	YEL	ENGINE TO ENGINE GROUND INBOARD	3/8 EYE	TO	3/8 EYE	8'-6"
E	1/0	YEL	ENG. TO ENG. GROUND OUTBOARD	3/8 EYE	TO	3/8 EYE	13'-0"
F	1/0	RED	SOLENOID TO PORT BUSBAR	3/8 EYE	TO	5/16 EYE	0'-8"
G	1/0	YEL	PORT ENG TO GROUND BUSS	1/4 EYE	TO	3/8 EYE	5'-0"
H	1/0	RED	BATTERY SWITCH TO STBD STARTER	3/8 EYE	TO	3/8 EYE	20'-0"
I	1/0	RED	BATTERY SW. TO BUSBAR STBD	3/8 EYE	TO	5/16 EYE	3'-6"
J	1/0	RED	SOLENOID TO STBD. BUSBAR	3/8 EYE	TO	5/16 EYE	0'-8"
K	1/0	YEL	STBD BATTERY TO ENG. GROUND	NEG LUG	TO	3/8 EYE	7'-0"
M	1/0	RED	PORT BATTERY TO BATTERY SW	POS LUG	TO	3/8 EYE	12'-0"
N	1/0	RED	STBD BATTERY TO BATTERY SW	POS LUG	TO	3/8 EYE	12'-0"
O	-	-	-	-	-	-	-
P	1/0	RED	SWITCH TO GEN	3/8 EYE	TO	3/8 EYE	5'-0"
Q	1/0	RED	BATTERY TO GEN BATTERY SW	POS LUG	TO	3/8 EYE	6'-0"
R	1/0	YEL	BATTERY TO GEN	NEG LUG	TO	3/8 EYE	6'-6"
S	1/0	YEL	GEN TO STBD ENG. GROUND	3/8 EYE	TO	3/8 EYE	7'-0"
J1	1/0	RED	BATT. JUMPER POS-WINDLASS OPT	3/8 EYE	TO	3/8 EYE	1'-6"
J2	1/0	RED	BATT. JUMPER POS-WINDLASS OPT	3/8 EYE	TO	3/8 EYE	1'-6"
J3	1/0	YEL	BATT. JUMPER NEG-WINDLASS OPT	3/8 EYE	TO	3/8 EYE	1'-6"
J4	1/0	YEL	BATT. JUMPER NEG-WINDLASS OPT	3/8 EYE	TO	3/8 EYE	1'-6"

DATE	DISTRIBUTION	

DATE	INT	REVISIONS
6-10-04	GH	MAKE DRAWING ENGINE SPECIFIC

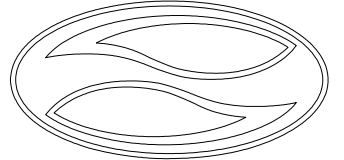  
**SILVERTON**  
 Marine Corporation  
 DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
 S. RACE & RIVERVIEW DR.  
 MILLVILLE N.J.  
 08332  
 TELEPHONE  
 609-825-4117  
 FACSIMILE  
 609-293-8025

THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

**33 Convertible**  
 BATTERY SYSTEM  
 CRUSADER - ALL

DRAWN BY: PRJ  
 CHECKED BY:  
 APPROVED BY:  
 SCALE:  
 TOLERANCE:  
 SHEET NO.:  
 DATE: 8-19-03  
 DRAWING NO.: 34CES81903



WIRE CHART				
WIRE NUMBER	WIRE COLOR	WIRE GAUGE	WIRE CIRCUIT	WIRE LENGTH
1	BLUE	12	TRIM-TAB	17'-1"
2	RED	12	TRIM-TAB	17'-1"
3	YELLOW	12	TRIM-TAB	17'-1"
4	GREEN	12	TRIM-TAB	17'-1"
92	YELLOW	12	TRIM-TAB GRD.	9'-1"
9	YEL/BLUE	8	ENG BLOWER	14'-6"
9P	YEL/BLUE	10	PORT ENG BLOWER	6'-4"
9S	YEL/BLUE	10	STBD. ENG BLOWER	12'-10"
64P	YELLOW	10	PORT ENG BLOW GRD.	6'-10"
64S	YELLOW	10	STBD. ENG BLOW GRD.	13'-4"
H26	BLK/WHITE	14	HALON	23'-6"
104	YELLOW	14	HALON GRD.	15'-6"
27	YELLOW	14	PORT FUEL SENDER GRD	9'-0"
28	PINK/RED	14	PORT FUEL SENDER	17'-0"
G3	WHITE	14	GEN START/STOP	24'-3"
G4	WHITE	14	GEN START/STOP	24'-3"
G70	WHITE	14	GEN IND. LIGHT	24'-3"
39	PINK/GREEN	14	STBD. FUEL SENDER	23'-10"
40	YELLOW	14	STBD.FUEL SENDER GRD.	15'-10"
72	BRN/WHITE	12	FWD BILGE AUTO	34'-6"
73	BRN/RED	12	FWD BILGE MAN	34'-6"
74	YELLOW	12	FWD BILGE GRD.	26'-6"
98	BRN/WHITE	12	AFT BILGE AUTO	24'-0"
99	BRN/RED	12	AFT BILGE MAN	24'-0"
100	YELLOW	12	AFT BILGE GRD.	26'-0"
84	WHITE	10	MACERATOR PUMP	33'-0"
85	YELLOW	10	MACERATOR PMP. GRD.	25'-0"
42	GRAY/GREEN	12	STERN LT	25'-1"
43	YELLOW	12	STERN LT GRD	17'-1"
117	YELLOW	4	PANEL GRD PORT	15'-0"
118	YELLOW	4	PANEL GRD STBD	15'-0"
78	BRN/BLACK	14	SHOWER SUMP PMP.	33'-0"
79	YELLOW	14	SHOWER SUMP GRD.	25'-0"
86	DRG/BLACK	14	WASTE MDN. SENDER	33'-0"
87	YELLOW	14	WASTE SEND GRD	33'-0"
126	DRG/YELLOW	14	WATER MDN SENDER	20'-1"
127	YELLOW	14	WATER SEND GRD.	20'-1"
44	RED/YELLOW	6	ELECT. HEAD	37'-0"
45	YELLOW	6	ELECT. HEAD GRD.	29'-0"
106	WHITE	10	OIL CHANGER	22'-6"
107	YELLOW	10	OIL CHANGER GRD	14'-6"
108	BROWN/BLUE	10	SEAWATER WASHDOWN PMP	17'-7"
109	YELLOW	10	SEAWATER WASHDOWN GRD	9'-7"
124	RED	10	FRESH WATER PUMP	6'-4"
125	YELLOW	10	FRESH WATER PMP GRD.	6'-10"
105	GREEN	6	SAFTEY GROUND	15'-0"

PLUG PJ				
PIN NUMBER	WIRE NUMBER	AVG.	COLOR	WIRE
1	7B	14	BROWN/BLK	SHOWER SUMP PMP.

PLUG PF				
PIN NUMBER	WIRE NUMBER	AVG.	COLOR	WIRE
1	1	12	BLUE	TRIM TAB
2	2	12	RED	TRIM TAB
3	3	12	YELLOW	TRIM TAB
4	4	12	GREEN	TRIM TAB
5	2B	14	PINK/RED	PORT FUEL
6	39	14	PINK/GREEN	STBD. FUEL
7	H26	14	BLACK/WHITE	HALON
8	G70	14	WHITE	GEN IND. LT.

PLUG PG				
PIN NUMBER	WIRE NUMBER	AVG.	COLOR	WIRE
1	72	12	BROWN/WHT	FWD BILGE PMP AUTO
2	73	12	BROWN/RED	FWD BILGE PMP MAN
3	98	12	BROWN/WHT	AFT BILGE PMP AUTO
4	99	12	BROWN/YEL	AFT BILGE PMP MAN


PLUG PH				
PIN NUMBER	WIRE NUMBER	AVG.	COLOR	WIRE
1	110	10	BROWN	FISHBOX MACERATOR
3	106	10	WHITE	OIL EXCHANGER PMP.
4	108	10	BRN/BLUE	SEAWATER WASHDOWN
5	124	10	RED	FRESH WATER PMP.
6	84	10	WHITE	MACERATOR PMP.

PLUG PI				
PIN NUMBER	WIRE NUMBER	AVG.	COLOR	WIRE
1	G3	14	WHITE	GEN START/STOP
2	G4	14	WHITE	GEN START/STOP

- NOTES:
- 1 PLUG PJ IDENTIFY WITH BROWN
  - 2 PLUG PF IDENTIFY WITH PINK
  - 3 PLUG PG IDENTIFY WITH DARK BLUE
  - 4 PLUG PH IDENTIFY WITH PURPLE
  - 5 PLUG PI IDENTIFY WITH GRAY
  - 4-6 ADD STERN LT WIRES
  - 4-6 DELETE FISHBOX MACERATOR WIRES

DATE	DISTRIBUTION

DATE	INT	REVISIONS

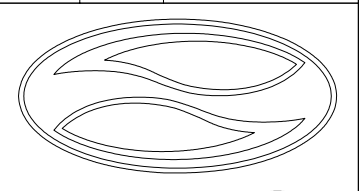

SILVERTON Marine Corporation  
DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025


THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

# 33 Convertible

## BILGE HARNESS


DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	12-28-05
DRAWING NO.:	
32CEH122805	

SILVERTON PART NO.	1023979
--------------------	---------

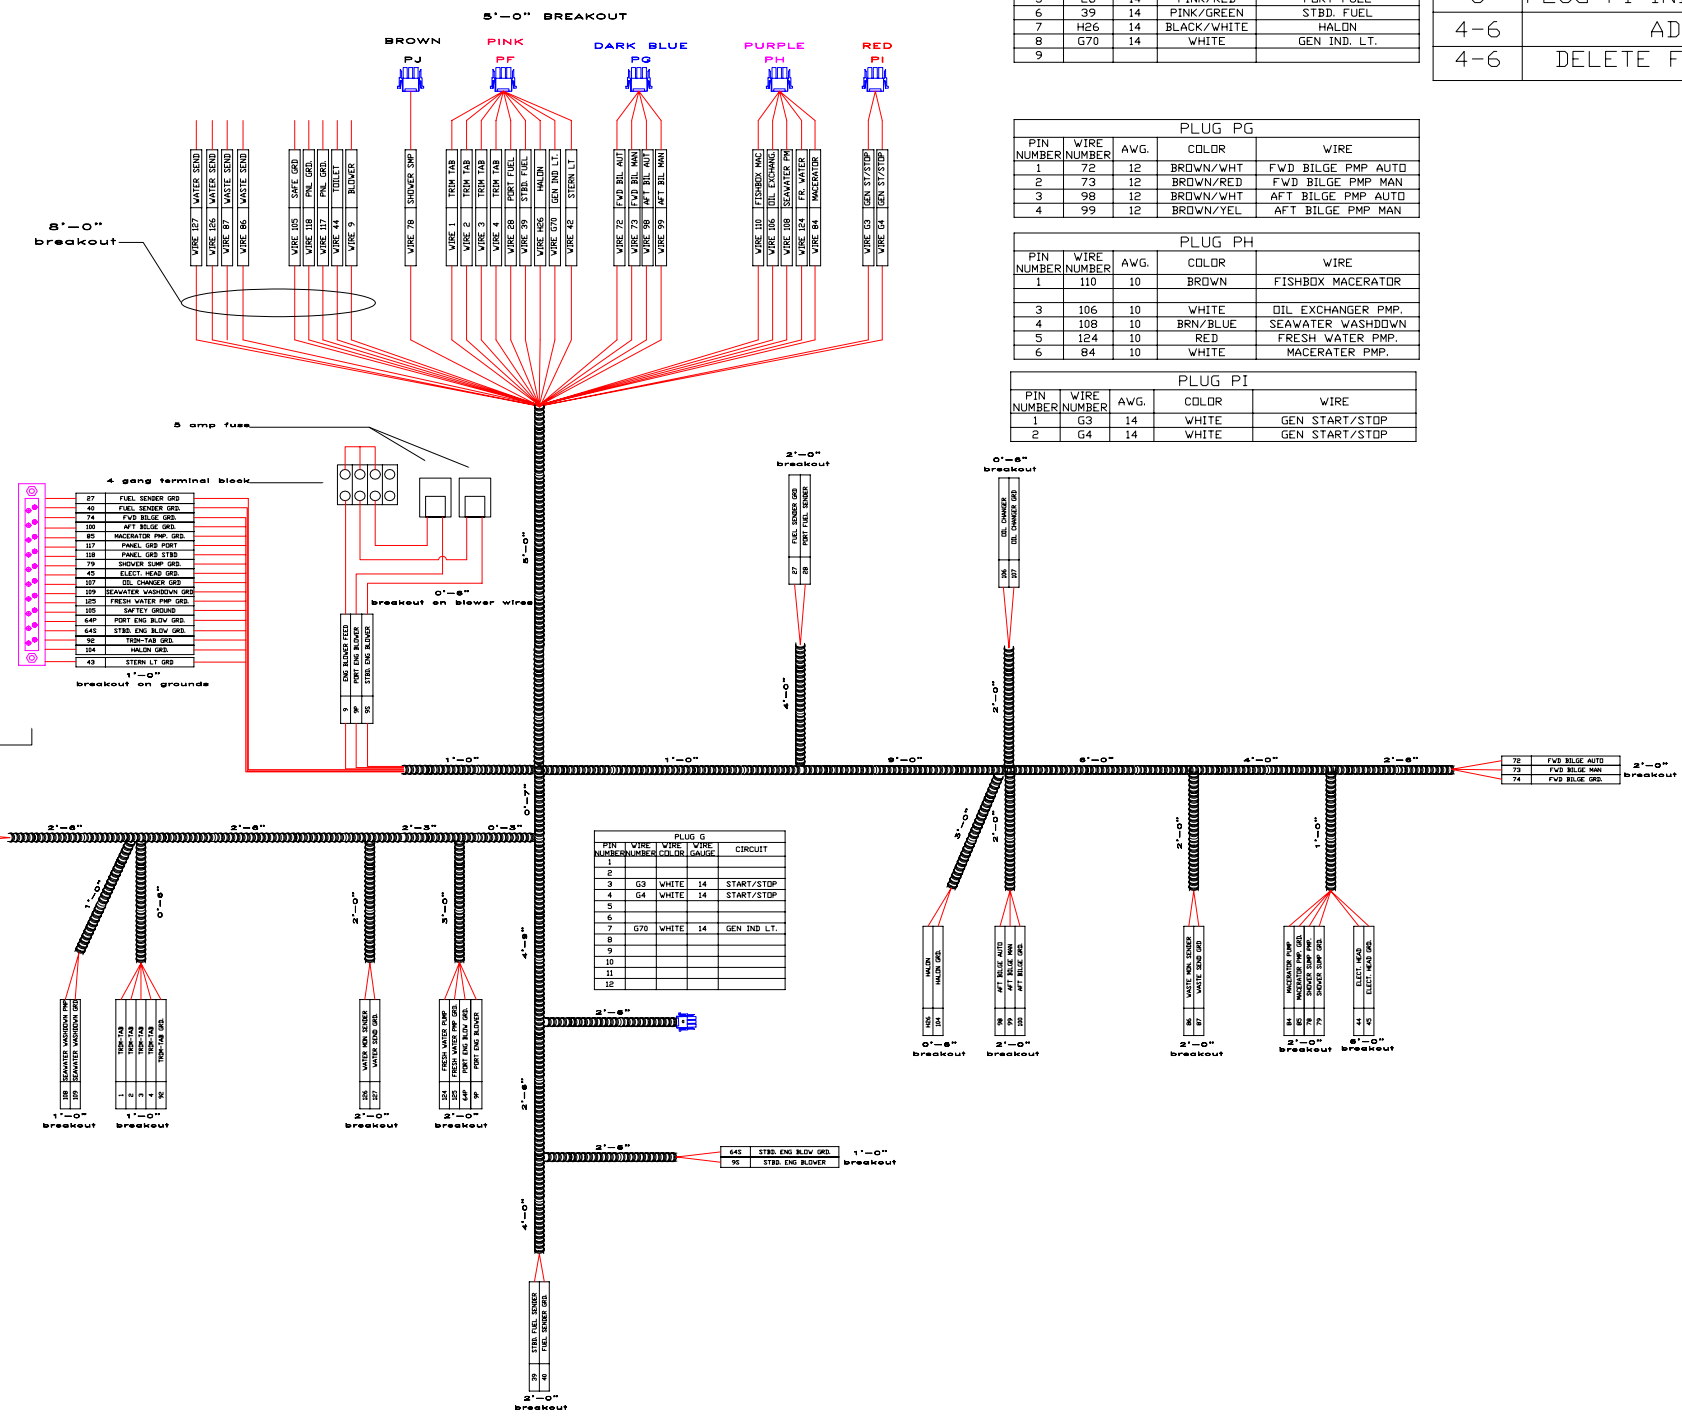


PIN NUMBER	WIRE NUMBER	WIRE COLOR	WIRE GAUGE	CIRCUIT
1	G3	WHITE	14	START/STOP
2	G4	WHITE	14	START/STOP
3	G3	WHITE	14	START/STOP
4	G4	WHITE	14	START/STOP
5	G3	WHITE	14	START/STOP
6	G4	WHITE	14	START/STOP
7	G70	WHITE	14	GEN IND. LT.
8				
9				
10				
11				
12				

NO.	GAUGE	COLOR	LENGTH
215	18	WHITE	60'-0"
216	18	GREEN	60'-0"
217	18	BROWN	60'-0"
218	18	PINK	60'-0"

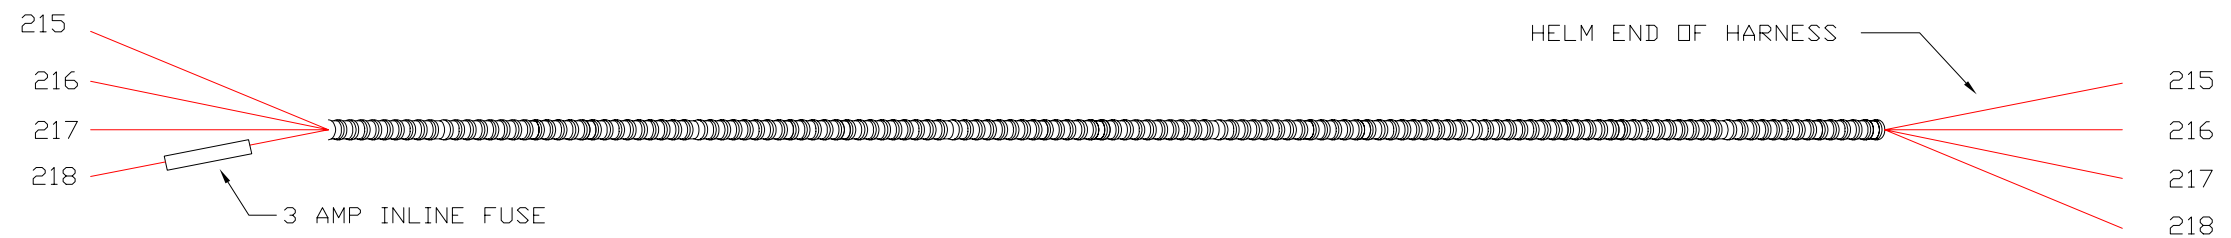

DATE	DISTRIBUTION	

DATE	INT	REVISIONS

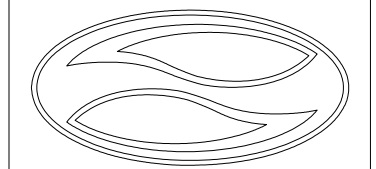

**SILVERTON**  
Marine Corporation  
DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025


THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

### 33 Convertible

VOLVO BOW THRUSTER

DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	2-22-06
DRAWING NO.:	EAEH030606

DATE	REVISIONS	DATE	DISTRIBUTION

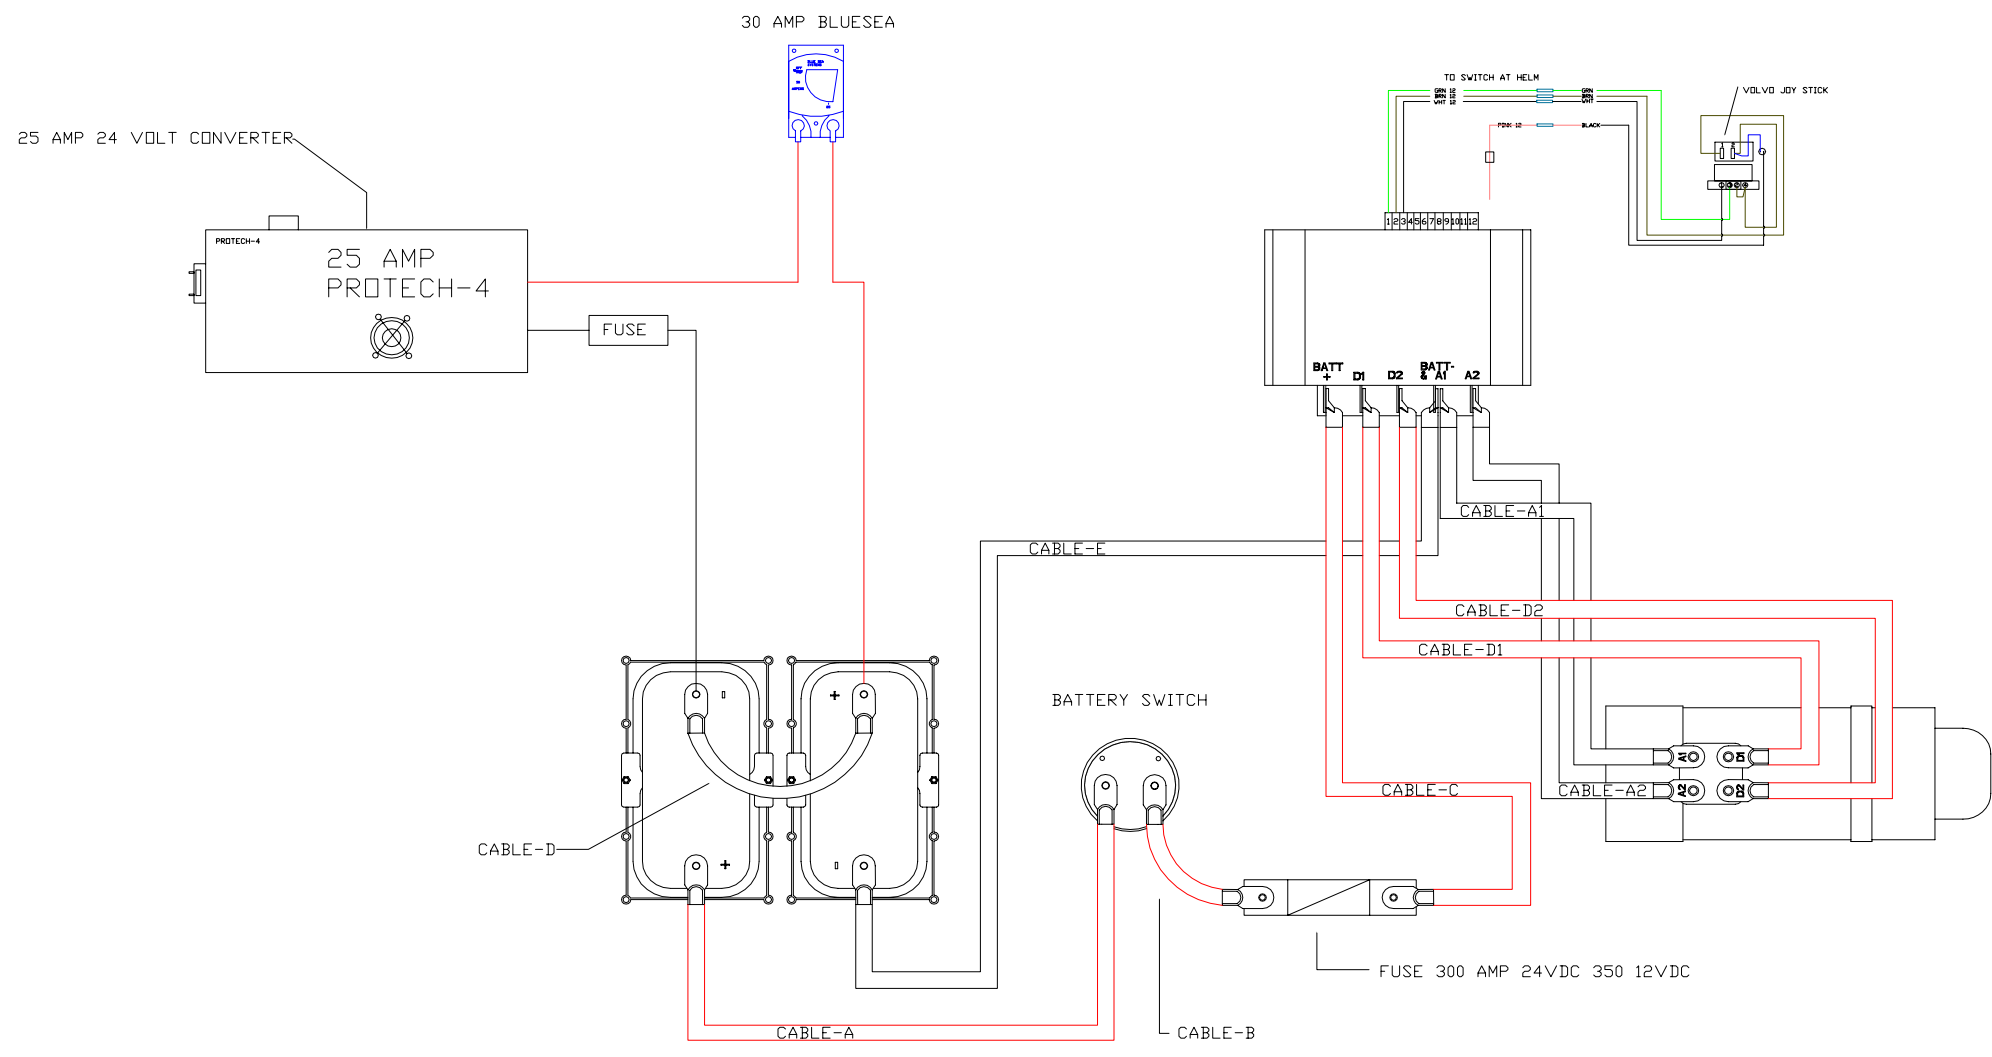

WIRE CUT CHART

CABLE	AWG	COLOR	CIRCUIT	EYE	TO	EYE	LENGHT
A	4/0	RED	BATTERY POSITIVE TO BATTERY SWITCH	3/8"	TO	3/8"	21'
A1	1/0	YELLOW	CONTROL BOX A1 TERM. TO MOTOR A1 TERM.	3/8"	TO	3/8"	54'
A2	1/0	YELLOW	CONTROL BOX A2 TERM. TO MOTOR A2 TERM.	3/8"	TO	3/8"	54'
B	4/0	RED	BATTERY SWITCH TO FUSE LINE	3/8"	TO	3/8"	6'
C	4/0	RED	LOAD FUSE TO CONTROL BOX TERM B+	5/16"	TO	3/8"	132'
D	4/0	BLACK	BATTERY JUMPER	3/8"	TO	3/8"	14'
D1	1/0	RED	CONTROL BOX TERM. D1 TO MOTOR D1	3/8"	TO	3/8"	54'
D2	1/0	RED	CONTROL BOX TERM. D2 TO MOTOR D2	3/8"	TO	3/8"	54'
E	4/0	YEL	BATTERY NEG TO CONTROL BOX A1	3/8"	TO	3/8"	123'



### 33 Convertible

BOW THRUSTER VOLVO CT600

S. RACE & RIVERSIDE DR.  
MILLVILLE N.J.  
08332  
609-825-4117  
(FAX) 609-293-8025


SIZE	DWN BY	PRJ	DWG NO.	32CED020906	REV
SCALE	SCALE	DATE:	2-9-06	SHEET NO.	# OF #

32C BRIDGE LINER WIRE CHART				
WIRE NO.	WIRE GAUGE	COLOR	CIRCUIT	LENHTH
42	12	GRAY/GREEN	NAV LTS LOAD	22'-6"
43	12	YELLOW	NAV LTS GRD.	22'-6"
33	12	GRAY/WHT	ANCHOR LT.	11'-0"
34	12	GRAY	BOW LT.	11'-0"
30	12	YELLOW	MAST LT GRD.	11'-0"
FPS	16/2	CLEAR	FWD PORT SPEAKER	13'-0"
APS	16/2	CLEAR	AFT PORT SPEAKER	9'-0"
FSS	16/2	CLEAR	FWD STBD SPEAKER	9'-6"
ASS	16/2	CLEAR	AFT STBD SPEAKER	9'-0"

CAP E				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	42	12	GRAY/GREEN	NAV LTS LOAD
2	43	12	YELLOW	NAV LTS GRD.
3	33	12	GRAY/WHT	ANCHOR LT.
4	34	12	GRAY	BOW LT.
5	30	12	YELLOW	MAST LT GRD.
6				

CAP NA				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	34	12	GRAY	BOW LIGHT
2	33	12	GRAY/WHT	ANCHOR LIGHT
3	30	12	YELLOW	GROUND

CAP BL				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	PASPK +	18/2	CLEAR	PORT SPK +
2	PASPK -	18/2	CLEAR	PORT SPK -
3	SASPK +	18/2	CLEAR	STBD SPK +
4	SASPK -	18/2	CLEAR	STBD. SPK -

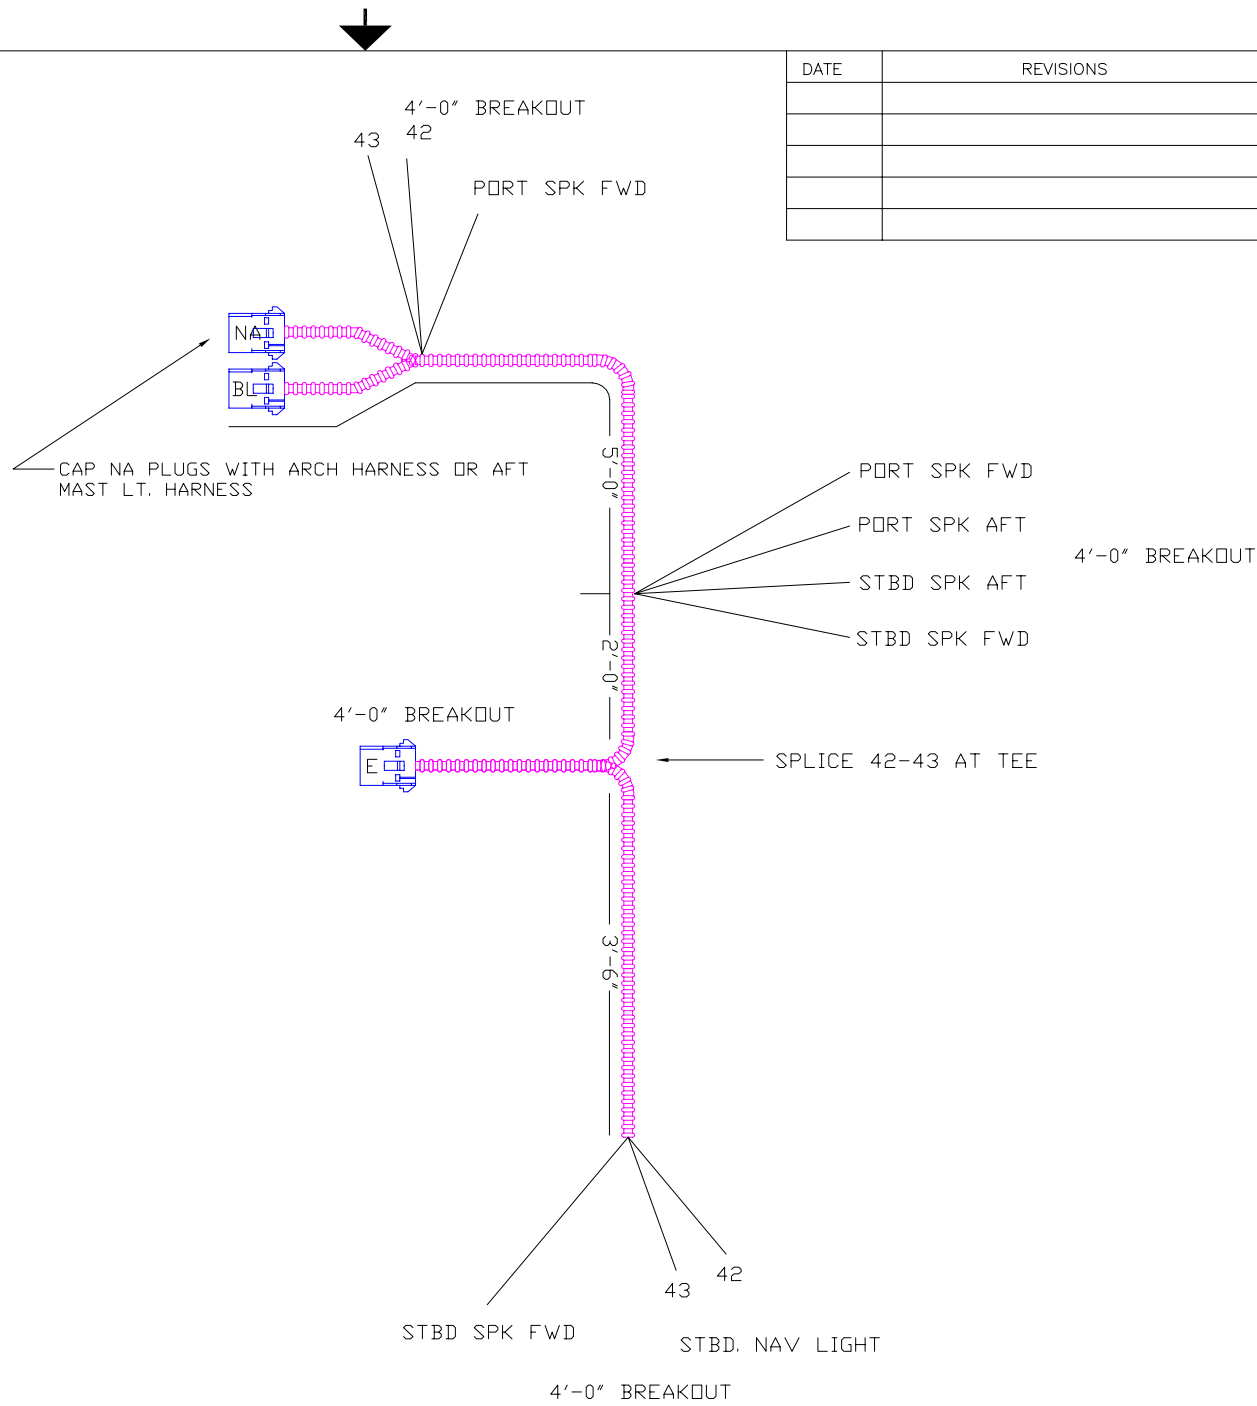

DATE	REVISIONS	DATE	DISTRIBUTION

		<b>33 Convertible</b>		
		BRIDGE HARNESS		
S. RACE & RIVERSIDE DR. MILLVILLE N.J. 08332 609-825-4117 (FAX) 609-293-8025	SIZE	DWN BY PRJ	DWG NO. 32C041306	REV
SCALE	SCALE	DATE: 4-13-06	SHEET NO. #	OF #



ALL BREAKOUT FROM THE  
BOTTOM OF PANEL

OPTIONAL TOILET BREAKER  
OPTIONAL OIL CHANGER BREAKER  
OPTIONAL SEAWATER WASHDOWN BREAKER  
OPTIONAL EXT REFRIG BREAKER  
  
OPTIONAL WINDLASS CONTROL BREAKER  
OPTIONAL MACERATOR PUMP

NOTES:

nick_jch@verizon.net	
4-8-06	DELETE FISHBOX MACERATOR

DATE	DISTRIBUTION	

DATE	INT	REVISIONS

283	12	YELLOW	SALON LIGHTS GRD	60" BREAKOUT
290	12	YELLOW	DECK COURT. LTS GRD	60" BREAKOUT
36	12	YEL	COCKPIT OVER HEAD GRD	60" BREAKOUT
285	14	YEL	SALON CO MONITOR GRD.	80" BREAKOUT

PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	153	12	YELLOW	V-BERTH CAB LTS GRD
2	183	14	YELLOW	GALLEY COURT LTS GRD
3	177	14	YELLOW	FWD CD MON GRD
4	155	14	YELLOW	V-BERTH READ LT GRD
5	193	10	YELLOW	GALLEY REFRIG GRD
6	179	14	YELLOW	MID CD MON GRD
7	157	12	YELLOW	MID CAB LTS GRD
8	163	14	YELLOW	MID CAB READ LT GRD
9	151	14	YELLOW	HEAD LIGHTS GRD.


PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	22	14	BLUE	AFT BILGE PMP IND
2	24	14	BLUE	FWD BILGE PMP IND

PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	72	12	BROWN/WHI	FWD BILGE PMP AUTO
2	73	12	BROWN/RED	FWD BILGE PMP MAN
3	98	12	BROWN/WHI	AFT BILGE PMP AUTO
4	99	12	BROWN/YEL	AFT BILGE PMP MAN


PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	192	10	RED/BLK	GALLEY REFRIG
2	-	-	-	-

153	12	V-BERTH CAB LTS GRD
182	14	GALLEY LTS GRD
177	14	FWD CD MON GRD
155	14	V-BERTH READ LT GRD
193	10	GALLEY REFRIG GRD
179	14	MID CD MON GRD
157	12	MID CAB LTS GRD
163	14	MID CAB READ LT GRD
151	14	HEAD LIGHTS GRD.

6'-0" BREAKOUT  
TO FWD ASMY HARNESS

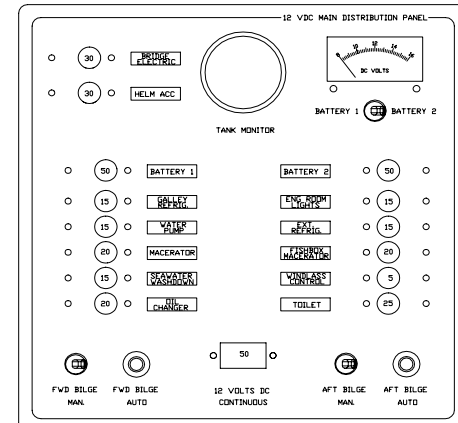

DO NOT INSTALL BREAKER ON ALL OPTIONS COIL WIRE BACK WITH TERMINAL COVERED WITH HEAT SHRINK

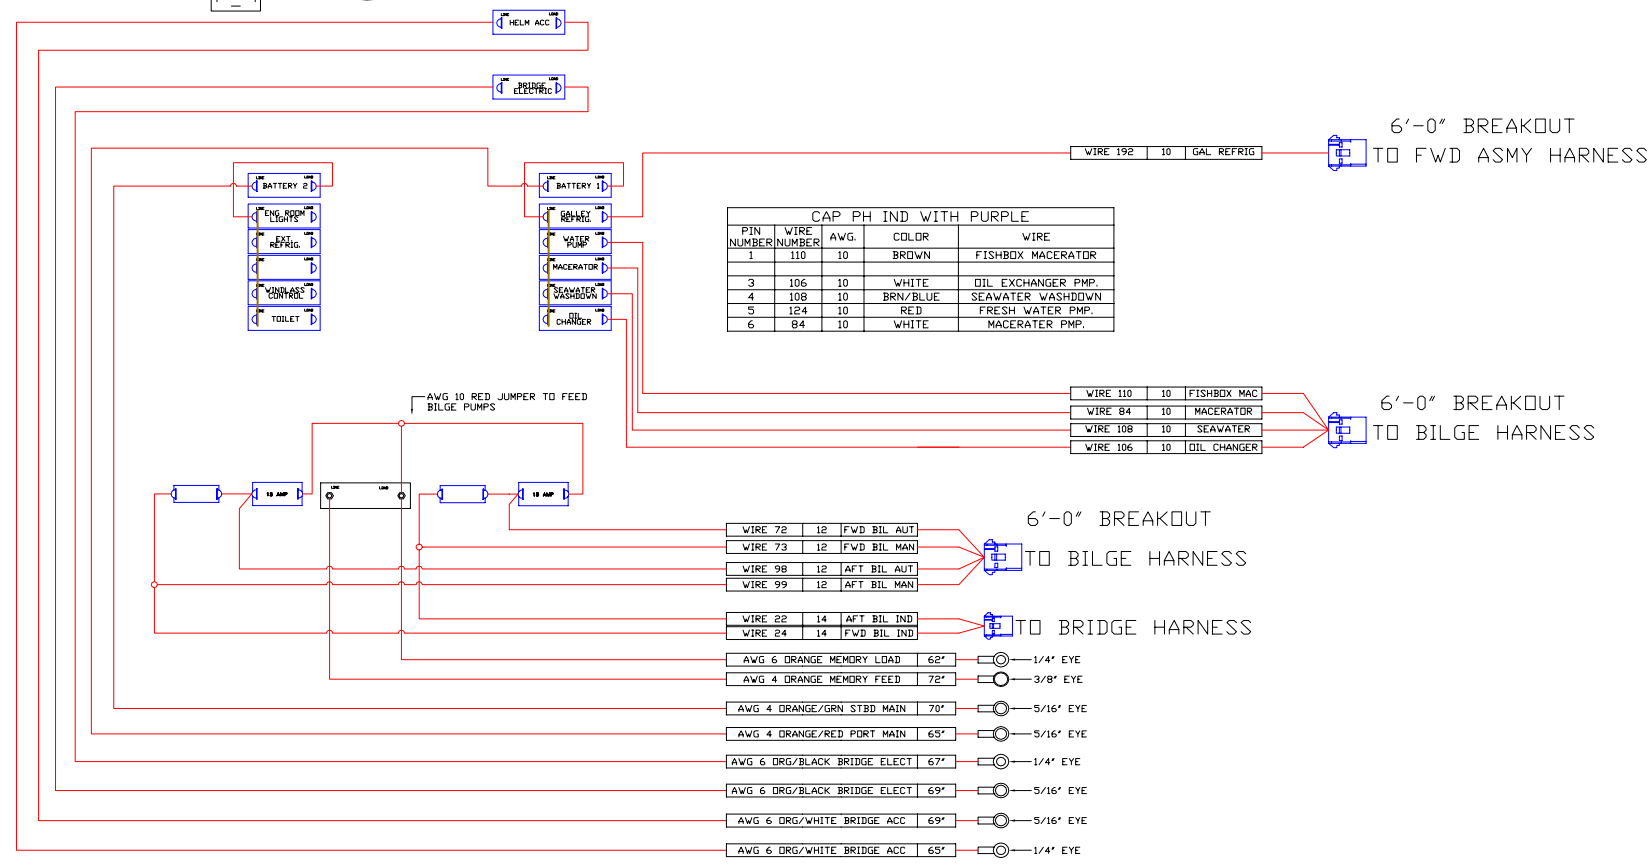

PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	110	10	BROWN	FISHBOX MACERATOR
3	106	10	WHITE	OIL EXCHANGER PMP.
4	108	10	BRN/BLUE	SEAWATER WASHDOWN
5	124	10	RED	FRESH WATER PMP.
6	84	10	WHITE	MACERATOR PMP.


6'-0" BREAKOUT  
TO FWD ASMY HARNESS

6'-0" BREAKOUT  
TO BILGE HARNESS

6'-0" BREAKOUT  
TO BILGE HARNESS

TO BRIDGE HARNESS

- AWG 6 ORANGE MEMORY LOAD 62" 1/4" EYE
- AWG 4 ORANGE MEMORY FEED 72" 3/8" EYE
- AWG 4 ORANGE/GRN STBD MAIN 70" 5/16" EYE
- AWG 4 ORANGE/RED PORT MAIN 65" 5/16" EYE
- AWG 6 DRG/BLACK BRIDGE ELECT 67" 1/4" EYE
- AWG 6 DRG/BLACK BRIDGE ELECT 69" 5/16" EYE
- AWG 6 DRG/WHITE BRIDGE ACC 69" 5/16" EYE
- AWG 6 DRG/WHITE BRIDGE ACC 65" 1/4" EYE

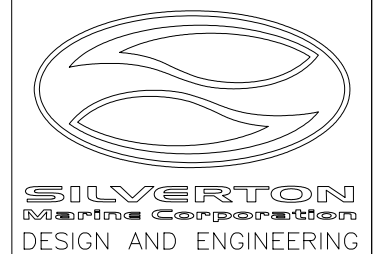

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025


THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

33 Convertible

DC MAIN DIST. PANEL

DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	1-16-06
DRAWING NO.:	
32CEP011606	

SILVERTON PART NO. 1024002



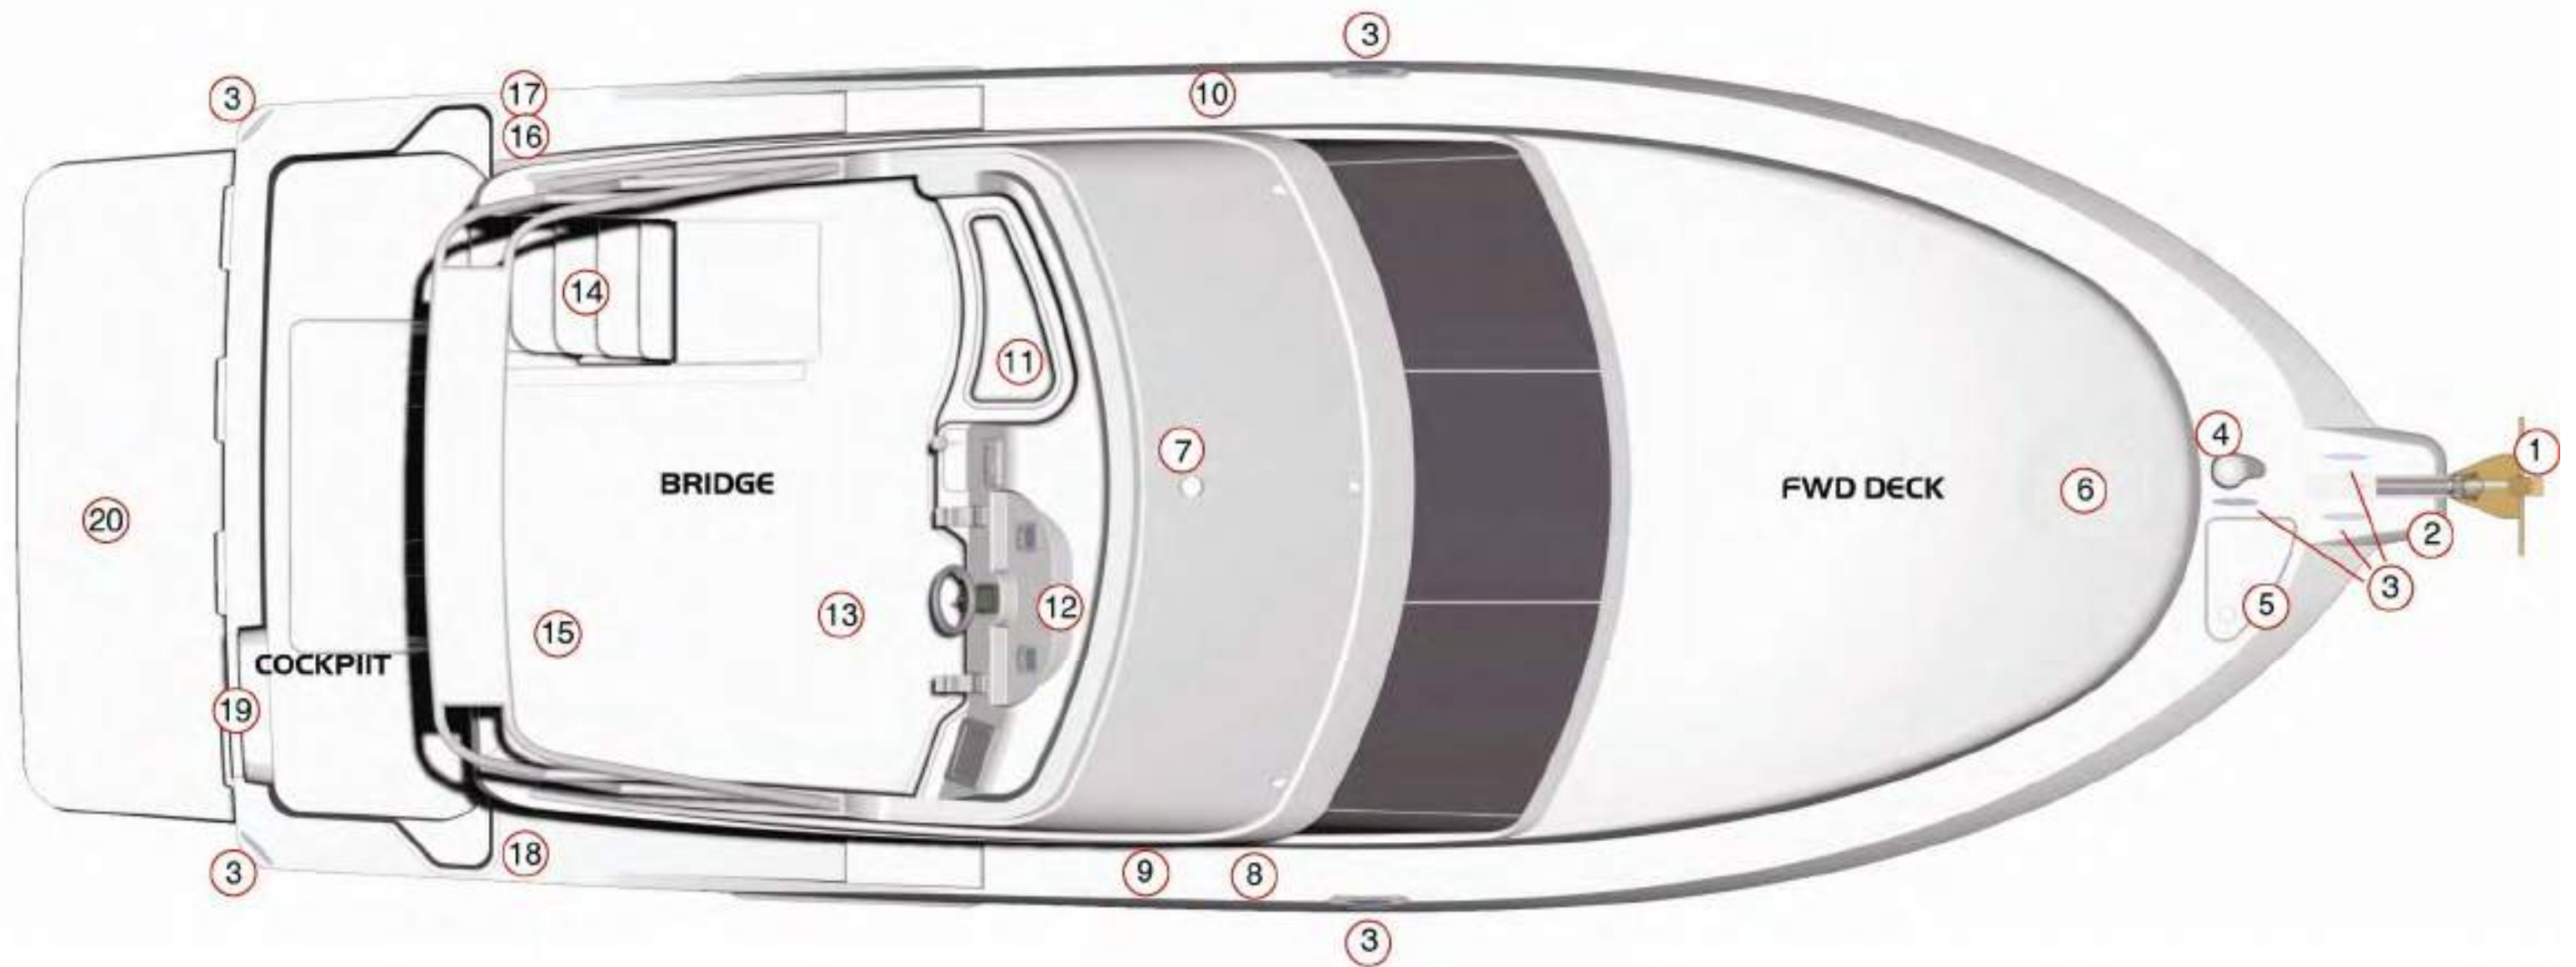


1. Anchor
2. Pulpit
3. Cleats
4. Windlass
5. Rope Locker Hatch
6. Escape Hatch—V-Berth
7. Horn
8. Waste Pump-Out
9. Starboard Sidewalk w/ Aluminum Grab Rail
10. Port Sidewalk w/ Aluminum Grab Rail

11. Forward Lounge
12. Helm
13. Captain's Chair
14. Bridge Access Steps
15. Aft Lounge
16. Water Fill
17. Port Fuel Fill
18. Starboard Fuel Fill
19. Transom door
20. Swim Platform

## 33 Convertible DECK LAYOUT

REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED
		REVISED 1/23/96	JBP	

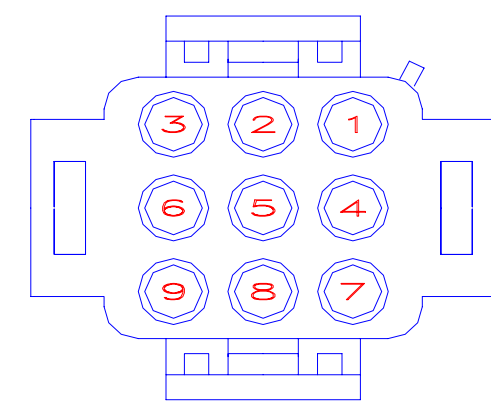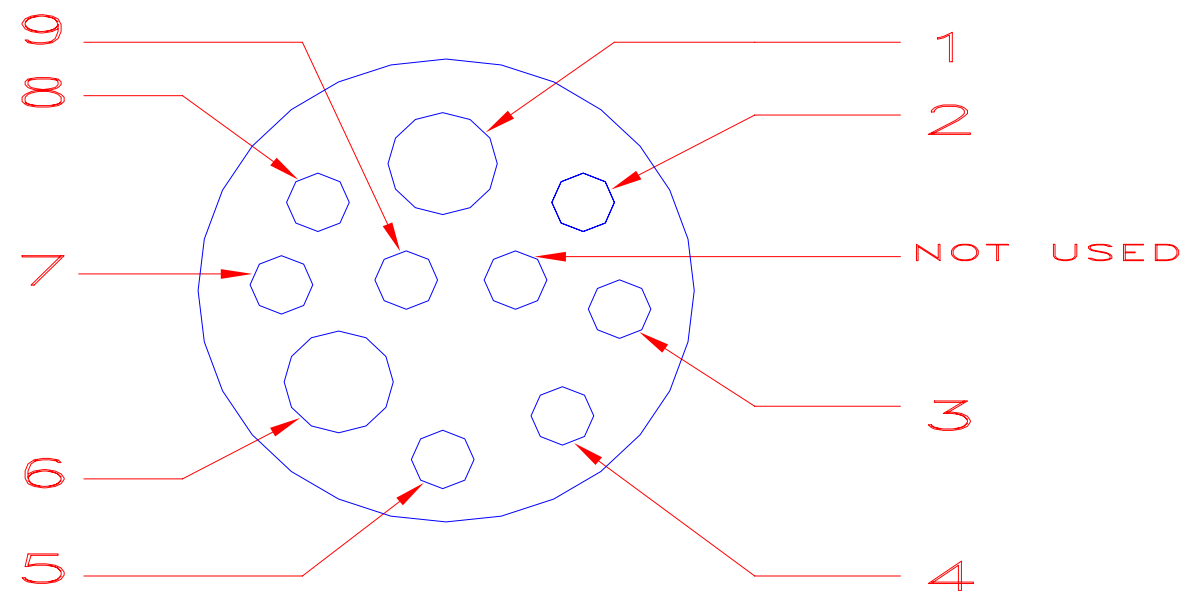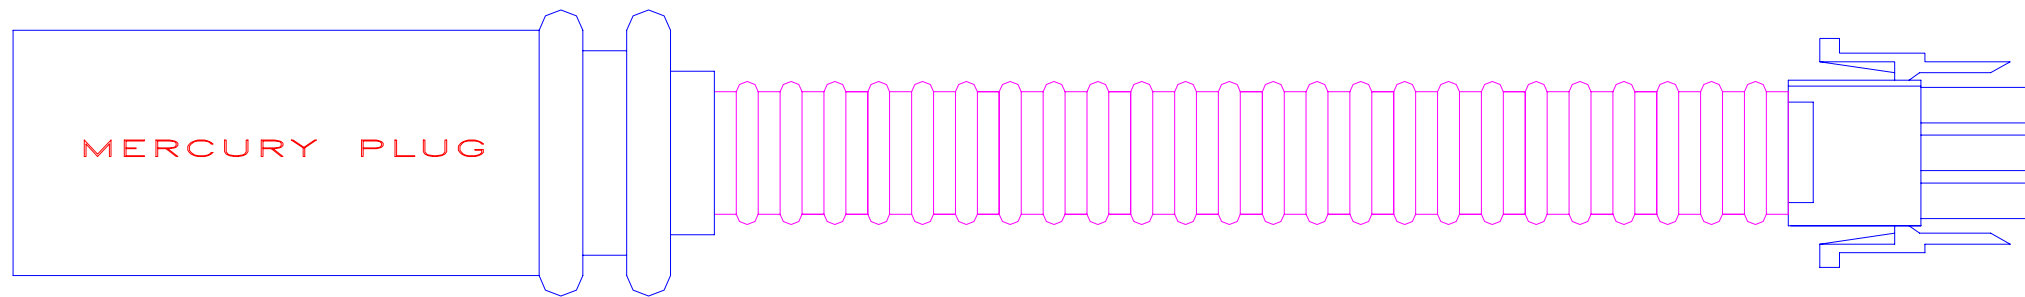

AMP PLUG NO. 350720-1




NO	COLOR	GA	CIRCUIT	LTH
1	BLACK	10	GROUND	40'-0"
2	GREY	14	TACH	40'-0"
3	TAN	14	WATER TEMP	40'-0"
4	LT. BLU/TAN	14	ALARM	40'-0"
5	PURPLE	14	IGNITION	40'-0"
6	RED/PURP.	10	BATTERY	40'-0"
7	YELL/RED	12	STARTER	40'-0"
8	LT. BLUE	14	OIL PRESS.	40'-0"
9	ORG/BRN	14	SERVICE LT.	40'-0"

**Silverton**  
Y A C H T  
S. RACE & RIVERSIDE DR.  
MILLVILLE N.J.  
08332  
856-825-4117  
(FAX) 856-825-2898

<b>33 Convertible</b>			
CRUSADER PORT ENGINE HARNESS 40'			
SIZE	FSCM NO.	DWG NO.	REV
		32C000401D	
SCALE		6.30.01	SHEET



REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED

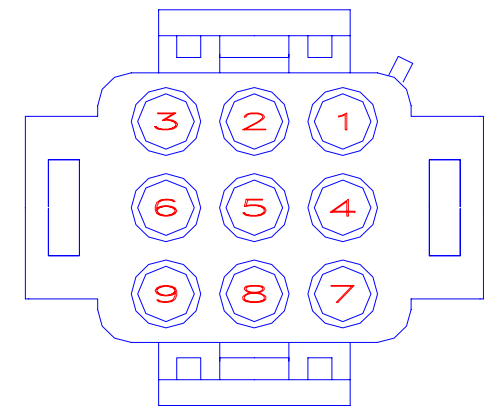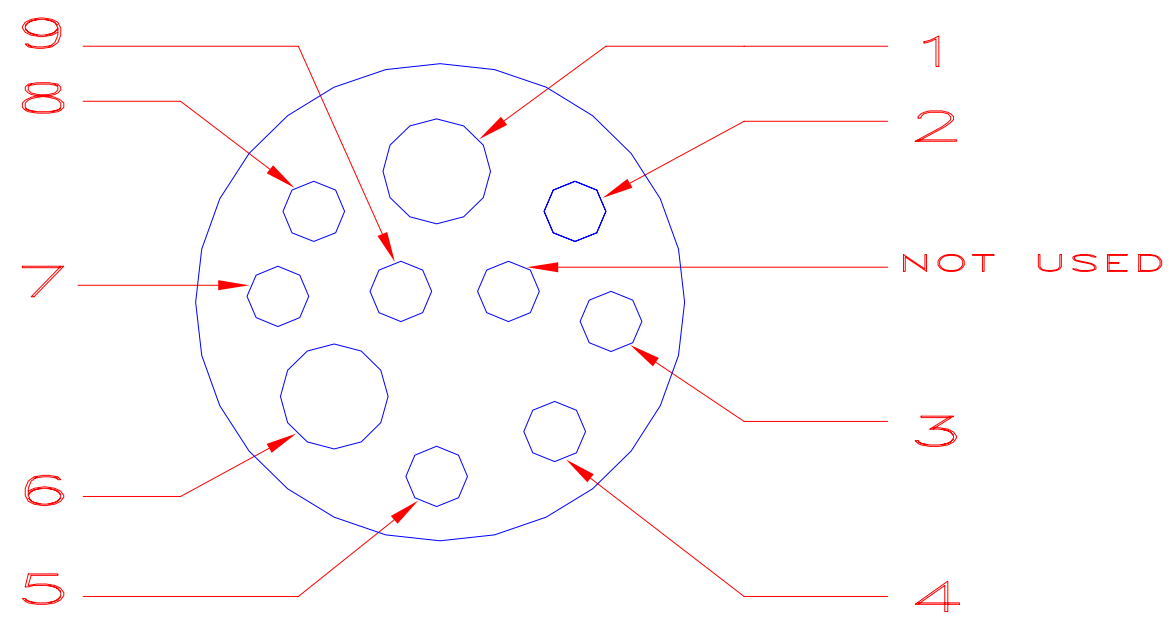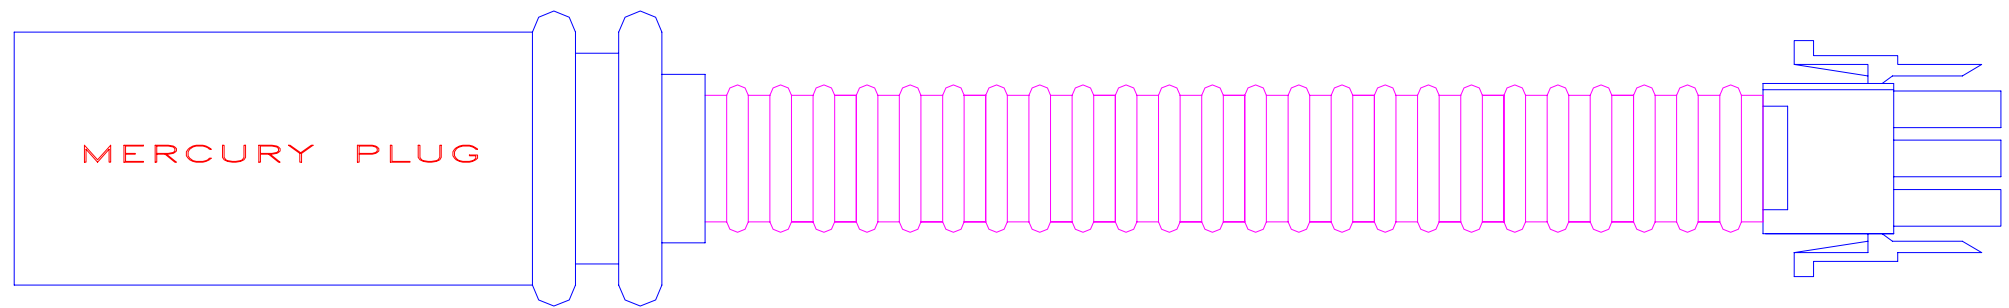


AMP PLUG NO. 350720-1

NO	COLOR	GA	CIRCUIT	LTH
1	BLACK	10	GROUND	45'-0"
2	GREY	14	TACH	45'-0"
3	TAN	14	WATER TEMP	45'-0"
4	LT. BLU/TAN	14	ALARM	45'-0"
5	PURPLE	14	IGNITION	45'-0"
6	RED/PURP.	10	BATTERY	45'-0"
7	YELL/RED	12	STARTER	45'-0"
8	LT. BLUE	14	OIL PRESS.	45'-0"
9	ORG/BRN	14	SERVICE LT.	45'-0"

**Silverton**  
Y A C H T  
S. RACE & RIVERSIDE DR.  
MILLVILLE N.J.  
08332  
856-825-4117  
(FAX) 856-825-2898

<b>33 Convertible</b>			
CRUSADER STBD. ENGINE HARNESS 45'			
SIZE	FSCM NO.	DWG NO.	REV
		32C000501D	
SCALE	6.30.01		SHEET

DATE	REVISIONS	DATE	DISTRIBUTION

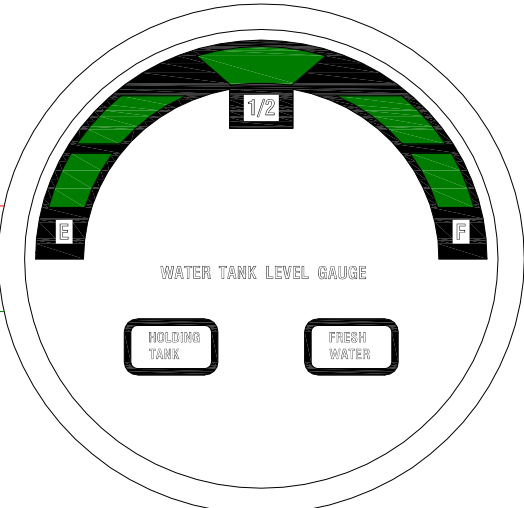

1/2 AMP FUSE

RED  
WHITE  
BLACK  
GREEN


ORANGE/BLACK 86

YELLOW 87


ORANGE/WHITE 126

YELLOW 126

GROUND BUSS

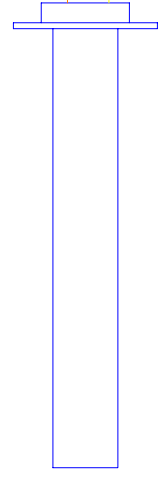


WASTE SENDER

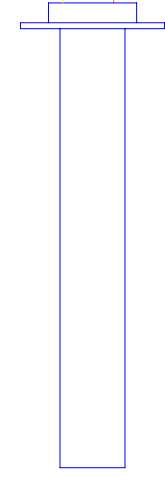

WATER SENDER

		<b>33 Convertible</b>		
		FIREBOY TANK MONITOR		
SIZE	DWN BY	DWG NO.	REV	
	PRJ	EA091505		
SCALE	DATE:	SHEET NO.		
	4-19-06			

S. RACE & RIVERSIDE DR.  
MILLVILLE N.J.  
08332  
609-825-4117  
(FAX) 609-293-8025

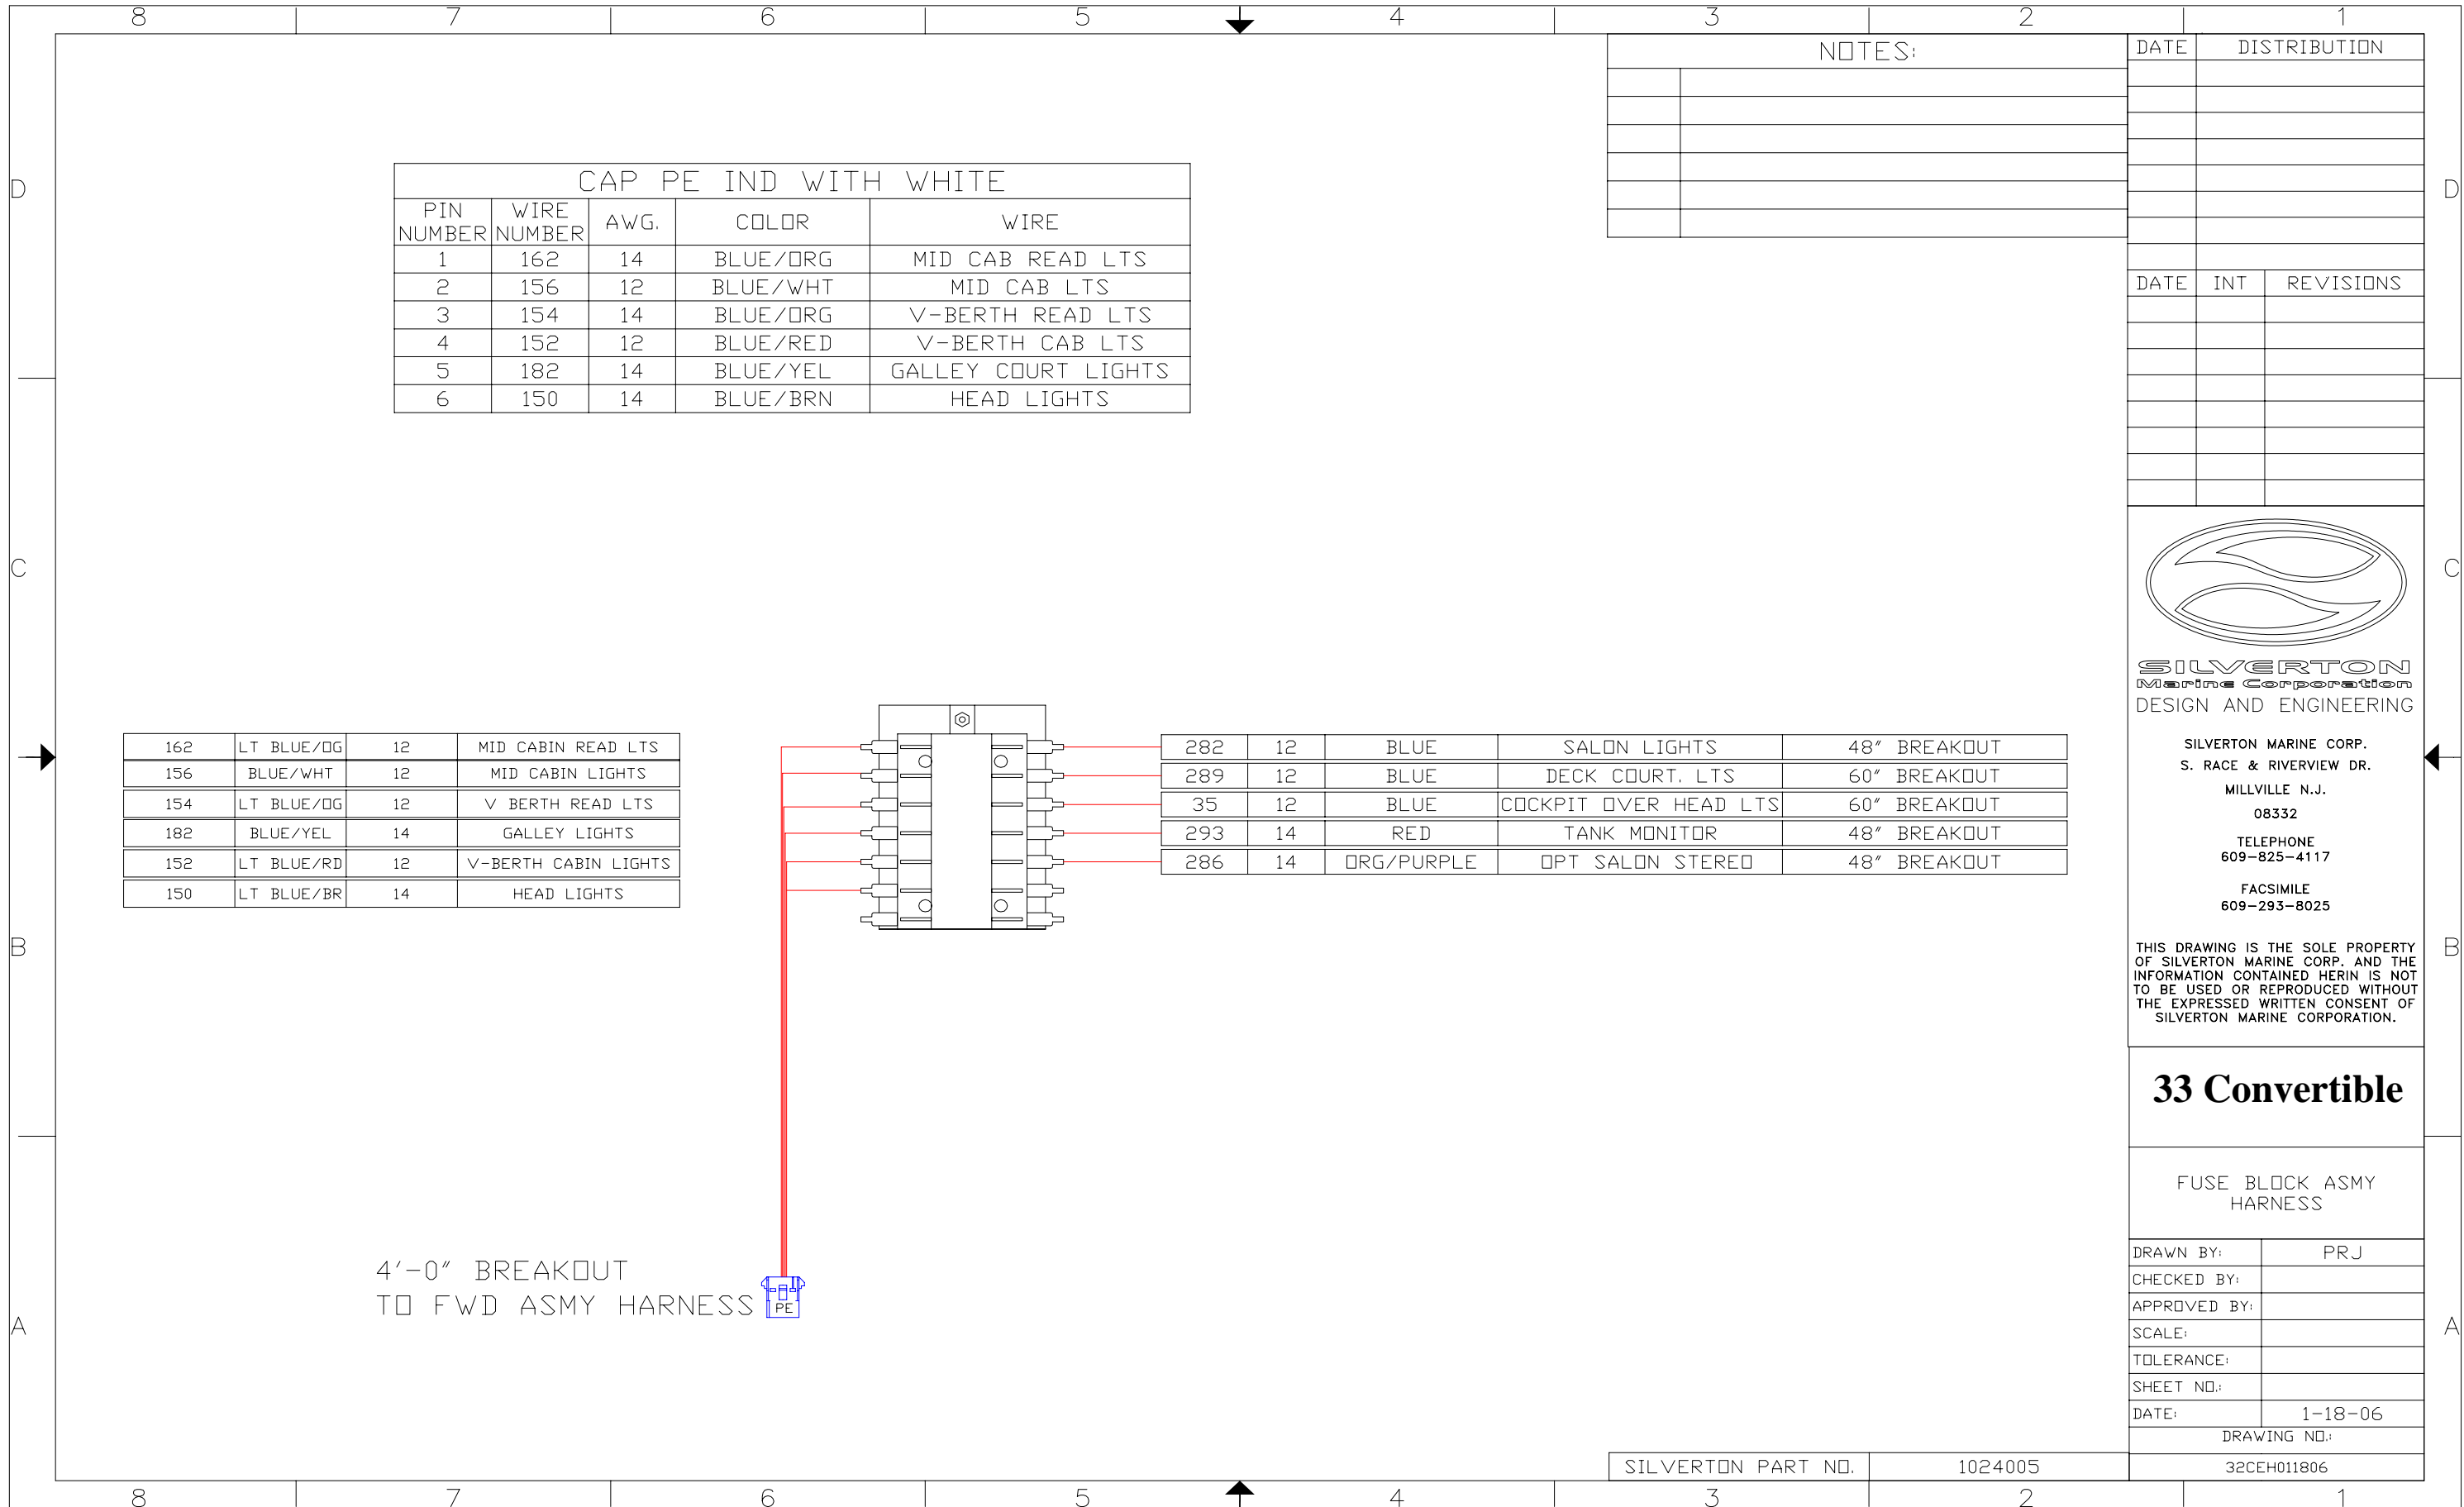


CAP PE IND WITH WHITE				
PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	162	14	BLUE/ORG	MID CAB READ LTS
2	156	12	BLUE/WHT	MID CAB LTS
3	154	14	BLUE/ORG	V-BERTH READ LTS
4	152	12	BLUE/RED	V-BERTH CAB LTS
5	182	14	BLUE/YEL	GALLEY COURT LIGHTS
6	150	14	BLUE/BRN	HEAD LIGHTS

162	LT BLUE/DG	12	MID CABIN READ LTS
156	BLUE/WHT	12	MID CABIN LIGHTS
154	LT BLUE/DG	12	V BERTH READ LTS
182	BLUE/YEL	14	GALLEY LIGHTS
152	LT BLUE/RD	12	V-BERTH CABIN LIGHTS
150	LT BLUE/BR	14	HEAD LIGHTS

282	12	BLUE	SALON LIGHTS	48" BREAKOUT
289	12	BLUE	DECK COURT. LTS	60" BREAKOUT
35	12	BLUE	COCKPIT OVER HEAD LTS	60" BREAKOUT
293	14	RED	TANK MONITOR	48" BREAKOUT
286	14	ORG/PURPLE	OPT SALON STEREO	48" BREAKOUT

NOTES:		DATE	DISTRIBUTION

DATE	INT	REVISIONS

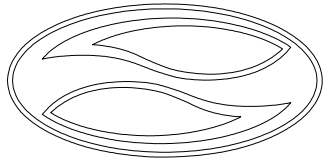

SILVERTON  
Marine Corporation  
DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025

THIS DRAWING IS THE SOLE PROPERTY  
OF SILVERTON MARINE CORP. AND THE  
INFORMATION CONTAINED HEREIN IS NOT  
TO BE USED OR REPRODUCED WITHOUT  
THE EXPRESSED WRITTEN CONSENT OF  
SILVERTON MARINE CORPORATION.

**33 Convertible**

FUSE BLOCK ASMY  
HARNESS

DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	1-18-06
DRAWING NO.:	
32CEH011806	

SILVERTON PART NO. 1024005

WIRE NO.	COLOR	GAUGE	CIRCUIT	LENGTH
152	LT BLUE/RD	12	V-BERTH CABIN LIGHTS	39'-0"
153	YELLOW	12	V-BERTH CABIN LTS GRD	39'-0"
182L	BLUE	14	GALLEY COURT LTS	10'-2"
182	BLUE	14	GALLEY COURT LTS	26'-2"
183	YELLOW	14	GALLEY COURT LTS GRD	19'-0"
176	WHITE/DRG	14	FWD CO MONITOR	29'-0"
177	YELLOW	14	FWD CO MONITOR GRD	29'-0"
154	LT BLUE/DG	14	V BERTH READ LTS	42'-0"
155	YELLOW	14	V BERTH READ LTS GRD	42'-0"
192	RED/BLK	10	GALLEY REFRIGERATOR	31'-0"
193	YELLOW	10	GALLEY REFRIG. GRD.	31'-0"
178	WHITE/DRG	14	MID CO MONITOR	3'-0"
179	YELLOW	14	MID CO MONITOR GRD	3'-0"
156	BLUE/WHT	12	MID CABIN LIGHTS	31'-6"
157	YELLOW	12	MID CABIN LIGHTS GRD	31'-6"
162	LT BLUE/DG	14	MID CABIN READ LTS	14'-0"
163	YELLOW	14	MID CABIN READ LTS GRD	14'-0"
FIPS	CLEAR	16/2	FWD INT. PORT SPK	48'-0"
FISS	CLEAR	16/2	FWD INT. STBD SPK	51'-0"
150	BLUE/BRN	14	HEAD LIGHTS	59'-6"
151	YELLOW	14	HEAD LIGHTS GRD.	46'-6"

PLUG PE IND WITH WHITE				
PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	162	14	BLUE/DRG	MID CAB READ LTS
2	156	12	BLUE/WHT	MID CAB LTS
3	154	14	BLUE/DRG	V-BERTH READ LTS
4	152	12	BLUE/RED	V-BERTH CAB LTS
5	182	14	BLUE/YEL	GALLEY COURT LIGHTS
6	150	14	BLUE/BRN	HEAD LIGHTS

PLUG PA IND WITH ORANGE				
PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	178	14	WHT/DRG	MID CAB CO MONITOR
2	176	14	WHT/DRG	FWD CAB CO MONITOR



PLUG PR IND WITH GREEN				
PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	192	10	RED/BLK	GALLEY REFRIG
2	-	-	-	-

PLUG PC IND WITH YELLOW				
PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	153	12	YELLOW	V-BERTH CAB LTS GRD
2	135	12	YELLOW	GALLEY LTS GRD
3	177	14	YELLOW	FWD CO MON GRD
4	155	14	YELLOW	V-BERTH READ LT GRD
5	193	10	YELLOW	GALLEY REFRIG GRD
6	179	14	YELLOW	MID CO MON GRD
7	157	12	YELLOW	MID CAB LTS GRD
8	163	14	YELLOW	MID CAB READ LT GRD
9	-	-	-	-

NOTES:

ADD 6'-0" TO FWD CO MONITOR BREAKOUT

REV: 5-17-06 ADD 4'-0" TO SPEAKER WIRES

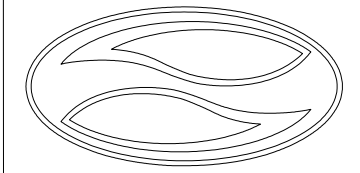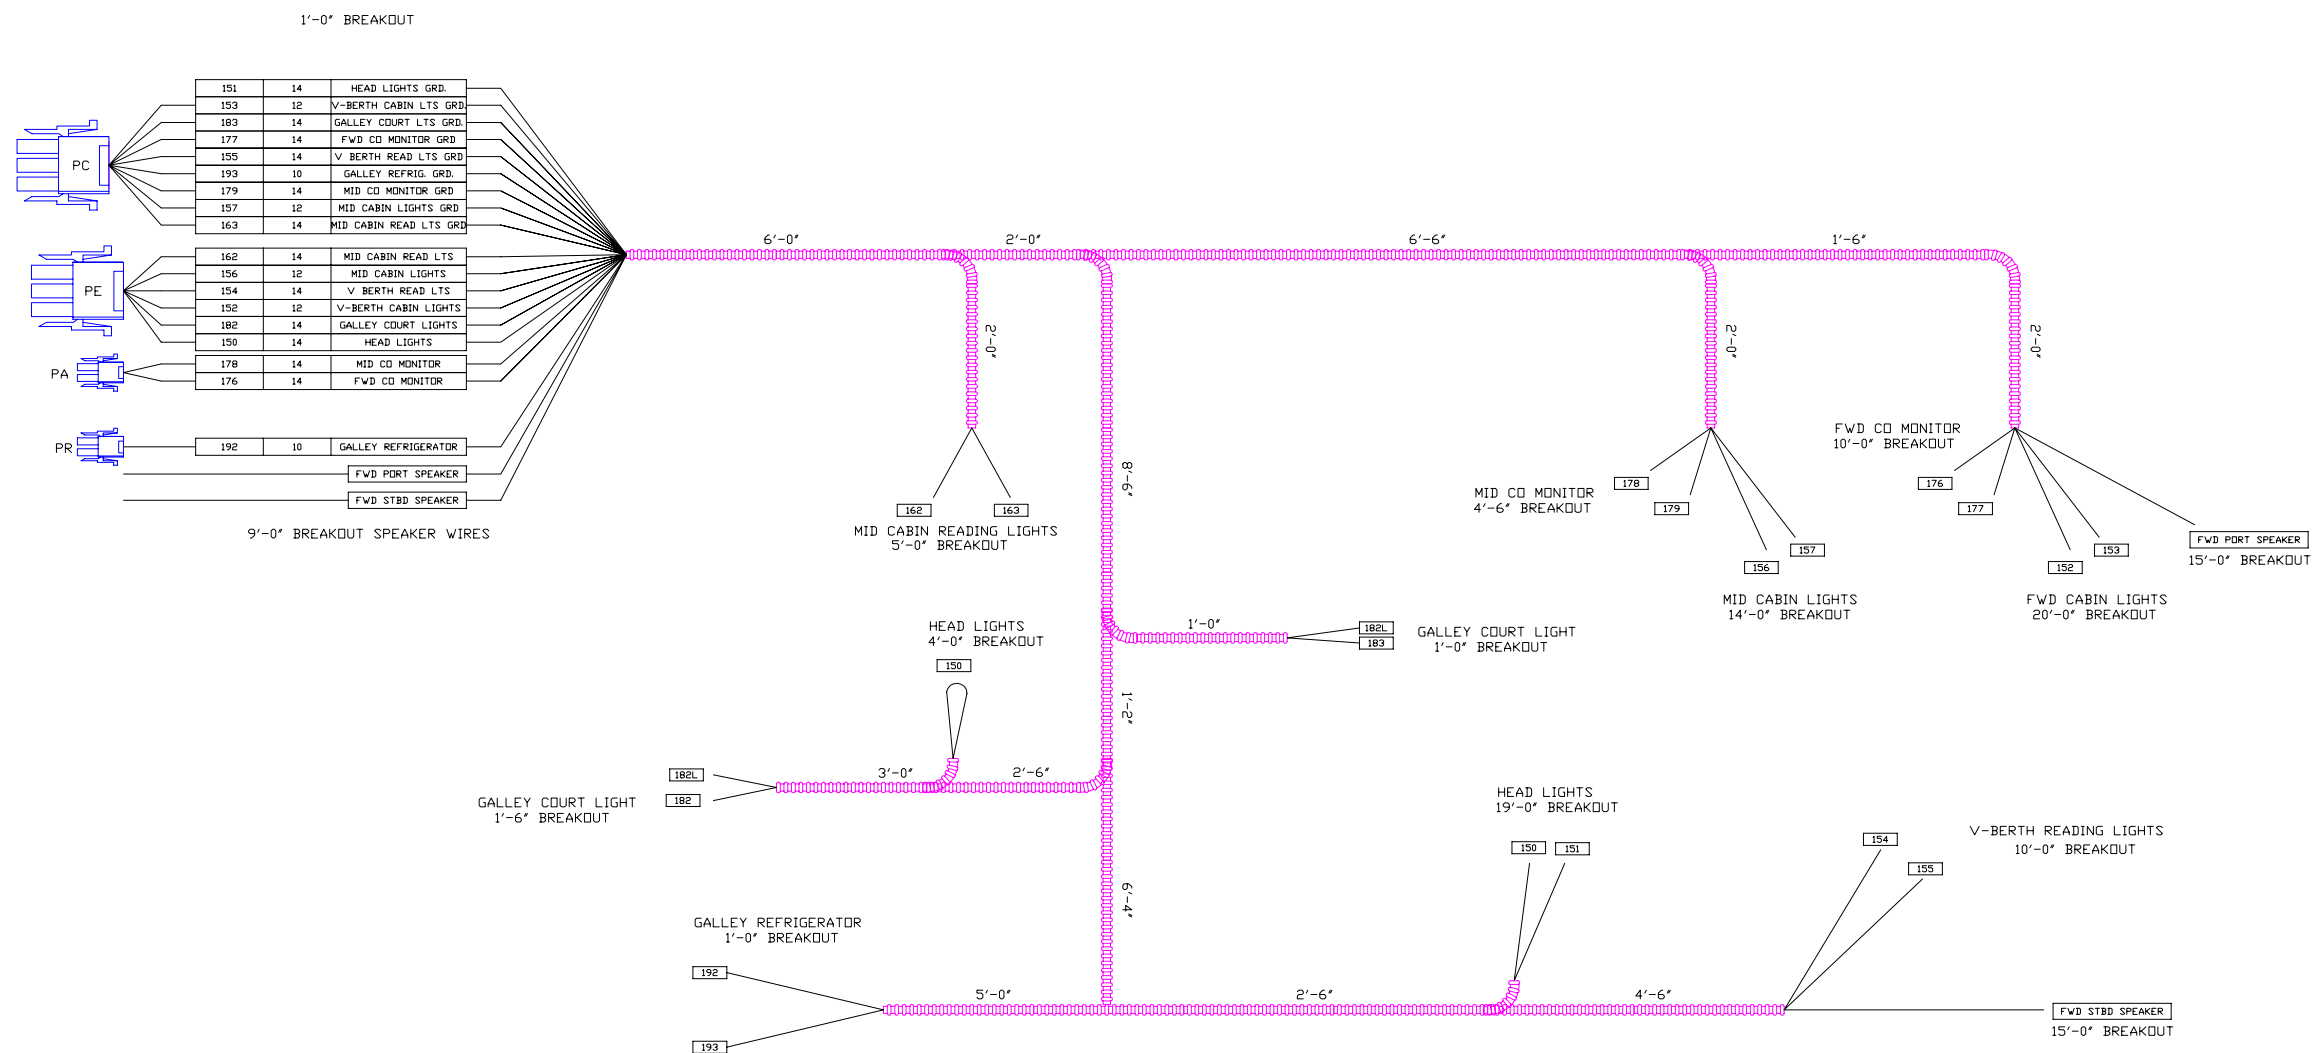

SILVERTON  
Marine Corporation  
DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025

THIS DRAWING IS THE SOLE PROPERTY  
OF SILVERTON MARINE CORP. AND THE  
INFORMATION CONTAINED HERIN IS NOT  
TO BE USED OR REPRODUCED WITHOUT  
THE EXPRESSED WRITTEN CONSENT OF  
SILVERTON MARINE CORPORATION.

**33 Convertible**

FWD ASMY HARNESS

DRAWN BY: PRJ

CHECKED BY:

APPROVED BY:

SCALE:

TOLERANCE:

SHEET NO.:

DATE: 1-12-06

DRAWING NO.:

SILVERTON PART NO.

1023993


32CEH011206

- BLACK WIRE HOT
- GREEN WIRE EARTH GRD.
- WHITE WIRE NEUTRAL

NOTES:	


DATE	DISTRIBUTION

DATE	INT	REVISIONS

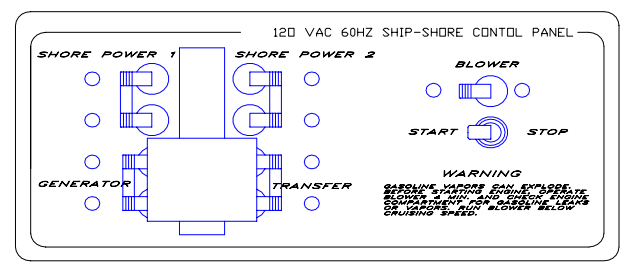


WIRE G9	10	YELLOW/BLACK	ENG ROOM BLOWER	3'-0"
WIRE G9	10	YELLOW/BLACK	ENG ROOM BLOWER	3'-0"

10 AWG MOLEX CONNECTOR  
PART NUMBER 19403-1300

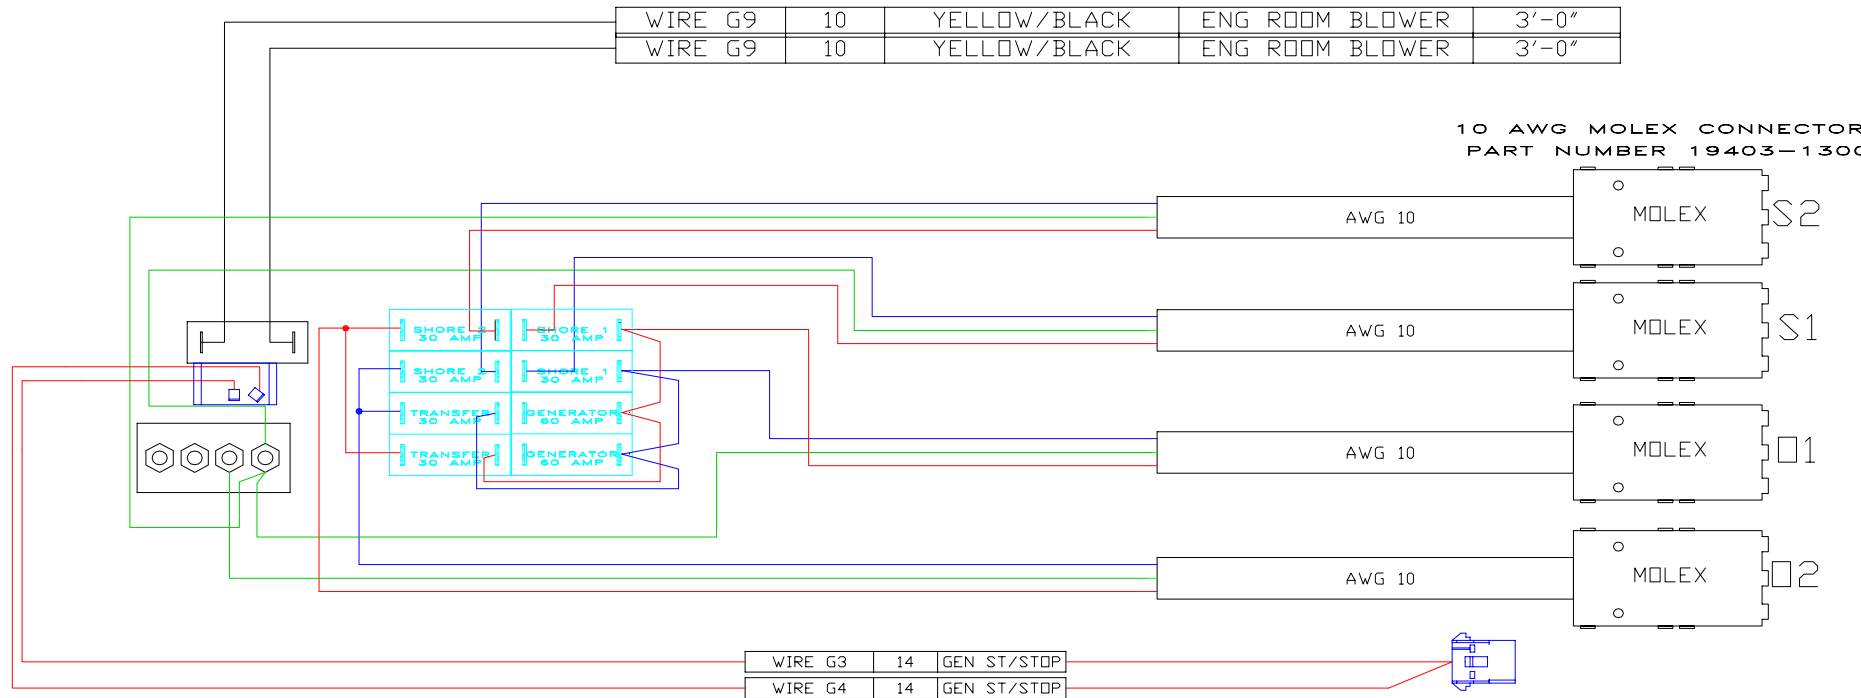

CAP				
PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	G3	14	WHITE	GEN START/STOP
2	G4	14	WHITE	GEN START/STOP

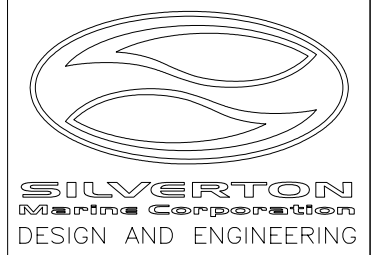

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025


THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.


### 33 Convertible

OPTIONAL GENERATOR TRANSFER PANEL

DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	1-19-06
DRAWING NO.:	
32CEP011906	

SILVERTON PART NO.

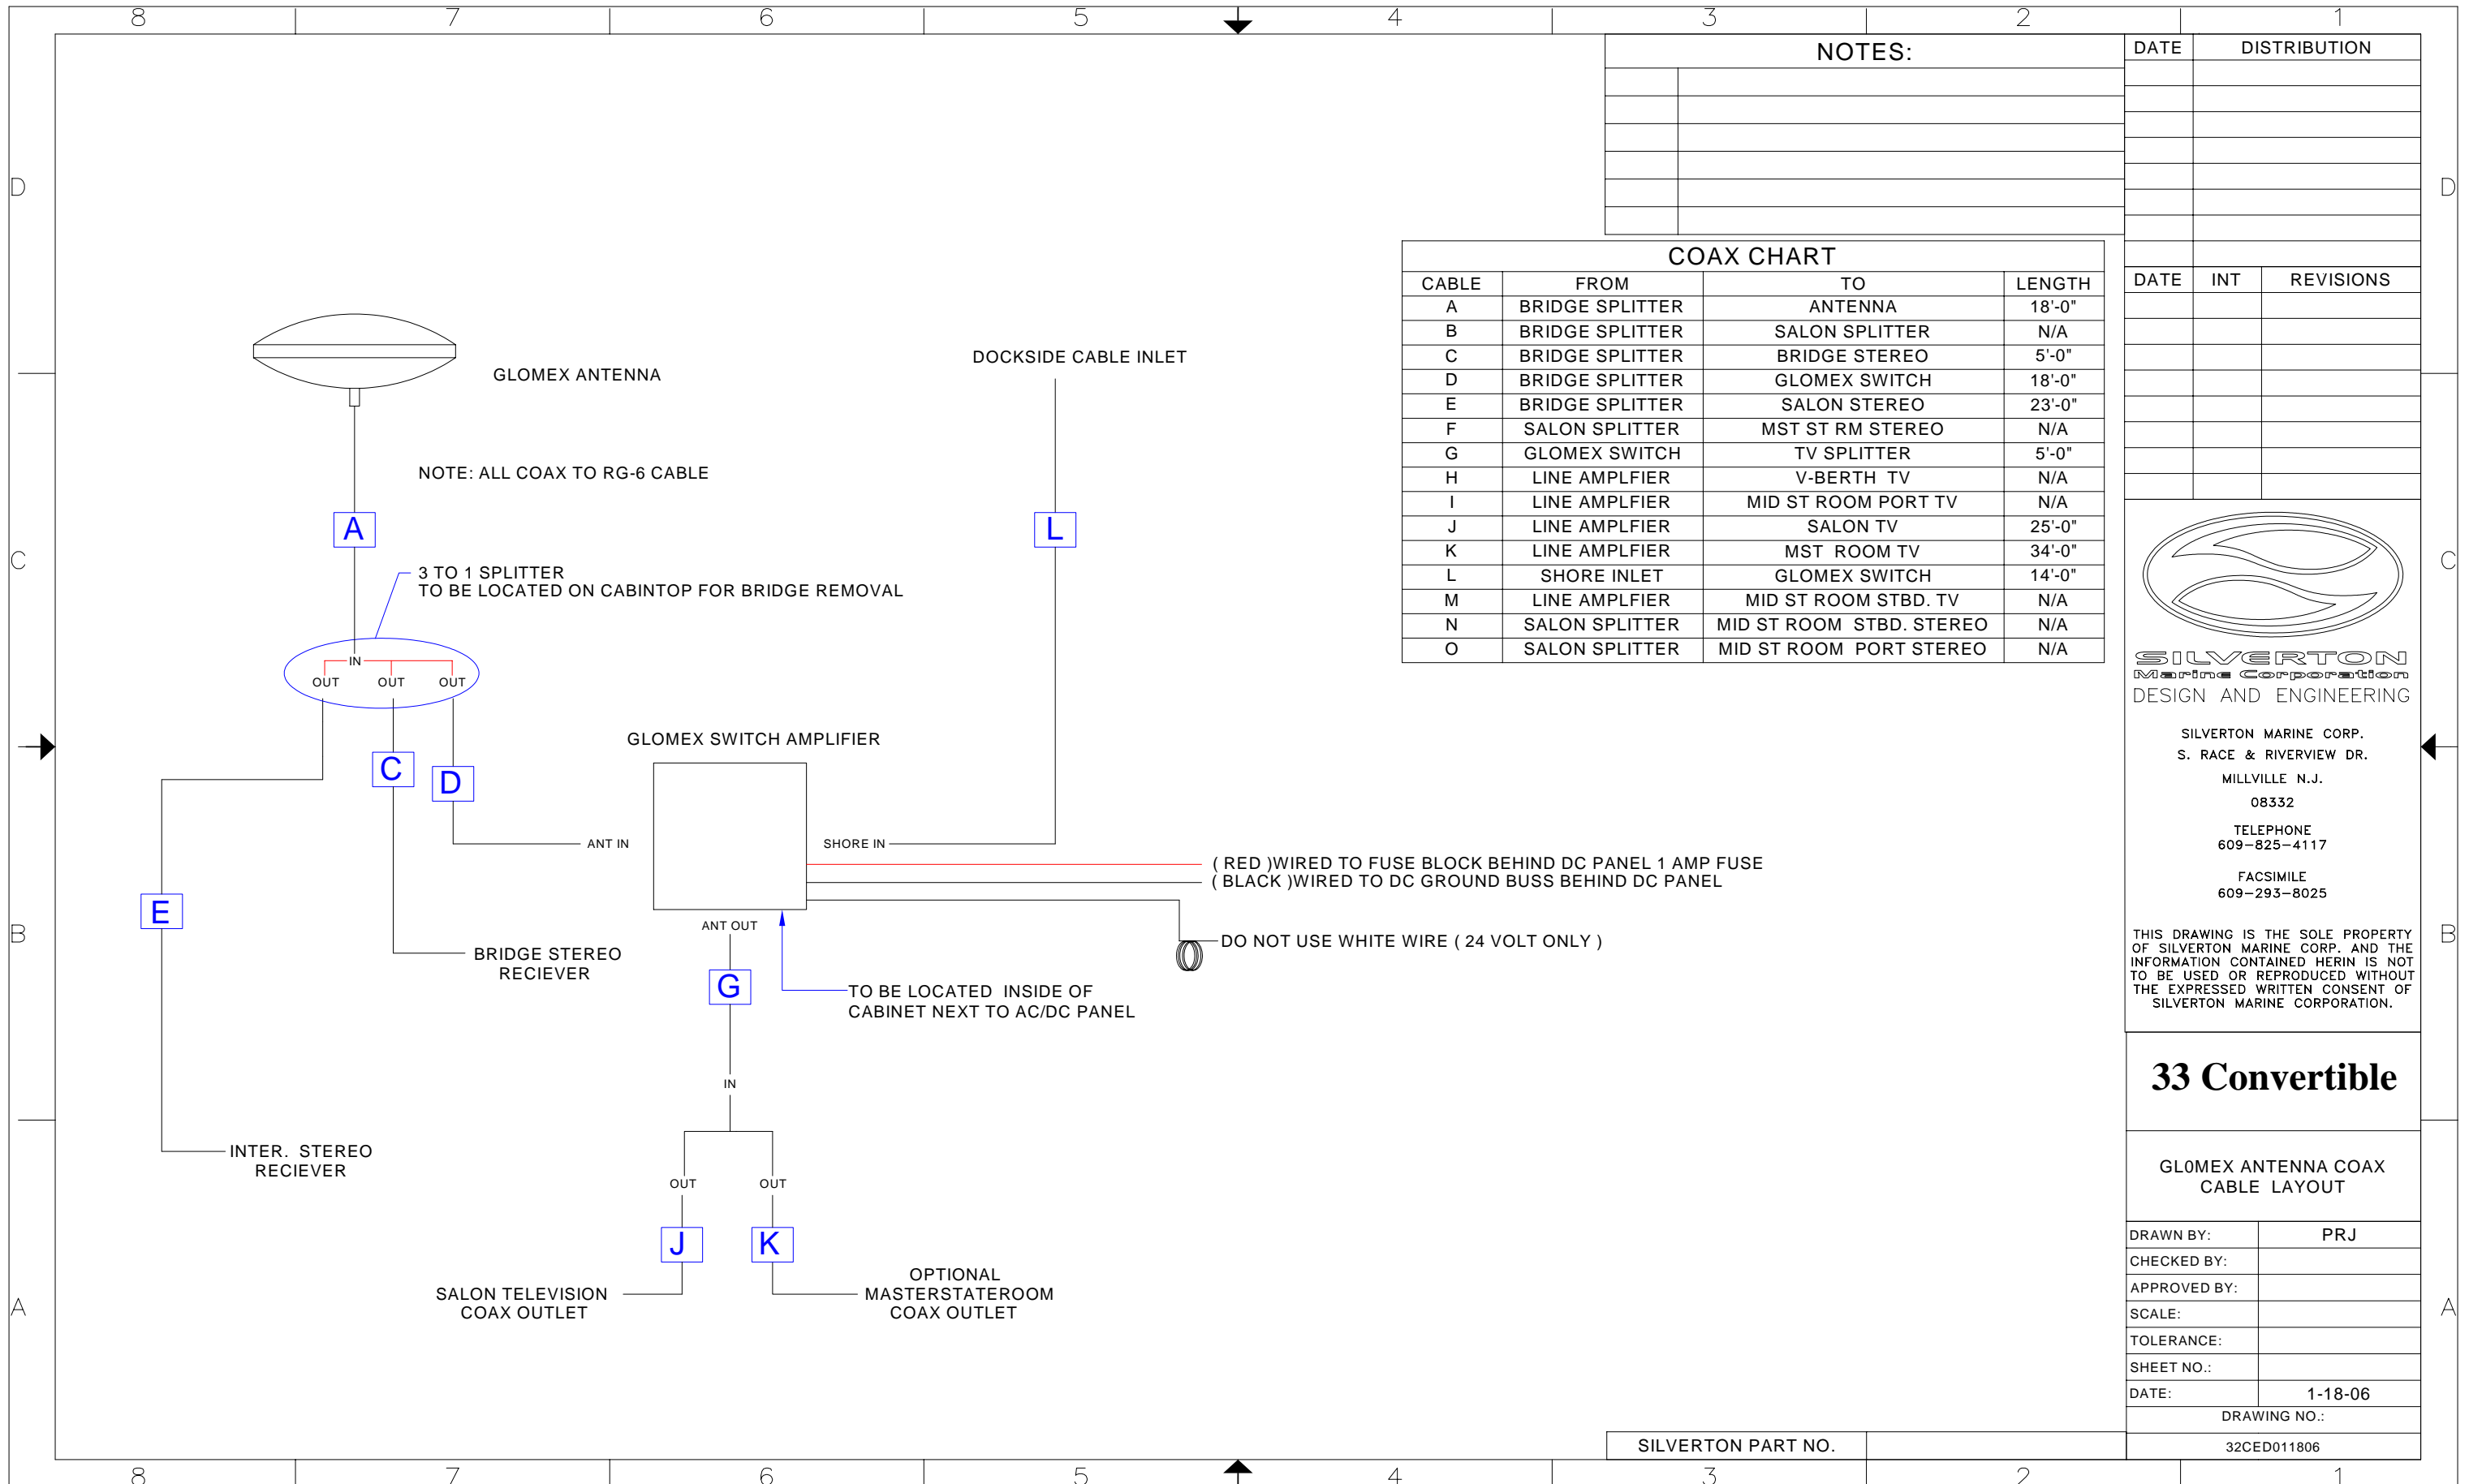

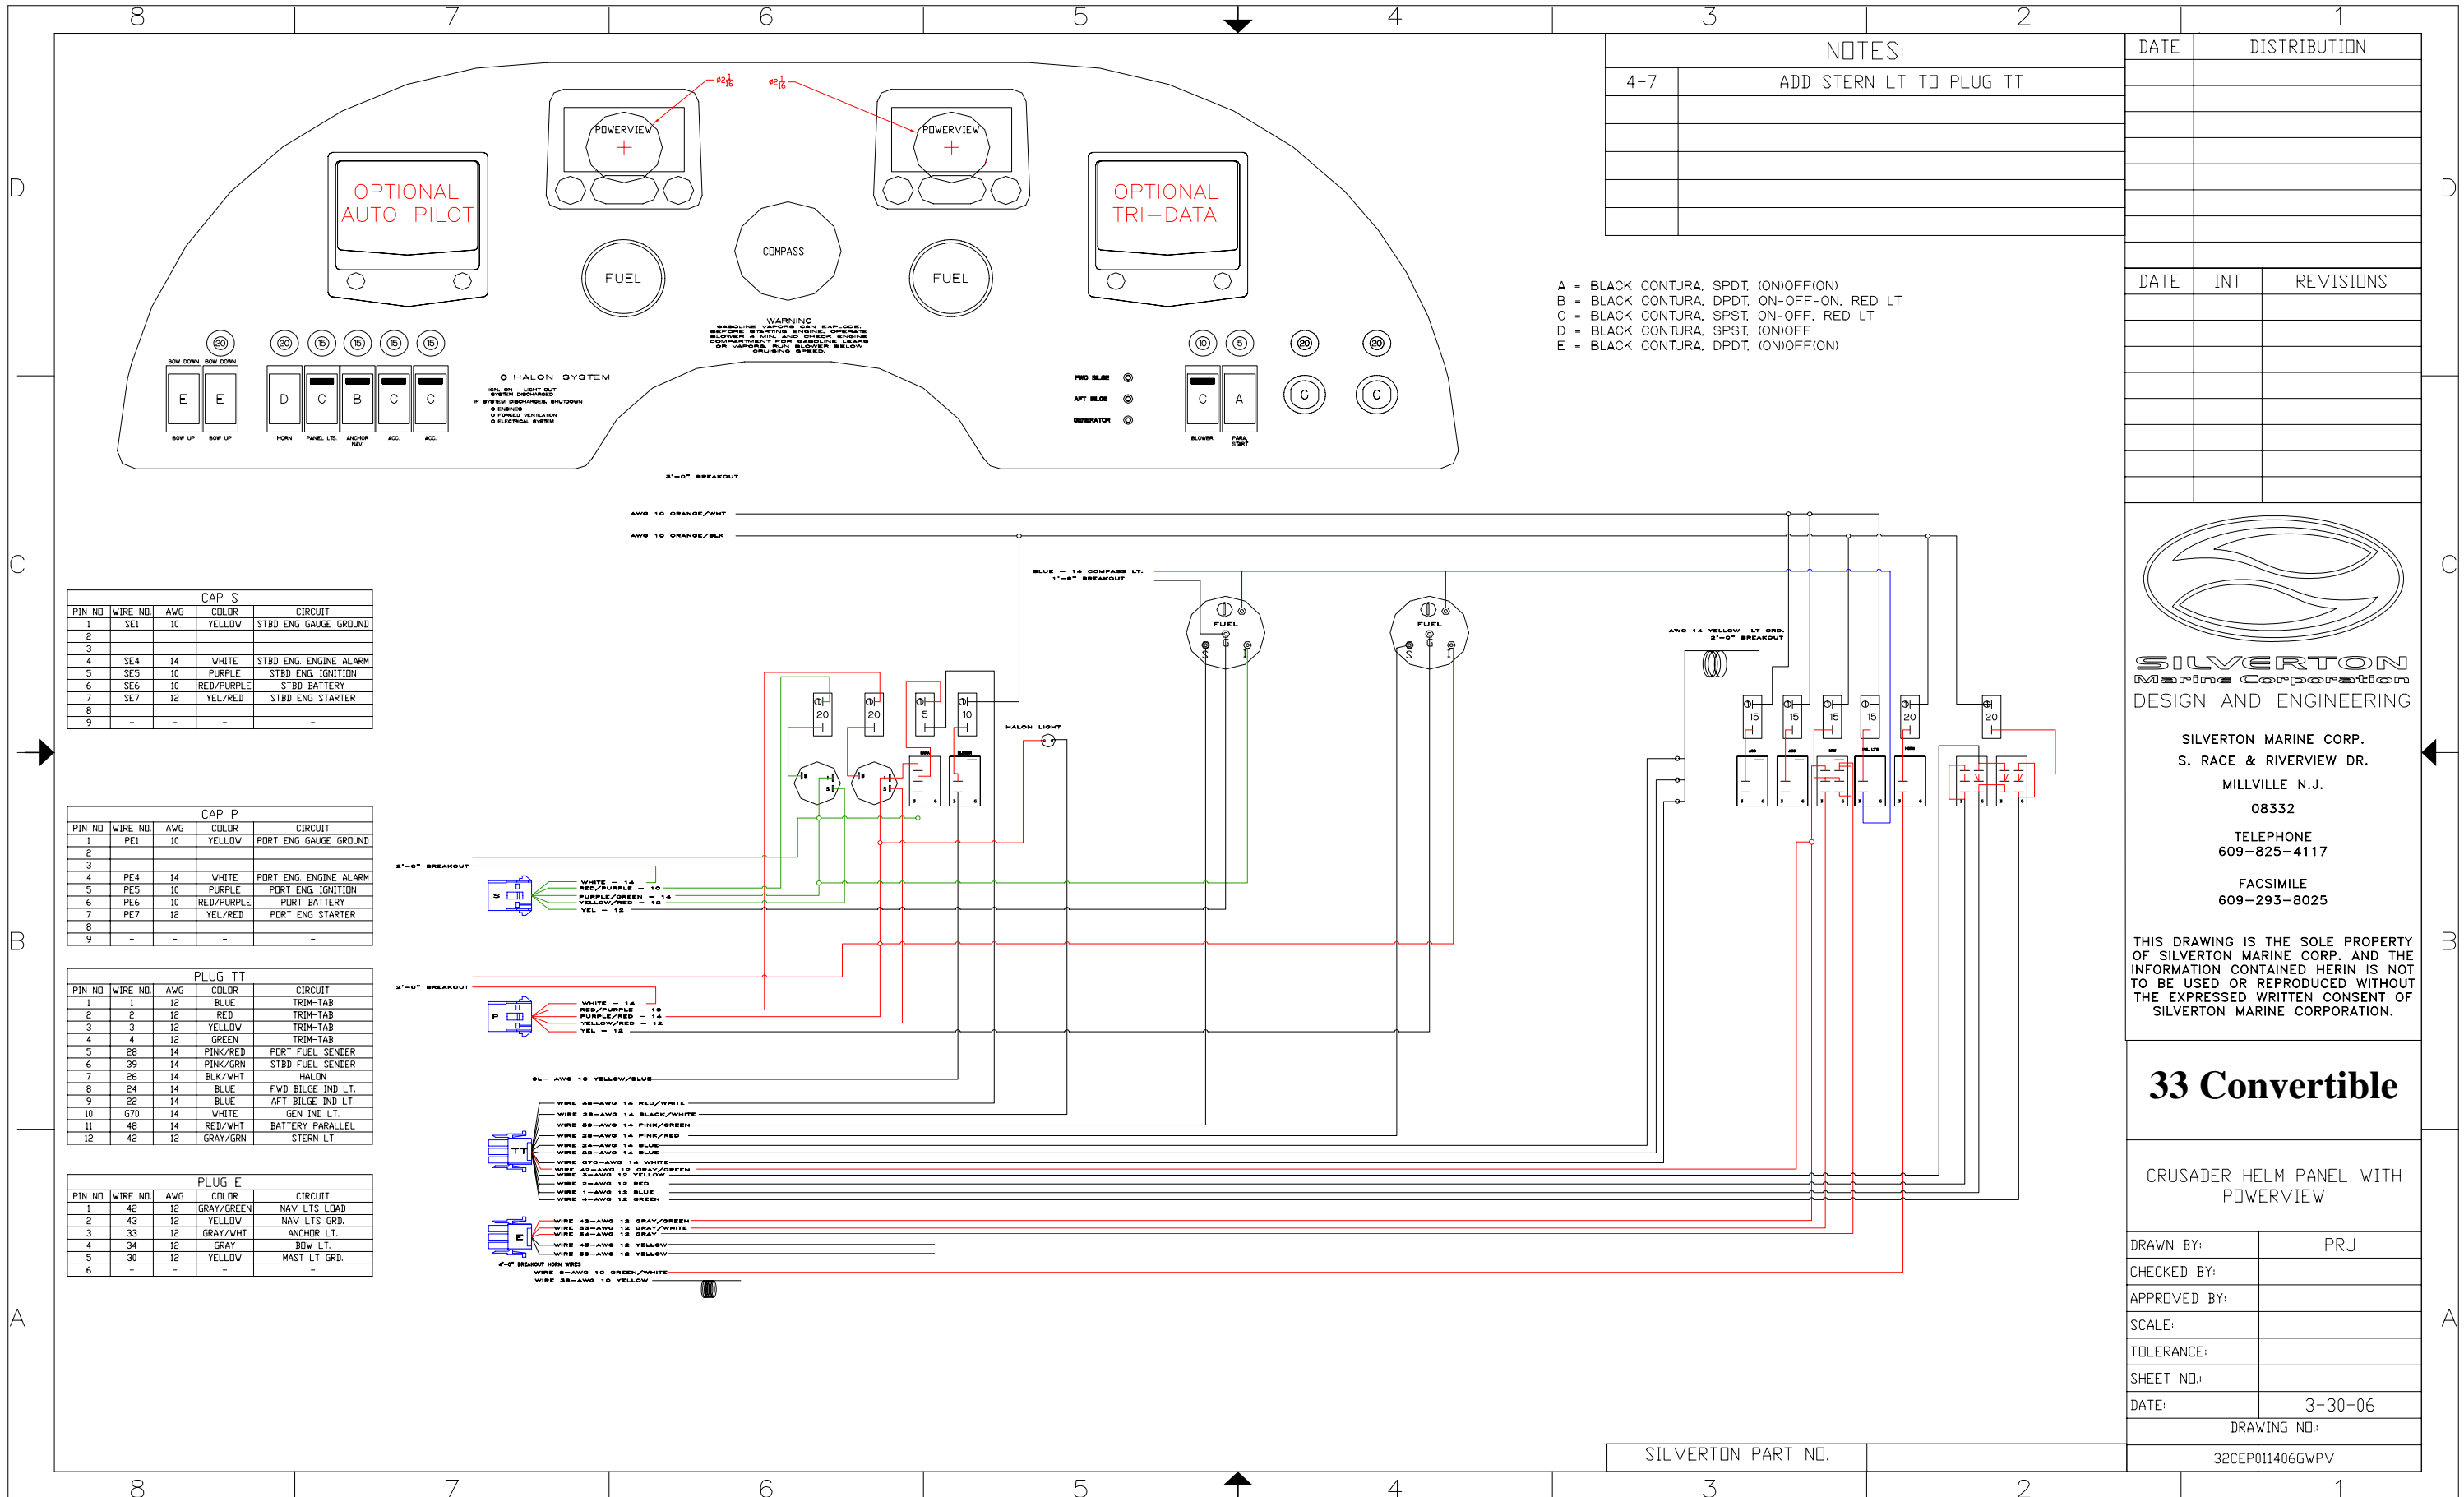


CAP S				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	SE1	10	YELLOW	STBD ENG GAUGE GROUND
2				
3				
4	SE4	14	WHITE	STBD ENG. ENGINE ALARM
5	SE5	10	PURPLE	STBD ENG. IGNITION
6	SE6	10	RED/PURPLE	STBD BATTERY
7	SE7	12	YEL/RED	STBD ENG STARTER
8				
9				

CAP P				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	PE1	10	YELLOW	PORT ENG GAUGE GROUND
2				
3				
4	PE4	14	WHITE	PORT ENG. ENGINE ALARM
5	PE5	10	PURPLE	PORT ENG. IGNITION
6	PE6	10	RED/PURPLE	PORT BATTERY
7	PE7	12	YEL/RED	PORT ENG STARTER
8				
9				

PLUG TT				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	1	12	BLUE	TRIM-TAB
2	2	12	RED	TRIM-TAB
3	3	12	YELLOW	TRIM-TAB
4	4	12	GREEN	TRIM-TAB
5	28	14	PINK/RED	PORT FUEL SENDER
6	39	14	PINK/GRN	STBD FUEL SENDER
7	26	14	BLK/WHT	HALON
8	24	14	BLUE	FWD BILGE IND LT.
9	22	14	BLUE	AFT BILGE IND LT.
10	G70	14	WHITE	GEN IND LT.
11	48	14	RED/WHT	BATTERY PARALLEL
12	42	12	GRAY/GRN	STERN LT

PLUG E				
PIN NO.	WIRE NO.	AWG	COLOR	CIRCUIT
1	42	12	GRAY/GREEN	NAV LTS LOAD
2	43	12	YELLOW	NAV LTS GRD.
3	33	12	GRAY/WHT	ANCHOR LT.
4	34	12	GRAY	BOW LT.
5	38	12	YELLOW	MAST LT GRD.
6				

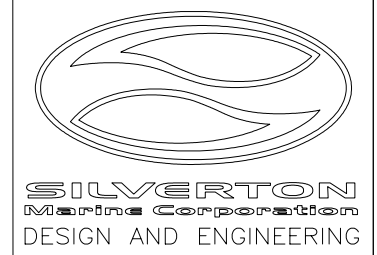

SILVERTON MARINE CORP.  
 S. RACE & RIVERVIEW DR.  
 MILLVILLE N.J.  
 08332  
 TELEPHONE  
 609-825-4117  
 FACSIMILE  
 609-293-8025


THIS DRAWING IS THE SOLE PROPERTY  
 OF SILVERTON MARINE CORP. AND THE  
 INFORMATION CONTAINED HEREIN IS NOT  
 TO BE USED OR REPRODUCED WITHOUT  
 THE EXPRESSED WRITTEN CONSENT OF  
 SILVERTON MARINE CORPORATION.

## 33 Convertible

CRUSADER HELM PANEL WITH  
 POWERVIEW

DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	3-30-06
DRAWING NO.:	
	32CEP011406GWPV

SILVERTON PART NO.

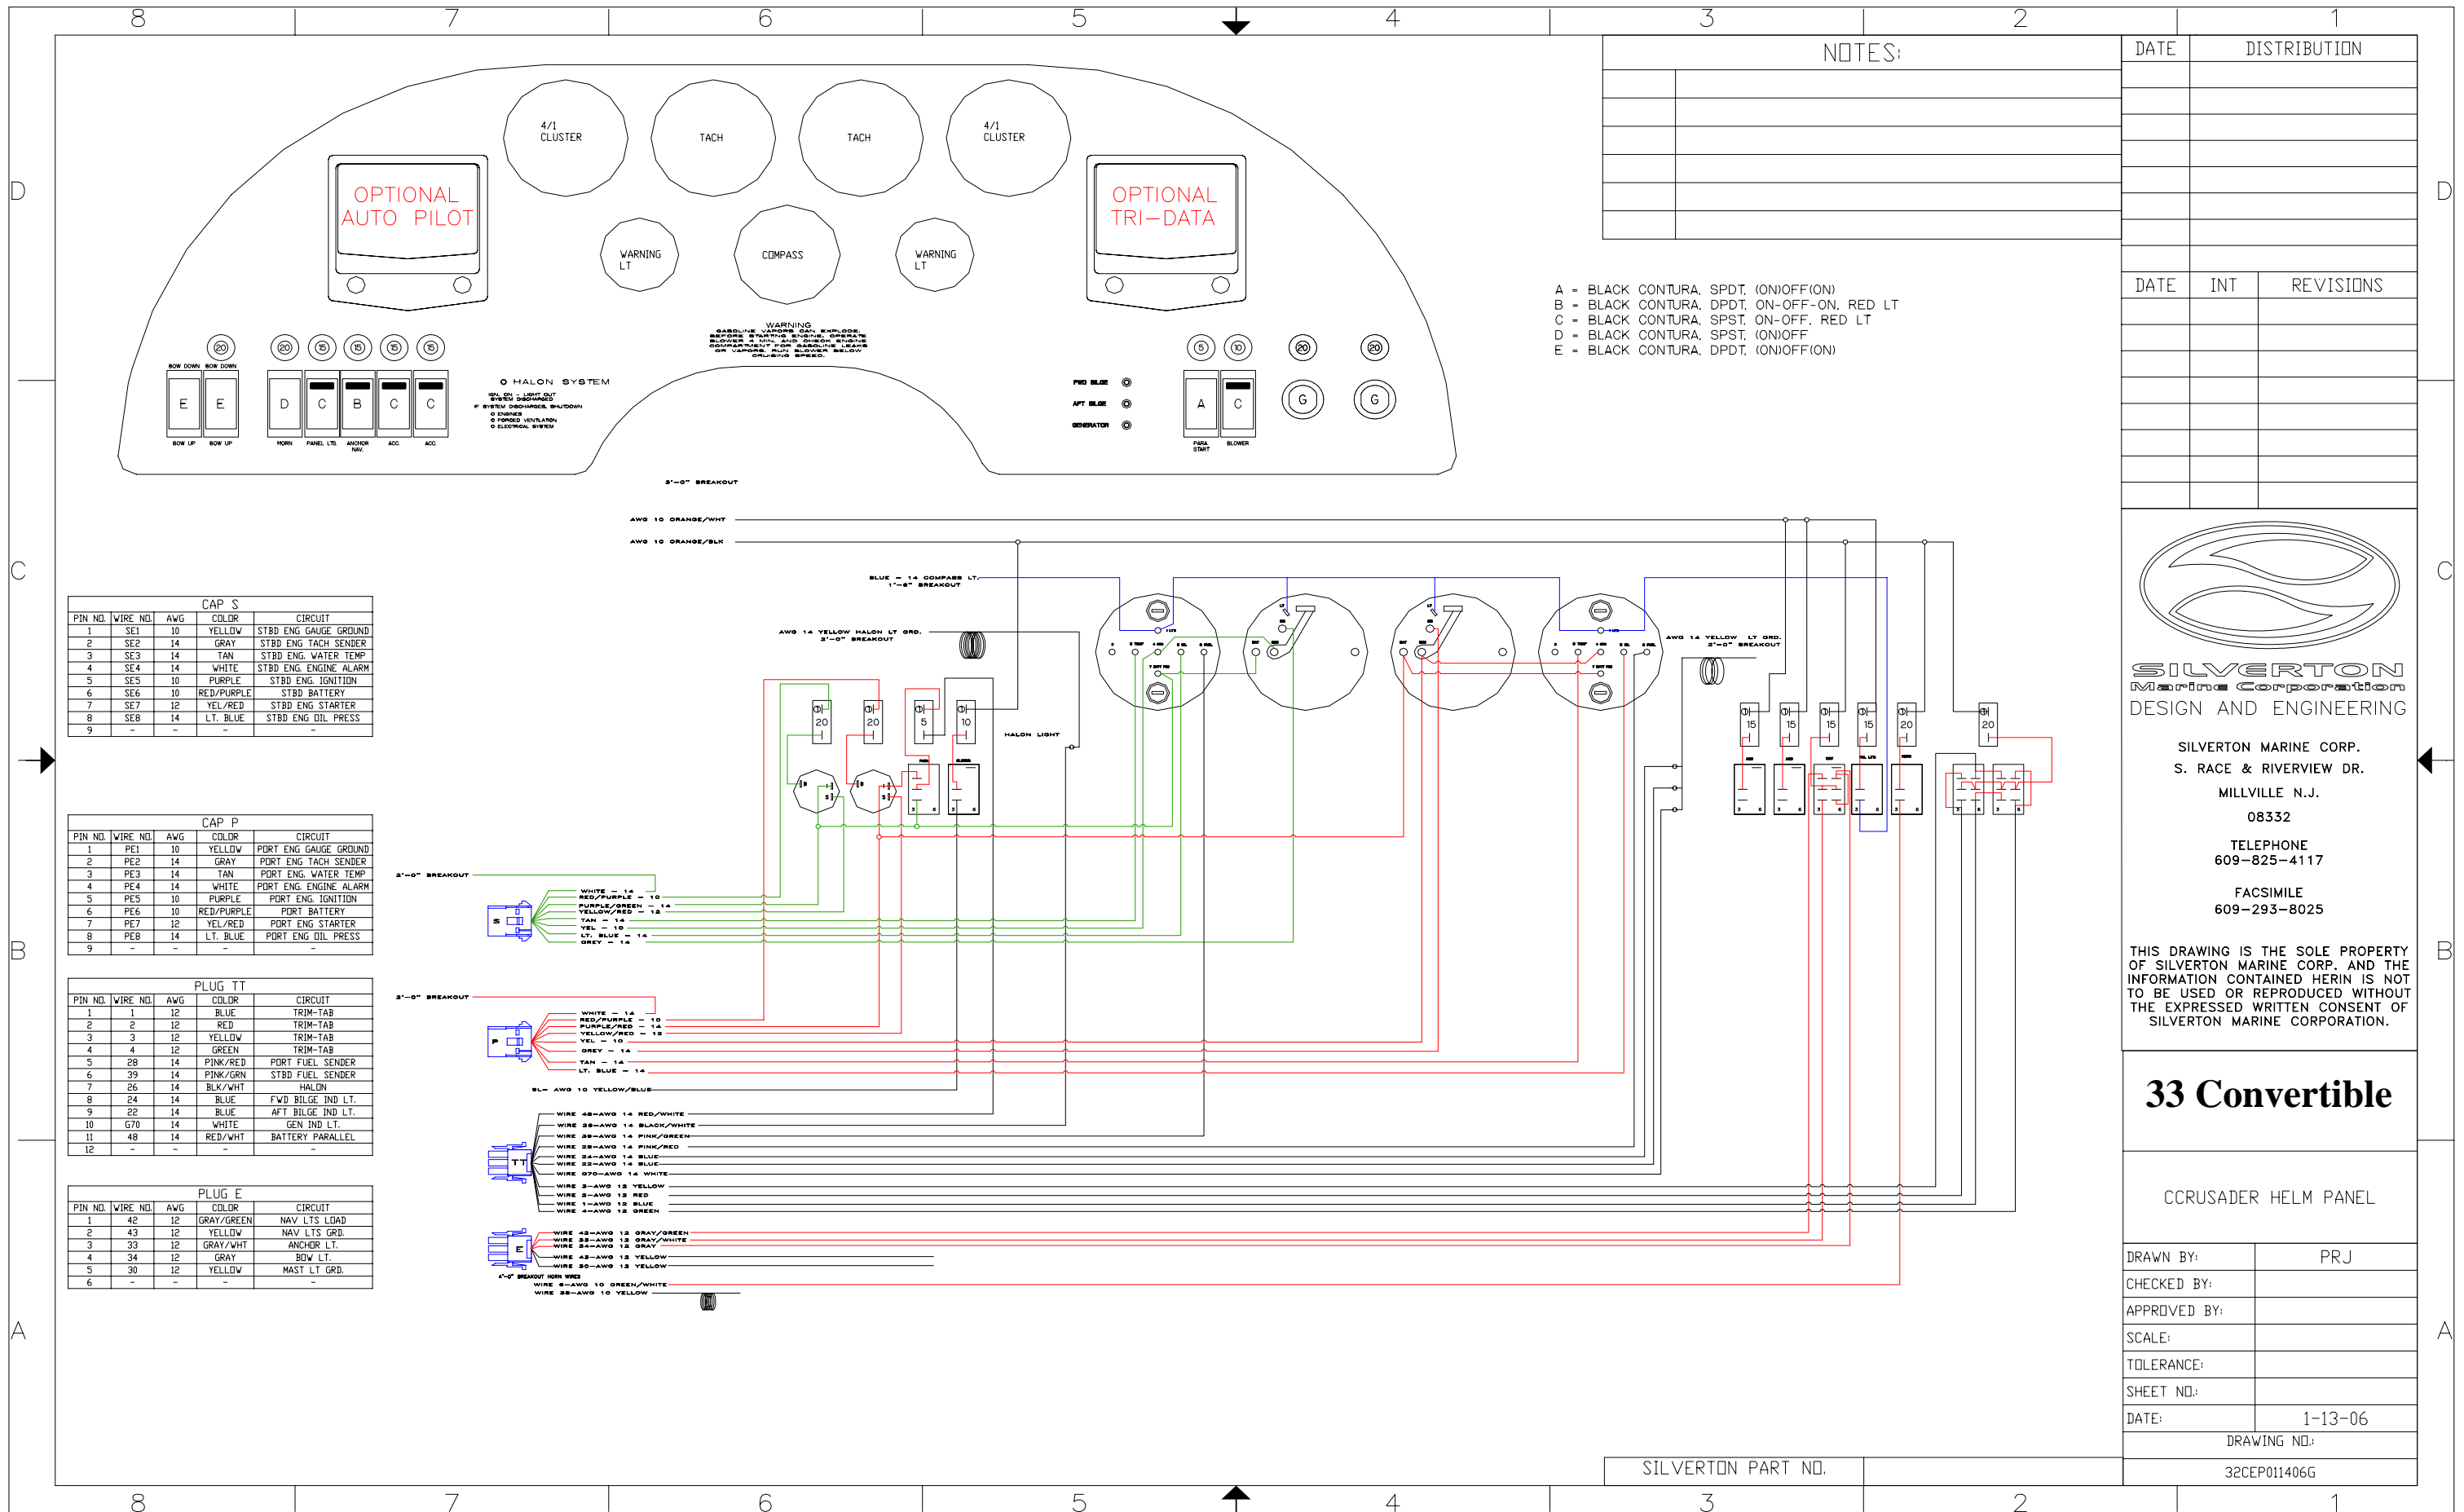


NOTES:


DATE	DISTRIBUTION

- A - BLACK CONTURA, SPDT, (ON/OFF/ON)
- B - BLACK CONTURA, DPDT, ON-OFF-ON, RED LT
- C - BLACK CONTURA, SPST, ON-OFF, RED LT
- D - BLACK CONTURA, SPST, (ON/OFF)
- E - BLACK CONTURA, DPDT, (ON/OFF/ON)

DATE	INT	REVISIONS

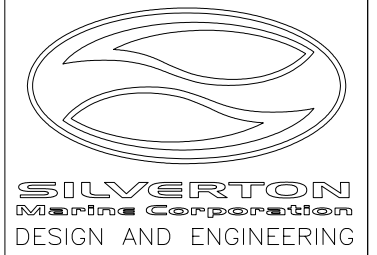

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025

THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.


## 33 Convertible

CCRUSADER HELM PANEL

DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	1-13-06
DRAWING NO.:	
	32CEP011406G

SILVERTON PART NO.



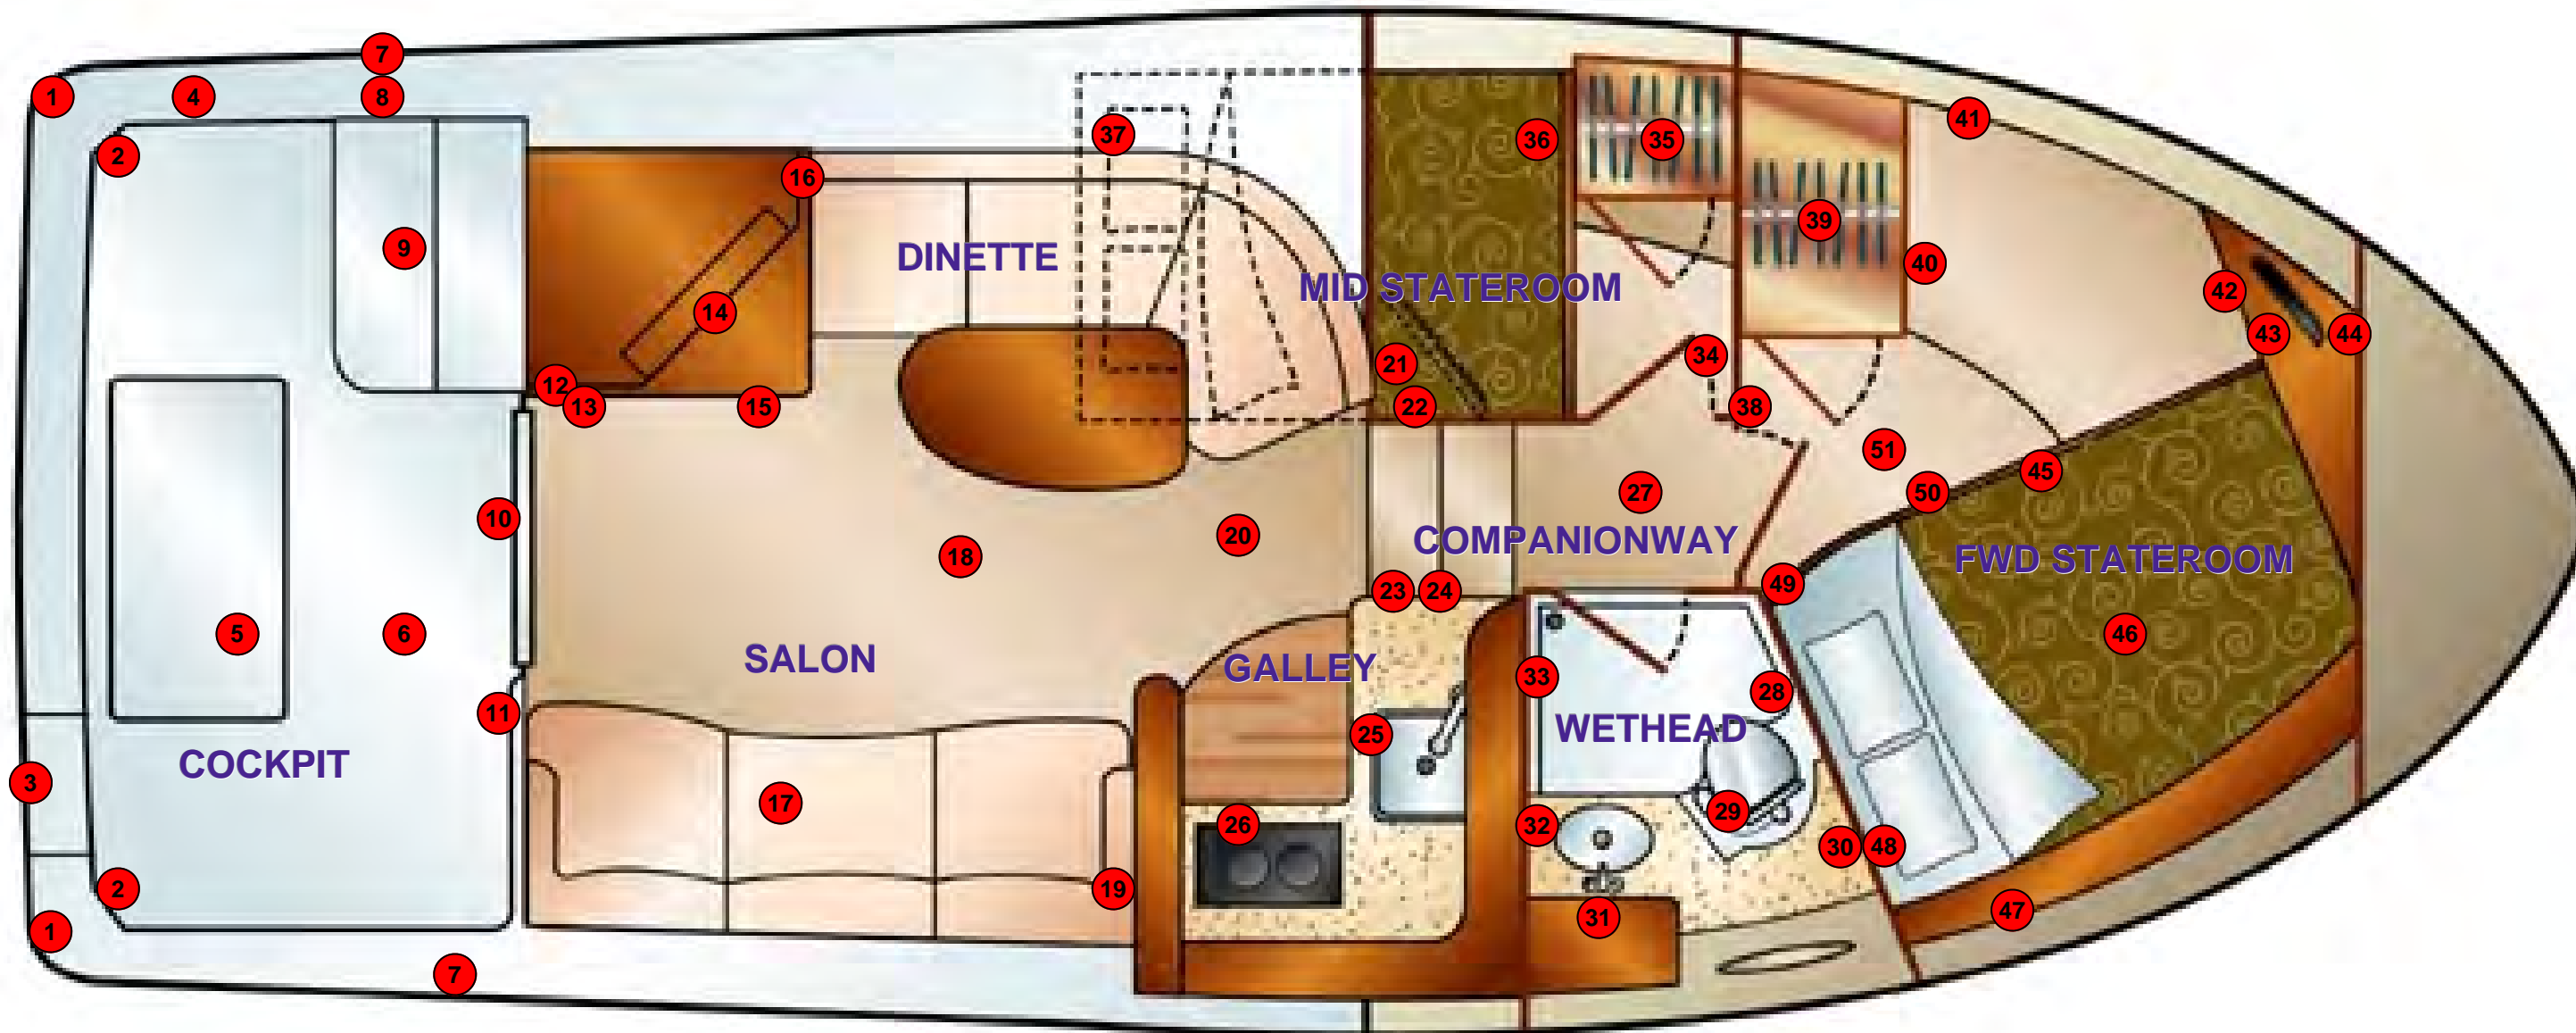


- 1. Cleats
- 2. Deck Drain
- 3. Transom Door
- 4. Shore Power, Shore Water Hookup, & TV/Phone Jack Hookup
- 5. Access Hatch
- 6. Access Hatch—Generator
- 7. Fuel Fill
- 8. Water Fill
- 9. Bridge Access Steps
- 10. Entry Door
- 11. Overhead & Courtesy Light Switch
- 12. Glomex Control Panel, Light Switch, CO Monitor & Phone Jack
- 13. DC Electrical System & Storage Cabinet (below)
- 14. AC/DC Panel
- 15. Stereo/CD Player
- 16. Safe-T-Alert System, 120 Volt Outlets (2), Air Conditioning Control Panel

- 17. Salon Sofa with Storage Racks underneath
- 18. Access Hatch—Engine Room
- 19. 120 Volt Outlets (2)
- 20. Access Hatch—Bow Thruster Batteries
- 21. Television/DVD Player
- 22. Microwave
- 23. Light Switch
- 24. 120 Volt Outlets (2)
- 25. Galley Sink, 4-Drawers & Storage Cabinet
- 26. Stovetop, Refrigerator/Freezer
- 27. Access Hatch—Waste Tank
- 28. Exhaust Vent & Flush Control for Toilet
- 29. Toilet
- 30. Towel Bar
- 31. Vanity Mirror, Sink, & Storage Cabinet
- 32. Waterproof 120 Volt Outlets (2)
- 33. Waterproof Light Switch
- 34. Light Switch
- 35. Hanging Locker

- 36. CO Monitor
- 37. Reading Light with individual switch
- 38. Light Switch
- 39. Hanging Locker
- 40. CO Monitor, Air Conditioning Control Panel
- 41. Stereo Speaker—Port Side
- 42. Vent Outlet
- 43. DVD/CD Player
- 44. Television
- 45. 120 Volt Outlets (2)
- 46. Access Hatch—Air Conditioning (under Mattress)
- 47. Stereo Speaker—Stbd Side
- 48. Reading Light with individual switch
- 49. Storage Cabinet
- 50. 3-Drawer Storage
- 51. Access Hatch—Waste System

## 33 Convertible INTERIOR LAYOUT

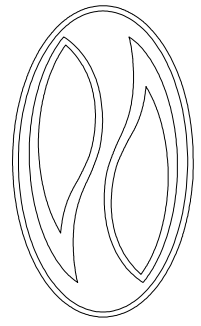


SILVERTON


# MAXWELL WINDLASS

CAB	COLOR	EYE	EYE	LNTH
F1	RED	5/16	5/16	30'-0"
F2	RED	5/16	5/16	30'-0"
W	RED	5/16	5/16	-
WP1	RED	5/16	5/16	-
G	YELLOW	5/16	5/16	39'-0"

CTRL 12/3 ORANGE/DRG/RED/DRG/GRN 30'-0"

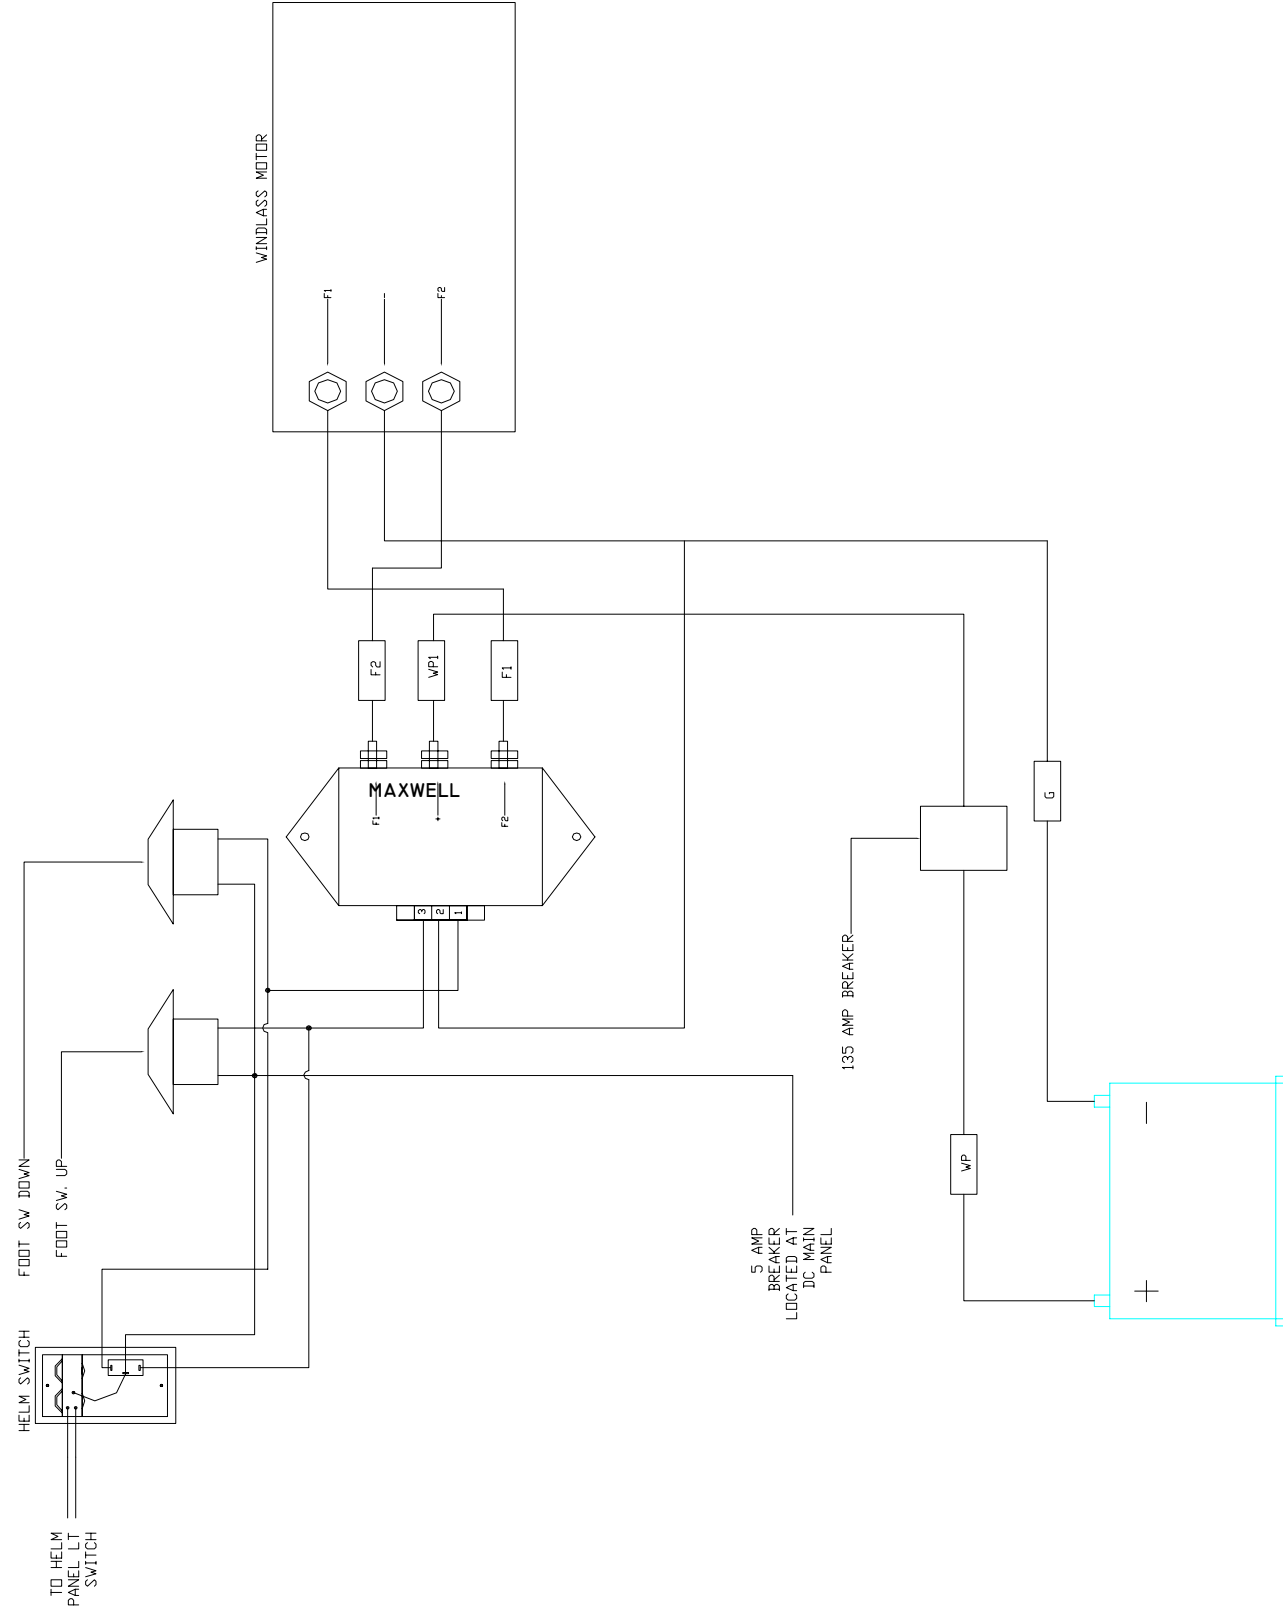


## 33 Convertible

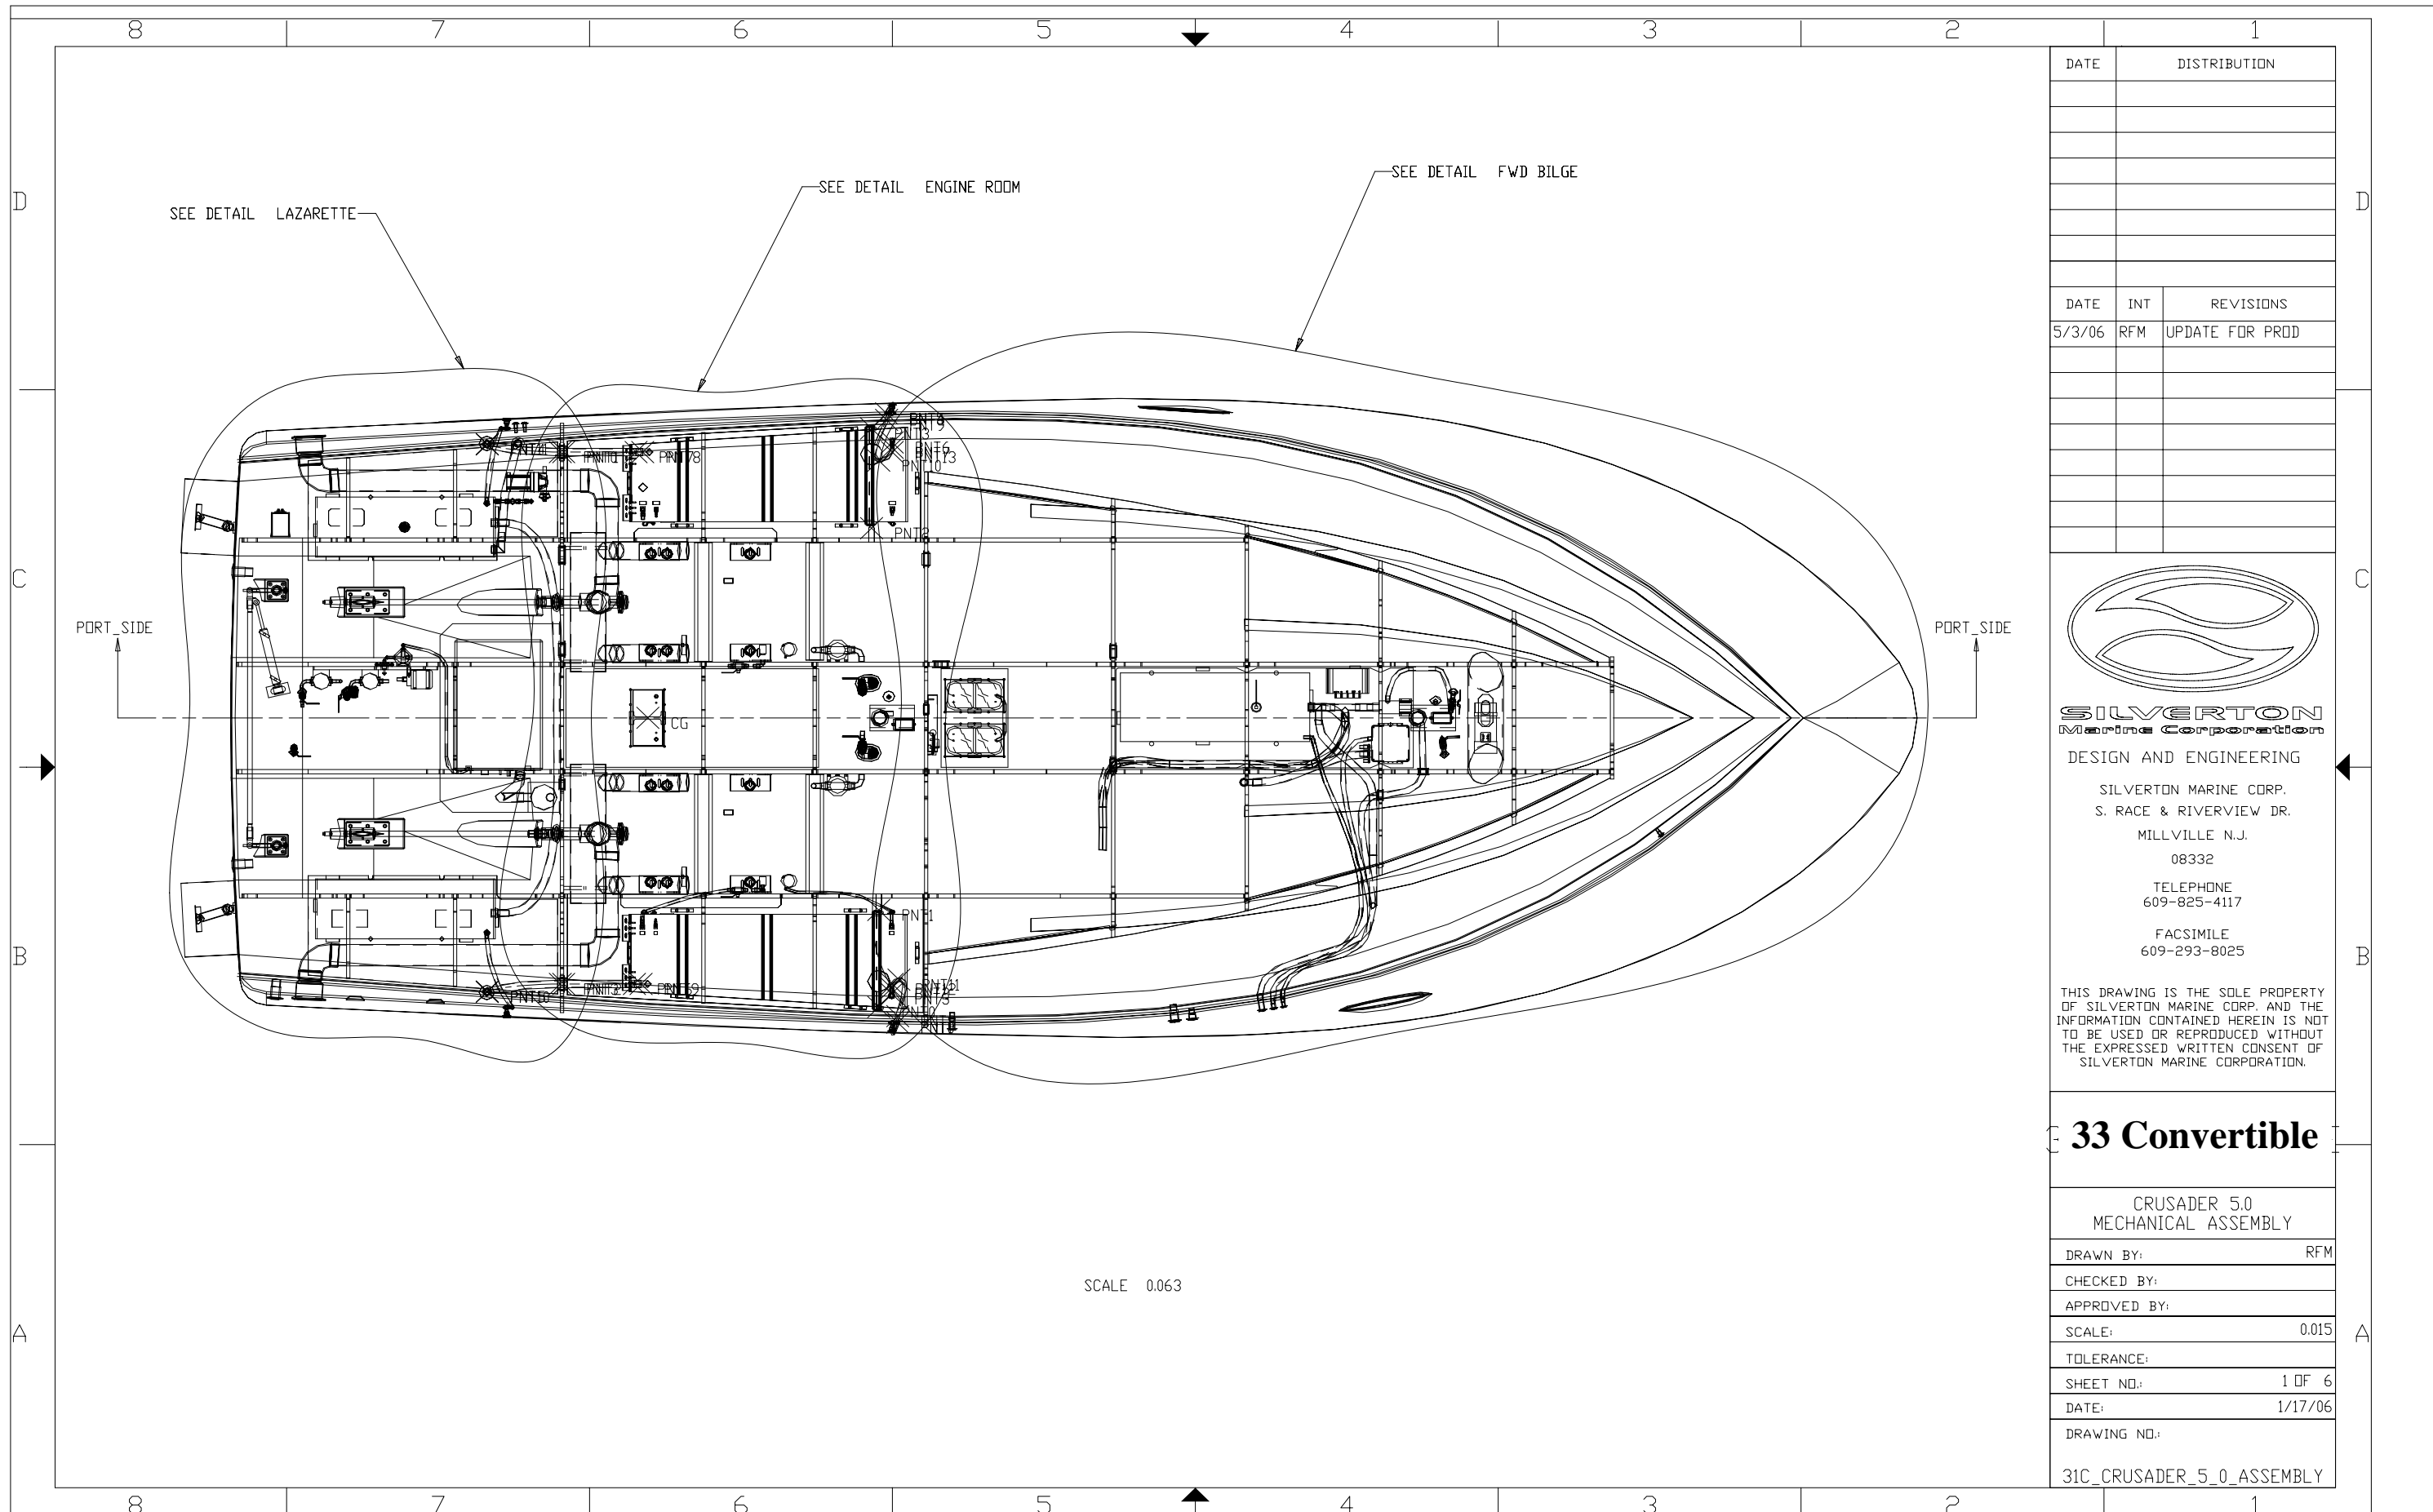

DATE	DISTRIBUTION	

DATE	INT	REVISIONS
5/3/06	RFM	UPDATE FOR PROD

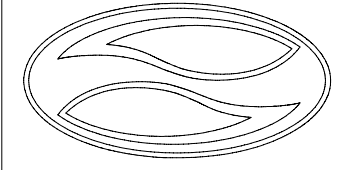

**SILVERTON**  
Marine Corporation  
DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025


THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

### 33 Convertible

CRUSADER 5.0  
MECHANICAL ASSEMBLY

DRAWN BY:	RFM
CHECKED BY:	
APPROVED BY:	
SCALE:	0.015
TOLERANCE:	
SHEET NO.:	1 OF 6
DATE:	1/17/06
DRAWING NO.:	31C_CRUSADER_5_0_ASSEMBLY

SCALE 0.063

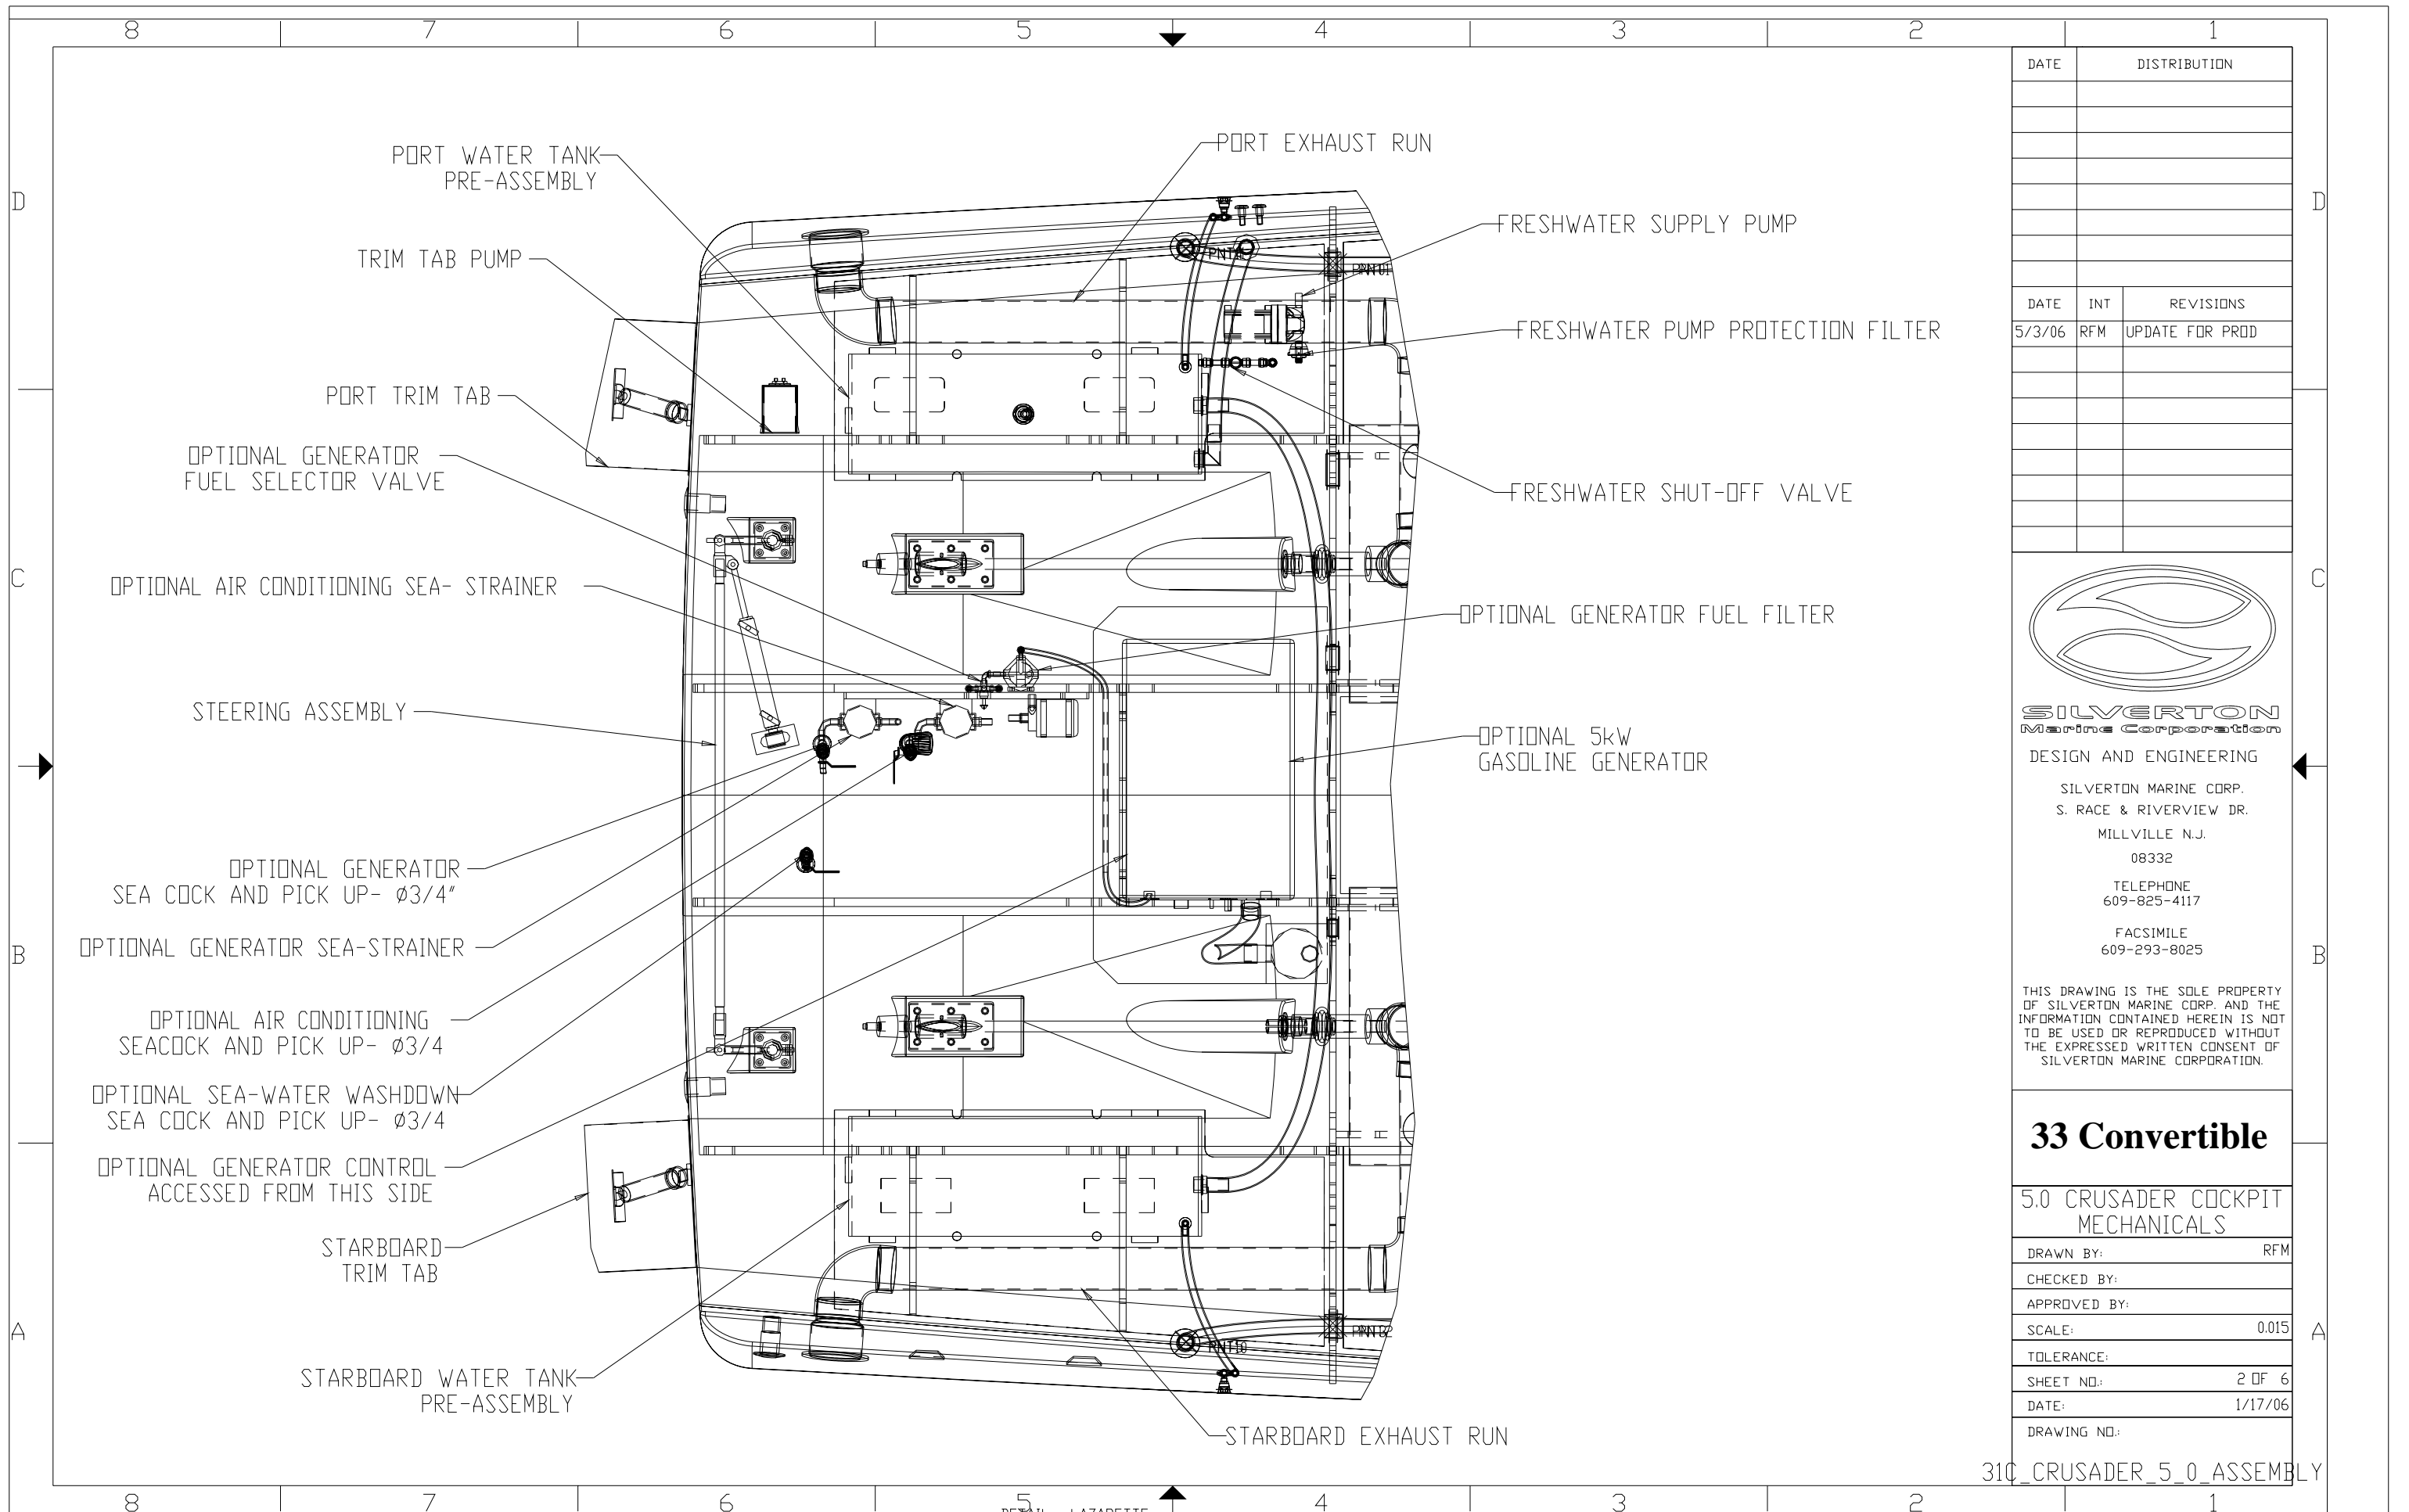

DATE	DISTRIBUTION	

DATE	INT	REVISIONS
5/3/06	RFM	UPDATE FOR PROD



**SILVERTON**  
 Marine Corporation  
 DESIGN AND ENGINEERING  
 SILVERTON MARINE CORP.  
 S. RACE & RIVERVIEW DR.  
 MILLVILLE N.J.  
 08332  
 TELEPHONE  
 609-825-4117  
 FACSIMILE  
 609-293-8025


THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

### 33 Convertible

#### 5.0 CRUSADER COCKPIT MECHANICALS


DRAWN BY:	RFM
CHECKED BY:	
APPROVED BY:	
SCALE:	0.015
TOLERANCE:	
SHEET NO.:	2 OF 6
DATE:	1/17/06
DRAWING NO.:	

310\_CRUSADER\_5\_0\_ASSEMBLY

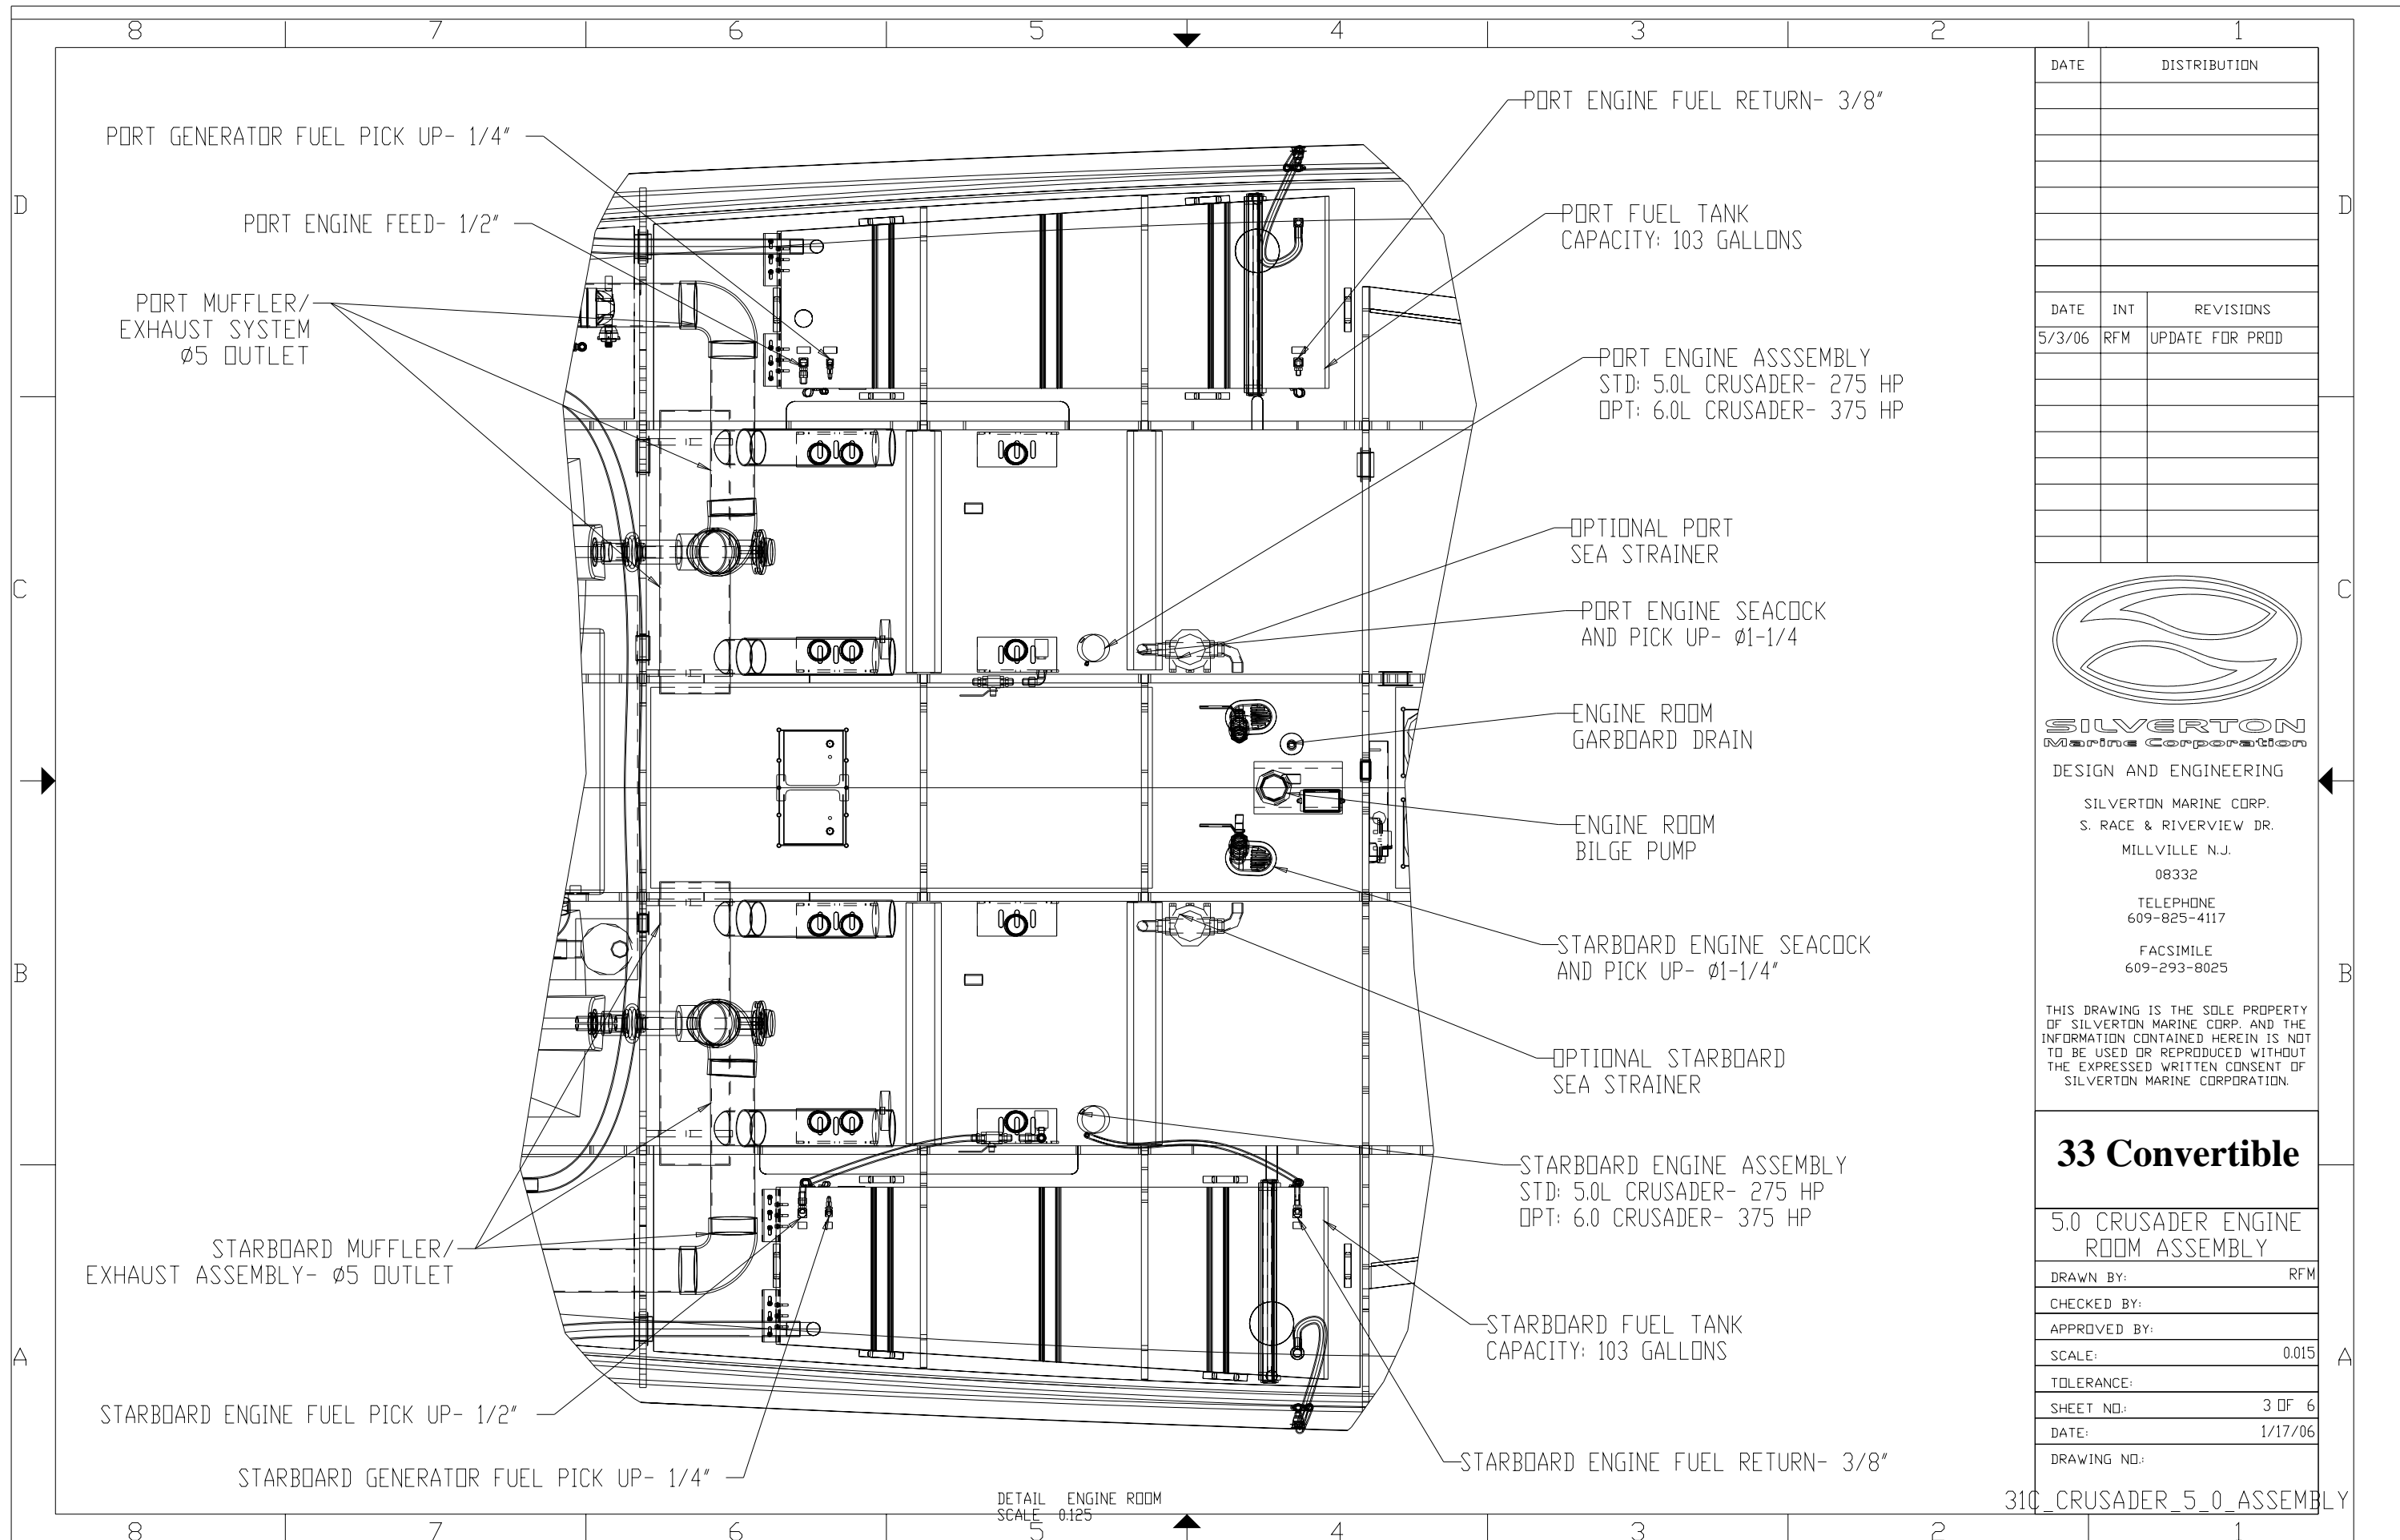

DATE	DISTRIBUTION	

DATE	INT	REVISIONS
5/3/06	RFM	UPDATE FOR PROD

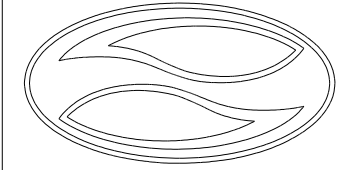

**SILVERTON**  
Marine Corporation

DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332

TELEPHONE  
609-825-4117

FACSIMILE  
609-293-8025


THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

### 33 Convertible

#### 5.0 CRUSADER ENGINE ROOM ASSEMBLY

DRAWN BY:	RFM
CHECKED BY:	
APPROVED BY:	
SCALE:	0.015
TOLERANCE:	
SHEET NO.:	3 OF 6
DATE:	1/17/06
DRAWING NO.:	



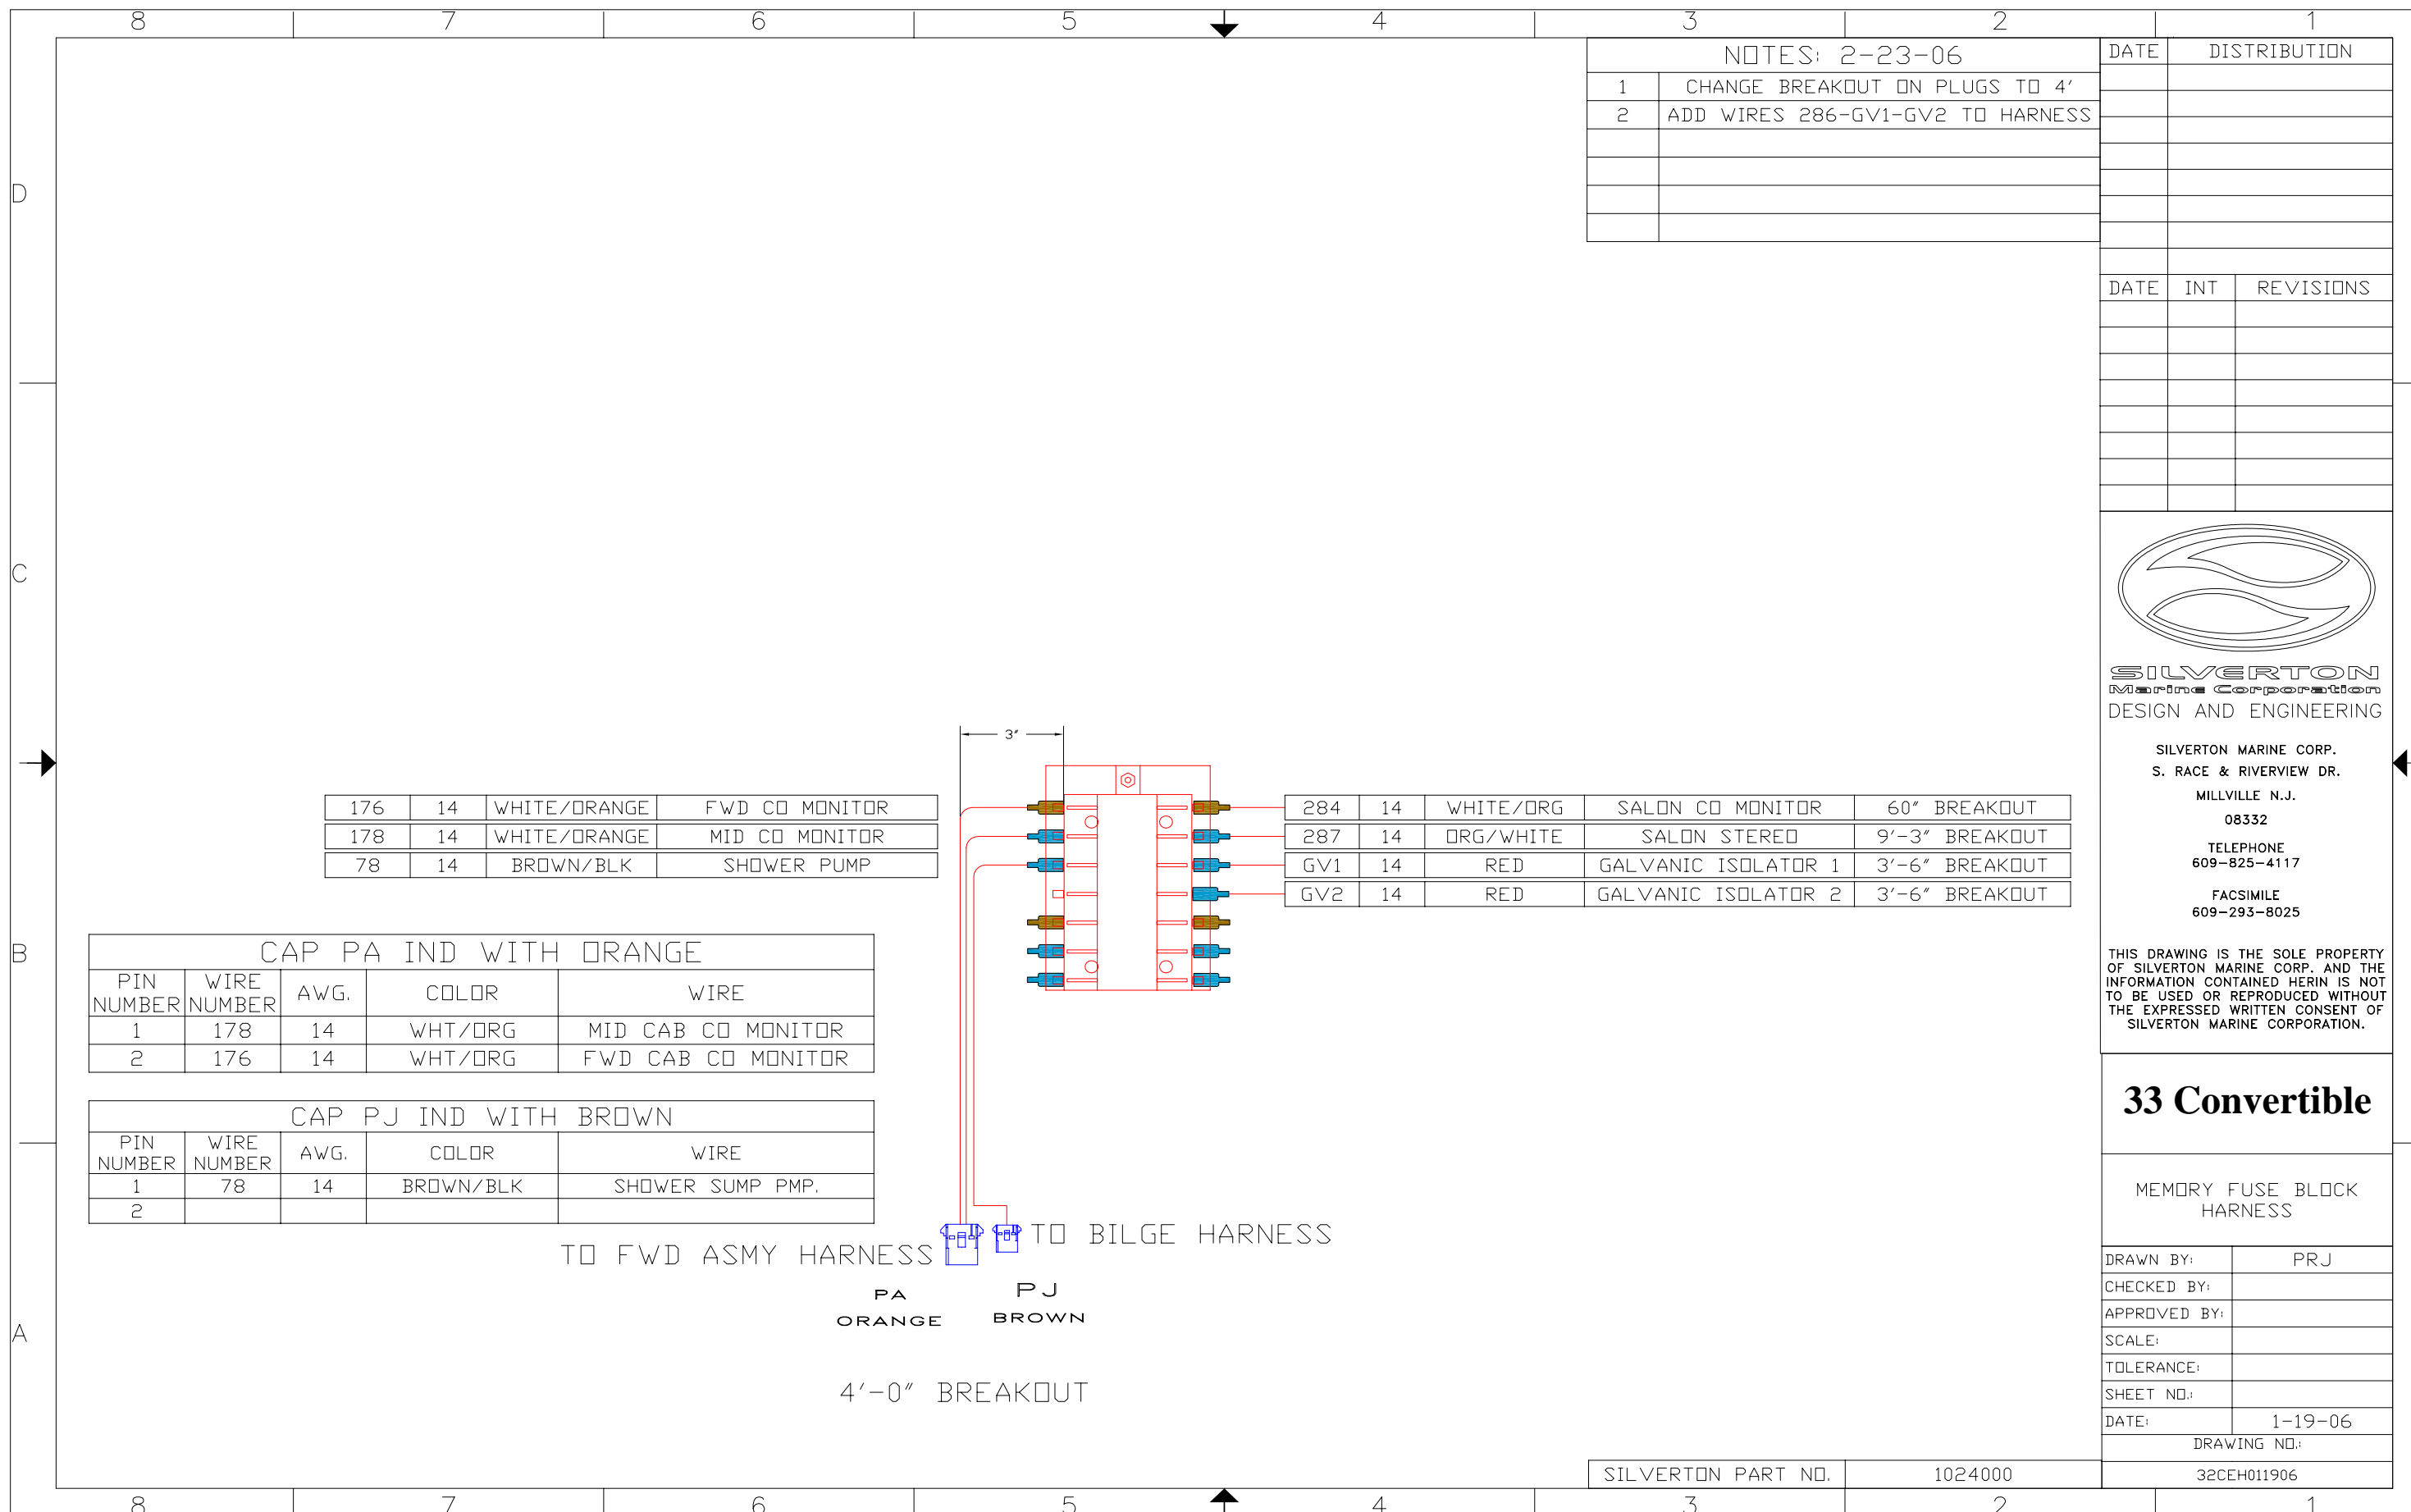


NOTES: 2-23-06

1	CHANGE BREAKOUT ON PLUGS TO 4'
2	ADD WIRES 286-GV1-GV2 TO HARNESS

DATE	DISTRIBUTION	

DATE	INT	REVISIONS

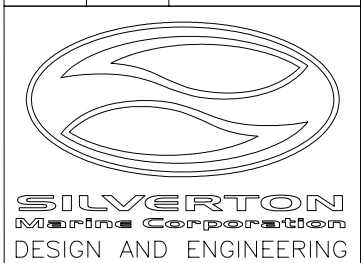


SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025

THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

### 33 Convertible

MEMORY FUSE BLOCK HARNESS


DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	1-19-06
DRAWING NO.:	
SILVERTON PART NO.	1024000
	32CEH011906

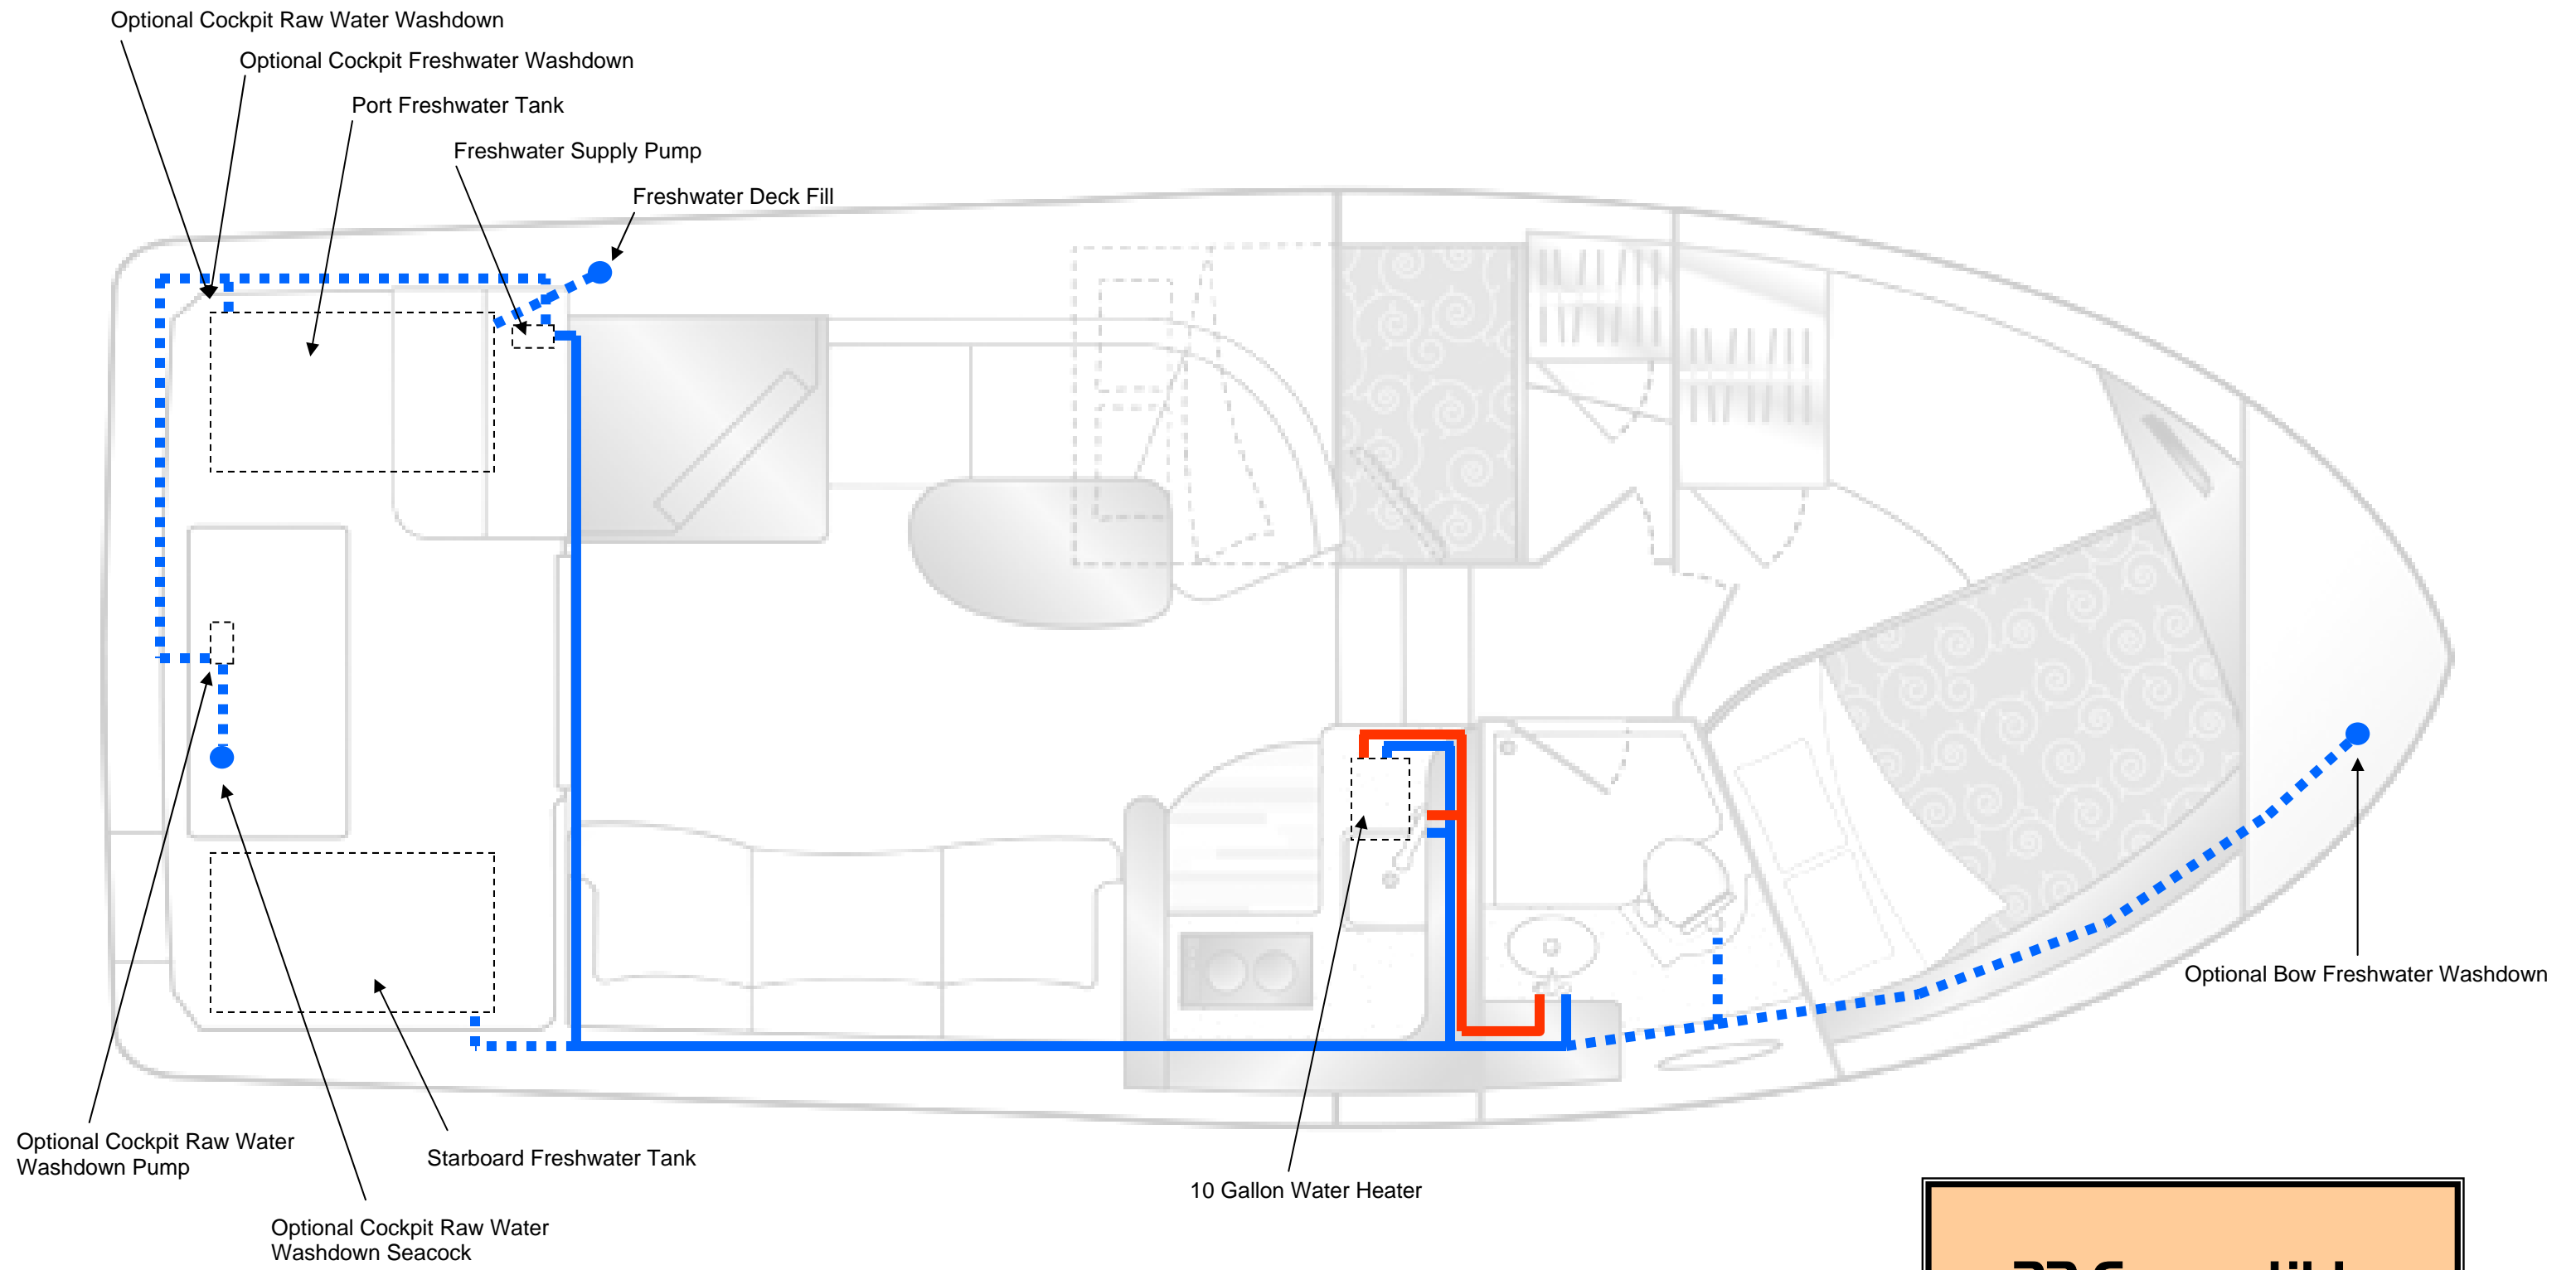



**33 Convertible  
PLUMBING**



REVISIONS		
DATE	INIT.	DESCRIPTION
10-22-02	GH	REVISE POWER SOURCE TO HELM

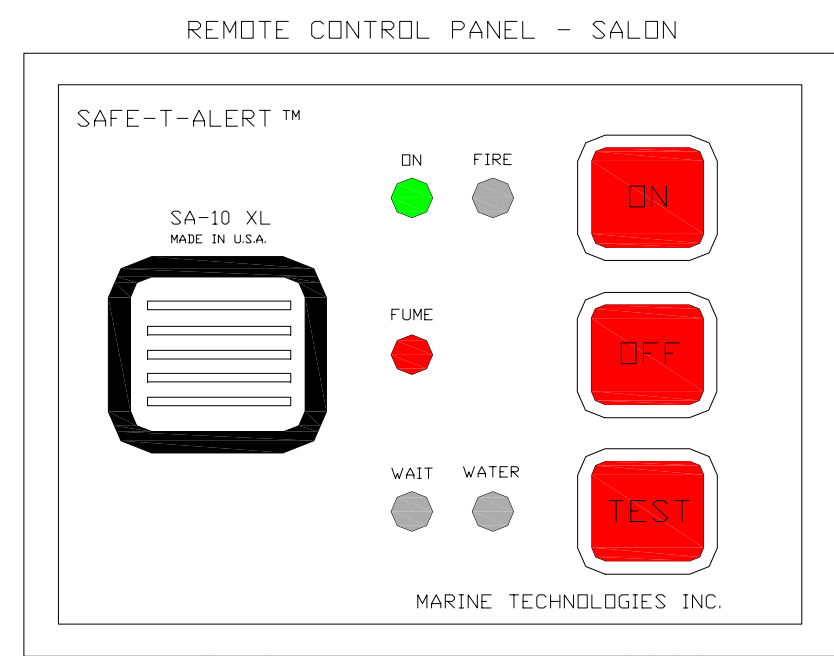

"Y" HARNESS  
SUPPLIED W/REMOTE CONTROL PANEL

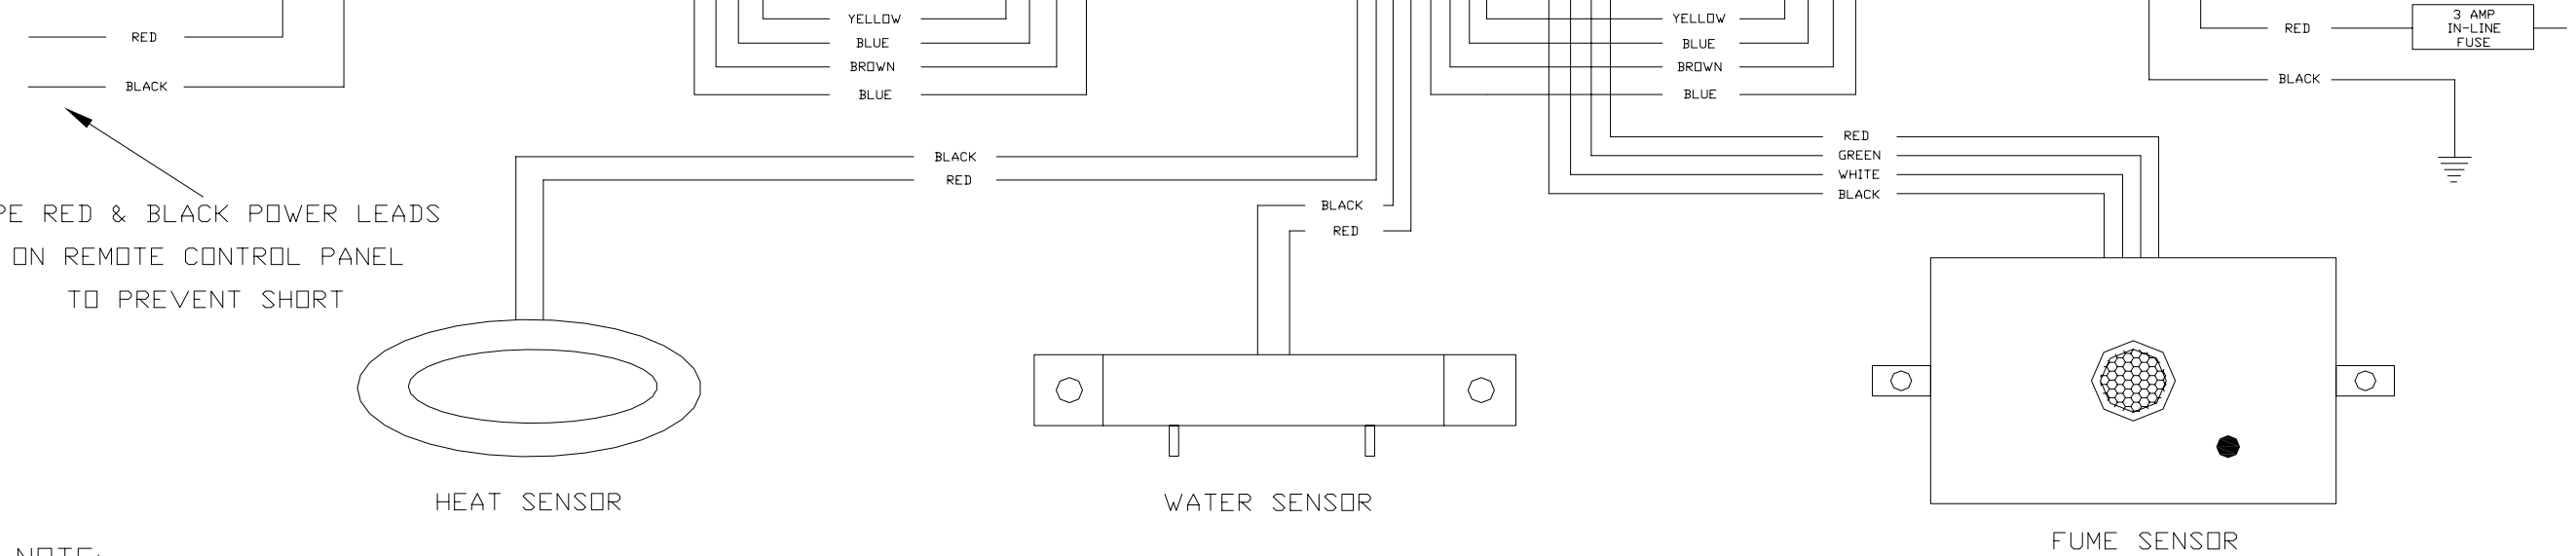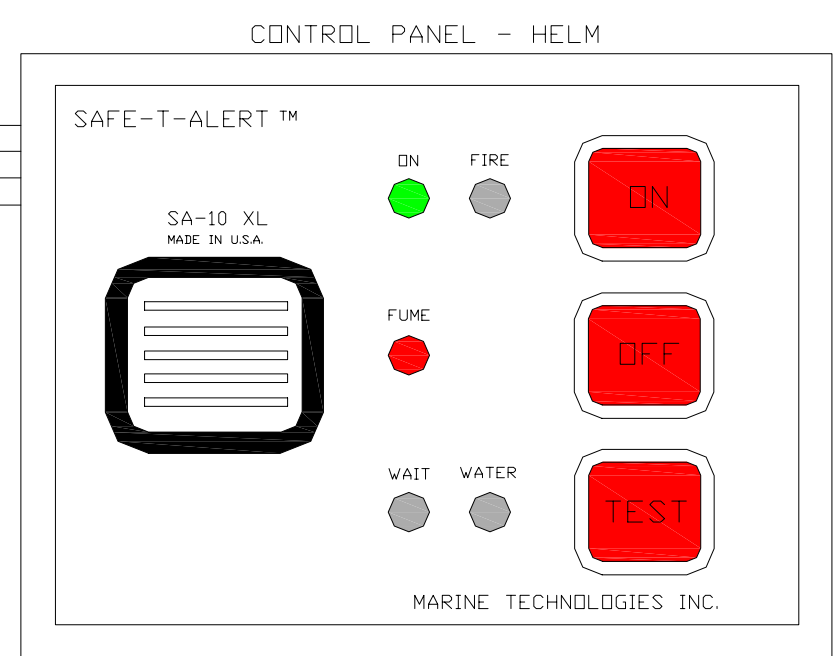

TAPE RED & BLACK POWER LEADS  
ON REMOTE CONTROL PANEL  
TO PREVENT SHORT


NOTE:  
 INSTALL SALON CONTROL PANEL WITHIN CLOSE PROXIMITY TO AC/DC PANEL  
 INSTALL REMOTE CONTROL PANEL IN CONVENIENT LOCATION ON HELM  
 LOCATE HEAT SENSOR AS HIGH AS POSSIBLE IN ENGINE ROOM  
 LOCATE WATER SENSOR HORIZONTALLY 4" ABOVE BILGE PUMP AUTO SWITCH  
 LOCATE FUME SENSOR ON FORWARD ENGINE COMPARTMENT BULKHEAD AT STARTER HEIGHT  
 MOUNT SMALL 12 POINT TERMINAL BLOCK ON BACKBOARD OF AC/DC PANEL

<p>S. RACE &amp; RIVERSIDE DR. MILLVILLE N.J. 08332 856-825-4117 (FAX) 856-825-2898</p>	<b>SAFE-T-ALERT ALARM SYSTEM</b>		
	<b>33 Convertible</b>		
SIZE	DWN BY GH	DWG NO. EALL757	REV
SCALE NONE	SHEET		


SALON LIGHT HARNESS				
WIRE NO.	WIRE GAUGE	COLOR	CIRCUIT	LENHTH
282	12	BLUE	SALON LIGHT	38'-6"
283	12	YELLOW	SALON LT GRD.	38'-6"
35	12	BLUE	COCKPIT OH LT.	19'-0"
36	12	YELLOW	COCKPIT OH LT GRD	19'-0"

DATE	REVISIONS	DATE	DISTRIBUTION

NOTE: NO LOOM ON HARNESS TAPE ONLY

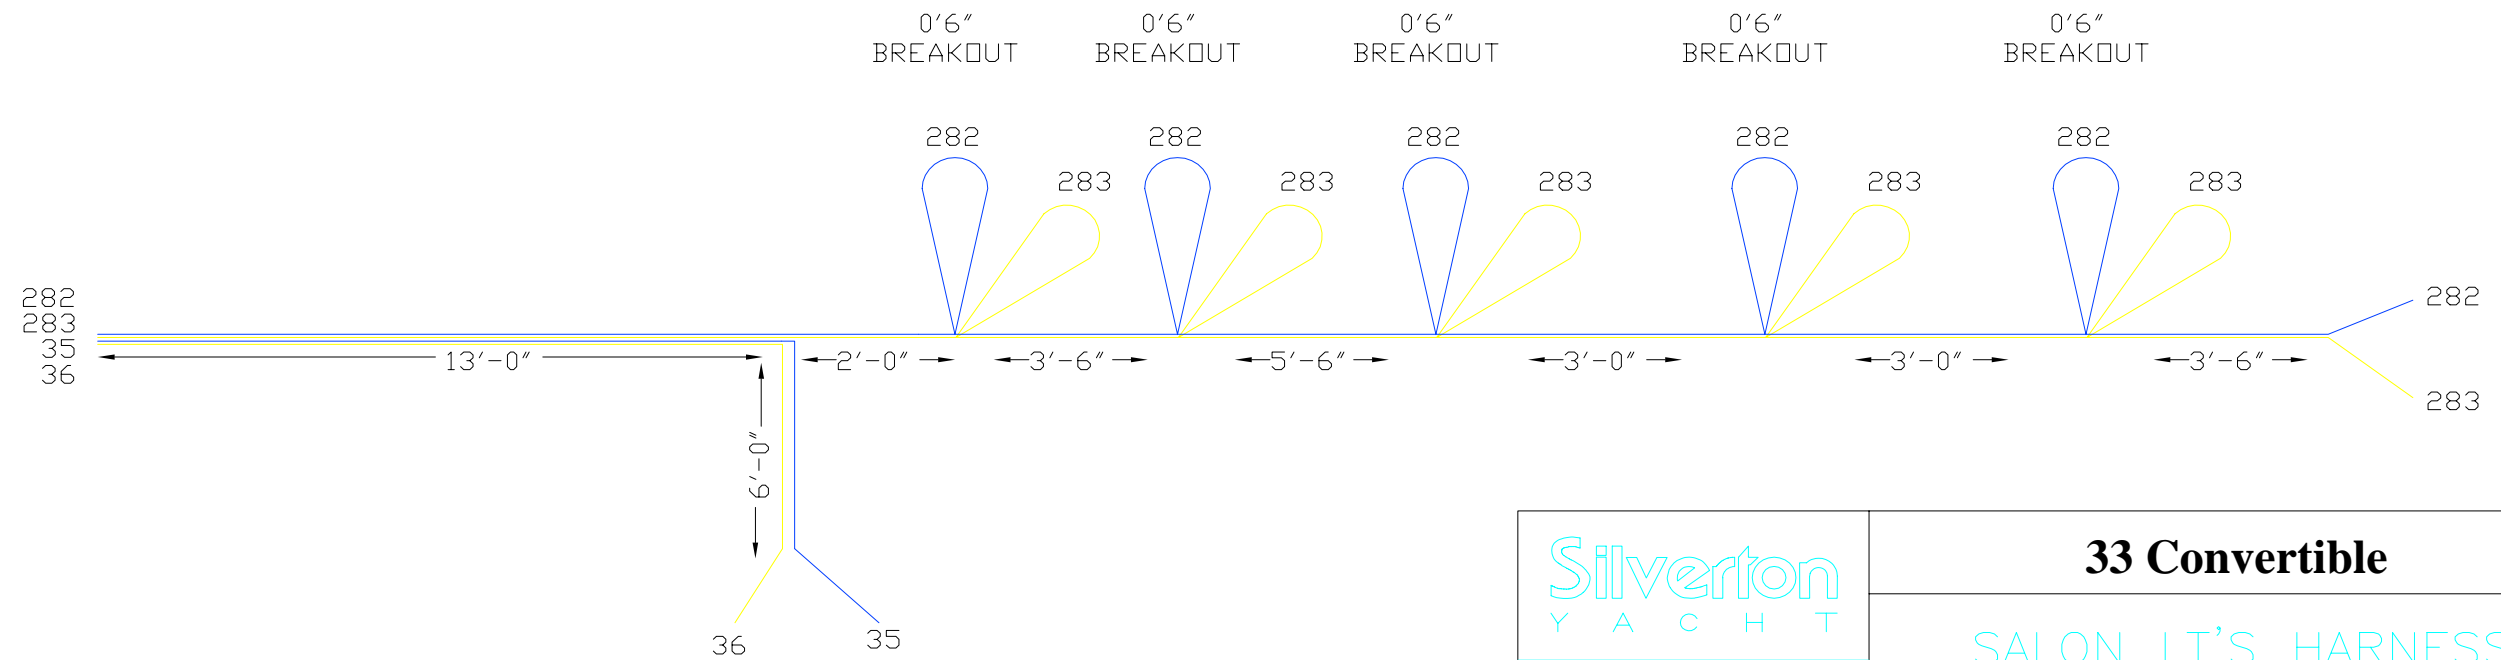

	<b>33 Convertible</b>		
	SALON LT'S HARNESS		
SIZE	DWN BY PRJ	DWG NO. 32EH41206	REV
SCALE SCALE	DATE: 4-12-06	SHEET NO. # OF #	

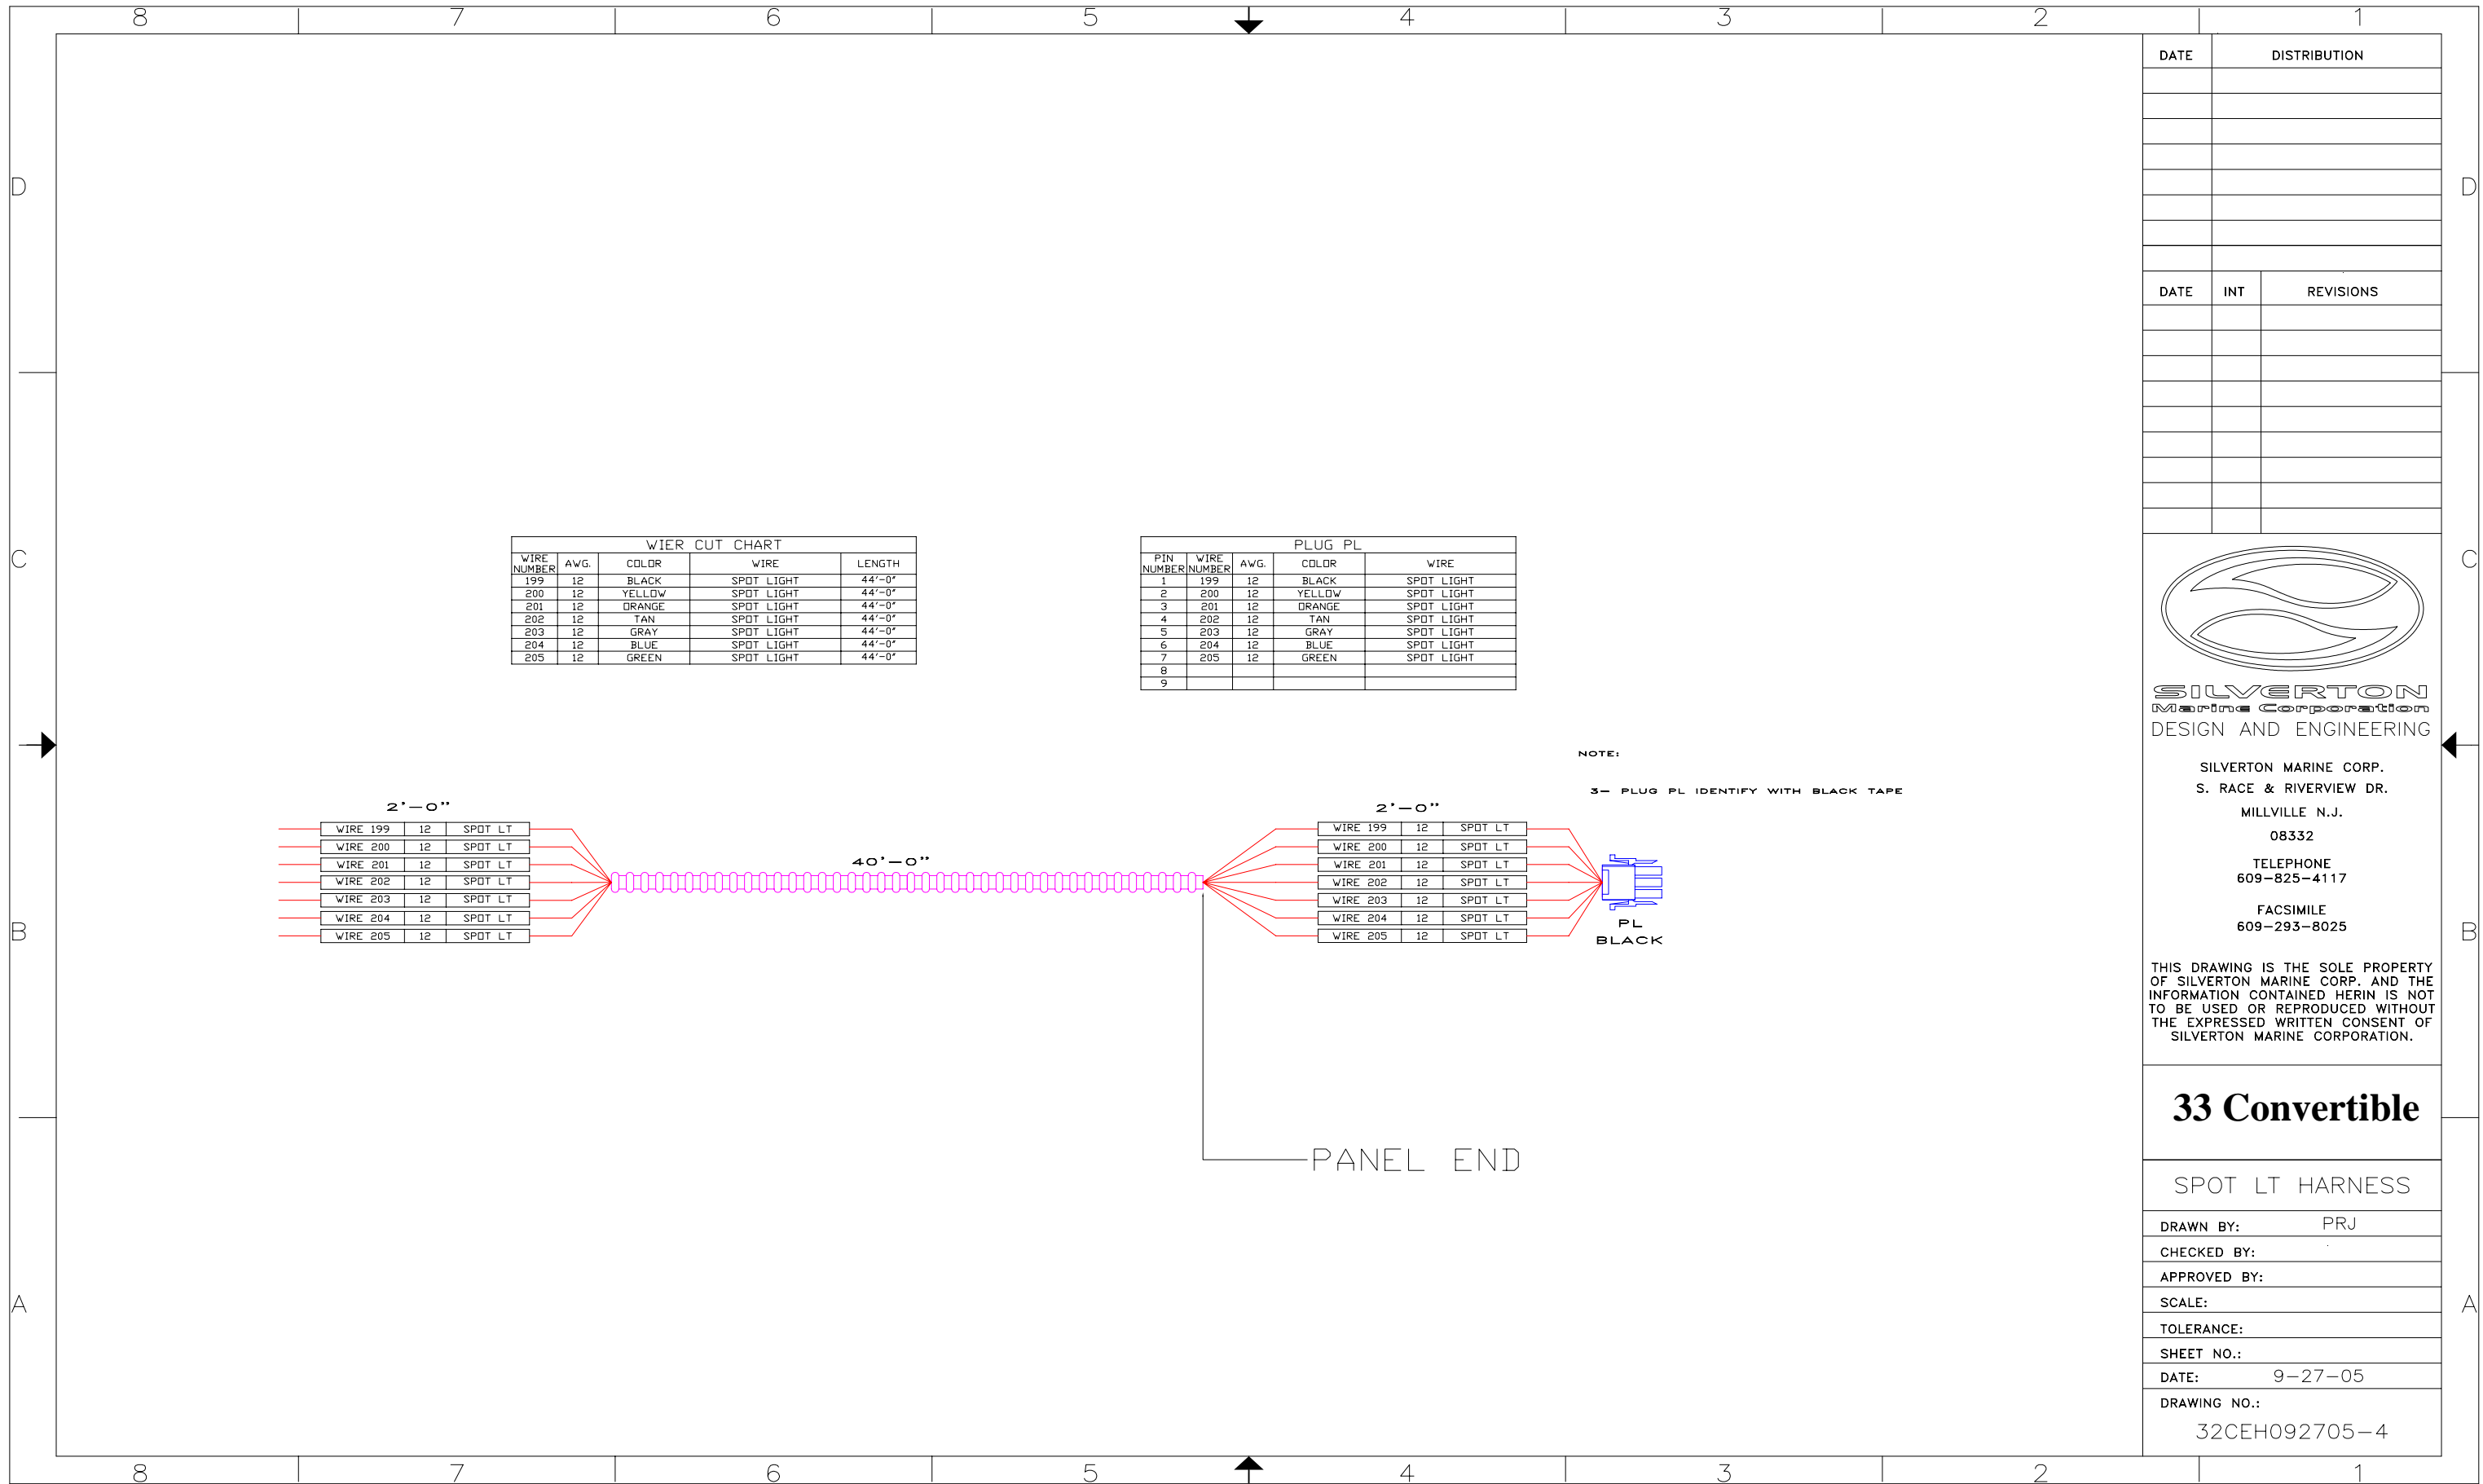


WIER CUT CHART				
WIRE NUMBER	AWG.	COLOR	WIRE	LENGTH
199	12	BLACK	SPOT LIGHT	44'-0"
200	12	YELLOW	SPOT LIGHT	44'-0"
201	12	DRANGE	SPOT LIGHT	44'-0"
202	12	TAN	SPOT LIGHT	44'-0"
203	12	GRAY	SPOT LIGHT	44'-0"
204	12	BLUE	SPOT LIGHT	44'-0"
205	12	GREEN	SPOT LIGHT	44'-0"

PLUG PL				
PIN NUMBER	WIRE NUMBER	AWG.	COLOR	WIRE
1	199	12	BLACK	SPOT LIGHT
2	200	12	YELLOW	SPOT LIGHT
3	201	12	DRANGE	SPOT LIGHT
4	202	12	TAN	SPOT LIGHT
5	203	12	GRAY	SPOT LIGHT
6	204	12	BLUE	SPOT LIGHT
7	205	12	GREEN	SPOT LIGHT
8				
9				

NOTE:  
3- PLUG PL IDENTIFY WITH BLACK TAPE

DATE	DISTRIBUTION	

DATE	INT	REVISIONS

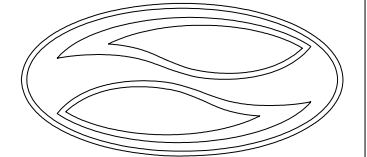

**SILVERTON**  
Marine Corporation  
DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025

THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HERIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

**33 Convertible**


SPOT LT HARNESS

DRAWN BY:	PRJ
CHECKED BY:	
APPROVED BY:	
SCALE:	
TOLERANCE:	
SHEET NO.:	
DATE:	9-27-05
DRAWING NO.:	32CEH092705-4




NOTES:

- A:  $\phi 7/8$  HOLE, 5/8 THRU-HULL- OPTION: AIR CONDITIONING
- B:  $\phi 7/8$  HOLE, 5/8 THRU-HULL- WASTE TANK VENT
- C:  $\phi 1-1/8$  HOLE, 3/4" THRU-HULL- SHOWER SUMP OUTLET
- D:  $\phi 1-3/8$  HOLE, 1-1/8 THRU-HULL- FWD BILGE PUMP
- E:  $\phi 1-3/4$  HOLE, 1-1/4 THRU-HULL- HEAD SINK DRAIN
- F:  $\phi 2$  HOLE, 1-1/2 THRU-HULL- GALLEY SINK DRAIN
- G:  $\phi 1-3/8$  HOLE, 1-1/8 THRU-HULL- MID BILGE PUMP
- H:  $\phi 1-3/8$  HOLE, FLUSH TANK VENT W/ TRAP- WATER TANK
- I:  $\phi 1-3/8$  HOLE, FLUSH TANK VENT W/ TRAP- FUEL TANK
- J:  $\phi 6$  HOLE- 5" PLASTIC STRAIGHT EXHAUST PORT
- K:  $\phi 2-3/8$  HOLE- 2" THRU-HULL- OPTION: GENERATOR

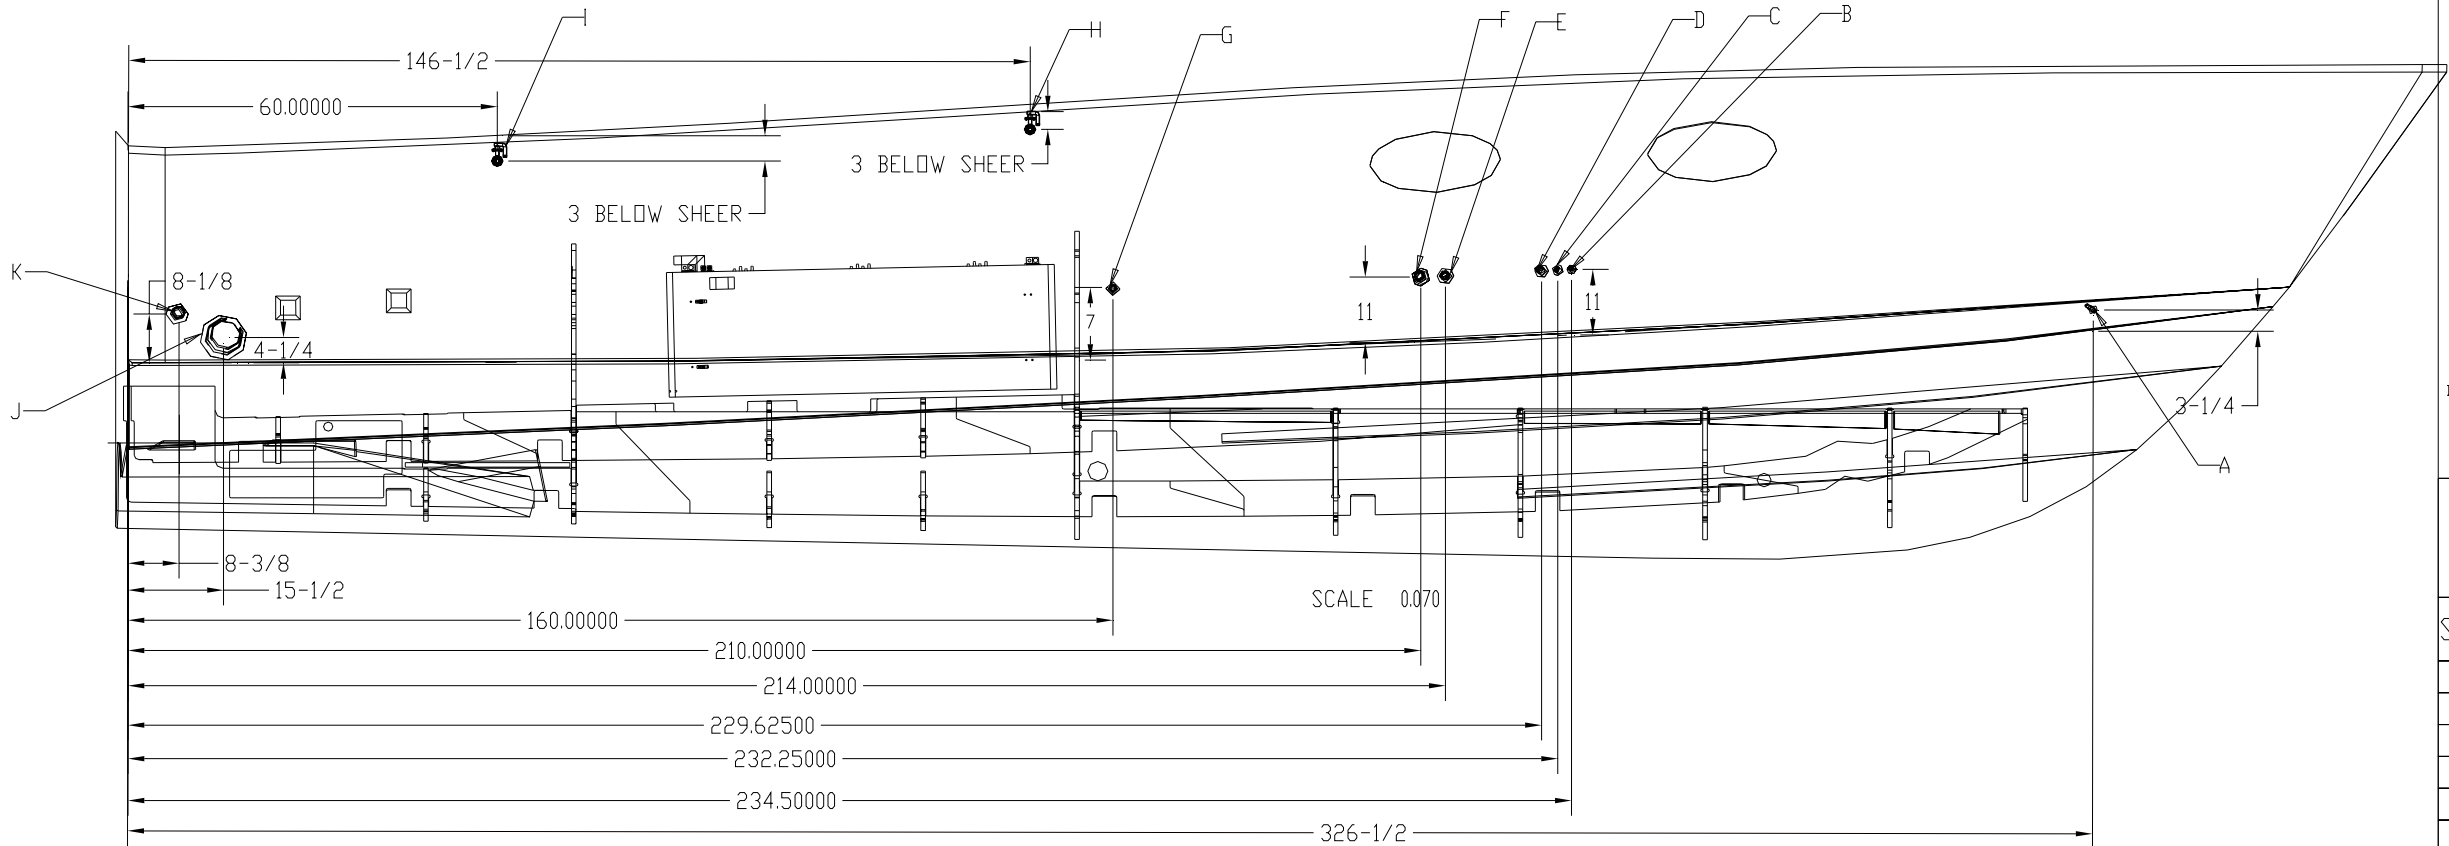

DATE	DISTRIBUTION	

DATE	INT	REVISIONS
2/24/06	RFM	CHANGED LOCATIONS, ADDED THRU-HULLS
5/1/06	RFM	PRDD CHANGES

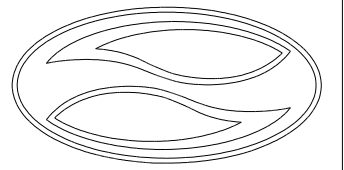

**SILVERTON**  
Marine Corporation

DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332

TELEPHONE  
609-825-4117

FACSIMILE  
609-293-8025

THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

**33 Convertible**

STARBOARD THRU-HULLS

DRAWN BY:	RFM
CHECKED BY:	
APPROVED BY:	
SCALE:	0.015
TOLERANCE:	
SHEET NO.:	2 OF 4
DATE:	1/26/06
DRAWING NO.:	


31C\_THRU\_HULLS

NOTES:

- A:  $\varnothing 6$  HOLE- 5" PLASTIC STRAIGHT EXHAUST PORT
- B:  $\varnothing 7/8$  HOLE, 5/8" THRU-HULL-A/C CONDENSATE DRAIN OPTION- AIR CONDITIONING
- C:  $\varnothing 7/8$  HOLE, 5/8" THRU-HULL- A/C OUTLET- OPTION- AIR CONDITIONING
- D:  $\varnothing 1-3/8$  HOLE, FLUSH TANK VENT W/ TRAP- WATER TANK VENT
- E:  $\varnothing 1-3/8$  HOLE, FLUSH TANK VENT W/ TRAP- FUEL TANK VENT

DATE	DISTRIBUTION	

DATE	INT	REVISIONS
5/1/06	RFM	PROD CHANGES

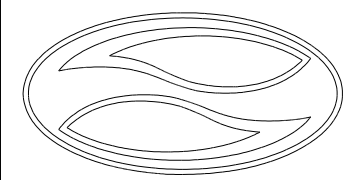

**SILVERTON**  
Marine Corporation

DESIGN AND ENGINEERING

SILVERTON MARINE CORP.  
S. RACE & RIVERVIEW DR.  
MILLVILLE N.J.  
08332  
TELEPHONE  
609-825-4117  
FACSIMILE  
609-293-8025


THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.

**33 Convertible**

PORT THRU-HULLS


DRAWN BY:	RFM
CHECKED BY:	
APPROVED BY:	
SCALE:	0.015
TOLERANCE:	
SHEET NO.:	3 OF 4
DATE:	1/26/06
DRAWING NO.:	

31C\_THRU\_HULLS

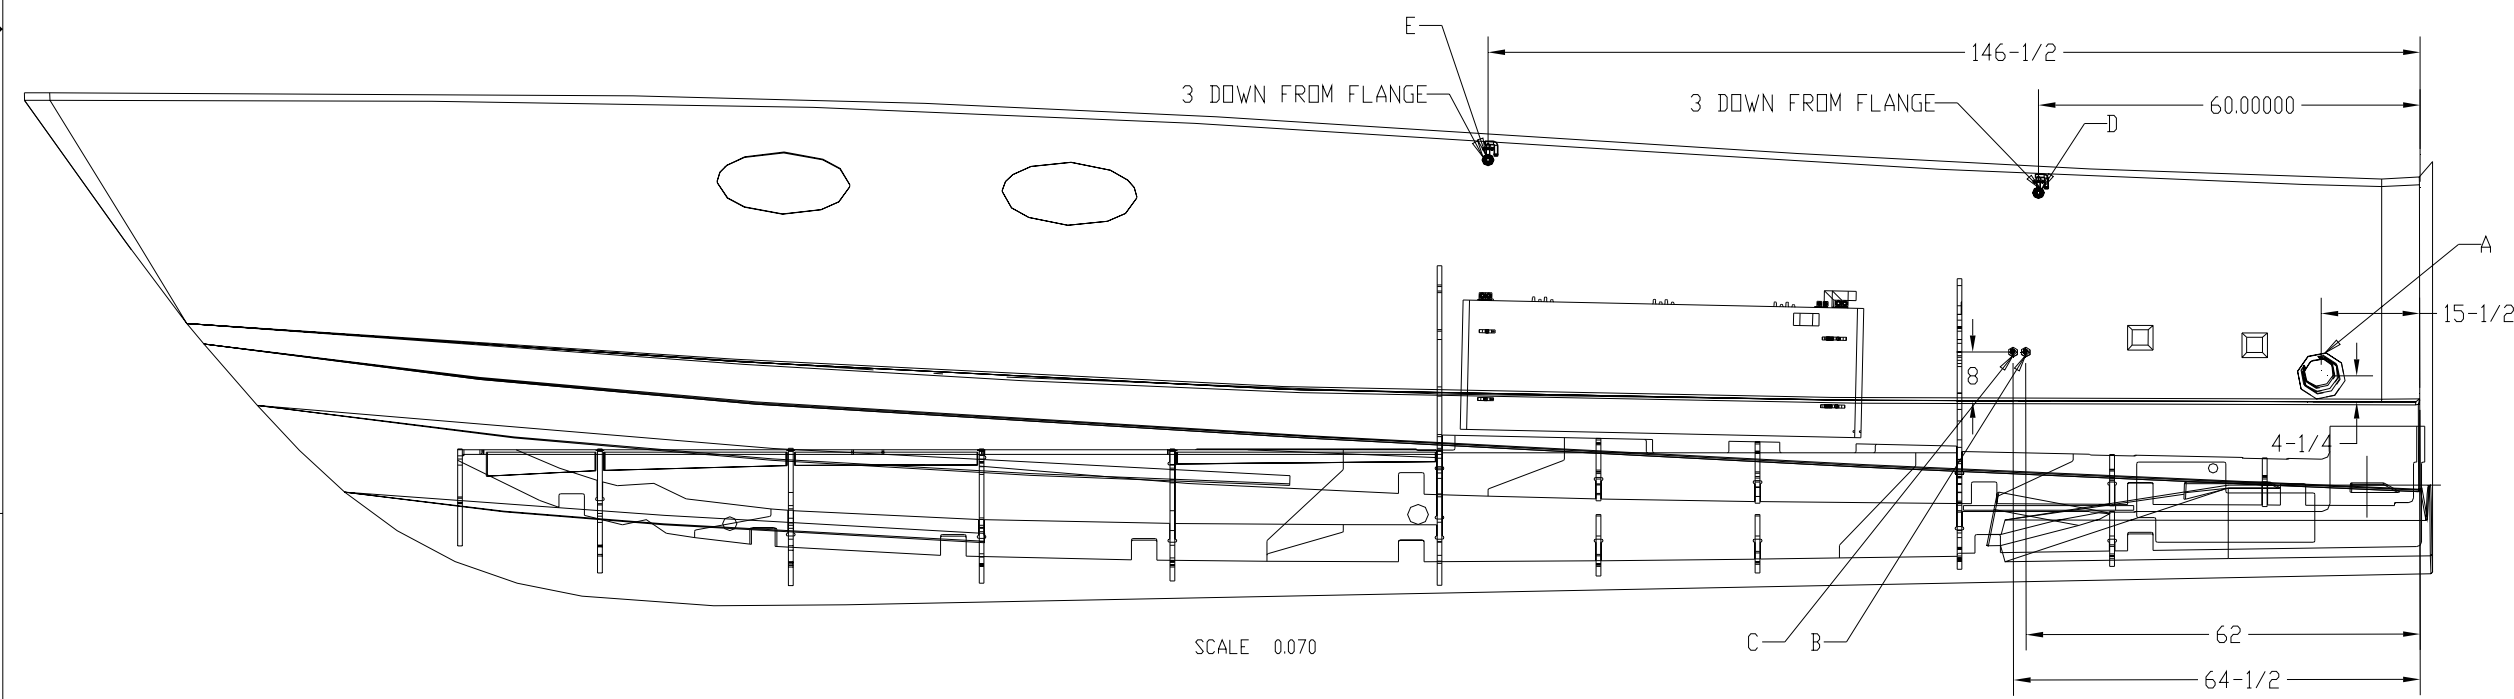

SCALE 0.070


NOTES:  
 A- $\phi$ 2-3/8 HOLE- 2" THRU-HULL W/ FLAPPER

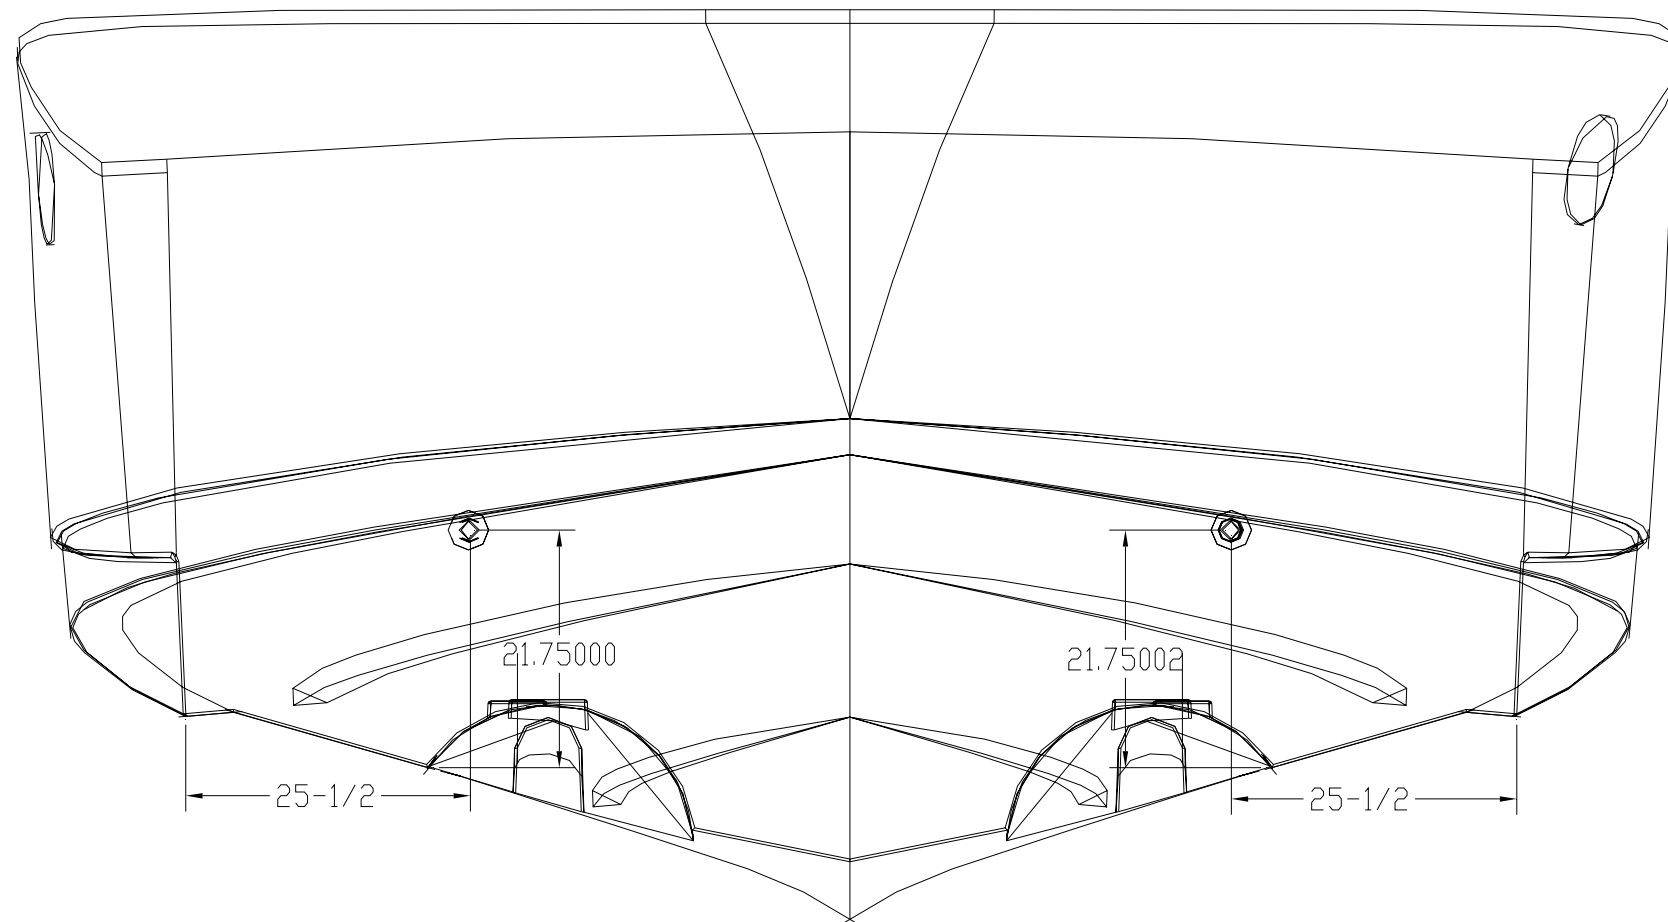

SCALE 0.125

DATE	DISTRIBUTION	

DATE	INT	REVISIONS
4/25/06	RFM	UPDATE FOR PRODUCTION
5/1/06	RFM	PRDD CHANEGS

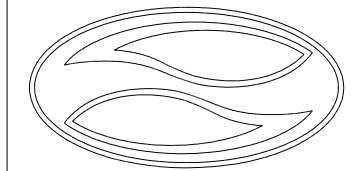

**SILVERTON**  
 Marine Corporation  
 DESIGN AND ENGINEERING  
 SILVERTON MARINE CORP.  
 S. RACE & RIVERVIEW DR.  
 MILLVILLE N.J.  
 08332  
 TELEPHONE  
 609-825-4117  
 FACSIMILE  
 609-293-8025

THIS DRAWING IS THE SOLE PROPERTY OF SILVERTON MARINE CORP. AND THE INFORMATION CONTAINED HEREIN IS NOT TO BE USED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN CONSENT OF SILVERTON MARINE CORPORATION.


**33 Convertible**

TRANSOM THRU-HULLS

DRAWN BY:	RFM
CHECKED BY:	
APPROVED BY:	
SCALE:	0.015
TOLERANCE:	
SHEET NO.:	4 OF 4
DATE:	1/26/06
DRAWING NO.:	31C_THRU_HULLS





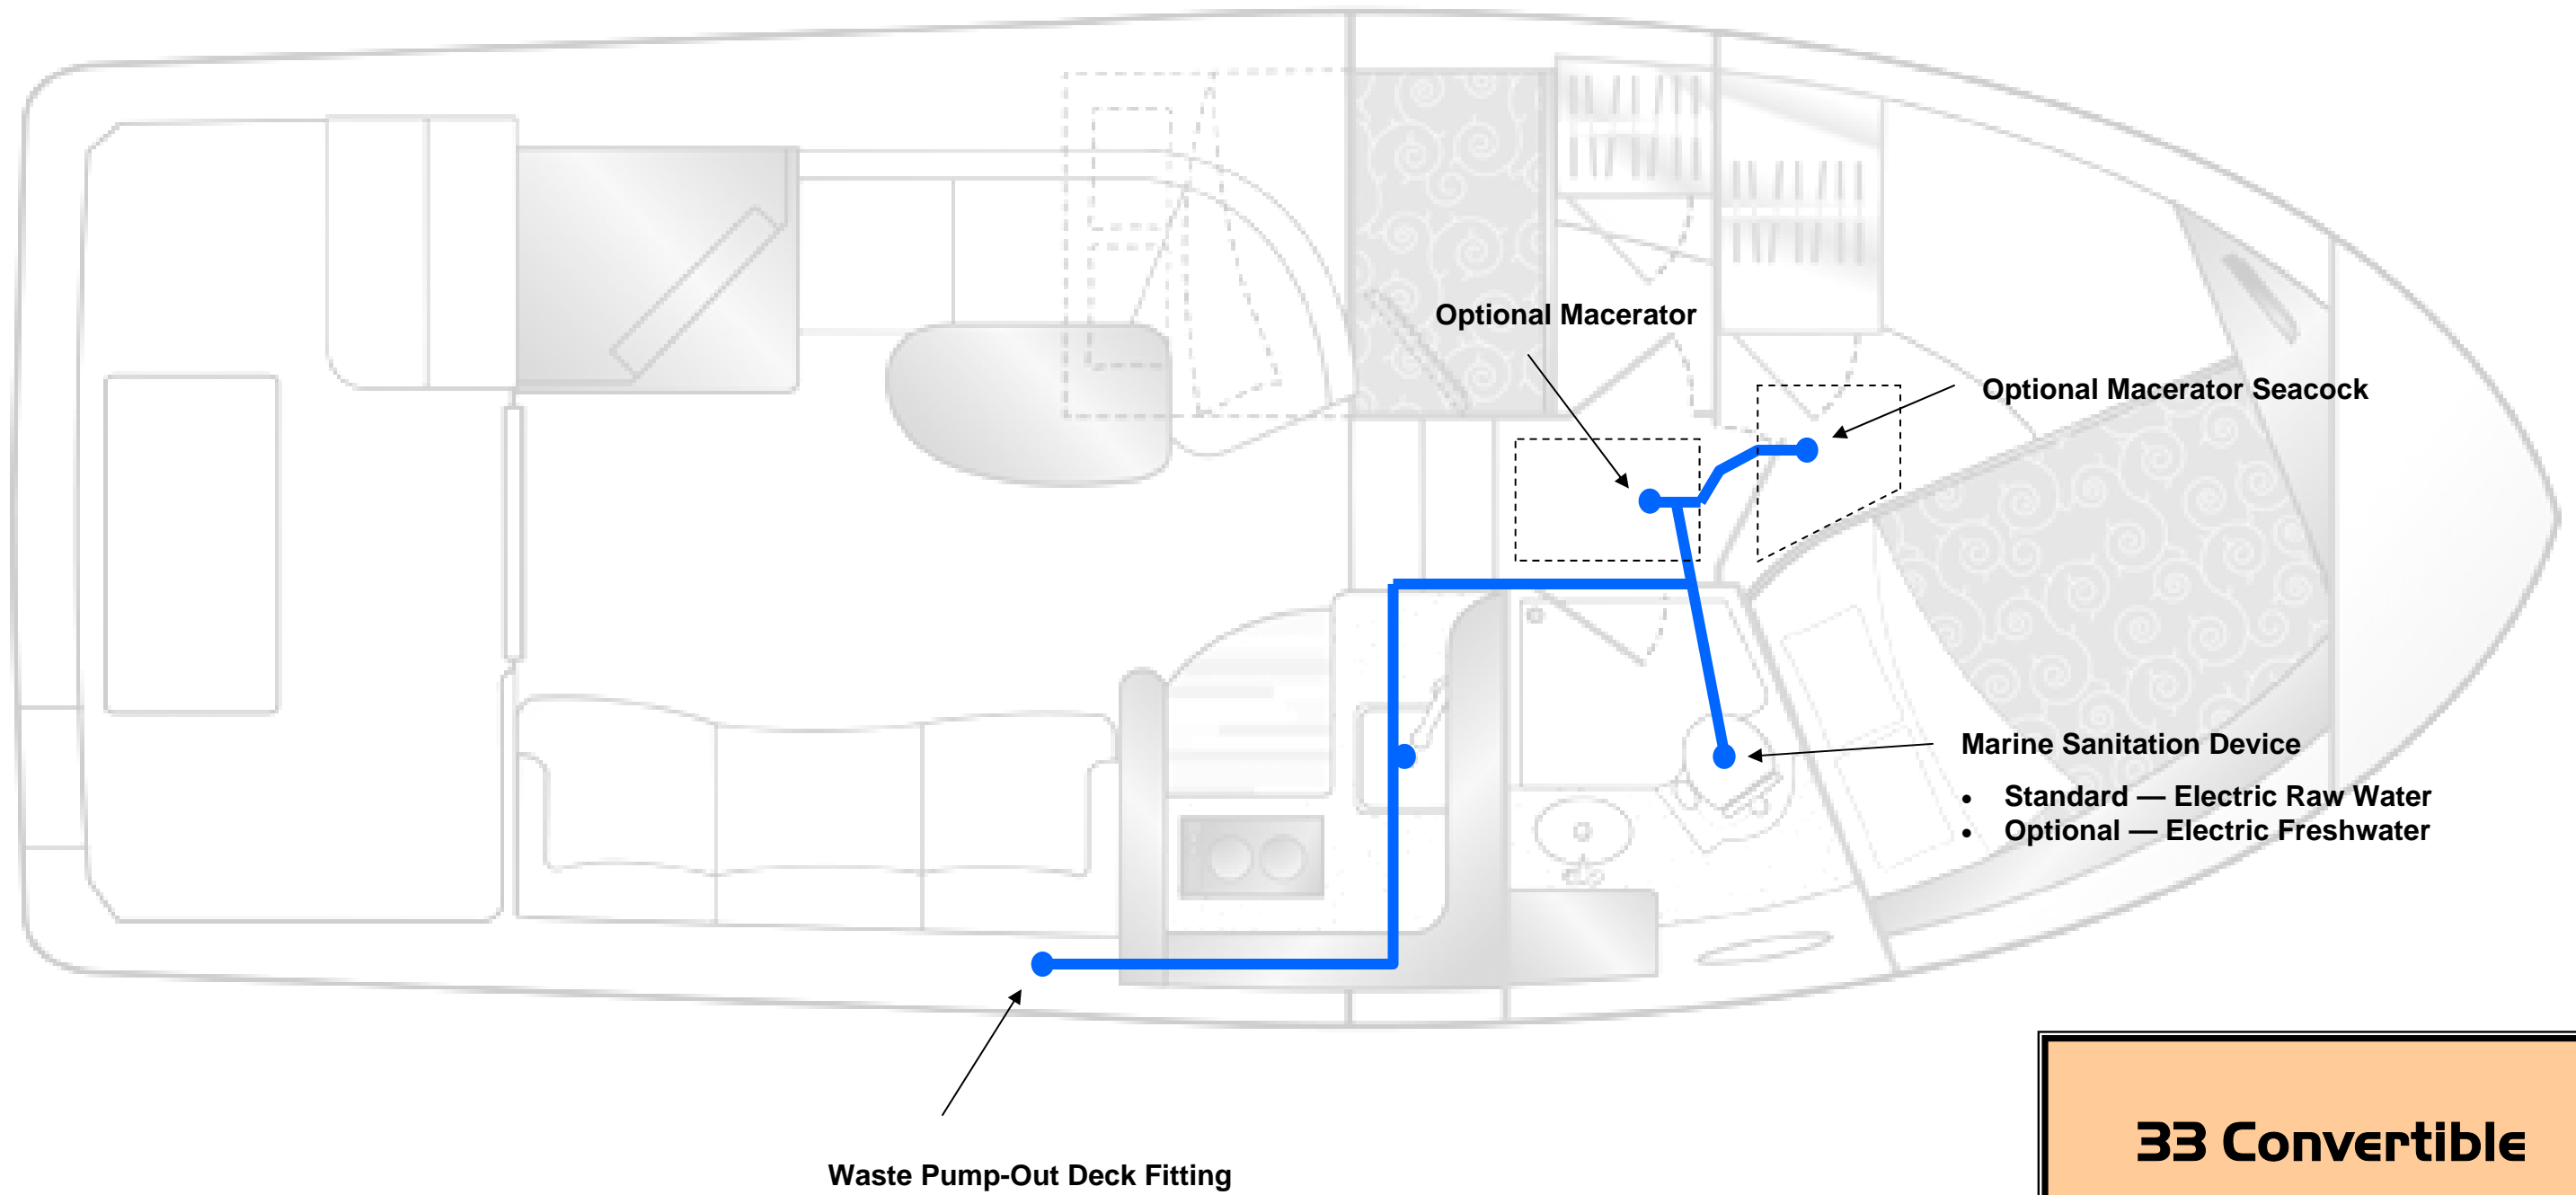

**33 Convertible  
WASTE**

WASTE / WATER MONITOR  
ELECTRICAL SCHEMATIC

**33 Convertible**

