

OWNER'S MANUAL

Original instructions




TOHATSU

Feel the Wind™

BFT 200D

BFT 225D

BFT 250D

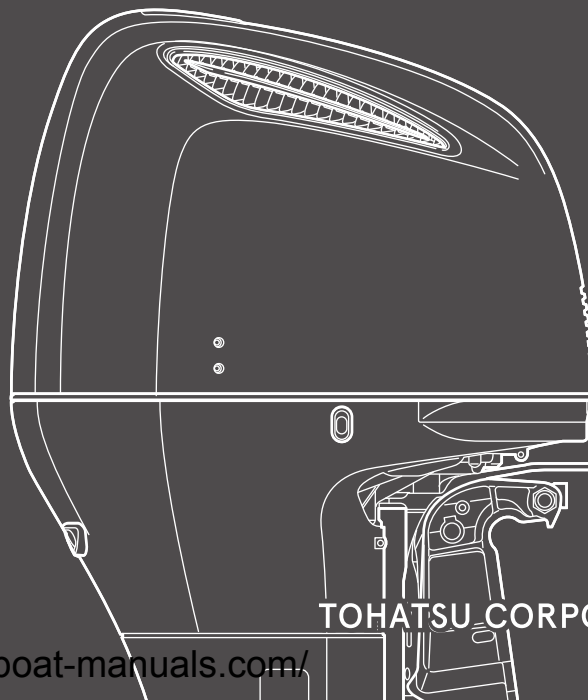

TOHATSU CORPORATION

BACKS
YOU
UP.

<https://www.boat-manuals.com/>

© 2018 Honda Motor Co., Ltd.
PGM-FI is a trademark of Honda Motor Co., Ltd. registered in Japan and other countries.

<https://www.boat-manuals.com/>

Thank you for purchasing a TOHATSU Outboard Motor.

This manual covers operation and maintenance of the TOHATSU BFT200D/BFT225D/BFT250D Outboard Motor.

All information in this publication is based on the latest product information available at the time of approval for printing.

Tohatsu Corporation reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

This manual should be considered a permanent part of the Outboard Motor and should remain with it if it is resold.

Throughout this manual, you will see safety messages preceded by the following words and symbols. Here's what they mean:

DANGER

Indicates serious injury or death **WILL** result if instructions are not followed.

WARNING

Indicates a strong possibility that serious personal injury or death may result if instructions are not followed.

CAUTION

Indicates a possibility that personal injury or equipment damage could result if instructions are not followed.

NOTICE

Indicates that equipment or property damage could result if instructions are not followed.

NOTE: Gives helpful information.

If a problem should arise, or if you have any questions about the Outboard Motor, consult an authorized TOHATSU Outboard Motor dealer.


WARNING

TOHATSU Outboard Motors are designed to give safe and dependable service if operated according to instructions. Read and understand the Owner's Manual before operating the Outboard Motor. Failure to do so could result in personal injury or equipment damage.

Control and Feature Identification Codes

Model	BFT200D				BFT225D			BFT250D		
	LRU	XRD	XRU	XCRU	XRU	XRD	XCRU	XRU	XRD	XCRU
Transom Height	508 mm (20.0 in)	•								
(Shaft Length)	635 mm (25.0 in)		•	•	•	•	•	•	•	•
Standard Rotating Propeller Shaft	•	•	•		•	•		•	•	
Counterrotating Propeller Shaft				•			•			•
Power Trim/Tilt	•	•	•	•	•	•	•	•	•	•
Mechanical wire	•	•	•	•	•	•	•	•	•	•
Drive by Wire (DBW)										

BFT200D/BFT225D/BFT250D are provided with the following types according to the shaft length and the rotating direction of the propeller shaft.
 TYPE CODE Example

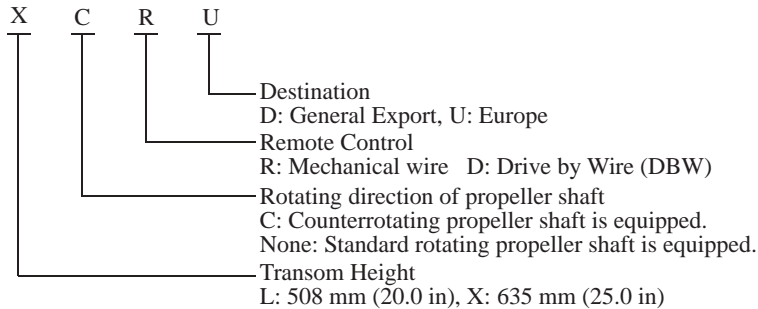


How To Determine Which Direction The Propeller Shaft Rotates

The direction the propeller shaft rotates can be determined based on whether or not the shaft has a groove.

With groove: Counterrotating

Without groove: Standard rotating

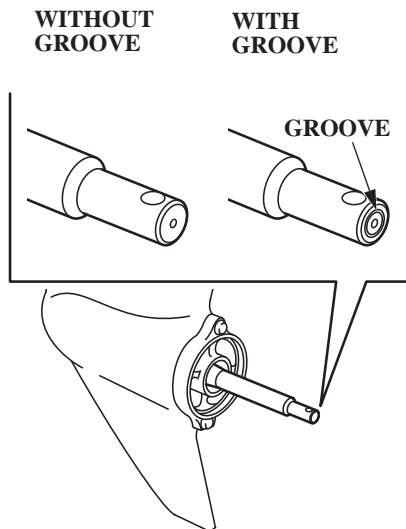

Remote Control Types

The remote control type is classified into the following three categories according to the control box position.

Flush-mount type
(DBW type): D1 type*

Top-mount type
(DBW type): D2 type*

Side-mount type: R1 type

Flush-mount type
(Mechanical wire type): R2 type


Top-mount type
(Mechanical wire type): R3 type

Check the type of your outboard motor and read this Owner's Manual thoroughly before operation.

Texts with no type indication are the information and/or procedures common to all types.

*: Not for sale in some countries or regions.

Serial Number Locations

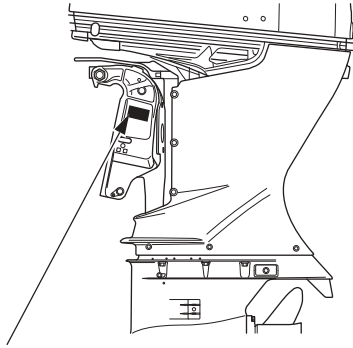


FRAME SERIAL NUMBER

Record the frame and engine serial numbers for your reference. Refer to the serial numbers when ordering parts, and when making technical or warranty inquiries.

The frame serial number is stamped on a plate attached on the left side of the stern bracket.

Frame serial number:

ENGINE SERIAL NUMBER

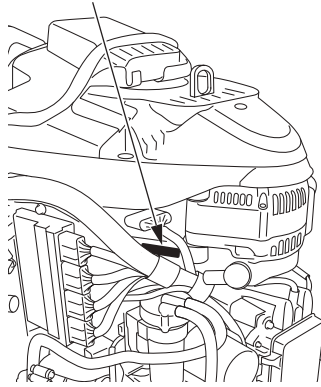

The engine serial number is stamped on the upper right side of the engine.

Engine serial number:

CONTENTS

1. SAFETY	7	Cooling Water Check Hole	41
SAFETY INFORMATION	7	Cooling Water Intake Port	41
2. SAFETY LABEL LOCATIONS	9	Engine Cover Latches	41
3. COMPONENT IDENTIFICATION	11	Tachometer (optional equipment)	42
4. CONTROLS AND FEATURES	20	NMEA Interface Coupler	42
Remote Control Lever (D1 type)	20	Operating Hour Notification System	42
Remote Control Lever (D2 type)	21	5. INSTALLATION	45
Remote Control Lever (R1 type)	22	Transom Height	45
Remote Control Lever (R2 type)	23	Location	46
Remote Control Lever (R3 type)	24	Installation Height	46
Neutral Release Lever	25	Outboard Motor Installation	47
Engine Switch	25	Outboard Motor Angle Inspection (Cruising)	48
Power Switch	26	Battery Connections	49
START/STOP SWITCH	27	Remote Control Installation (optional equipment)	51
FUNCTION SWITCHES (D1 type)	28	<Remote Control Box Location>	54
FUNCTION SWITCHES (D2 type)	29	<Remote Control Cable Length>	54
Fast Idle Lever (R1 type)/Fast Idle Button (R2, R3 types)	31	Propeller Selection	55
PGM-FI Indicator/Buzzer	32	Fuel Line Connection	55
ACG Indicator/Buzzer	32	6. PRE-OPERATION CHECKS	56
Oil Pressure Indicator/Buzzer	33	Engine Cover Removal/Installation	56
Overheat Indicator/Buzzer	33	Engine Oil	57
Water Separator Buzzer	33	Fuel	59
Power Trim/Tilt Switch	34	GASOLINE CONTAINING ALCOHOL	60
PTT SWITCH PANEL	35	Propeller and Cotter Pin Inspection	61
Power Tilt	36	Remote Control Lever Friction	62
Trim Meter (optional equipment)	36	Fuel Filter with Water Separator	63
Power Tilt Switch (outboard motor pan)	36	Battery	64
Manual Relief Valve	37	Other Checks	65
Emergency Stop Switch	38	7. STARTING THE ENGINE	66
Emergency Stop Switch Lanyard/Clip	38	Fuel Priming	66
Spare Emergency Stop Switch Clip (optional equipment)	39	Starting the Engine	66
Tilt Lock Lever	40	(D1, D2 types)	66
Trim Tab	40	(R1 type)	70
Anode	40	(R2, R3 types)	74

CONTENTS

Station Select Mode	78	10. TRANSPORTING	109
8. OPERATION	79	Fuel Line Disconnection	109
Break-in Procedure	79	Transporting	109
Gear Shifting (D1 type)	80	Trailing	110
Gear Shifting (D2 type)	81	11. CLEANING AND FLUSHING	111
Gear Shifting (R1 type)	82	12. MAINTENANCE	112
Gear Shifting (R2 type)	83	Tool Kit and Spare Parts	
Gear Shifting (R3 type)	84	(Tool Kit does not come with Counter Rotation Types)	113
Cruising	85	MAINTENANCE SCHEDULE	114
Trolling Mode	88	Engine Oil	116
One-Lever Mode (For multiple outboard motors type)	89	Spark Plugs	118
Trimming the Outboard Motor	90	<Optional Parts: Iridium Spark Plug>	121
Trim Meter (optional equipment)	93	Lubrication	122
Tilting the Outboard Motor	94	Fuel Filter with Water Separator	123
Moorage	96	EMISSION CONTROL SYSTEM	126
Power Tilt Switch	97	Battery	127
Manual Relief Valve	97	Fuse	129
Trim Tab Adjustment	98	ACG Fuse	131
Engine Protection System	99	Propeller	132
<Engine Oil Pressure, Overheat, Water Separator,		Inspect After Operating	133
PGM-FI and ACG Warning Systems>	99	Submerged Outboard Motor	133
<Over-rev Limiter>	103	13. STORAGE	135
<Anode>	103	Fuel	135
Shallow Water Operation	103	Vapor Separator Draining	136
Multiple Outboard Motors	104	Battery Storage	137
9. STOPPING THE ENGINE	105	Outboard Motor Position	138
Emergency Engine Stop	105	14. DISPOSAL	139
Normal Engine Stop (D1, D2 type)	105	15. TROUBLESHOOTING	140
Normal Engine Stop		WARNING SYSTEM COMES ON	140
(D1, D2 without START/STOP Switch type)		Emergency Gear Shifting (for DBW type)	142
(R1, R2, R3 type)	107	16. SPECIFICATIONS	143
		17. "EC DECLARATION OF CONFORMITY"	
		CONTENT OUTLINE	147
		18. INDEX	152

 
SAFETY INFORMATION

For your safety and the safety of others, pay special attention to these precautions.

Operator Responsibility



- **TOHATSU outboard motor is designed to give safe and dependable service if operated according to instructions. Read and understand the Owner's Manual before operating the outboard motor. Failure to do so could result in personal injury or equipment damage.**



Shift to the neutral position and then shift to the reverse position at low engine speed. Do not shift to the reverse position suddenly at high engine speed.

- Gasoline is harmful or fatal if swallowed. Keep the fuel tank out of reach of children.
- Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well-ventilated area with the engine stopped.
- Do not smoke or allow flames or sparks where the engine is refueled or where gasoline is stored.
- Do not overfill the fuel tank. After refueling make sure that the fuel filler cap is closed properly and securely.
- Be careful not to spill any fuel while refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled make sure that the area is dry before starting the engine.
- Know how to stop the engine quickly in case of emergency. Understand the use of all controls.
- Do not exceed the boat manufacturer's power recommendation, and be sure that the outboard motor is properly mounted.
- Never permit anyone to operate the outboard motor without proper instruction.
- Stop the engine immediately if anyone falls overboard.
- Do not run the engine while the boat is near anyone in the water.
- Attach the emergency stop switch lanyard securely to the operator.
- Before operating the outboard motor, familiarize yourself with all laws and regulations relating to boating and the use of outboard motors.

SAFETY

- Do not attempt to modify the outboard motor.
- Always wear a life-jacket when on board.
- Do not operate the outboard motor without the engine cover. Exposed moving parts can cause injury.
- Do not remove any guards, labels, shields, covers or safety devices; they are installed for your safety.
- Stop the engine immediately if anyone falls overboard.
- Do not run the engine while the boat is near anyone in the water.
- Attach the emergency stop switch lanyard securely to the operator.

Burn Hazards

The engine and exhaust system become very hot during operation and remain hot for a while after stopping. Contact with hot engine components can cause burns and may ignite some materials.

- Avoid touching a hot engine or exhaust system.
- Allow the engine to cool before performing maintenance or transporting.

Carbon Monoxide Poisoning Hazard

Exhaust contains poisonous carbon monoxide, a colorless and odorless gas. Breathing exhaust can cause loss of consciousness and may lead to death.

- If you run the engine in an area that is confined, or even partially enclosed, the air can become contaminated with a dangerous amount of exhaust gas. To keep exhaust gas from building up, provide adequate ventilation.

2. SAFETY LABEL LOCATIONS

These labels are in the locations shown.



The label warns you of potential hazards that can cause serious injury.

The label is considered permanent part of your outboard motor.

Read the label and safety notes and precautions described in this manual carefully.

If the label comes off or becomes hard to read, contact your TOHATSU outboard motor dealer for a replacement.


**READ OWNER'S MANUAL
GEAR SHIFTING**

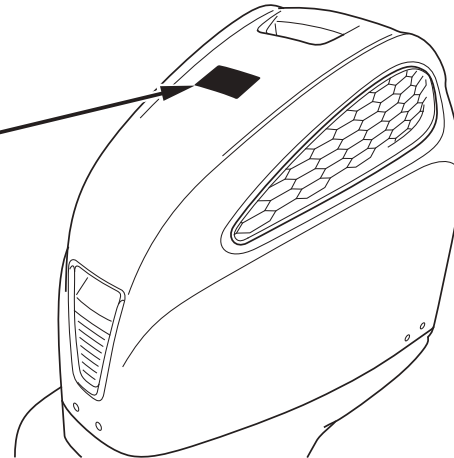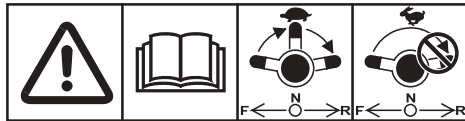


SAFETY LABEL LOCATIONS

CE mark location
[U type only]

CE MARK

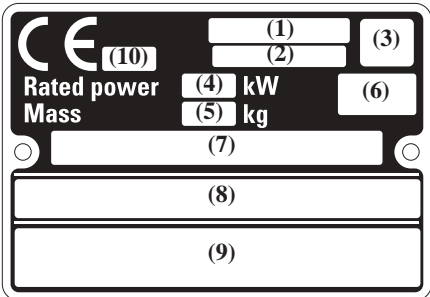


(1) Model name
(2) Engine family name
(3) Year code
(4) Rated power
(5) Dry mass (weight) (with propeller, without battery cable)
(6) Country of manufacture
(7) Frame number
(8) Manufacturer and address
(9) Name and address of authorized representative
(10) The identification number of the notified body

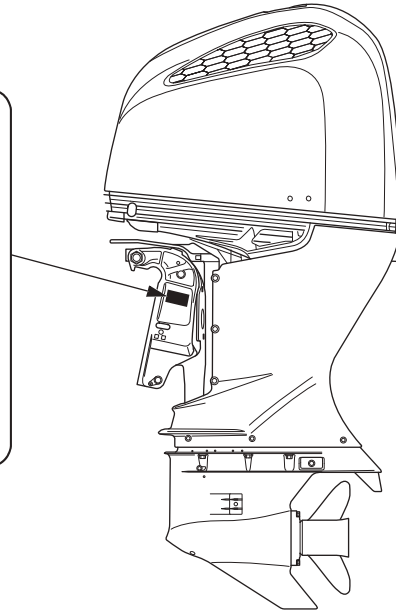

Year code	J	K	L	M	N
Year of manufacture	2018	2019	2020	2021	2022

Name and address of manufacturer and authorized representative are written in the “EC Declaration of Conformity” CONTENT OUTLINE in this Owner’s Manual.

3. COMPONENT IDENTIFICATION


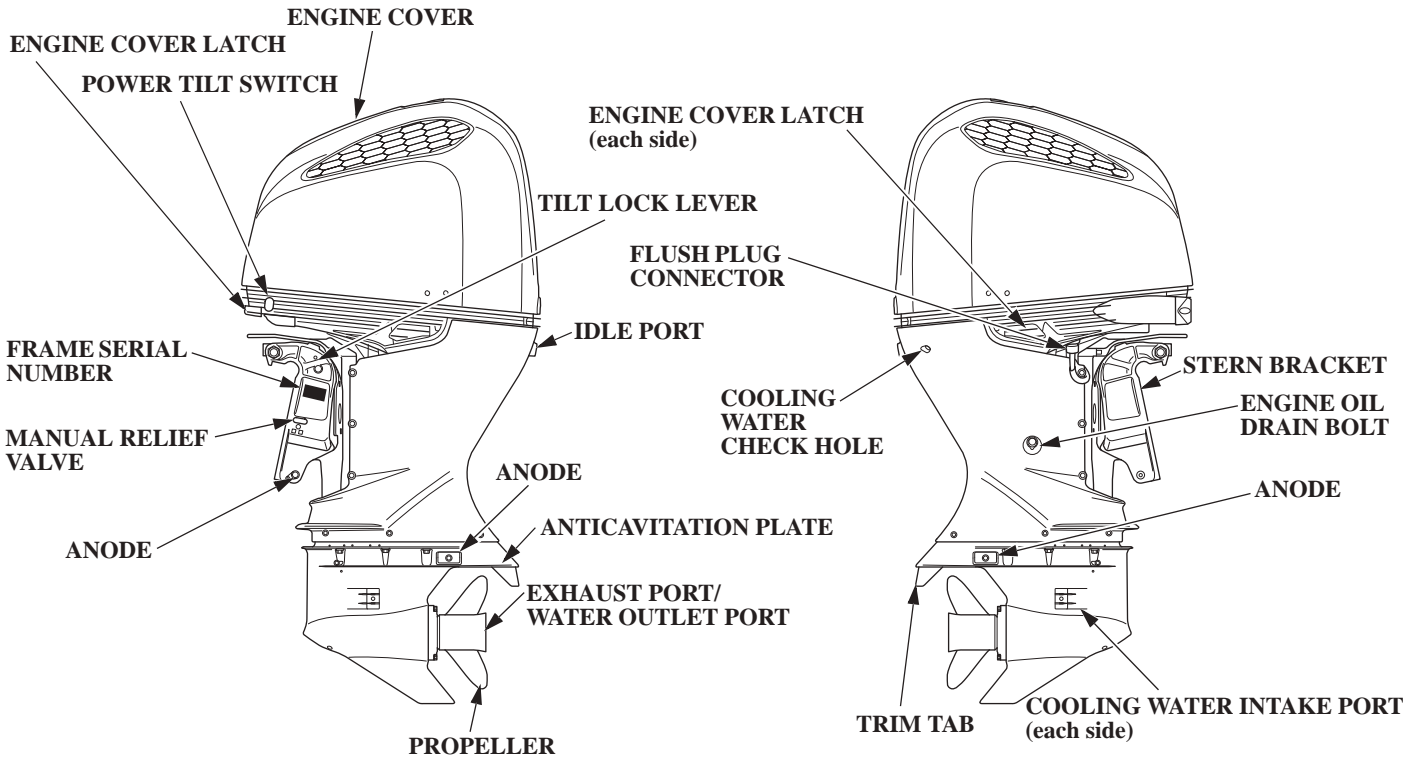


* Illustrations are based on X type

COMPONENT IDENTIFICATION

(R1, R2, R3 type)

**THROTTLE ARM/SHIFT
ARM SHAFT**

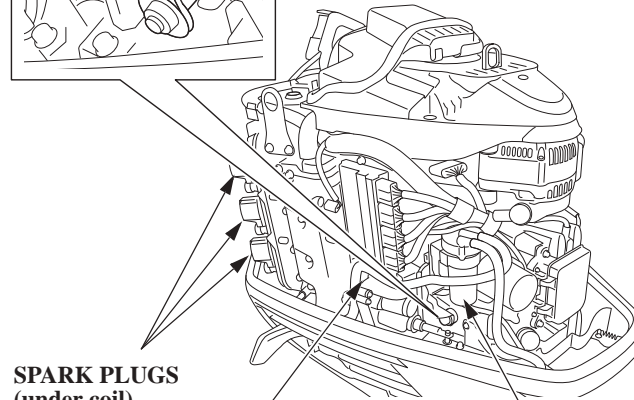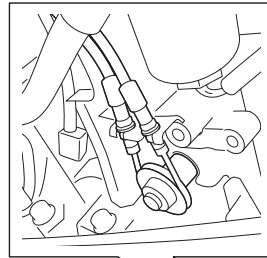


**SPARK PLUGS
(under coil)**

OIL LEVEL DIPSTICK

**FUEL FILTER with WATER
SEPARATOR**


COMPONENT IDENTIFICATION

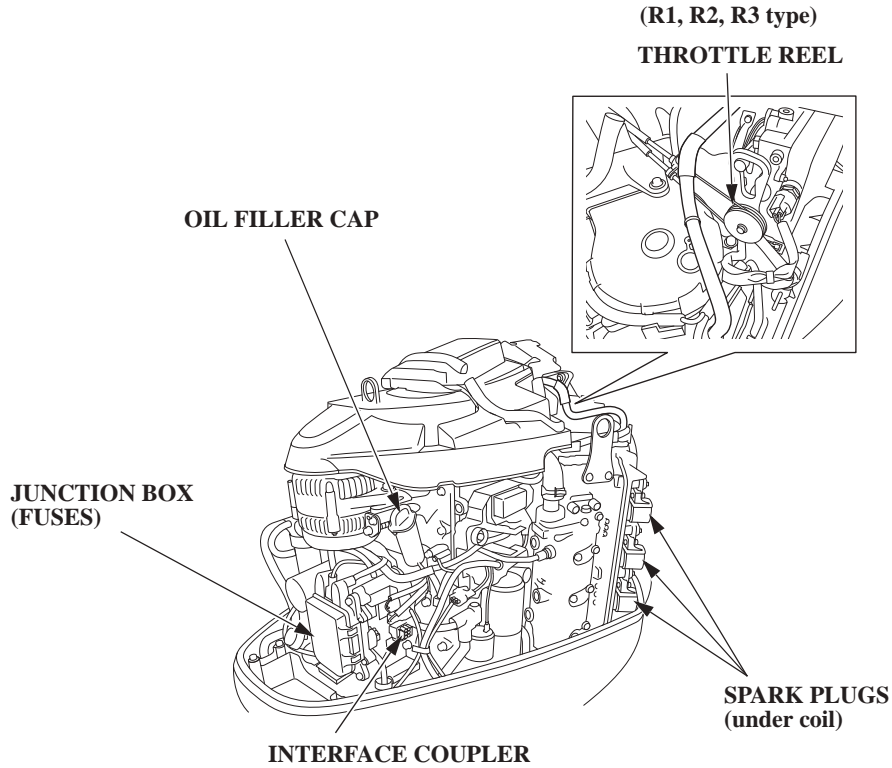


COMPONENT IDENTIFICATION

DBW REMOTE CONTROL BOX (optional equipment)


FLUSH-MOUNT TYPE (D1 type)

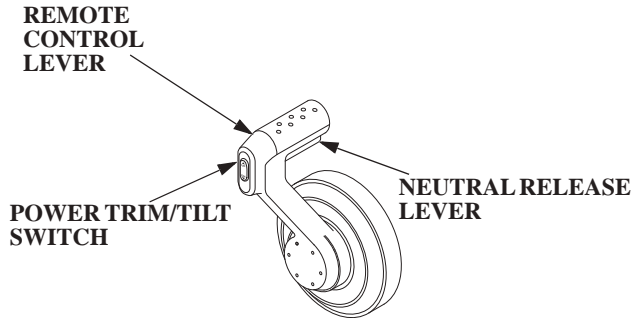

TOP-MOUNT TYPE (D2 type) (SINGLE OUTBOARD MOTOR TYPE)

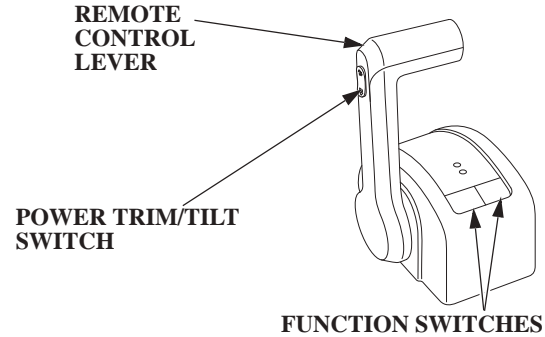


(DUAL OUTBOARD MOTOR TYPE)

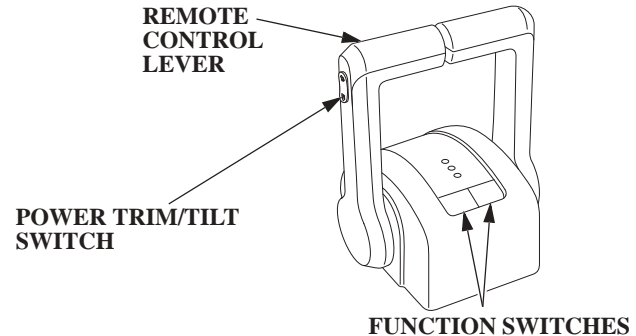


COMPONENT IDENTIFICATION

KEY SWITCH PANEL (optional equipment)

(With START/STOP switch type)
(Horizontal type)

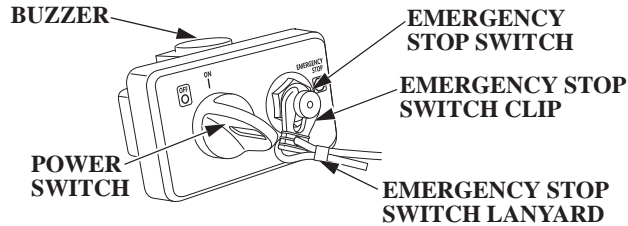


(Without START/STOP switch type)
(Horizontal type)

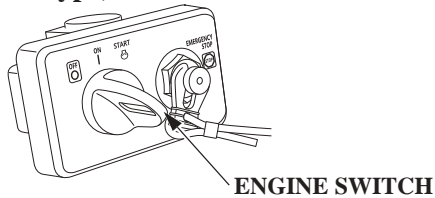


START/STOP SWITCH PANEL (optional equipment)

START/STOP SWITCH

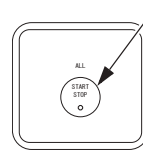


SINGLE TYPE/ALL ENGINE
START FOR MULTIPLE
OUTBOARD MOTORS

START/STOP SWITCH

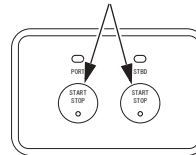

DUAL TYPE
OUTBOARD MOTOR

START/STOP SWITCH

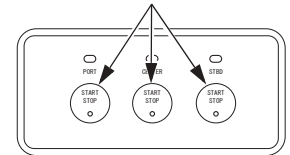


TRIPLE TYPE
OUTBOARD MOTOR

COMPONENT IDENTIFICATION


PTT SWITCH PANEL (optional equipment)

POWER TRIM/TILT SWITCH

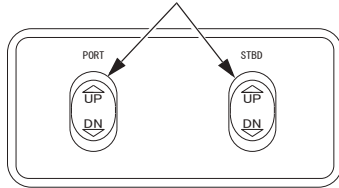

DUAL TYPE


POWER TRIM/TILT SWITCH

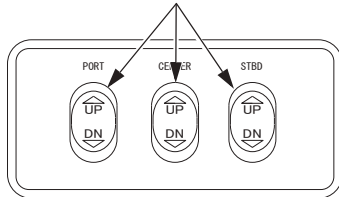


TRIPLE TYPE

FUNCTION SWITCH PANEL (optional equipment) (for FLUSH-MOUNT type)

FUNCTION SWITCHES

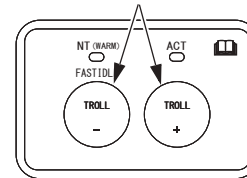


EMERGENCY STOP SWITCH PANEL (optional equipment)

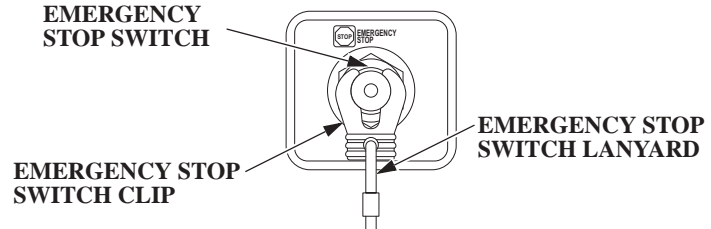


COMPONENT IDENTIFICATION

REMOTE CONTROL BOX (optional equipment)

SIDE-MOUNT TYPE (R1 type)

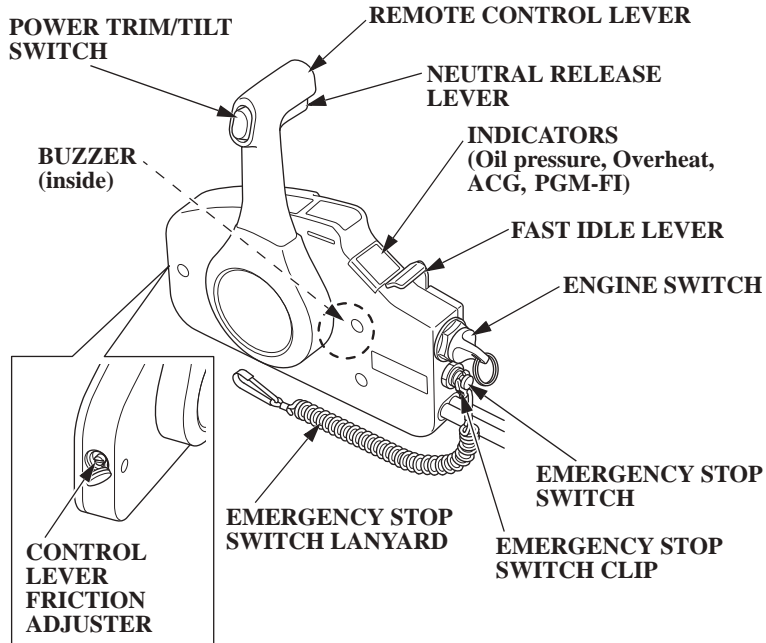


FLUSH-MOUNT TYPE (R2 type)

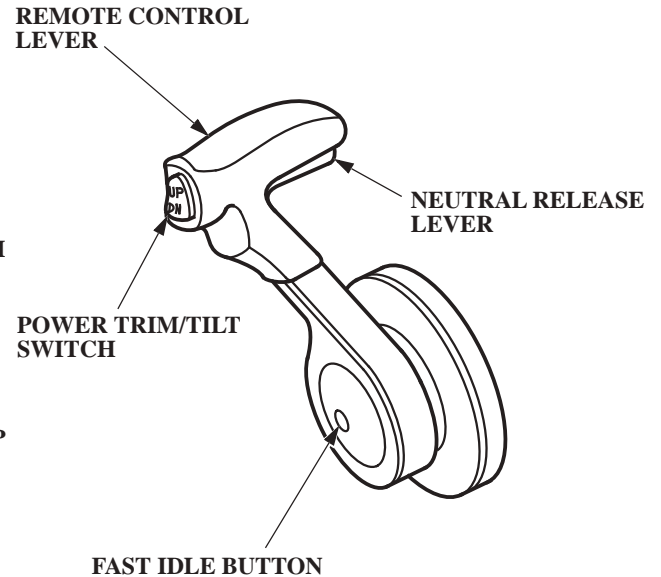


COMPONENT IDENTIFICATION


TOP-MOUNT TYPE (R3 type) (SINGLE OUTBOARD MOTOR TYPE)

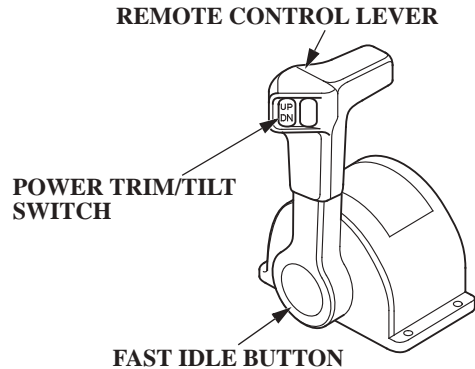


(DUAL OUTBOARD MOTOR TYPE)

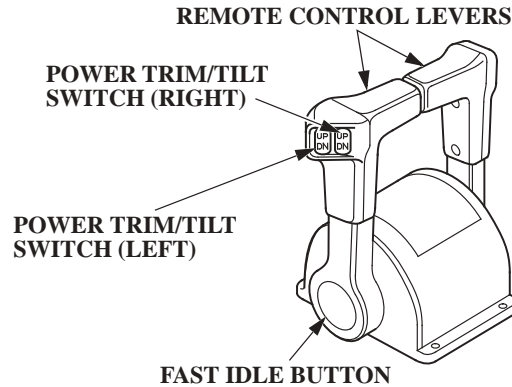

SWITCH PANEL (optional equipment) (FLUSH-MOUNT, TOP-MOUNT)

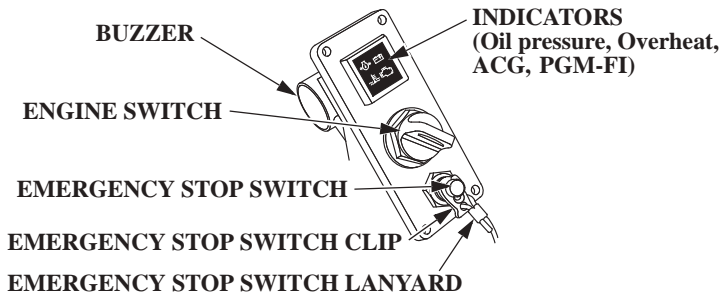


(for TOP-MOUNT DUAL type)

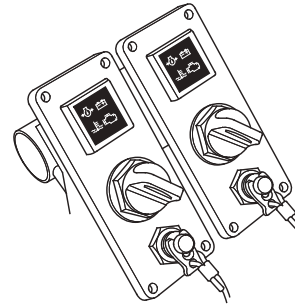


COMPONENT IDENTIFICATION


SWITCH PANEL without indicators type
(optional equipment)
(FLUSH-MOUNT, TOP-MOUNT SINGLE)

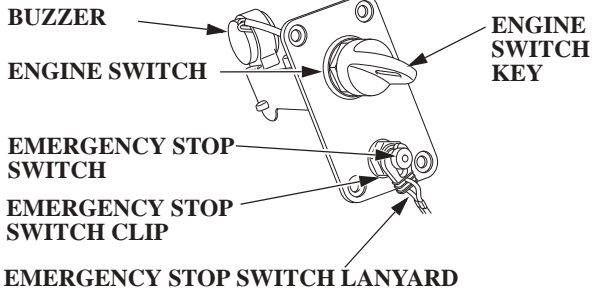

(for DUAL OUTBOARD MOTORS type)

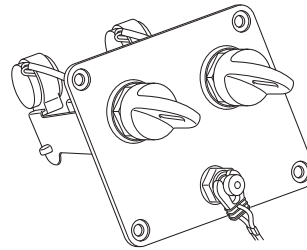


(for TRIPLE OUTBOARD MOTORS type)

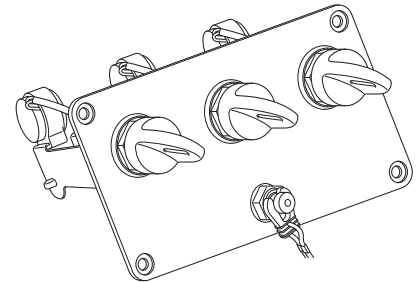


For the switch panel without indicators type, use it along with the NMEA2000-compatible device.

(Common)

TACHOMETER (Optional equipment)

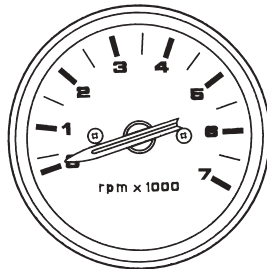



TRIMMETER (Optional equipment)

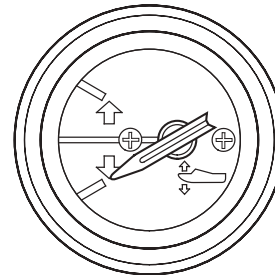

4. CONTROLS AND FEATURES

Remote Control Lever (D1 type)

REMOTE CONTROL LEVER

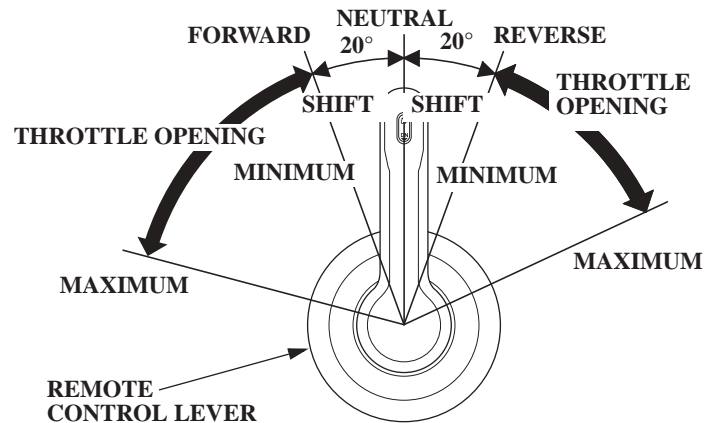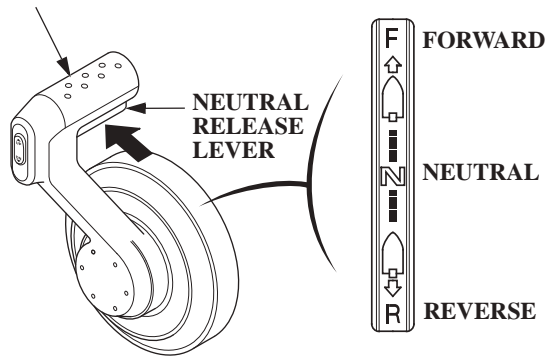

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.

It is necessary to pull up the neutral release lever to operate the remote control lever.

FORWARD:

Moving the lever to the FORWARD position (i.e. approximately 20° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

NEUTRAL:




Engine power is cut off from the propeller.

REVERSE:

Moving the lever to the REVERSE position (i.e. approximately 20° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.

CONTROLS AND FEATURES

Remote Control Lever (D2 type)

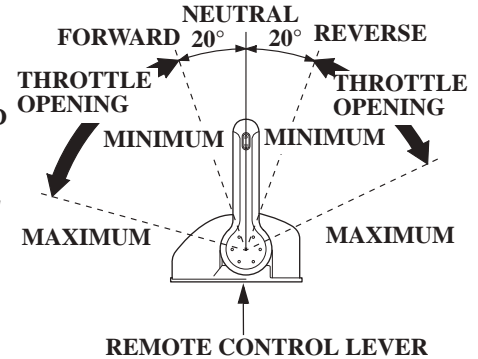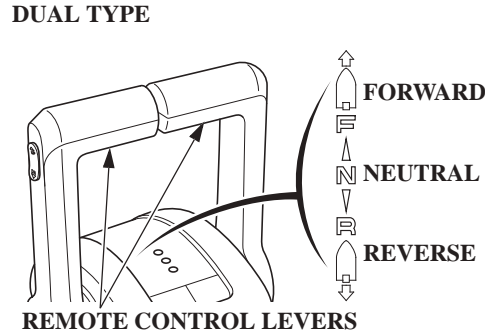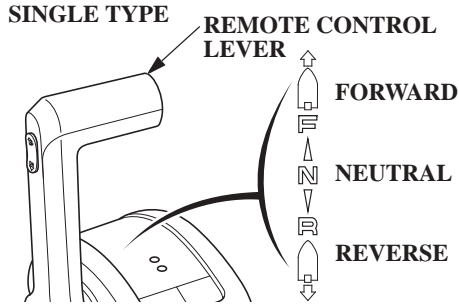

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.


FORWARD:
Moving the lever to the FORWARD position (i.e. approximately 20° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

NEUTRAL:
Engine power is cut off from the propeller.

REVERSE:
Moving the lever to the REVERSE position (i.e. approximately 20° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.


CONTROLS AND FEATURES

Remote Control Lever (R1 type)

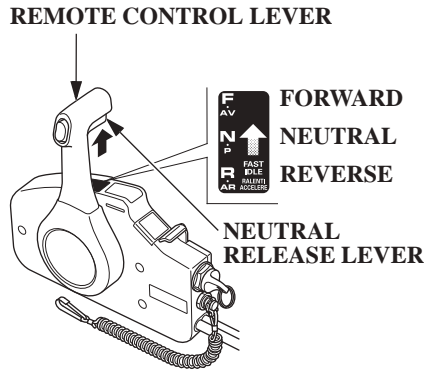

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.

It is necessary to pull up the neutral release lever to operate the remote control lever.

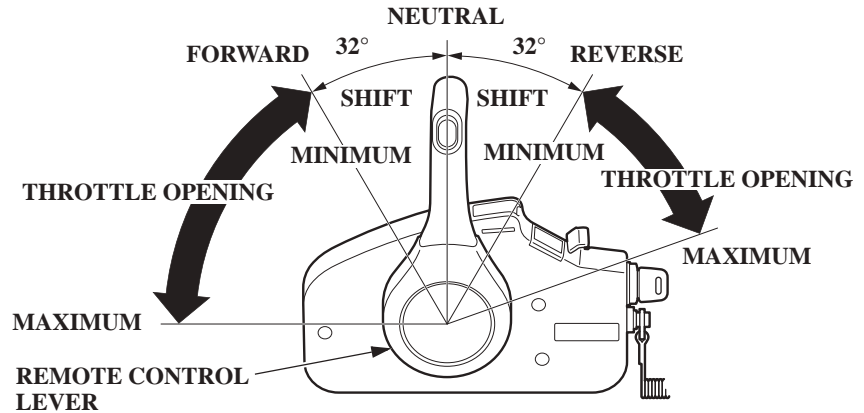

FORWARD:

Moving the lever to the FORWARD position (i.e. approximately 32° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

NEUTRAL:

Engine power is cut off from the propeller.



REVERSE:

Moving the lever to the REVERSE position (i.e. approximately 32° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.

CONTROLS AND FEATURES

Remote Control Lever (R2 type)

REMOTE CONTROL LEVER

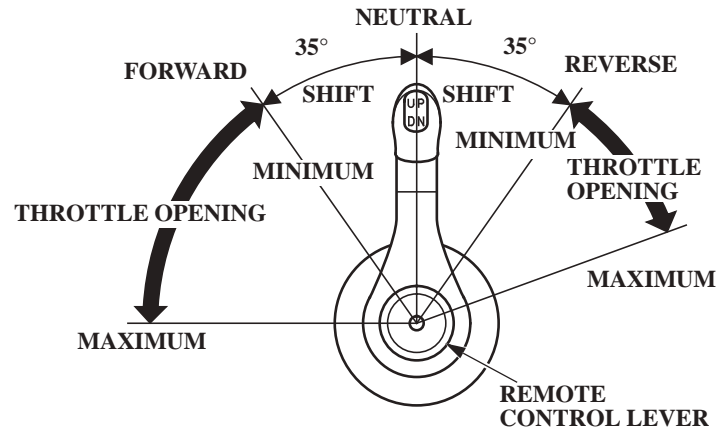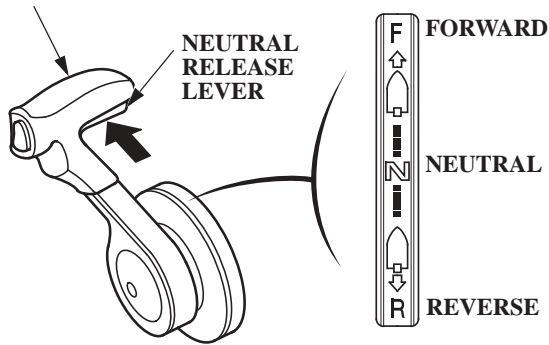

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.

It is necessary to pull up the neutral release lever to operate the remote control lever.

FORWARD:

Moving the lever to the FORWARD position (i.e. approximately 35° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

NEUTRAL:


Engine power is cut off from the propeller.

REVERSE:


Moving the lever to the REVERSE position (i.e. approximately 35° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.

CONTROLS AND FEATURES

Remote Control Lever (R3 type)

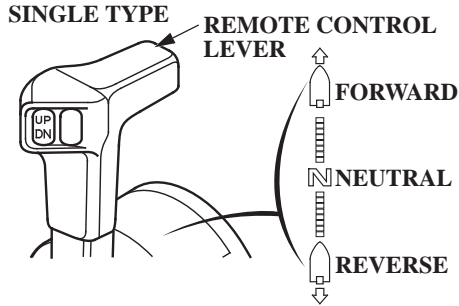


DUAL TYPE

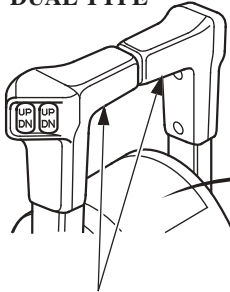


REMOTE CONTROL LEVERS

FORWARD NEUTRAL

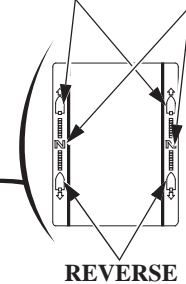

REVERSE

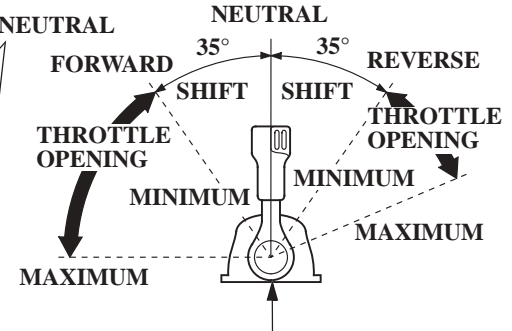

REMOTE CONTROL LEVER

Shifting gear into forward, reverse, or neutral and the engine speed adjustment can be performed with the remote control lever.

FORWARD:

Moving the lever to the FORWARD position (i.e. approximately 35° from the NEUTRAL position) engages the gear into forward. Moving the lever further from the FORWARD position will increase the throttle opening and the boat forward speed.

NEUTRAL:

Engine power is cut off from the propeller.

REVERSE:


Moving the lever to the REVERSE position (i.e. approximately 35° from the NEUTRAL position) engages the gear into reverse. Moving the lever further from the REVERSE position will increase the throttle opening and the boat reverse speed.

CONTROLS AND FEATURES

Neutral Release Lever


(D1 type)

REMOTE CONTROL LEVER

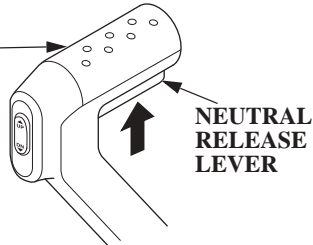


(R1 type)

REMOTE CONTROL LEVER

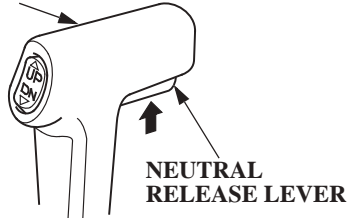


(R2 type)

REMOTE CONTROL LEVER

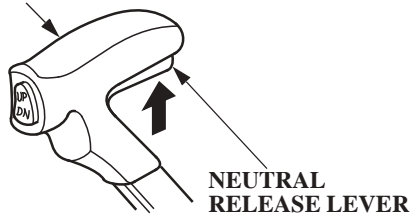


Engine Switch

(R1 type)

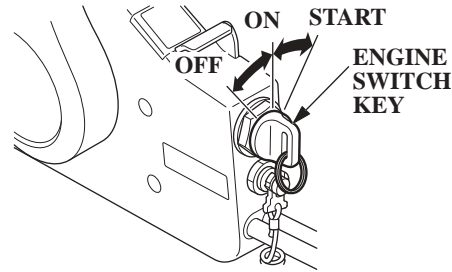

(D1, D2 without START/STOP Switch type)

(R2, R3 type)

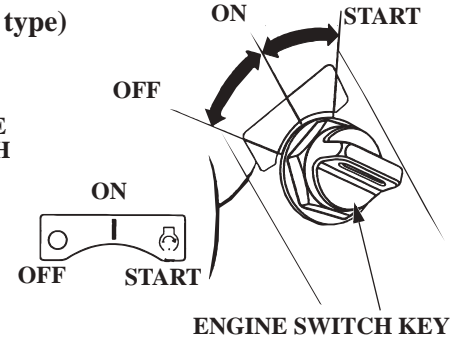

The neutral release lever is set on the remote control lever to prevent an accidental operation of the remote control lever.

The remote control lever does not operate unless it is moved while pulling the neutral release lever up.

This remote control is equipped with an automotive type engine switch. On the flush-mount type (D1 type), the top-mount type (D2 type), the engine switch locates on the key switch panel.

On the side-mount type (R1 type), the engine switch locates on your side near the remote control box.

On the flush-mount type (R2 type) and the top-mount type (R3 type), the engine switch locates at the center of the switch panel.

Key positions:

START: to start the engine.

ON: to run the engine after starting.

OFF: to stop the engine (IGNITION OFF).

CONTROLS AND FEATURES


NOTICE

Do not leave the engine switch ON (key in ON position) when the engine is not running as the battery will discharge.

NOTE:

The starter motor will not work unless the remote control lever is in the NEUTRAL position, and the clip is in the emergency stop switch.

Power Switch

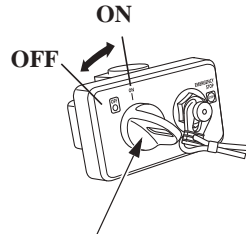

POWER SWITCH

This remote control is equipped with the power switch. This switch locates on the key switch panel.

Key positions:

ON: to run the engine after starting.


OFF: to stop the engine (IGNITION OFF).

NOTICE

Do not leave the power switch ON when the engine is not running as the battery will discharge.

The power will not be turned OFF if the engine is running.


START/STOP SWITCH

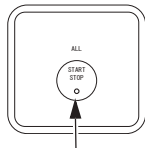

START/STOP SWITCH

**ALL ENGINE START
FOR MULTIPLE
OUTBOARD MOTORS**

Pushing the start/stop switch when the power is in ON starts the engine.

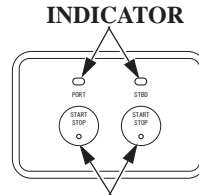


START/STOP SWITCH

**DUAL TYPE
OUTBOARD MOTORS**

For the multiple outboard motors, it is possible to start all engines at the same time by using the all engine start switch.

Also, it is possible to start each engine individually by using dual or triple type switch.

At this time, the indicator of the corresponding switch comes on.

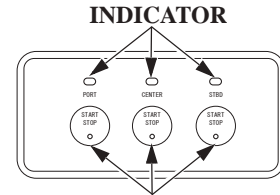

START/STOP SWITCH


**TRIPLE TYPE
OUTBOARD MOTORS**

NOTE:

The starter motor will not work unless the remote control lever is in the NEUTRAL position, and the clip is in the emergency stop switch.

CONTROLS AND FEATURES

FUNCTION SWITCHES (D1 type)

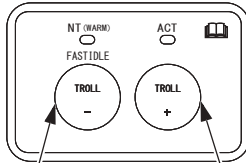

[-] SWITCH


[+] SWITCH

Function switches are used for operations in the fast idle mode and trolling mode.

<Fast Idle Mode>

The fast idle mode is only needed for starting carbureted outboard models. The BFT200D, BFT225D and BFT250D models use programmed fuel injection so, this mode will not be needed for starting.

After the engine starts and if the outside temperature is below 5°C (41°F), the fast idle mode can be used to accelerate engine warm up.

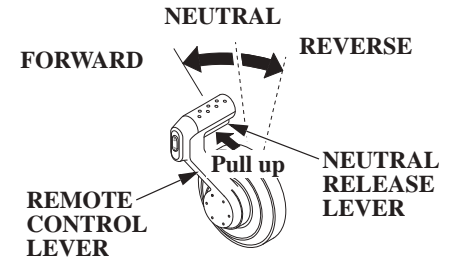


Use the [-] switch and the remote control lever to adjust the engine speed without gearshift when warming up the engine. Keeping the [-] switch pressed when the remote control lever is in the NEUTRAL position, turn the lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point. Note that the gearshift mechanism does not function when the [-] switch is pushed once and then released after the remote control lever is moved. The control lever does not operate unless the neutral release lever is pulled.

<Trolling Mode>

The engine speed can be adjusted with the [-] switch and [+] switch when in trolling mode.

If you press and hold the [+] switch while cruising with the throttle closed, the mode changes to trolling mode.

FUNCTION SWITCHES (D2 type)

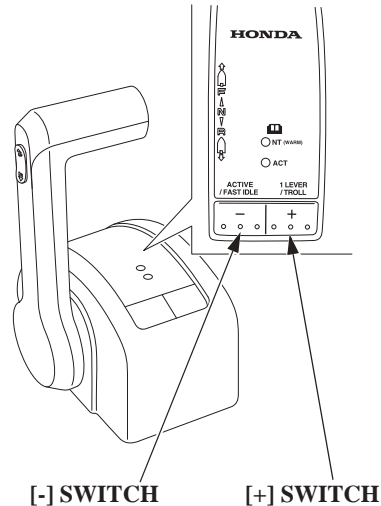


Function switches are used for operations in the fast idle mode, trolling mode, one-lever mode and station select mode.

<Fast Idle Mode>

The fast idle mode is only needed for starting carbureted outboard models. The BFT200D, BFT225D and BFT250D models use programmed fuel injection so, this mode will not be needed for starting.

After the engine starts and if the outside temperature is below 5°C (41°F), the fast idle mode can be used to accelerate engine warm up.

CONTROLS AND FEATURES

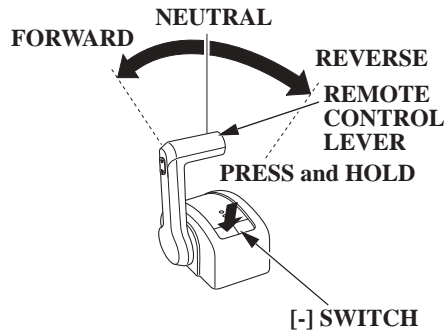

Use the [-] switch and the remote control lever to adjust the engine speed without gearshift when warming up the engine. Keeping the [-] switch pressed when the remote control lever is in the NEUTRAL position, turn the lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point. Note that the gearshift mechanism does not function when the [-] switch is pushed once and then released after the remote control lever is moved.

<Trolling Mode>

The engine speed can be adjusted with the [-] switch and [+] switch when in trolling mode. If you press and hold the [+] switch while cruising with the throttle closed, the mode changes to trolling mode.

<One-Lever Mode>

(For multiple outboard motors type)
Shifting gear and the engine speed adjustment of the all outboard motors can be performed with one remote control lever when in one-lever mode. If you press and hold the [+] switch when all remote control lever is in the NEUTRAL position, the mode changes to one-lever mode.

<Station Select Mode>


For multiple station type, use the [-] switch to change the operating station. If you press and hold the [-] switch of the inactive station when all remote control lever is in the NEUTRAL position, you can operate the outboard motors using this station.

Fast Idle Lever (R1 type)/Fast Idle Button (R2, R3 types)

The fast idle lever/fast idle button is only needed for starting carbureted outboard models. The BFT200D, BFT225D and BFT250D models use programmed fuel injection so, this lever will not be needed for starting.

After the engine starts and if the outside temperature is below 5°C (41°F), the fast idle lever/fast idle button can be used to accelerate engine warm up.


<Fast Idle Lever> (R1 type)

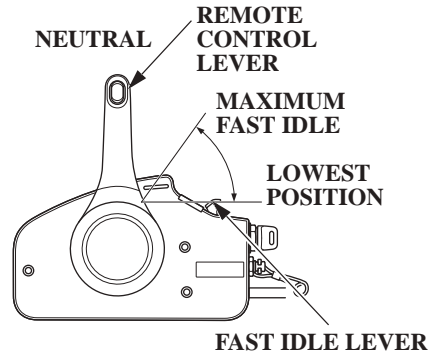

The fast idle lever will not move unless the remote control lever is in the NEUTRAL position. Conversely, the remote control lever will not move unless the fast idle lever is in the lowest position.

Lower the fast idle lever to the lowest position to decrease the fast idle.

<Fast Idle Button> (R2 type)

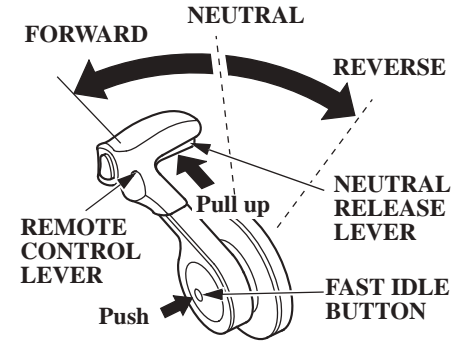


Pushing the fast idle button, turn the remote control lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point. Note that the gearshift mechanism does not function when the fast idle button is pushed once and then released after the remote control lever is moved.

The control lever does not operate unless the neutral release lever is pulled.

CONTROLS AND FEATURES


<Fast Idle Button>

(R3 type)

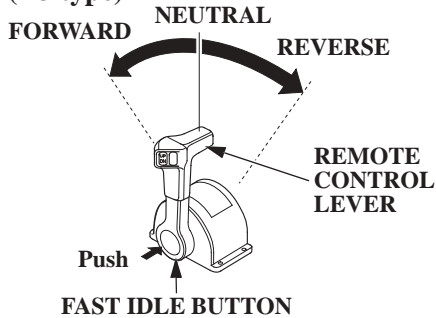


Use the fast idle button and the remote control lever to adjust the engine speed without gearshift when warming up the engine. Pushing the fast idle button, turn the remote control lever forward. Keep turning the lever forward. The throttle opens and the engine speed increases after the lever passed the shift point. Note that the gearshift mechanism does not function when the fast idle button is pushed once and then released after the remote control lever is moved.

PGM-FI Indicator/Buzzer (R1 type)

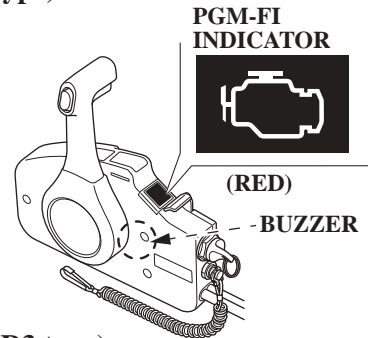


(R2, R3 type)

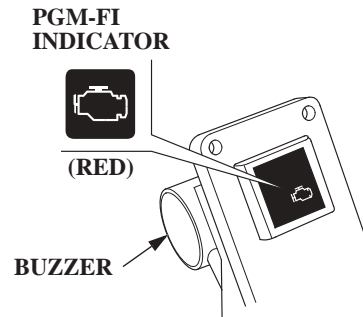


The PGM-FI indicator turns on and the buzzer sounds when the engine control system is faulty.

ACG Indicator/Buzzer (R1 type)

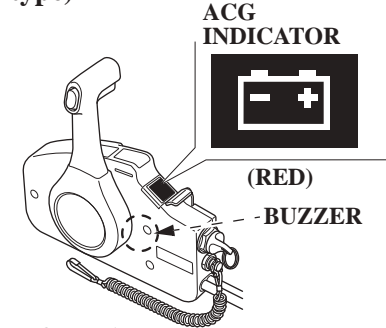


(R2, R3 type)

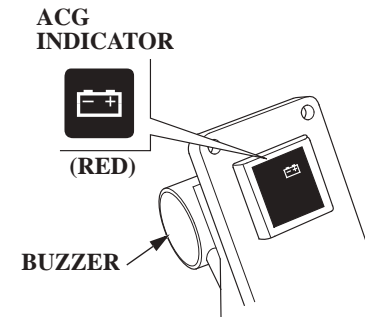

The ACG indicator turns on and the buzzer sounds when the charging system is faulty.

Oil Pressure Indicator/Buzzer

(R1 type)

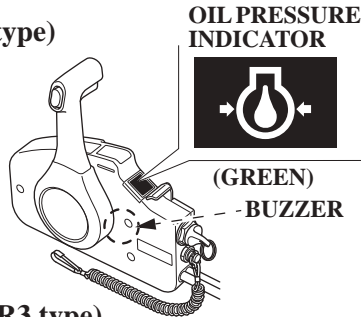

(R2, R3 type)

OIL PRESSURE
INDICATOR




(GREEN)

BUZZER

The oil pressure indicator turns off and the buzzer sounds when the oil level is low and/or the engine lubrication system is faulty. The engine speed slows down gradually this time.

Overheat Indicator/Buzzer

(R1 type)

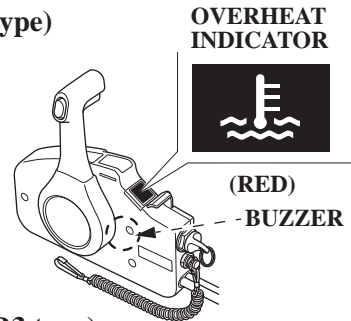

(R2, R3 type)

OVERHEAT
INDICATOR



(RED)

BUZZER

The overheat indicator turns on and the buzzer sounds when the engine cooling circuit is faulty. The engine speed slows down this time.

Water Separator Buzzer

The water separator buzzer sounds when water has accumulated in the water separator.

CONTROLS AND FEATURES

Power Trim/Tilt Switch

Power Trim


Press the power trim/tilt switch on the remote control lever to adjust the outboard motor trim angle of -4° to 16° to maintain proper boat trim. The power trim/tilt switch can be operated while the boat is under way or while stopped.

By using the power trim/tilt switch the operator can change the trim angle of the outboard motor to achieve maximum boat acceleration, speed, stability and maintain optimum fuel consumption.

NOTE:

The outboard motor trim angle of -4° to 16° is the angle when the outboard motor is installed on the boat at 12° .

(R1 type)

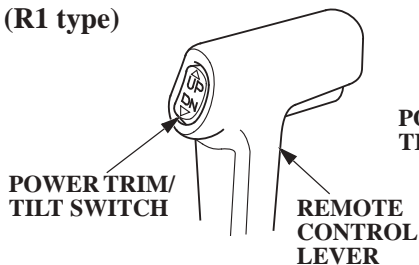

(R2 type)




NOTICE

Excessive trim/tilt angle during operation can cause the propeller to raise out of the water and cause propeller ventilation and engine over-revving. Excessive trim/tilt angle can also damage the water pump.

(R3 type)

SINGLE TYPE

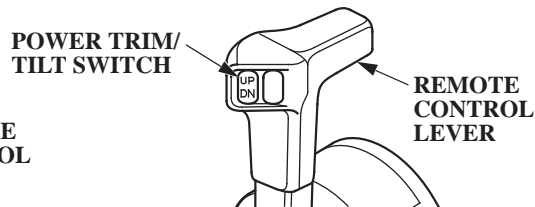


(R3 type)

DUAL TYPE


POWER TRIM/TILT SWITCH

(LEFT) (RIGHT)

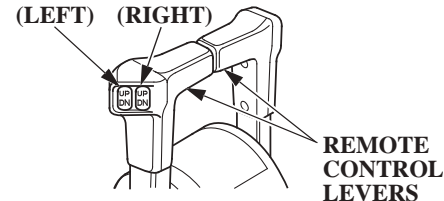


CONTROLS AND FEATURES

(D1 type)

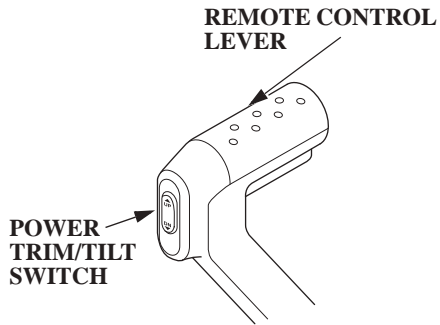


(D2 type)

SINGLE TYPE

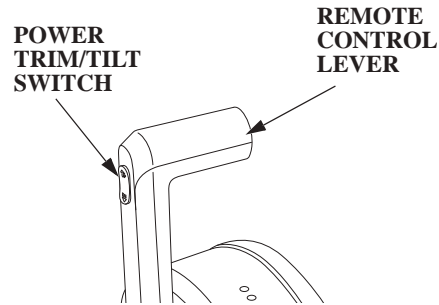


DUAL TYPE

POWER TRIM/TILT SWITCH

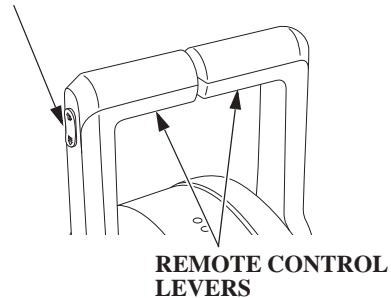


PTT SWITCH PANEL

 DUAL TYPE



TRIPLE TYPE

 


POWER TRIM/TILT SWITCH

NOTE:

For multiple outboard motors, the trim/tilt angle of all outboard motors is adjusted at the same time by using the power trim/tilt switch on the remote control lever and the trim/tilt angle of each outboard motor is adjusted by using each power trim/tilt switch on the panel.

CONTROLS AND FEATURES

Power Tilt

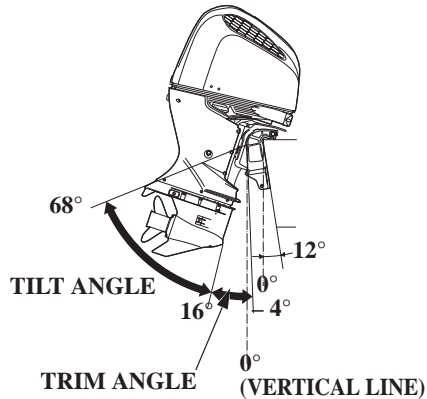


(when transom angle is 12°)

Press the power trim/tilt switch to adjust the outboard motor tilt angle of 16° to 68°.

By using the power trim/tilt switch the operator can change the tilt angle of the outboard motor for shallow water operation, beaching, launching from a trailer, or mooring. Please tilt up simultaneously, when you mount the dual type outboard motor.

Trim Meter (optional equipment)

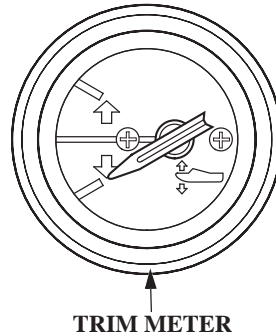


The trim meter has a range of -4° to 16° and indicates the trim angle of the outboard motor. Refer to the trim meter when using the power trim/tilt switch to achieve proper boat performance.

NOTE:

The outboard motor trim angle of -4° to 16° is the angle when the outboard motor is installed on the boat at 12°.


Power Tilt Switch (outboard motor pan)

POWER TILT SWITCH

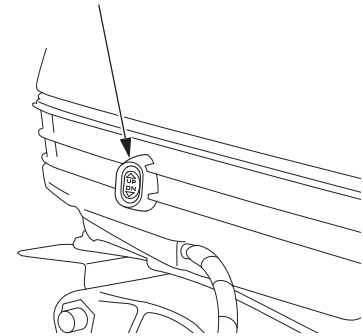

The power tilt switch located on the outboard motor pan is a convenience switch for tilting the outboard motor for trailering, or performing outboard maintenance. This power tilt switch should only be operated with the boat being stopped and engine off.

Manual Relief Valve

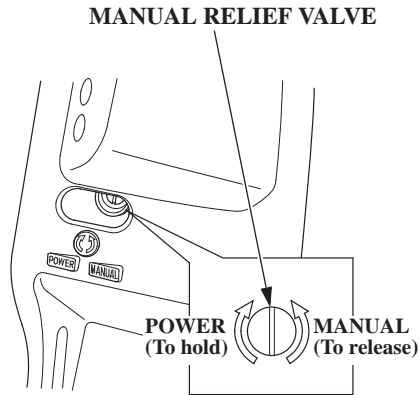

If the power trim/tilt switch will not tilt the outboard motor, the outboard motor can be manually tilted up or down by opening the manual relief valve. To tilt the outboard motor manually, turn the manual relief valve under the left stern bracket no more than 1 or 2 turns counterclockwise using a screwdriver.

After tilting the outboard motor, turn the manual relief valve clockwise securely.

The manual relief valve must be tightened securely before operating the outboard motor or the outboard motor could tilt up when operating in reverse.

CONTROLS AND FEATURES

Emergency Stop Switch


The emergency stop switch lanyard is provided to stop the engine immediately in the event the operator should fall overboard or away from the controls.

(D1, D2 type)




EMERGENCY STOP SWITCH

(R1 type)

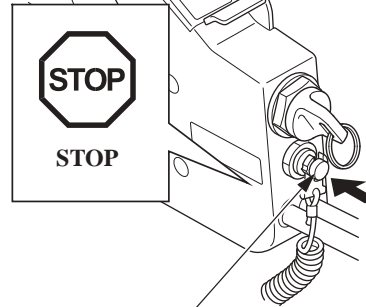

EMERGENCY STOP SWITCH


(R2, R3 type)

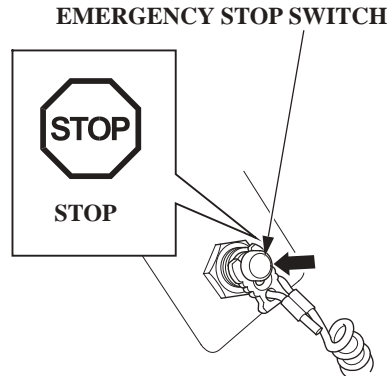

EMERGENCY STOP SWITCH

Emergency Stop Switch Lanyard/Clip

EMERGENCY STOP SWITCH LANYARD

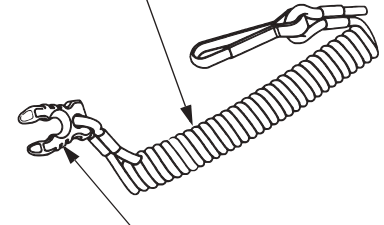

EMERGENCY STOP SWITCH CLIP

The emergency stop switch clip must be engaged with the emergency stop switch or the engine will not start. When the emergency stop switch clip becomes disengaged with the emergency stop switch the engine will stop immediately.


⚠ WARNING

If the emergency stop switch lanyard is not set, the boat might run out of control when the operator, for example, falls overboard and is not able to operate the outboard motor.

For the sake of the operator's and the passengers' safety, be sure to set the emergency stop switch clip located at one end of the emergency stop switch lanyard with the emergency stop switch. Attach the other end of the emergency stop switch lanyard securely to the operator.


(D1, D2 type)

EMERGENCY STOP SWITCH

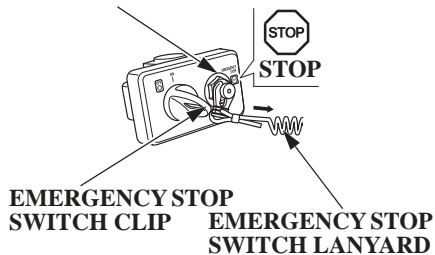


(R1 type)

EMERGENCY STOP SWITCH

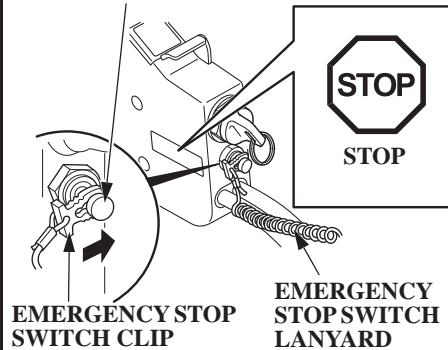

(R2, R3 type)

EMERGENCY STOP SWITCH

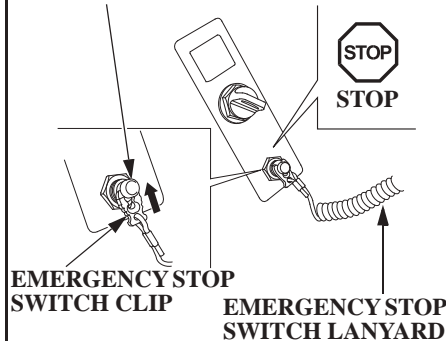


Spare Emergency Stop Switch Clip (optional equipment)

A spare emergency stop switch clip is available from your outboard motor dealer.

A spare emergency stop switch clip can be stored in the tool bag (see page 113).

CONTROLS AND FEATURES


Tilt Lock Lever

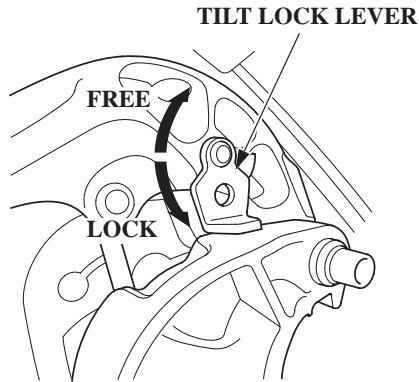

Use the tilt lock lever to raise the outboard motor and lock it in the position when the boat is moored or anchored for a long time.

Tilt the outboard motor as far as it goes and move the lock lever in the locking direction.


Trim Tab

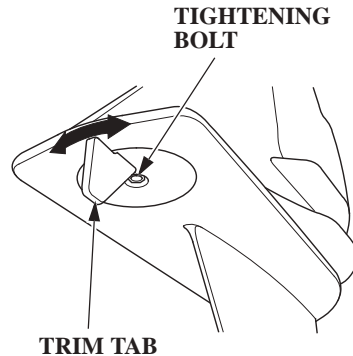

If the steering wheel/handle is pulled to the side while running at full speed, adjust the trim tab so that the boat runs straight ahead.

Loosen the tightening bolt and turn the trim tab right or left to adjust.

Anode

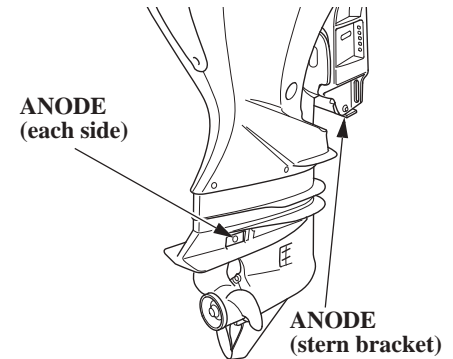


The anode is a sacrificial material which helps to protect the outboard motor from corrosion.

NOTICE

Do not paint the anode. It deteriorates the function of the anode, which can lead to rust and corrosion damage to the outboard motor.

Cooling Water Check Hole

COOLING WATER CHECK HOLE

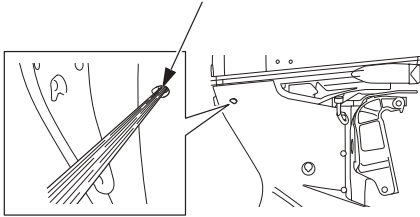


The cooling water is checked here to see whether it is circulating inside the engine properly.

After starting the engine, check at the cooling water check hole whether the cooling water is circulating through the engine.

Cooling Water Intake Port


COOLING WATER INTAKE PORT (each side)

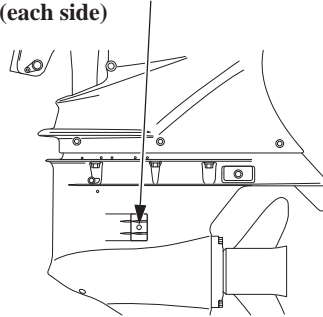

The engine cooling water is drawn into the engine through this port.


Engine Cover Latches

Front

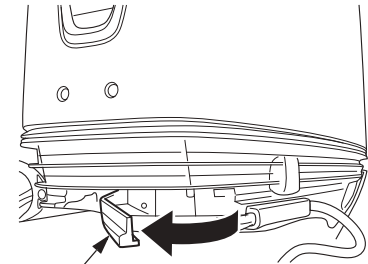

ENGINE COVER LATCH

Side

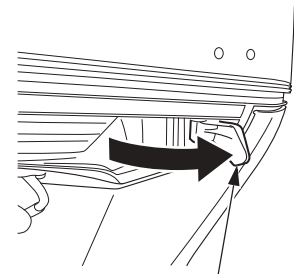


ENGINE COVER LATCH (each side)

Pull the engine cover latches to remove the engine cover.

CONTROLS AND FEATURES

Tachometer (optional equipment)

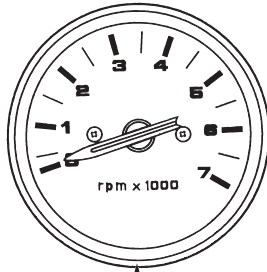


TACHOMETER

The tachometer shows the engine speed in revolutions per minute.

NMEA Interface Coupler

The NMEA2000 interface coupler can provide information regarding engine speed, fuel consumption, and various warnings to an existing NMEA2000 network via an optional interface cable. Contact your dealer for more information.

NMEA INTERFACE
COUPLER

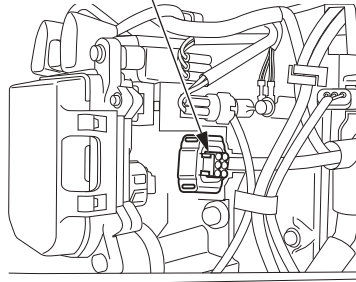

Operating Hour Notification System

This outboard motor engine counts the number of operating hours since the last periodic maintenance. When the next periodic maintenance is due, the engine notifies the NMEA2000 network, and a maintenance indication is displayed on an NMEA2000-compatible device.

After periodic maintenance is performed, reset the hour counter by:

DBW type:

1. Stopping the engine.
2. Turning the ignition switch or power switch ON.
3. Setting the gearshift at F or R.
4. Putting in and pull out the emergency stop switch clip 5 times within 20 seconds.
The buzzer will sound once when the hour counter is reset.


Mechanical wire type:

1. Stopping the engine.
2. Setting the gearshift at F or R.
3. Turning the engine switch ON. The buzzer will sound once.
4. Putting in and pull out the emergency stop switch clip 5 times within 20 seconds.
The buzzer will sound once when the hour counter is reset.

Periodic maintenance is required when either the operating hours or the time since last maintenance reaches the prescribed limit. Therefore, periodic maintenance may be required based on the number of months since the last maintenance before the alert based on engine operating hours displays (see Maintenance Schedule on page 114).

Reset the hour counter whenever maintenance is performed, whether based on the time interval or the number of operating hours.

<Operating hour notification timing>

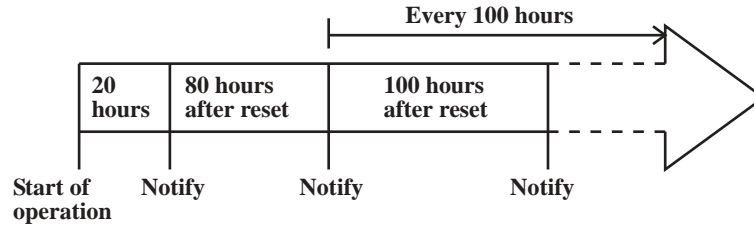

<Display>

Steps	1	2	3	4
Outboard motor	—	Engine switch ON	Start engine	Gear at F or R
Display	Switch ON	—	—	—
Maintenance indication on display	Not shown Maintenance indication	Shown Maintenance indication	Shown Maintenance indication	Not shown Maintenance indication

CONTROLS AND FEATURES

NMEA2000-compatible display:

- Follow instructions for the display.
- If the display allows selection of notification to be preset, select "Notify" (or equivalent).
- Turn on the power supply to the display before turning on the engine switch of the outboard motor.
- The indication may differ, depending on the type of display.

When "Periodic Maintenance" is indicated:

1. Have the periodic maintenance performed without delay after returning to port.
2. Reset the hour counter.

If not reset, the maintenance indication will remain in the display, and the hour count until the next maintenance will be in error.

When the periodic maintenance is conducted before "Periodic Maintenance" is indicated, reset the hour counter.

If not reset, the hour count until the next maintenance will be in error.

5. INSTALLATION

NOTICE

Improperly installed outboard motor can result in the outboard motor dropped into the water, boat not able to cruise straight ahead, engine speed not increase, and much fuel consumption.


We recommend that the outboard motor be installed by an authorized TOHATSU outboard motor dealer. Consult the authorized TOHATSU dealer in your area for the Y-OP (User Optional Parts)/equipments installation and operation.

Applicable Boat
Select the boat suitable for the engine power.
Engine power:
BFT200D : 147.1 kW (200 PS)
BFT225D : 165.5 kW (225 PS)
BFT250D : 183.9 kW (250 PS)

Power recommendation is indicated on most of the boats.

⚠ WARNING
Do not exceed the boat manufacturer’s power recommendation. Damage and injury may result.

Transom Height

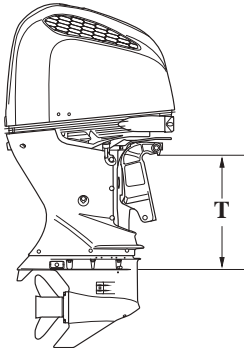


Type:	T (Transom Height) (when transom angle is 12°)
L:	508 mm (20.0 in)
X:	635 mm (25.0 in)

Select the outboard motor which is correct for the boat transom height of your boat.


INSTALLATION

Location

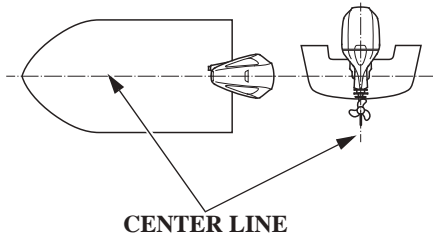


Install the outboard motor at the stern, at the center line of the boat.

Installation Height

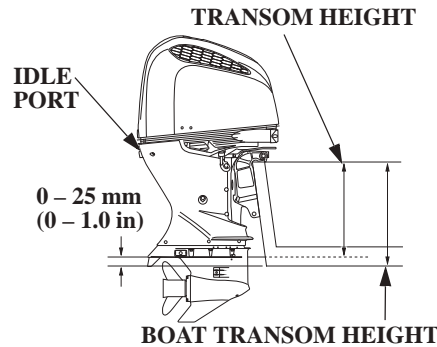


Make sure that the boat transom height is correct for the outboard motor. Incorrect installation height will reduce performance. The outboard motor should be installed so that the anticavitation plate is 0 - 25 mm (0 - 1.0 in) upper the bottom of the boat. The correct dimensions differ according to the type of the boats and the figuration of the bottom of the boats. Follow the manufacture's recommended installation height.

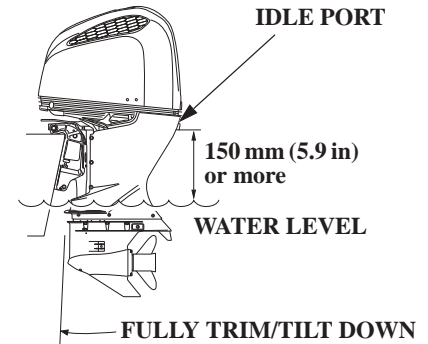

NOTICE

- The water level must be at least **100 mm (4 in)** above the anticavitation plate, otherwise the water pump may not receive sufficient cooling water, and the engine will overheat.
- Adverse effect to the engine can occur if the installation position of the outboard motor is too low. Trim/tilt down the outboard motor with the boat fully loaded and stop the engine. Check that the idle port is **150 mm (5.9 in)** or more above the water level.

Outboard Motor Installation

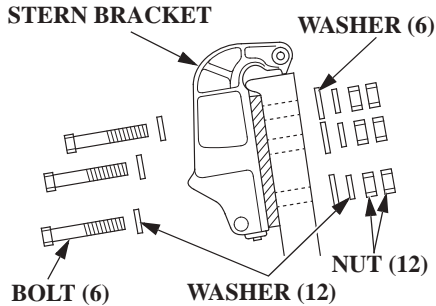


1. Apply the silicone sealant (Three Bond 1216 or equivalent) to the outboard motor mounting holes.
2. Set the outboard motor on the boat and secure with the bolts, washers, and lock nuts.

NOTE:

Standard torque:

55 N·m (5.6 kgf·m, 41 lbf·ft)

The standard torque is given just as a guideline. Torque of the nut can be different according to the material of the boat. Consult with an authorized TOHATSU outboard motor dealer.

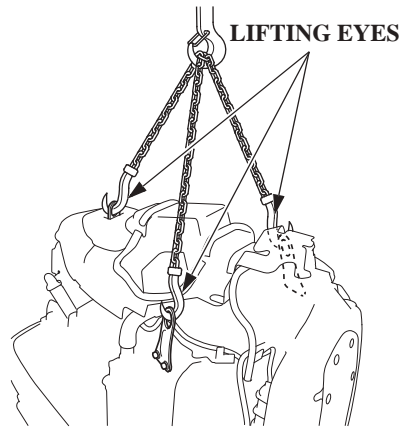

⚠ CAUTION


Install the outboard motor securely. Loosely mounted outboard motor can result in accidental loss of the outboard motor and damage and injury to the equipment and personnel.

Before installing the outboard motor on the boat, hang the outboard motor with the hoist or equivalent device by attaching the three lifting eyes to the outboard.

Use the hoist which allowable load is 300 kg (661 lbs) or above.


INSTALLATION

Outboard Motor Angle Inspection (Cruising)

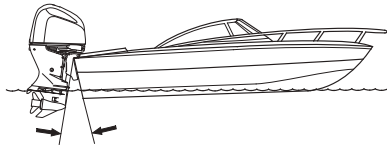


INCORRECT
CAUSES BOAT TO "SQUAT"

Install the outboard motor at the best trim angle for stable cruising and maximum power.
Trim angle too large: Incorrect causes boat to "squat."

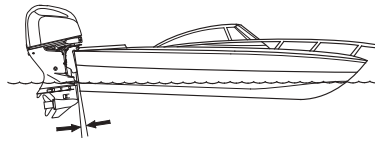

INCORRECT
CAUSES BOAT TO "PLOW"

Trim angle too small: Incorrect causes boat to "plow."

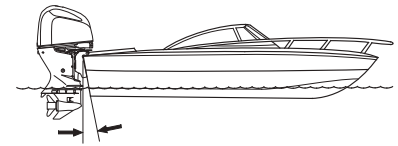

CORRECT
GIVES MAXIMUM PERFORMANCE

The trim angle differs according to the combination of the boat, outboard motor, and propeller, and the operating conditions.

Adjust the outboard motor so that it is perpendicular to the water surface (i.e. axis of the propeller is parallel with the water surface).

Battery Connections

Use a battery which has CCA (COLD CRANKING AMPERES) 799 at -18°C (0°F) and a reserve capacity 229 minutes (12V-110Ah/20HR) or more specifications. The battery is an optional part (i.e. part to be purchased separately from the outboard motor).

⚠ WARNING

Batteries produce explosive gases: If ignited, an explosion can cause serious injury or blindness. Provide adequate ventilation when charging.


- **CHEMICAL HAZARD:**
Battery electrolyte contains sulfuric acid. Contact with eyes or skin, even through clothing, may cause severe burns. Wear a faceshield and protective clothing.
- Keep flames and sparks away, and do not smoke in the area.
ANTIDOTE: If electrolyte gets into your eyes, flush thoroughly with warm water for at least 15 minutes and call a physician immediately.

- **POISON:** Electrolyte is poison.
ANTIDOTE:
 - External: Flush thoroughly with water.
 - Internal: Drink large quantities of water or milk. Follow with milk of magnesia or vegetable oil, and call a physician immediately.
- **KEEP OUT OF REACH OF CHILDREN.**

To protect the battery from mechanical damage and to prevent the battery from falling or tipping over, the battery must be:

- Installed in the correct size corrosion-resistant battery box.
- Properly secured in the boat.
- Secured in a location free from direct sunlight and water spray.
- Secured away from the fuel tank to avoid potential sparks near the fuel tank.

INSTALLATION

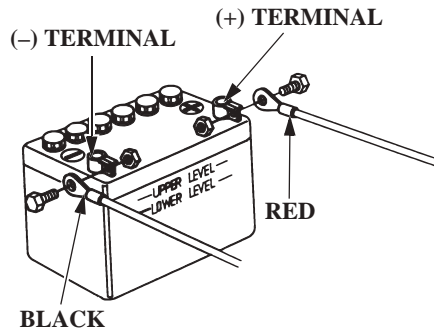

Connect the battery cables:

1. Connect the cable with the red terminal cover to the positive (+) terminal of the battery.
2. Connect the cable with the black terminal cover to the negative (-) terminal of the battery.

NOTE:

When more than one outboard motor is mounted on a boat, connect a battery to each respective outboard motors.

NOTICE

- Be sure to connect the (+) side battery cable first. When disconnecting the cables, disconnect the (-) side first then the (+) side.
- Unless the cables are properly connected to the terminals, the starter motor may fail to operate normally.
- Be careful to avoid connecting the battery in reverse polarity, as this will damage the battery-charging system in the outboard motor.
- Do not disconnect the battery cables while the engine is running. Disconnecting the cables while the engine is running, will damage the outboard motor's electrical system.
- Do not place the fuel tank near the battery.

- **Battery cable extension:** Extending the original battery cable will cause the battery voltage to drop due to the increased length of the cable and number of connections. This voltage drop may cause the buzzer to sound momentarily when engaging the starter motor and may prevent the outboard from starting. If the outboard starts and the buzzer sounds momentarily, there may be barely sufficient voltage reaching the engine.

Remote Control Installation (optional equipment)

NOTICE

Improperly installed steering system, remote control box, and remote control cable, or installing those of the different types could cause unpredictable accident. Consult an authorized TOHATSU outboard motor dealer for proper installation.

The control box is available in types as shown.


Select the most suitable control box for your outboard motor considering the installation position, operationability, etc. of the control box.

See an authorized TOHATSU outboard motor dealer for further information.


INSTALLATION

DBW type:


REMOTE CONTROL BOX

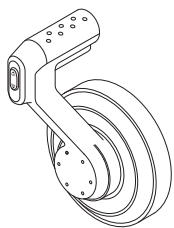

**FLUSH-MOUNT TYPE
CONTROL BOX**

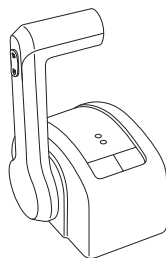

**TOP-MOUNT TYPE
CONTROL BOX
(FOR SINGLE
OUTBOARD
MOTOR TYPE)**

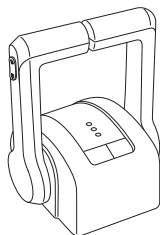

**TOP-MOUNT TYPE
CONTROL BOX
(FOR DUAL OUTBOARD
MOTOR TYPE)**

KEY SWITCH PANEL



**NORMAL KEY WITH
START/STOP SWITCH TYPE**

 


**NORMAL KEY WITHOUT
START/STOP SWITCH TYPE**


START/STOP SWITCH PANEL




**ALL ENGINE START
FOR MULTIPLE
OUTBOARD MOTORS**



**SINGLE TYPE
OUTBOARD MOTOR**

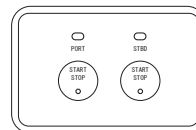


**DUAL TYPE
OUTBOARD MOTOR**

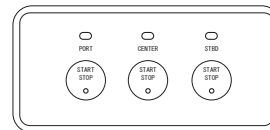


**TRIPLE TYPE
OUTBOARD MOTOR**


Mechanical wire type:

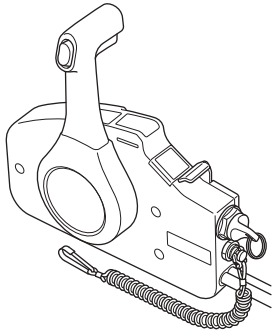


**SIDE-MOUNT
TYPE CONTROL BOX**

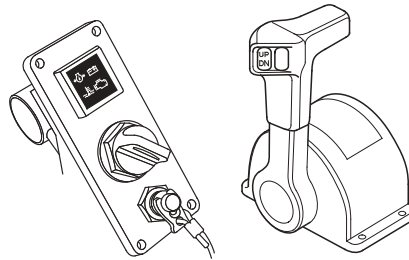

**TOP-MOUNT TYPE CONTROL BOX
(FOR SINGLE OUTBOARD MOTOR TYPE)
AND SWITCH PANEL**

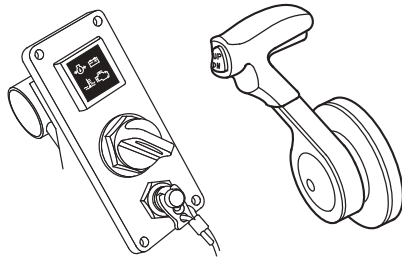


**FLUSH-MOUNT TYPE CONTROL
BOX AND SWITCH PANEL**

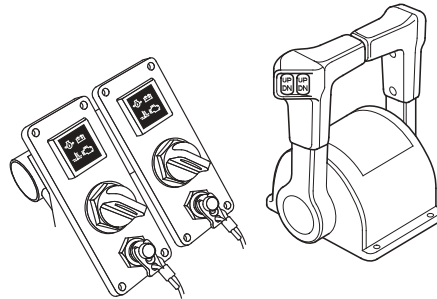

**TOP-MOUNT TYPE CONTROL BOX AND
SWITCH PANEL
(FOR DUAL OUTBOARD MOTOR TYPE)**

INSTALLATION

<Remote Control Box Location>

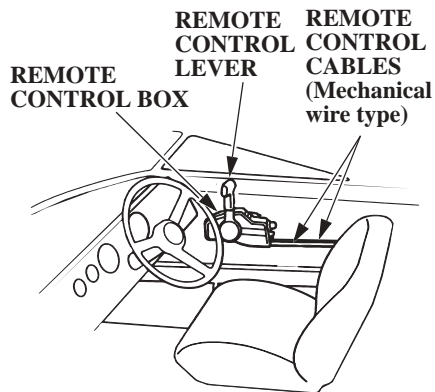


Install the remote control box in the position where is easy to operate the remote control lever and switches.

Mechanical wire type:

Be sure that there are no obstacles on the route of the control cable.

The control box position of the D1 type, D2 type, R2 type and the R3 type should be determined in the same manner.

<Remote Control Cable Length> (Mechanical wire type)

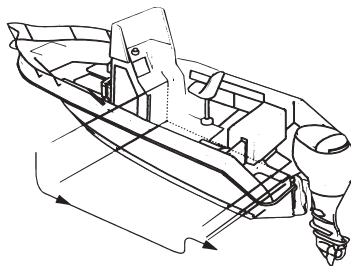

Measure the distance from the control box to the outboard motor along the cable routing.

Recommended cable length is 300 – 450 mm (11.8 – 17.7 in) longer than the measured distance.

Set the cable along the predetermined route and be sure that it is long enough to the route.

Connect the cable to the engine and be sure it is not kinked, bent sharp, pulled taut, or interfered while steering.

NOTICE

Do not bend the remote control cable as sharp as its route diameter is 300 mm (11.8 in) or less, or it affects the service life of the cable and the remote control lever operation.

Propeller Selection

BFT200D/BFT225D:

Select the adequate propeller so that the engine speed at full throttle is $5,000 \text{ min}^{-1}$ (rpm) to $6,000 \text{ min}^{-1}$ (rpm) when the boat is loaded.

BFT250D:

Select the adequate propeller so that the engine speed at full throttle is $5,300 \text{ min}^{-1}$ (rpm) to $6,300 \text{ min}^{-1}$ (rpm) when the boat is loaded.

Engine speed varies according to the propeller size and the boat condition. Use of the outboard motor outside the full throttle speed range will adversely affect the engine and cause serious problem. Use of the correct propeller assures powerful acceleration, top speed, excellency in terms of economy and cruising comfort, and it assures longer engine life as well.

Consult with your authorized TOHATSU outboard motor dealer for proper propeller selection.

Fuel Line Connection

Connect the fuel line to the tank and the outboard motor. Follow the boat manufacturer's instructions.

WARNING

Gasoline is extremely flammable, and gasoline vapor can explode, causing serious injury or death.

- Be careful not to spill fuel. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.
- Keep heat, sparks, and flame away.

6. PRE-OPERATION CHECKS

BFT200D/BFT225D/BFT250D is 4-stroke, water cooled outboard motor which uses unleaded regular gasoline for fuel. It also requires the engine oil. Check the following before operating the outboard motor.


⚠ CAUTION

Perform the following pre-operation checks with the engine stopped.


Before each use, look around and underneath the engine for signs of oil or gasoline leaks.

Engine Cover Removal/Installation

Front

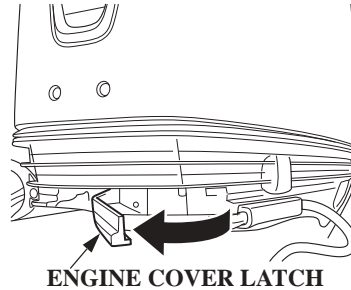

Side

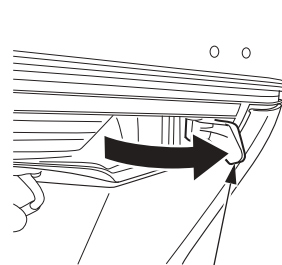


ENGINE COVER LATCH (each side)

1. Pull all the engine cover latches.
2. Remove the engine cover by taking it up.

<Installation>

COVER SIDE


COVER LOCKS

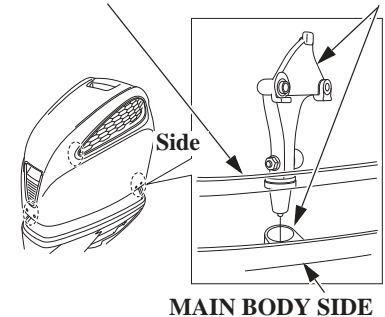

1. Place the engine cover on the main body.
2. Slide the engine cover so that the cover lock on the cover is mated with the lock in the main body.


PRE-OPERATION CHECKS

Front

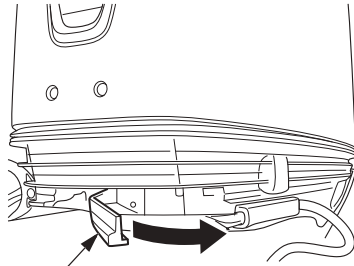

ENGINE COVER LATCH

Side

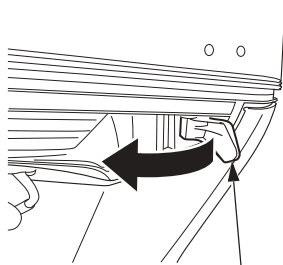

ENGINE COVER LATCH (each side)

3. Push the engine cover until any gap between the engine cover and main body is eliminated.
4. Push all the engine cover latches to lock them.

⚠ WARNING

Do not operate the outboard motor without the engine cover. Exposed moving parts can cause injury.

Engine Oil

NOTICE


- **Engine oil is a major factor affecting engine performance and service life. Nondetergent and low quality oils are not recommended, because they have inadequate lubricating properties.**
- **Running the engine with insufficient oil can cause serious engine damage.**

<Recommended oil>


Use 4-stroke oil or an equivalent high detergent, premium quality motor oil certified to meet or exceed U.S. automobile manufacturer's requirements for API Service category SG, SH SJ or SL. Motor oils classified SG, SH SJ or SL will show this designation on the container.

PRE-OPERATION CHECKS

SAE 10W-30 is recommended for general use.

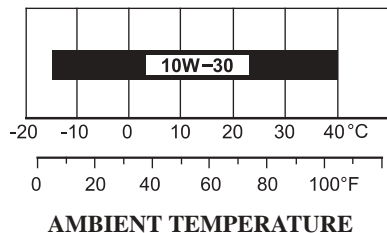


<Inspection and Refilling>

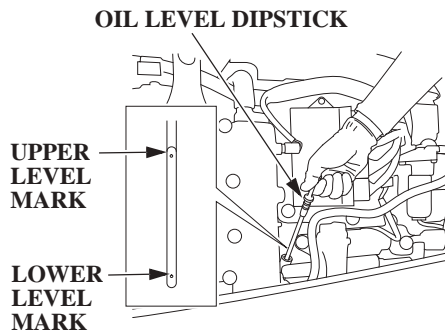

1. Position the outboard motor vertically, and remove the engine cover (see page 56).
2. Remove the oil level dipstick and wipe with a clean rag.
3. Reinsert the dipstick all the way in, then pull it out and read the level. If near or below the lower level mark, remove the oil filler cap and fill to the upper level mark with the recommended oil. Tighten the oil filler cap securely. Do not overtighten.

OIL FILLER CAP

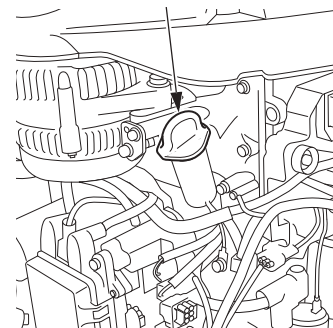

When the engine oil is contaminated or discolored, replace with the fresh engine oil (see page 116 for replacement interval and procedure).

4. Install the engine cover and lock it securely (see page 56).

NOTICE

Do not overfill the engine oil. Check the engine oil after refilling. Excessive engine oil as well as the insufficient oil could cause damage to the engine.

PRE-OPERATION CHECKS

When you check the oil level with the dipstick, you might notice the engine oil appears milky or the oil level has increased. If you notice either condition, change the engine oil. See the following table for an explanation of these conditions.

Operating Method	Result	Effect
Running the engine below 3,000 rpm for more than 30% of the time so the engine does not warm up.	<ul style="list-style-type: none">• Water condenses in the engine and mixes with the oil, resulting in a milky appearance.	The engine oil deteriorates, becomes less efficient as a lubricant, and causes an engine malfunction.
Frequent starting and stopping without allowing the engine to warm up.	<ul style="list-style-type: none">• Unburned fuel mixes with the oil, increasing the volume of oil.	

Fuel

Check the fuel level and refill if necessary. Do not fill the fuel tank above the UPPER LIMIT.

Refer to the boat manufacturer's instructions.

Use unleaded gasoline with a Research Octane Number of 91 or higher (a Pump Octane Number of 86 or higher). Use of leaded gasoline may cause damage to the engine.

Never use gasoline that is stale, contaminated, or mixed with oil. Avoid getting dirt, dust or water in the fuel tank.

PRE-OPERATION CHECKS

⚠ WARNING

Gasoline is extremely flammable and is explosive under certain conditions.

- Refuel in a well-ventilated area with the engine stopped.
- Do not smoke or allow flames or sparks in the area where the engine is refueled or where gasoline is stored.
- Do not overfill the fuel tank (there should be no fuel in the filler neck). After refueling, make sure the fuel filler cap is closed properly and securely.
- Be careful not to spill fuel when refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.
- Avoid repeated or prolonged contact with skin or breathing of vapor.
- **KEEP OUT OF REACH OF CHILDREN.**

GASOLINE CONTAINING ALCOHOL

If you decide to use a gasoline containing alcohol (gasohol), be sure its octane rating is at least as high as that recommended by TOHATSU. There are two types of “gasohol”: one containing ethanol, and the other containing methanol. Do not use gasohol that contains more than 10% ethanol. Do not use gasoline containing more than 5% methanol (methyl or wood alcohol) and that does not also contain co-solvents and corrosion inhibitors for methanol.

NOTE:

- Fuel system damage or engine performance problems resulting from the use of gasoline that contains more alcohol than recommended is not covered under the warranty.
- Before buying gasoline from an unfamiliar station, first determine if the gasoline contains alcohol, if it does, find out the type and percentage of alcohol used. If you notice any undesirable operating symptoms while using a particular gasoline. Switch to a gasoline that you know contains less than the recommended amount of alcohol.

Propeller and Cotter Pin Inspection

⚠ WARNING

The propeller blades are thin and sharp. Careless handling of the propeller can result in injury.

When checking the propeller:


- Remove the emergency stop switch clip to prevent an accidental start of the engine.
- Wear heavy gloves.

Propeller rotates rapidly while cruising. Before starting the engine, check the propeller blades for damage and deformation and replace if necessary.

Obtain a spare propeller for the event of an unpredictable accident while cruising. If no spare propeller is available, return to the pier at low speed and replace.

Consult an authorized TOHATSU outboard motor dealer for propeller selection.

Keep the spare washer, castle nut and cotter pin with you on your boat.

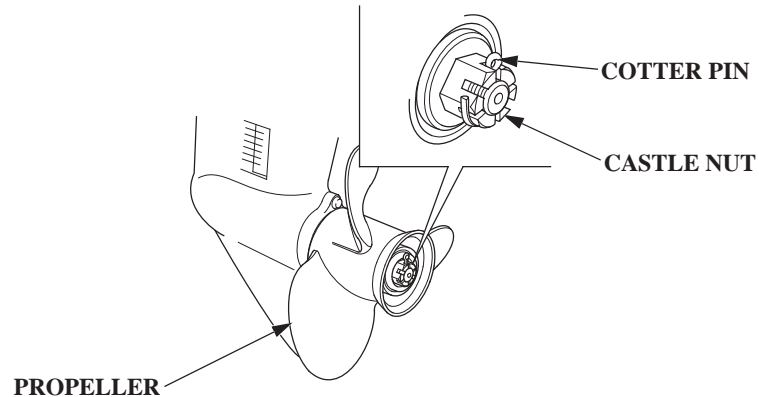


Engine speed varies according to the propeller size and the boat condition. Use of the outboard motor outside the full throttle speed range will adversely affect the engine and cause a serious problem. Use of the correct propeller assures powerful acceleration, top speed, excellency in terms of economy and cruising comfort, and it assures longer engine life as well.

Consult with your authorized TOHATSU outboard motor dealer for proper propeller selection.


1. Check the propeller for damage, wear, or deformation.
2. Check whether the propeller is installed properly.
3. Check the cotter pin for damage. Replace whenever the propeller is faulty.

PRE-OPERATION CHECKS

Remote Control Lever Friction (D1 type)

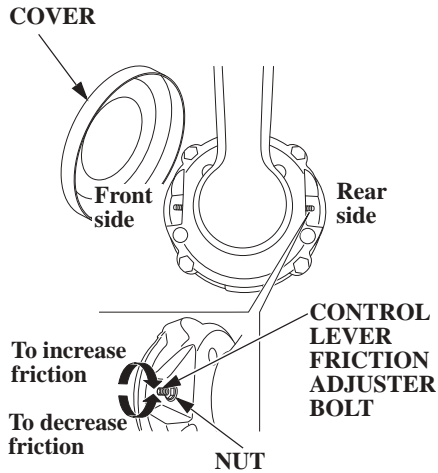

(D2 type)

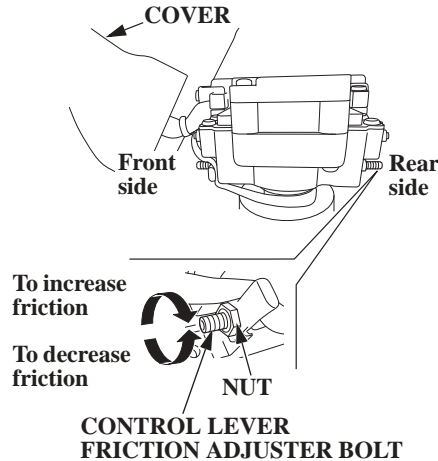


Check whether the remote control lever moves smoothly.

1. Remove the cover of the remote control lever.
2. Loosen the nut.
3. Adjust the lever friction when increasing throttle opening and boat speed by turning the control lever friction adjuster bolt right or left.
4. Tighten the nut to lock the lever friction.
5. Reinstall the cover of the remote control lever.


(R1 type)

CONTROL LEVER FRICTION ADJUSTER

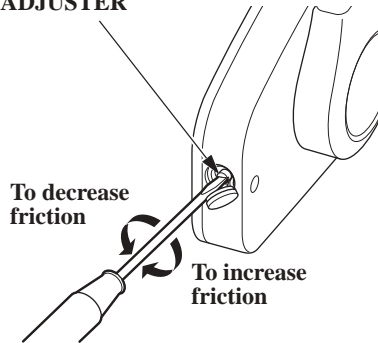


Check whether the remote control lever moves smoothly. Friction of the lever can be adjusted by turning the control lever friction screw right or left.


(R2 type)

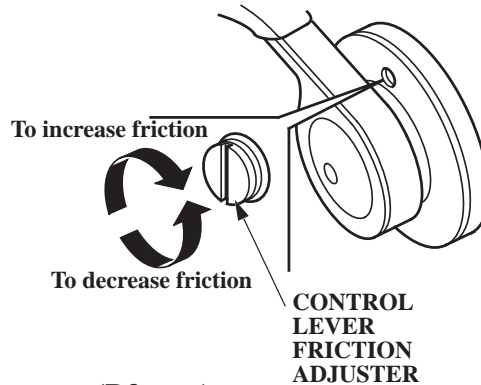

(R3 type)

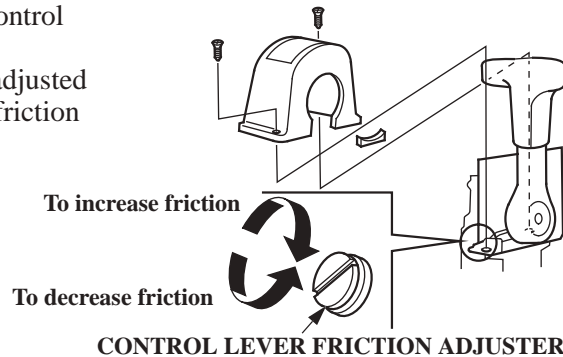

Fuel Filter with Water Separator

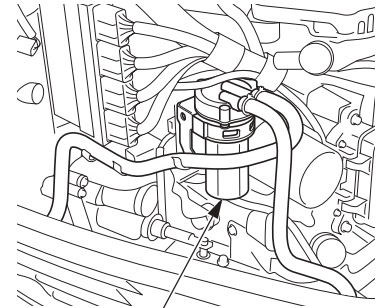

The fuel filter with water separator is located near the junction box. Check the fuel filter with water separator for water accumulation. If water is accumulated, drain them (see page 124).

PRE-OPERATION CHECKS

Battery

NOTICE


Battery handling differs according to the type of the battery and the instructions described below might not be applicable to the battery of your outboard. Refer to the battery manufacturer's instructions.

Battery Inspection

Check whether the battery fluid is between the upper and lower levels, and check the vent hole in the battery caps for clogging.

If the battery fluid is near or below the lower level, add the distilled water to the upper level (see page 127).

Check that the battery cables are connected securely.
If the battery terminals are contaminated or corroded, remove the battery and clean the terminals (see page 128).

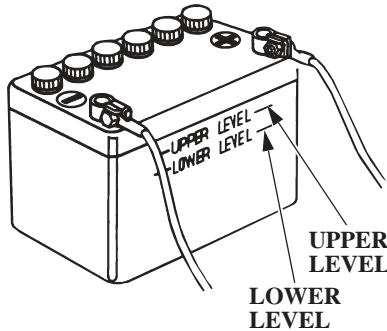

⚠ WARNING

Batteries produce explosive gases: If ignited, an explosion can cause serious injury or blindness. Provide adequate ventilation when charging.




- **CHEMICAL HAZARD:** Battery electrolyte contains sulfuric acid. Contact with eyes or skin, even through clothing, may cause severe burns. Wear a faceshield and protective clothing.

- Keep flames and sparks away, and do not smoke in the area.
ANTIDOTE: If electrolyte gets into your eyes, flush thoroughly with warm water for at least 15 minutes and call a physician immediately.
- **POISON:** Electrolyte is poison.
ANTIDOTE:
 - External: Flush thoroughly with water.
 - Internal: Drink large quantities of water or milk. Follow with milk of magnesia or vegetable oil, and call a physician immediately.
- **KEEP OUT OF REACH OF CHILDREN.**

PRE-OPERATION CHECKS

Other Checks

(5) TOOL KIT (page 113)

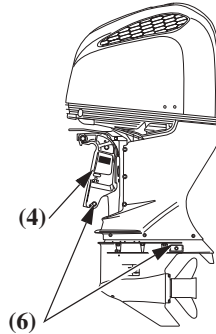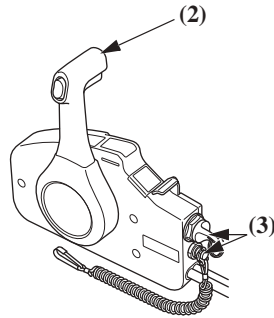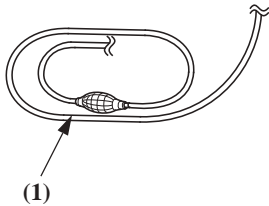

Check the following items:

- (1) The fuel hose for kinking, collapsing or a loose connection.
- (2) The control lever for smooth operation.
- (3) The switch for correct operation.
- (4) The stern bracket for damage.
- (5) The tool kit for missing spare parts and tools (see page 113).
- (6) The anode metal for damage, looseness or excessive corrosion.

The anode (sacrificed metal) helps to protect the outboard motor from corrosion damage; it must be exposed directly to the water whenever the outboard motor is in use. Replace the anodes when they have been reduced to about two-thirds of their original size, or if they are crumbling.

NOTICE


The possibility of corrosion damage is increased if the anode is painted over or allowed to deteriorate.

Parts/materials which should be installed on board:

- Owner's Manual
- Tool kit
- Spare parts: spark plugs, engine oil, spare propeller, castle nut, washer, cotter pin.
- Spare emergency stop switch clip.
- Other parts/materials required by laws/regulations.

7. STARTING THE ENGINE

Fuel Priming

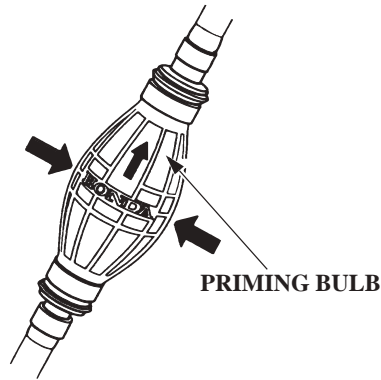

Hold the priming bulb so that the outlet end is higher than the inlet (so that the arrow on the priming bulb points up), and squeeze it until it feels firm, indicating that fuel has reached the outboard motor. Check for leaks.

⚠ WARNING


Be careful not to spill any fuel. Spilled fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.

NOTICE

Do not touch the priming bulb with the engine running or when tilting up the outboard motor. The vapor separator could overflow.

Starting the Engine (D1, D2 types)

EMERGENCY STOP SWITCH

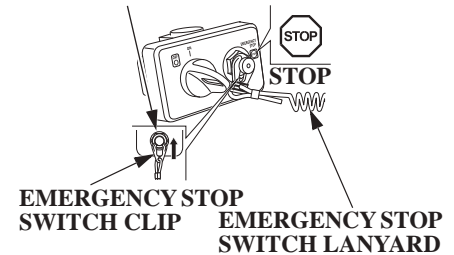

⚠ WARNING

Exhaust contains poisonous carbon monoxide which can cause unconsciousness and may lead to death. Never run the outboard motor in a boat house or other confined area.

NOTICE

To prevent damage to the outboard from overheating, never run the engine with the propeller out of water.

NOTE:


When the boat is mounted with the two outboard motors, perform the following on the right and left engines respectively.

1. Insert the emergency stop switch clip at one end of the emergency stop switch lanyard into the emergency stop switch. Attach the other end of the lanyard securely to the operator.

⚠ WARNING

If the operator does not attach the emergency stop switch lanyard, and is thrown from the seat or out of the boat, the out-of-control boat can seriously injure the operator, passengers, or bystanders. Always properly attach the lanyard before starting the engine.

**EMERGENCY STOP
SWITCH CLIP**

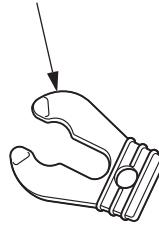


NOTE:

The engine does not start unless the emergency stop switch clip is set on the emergency stop switch.


A spare emergency stop switch clip can be stored in the tool bag (see page 113).

STARTING THE ENGINE

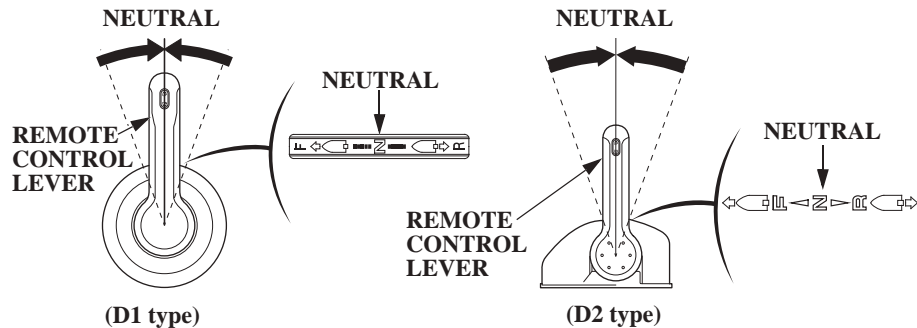

2. Set the control lever in the NEUTRAL position.
The engine does not start unless the control lever is set in the NEUTRAL position.

(Without START/STOP switch type)

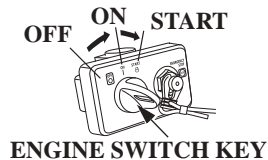


3. Turn the engine switch key to the START position and hold it there until the engine starts.
When the engine starts, release the key, allowing it to return to the ON position.
Go to step 5.

NOTICE


- Do not turn the engine switch key to the START position while the engine is running.

(With START/STOP switch type)

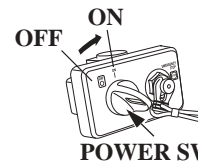

3. Insert the key to the power switch and turn it to the ON position.
4. Push the start/stop switch.

START/STOP SWITCH

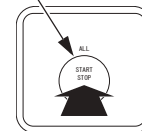

STARTING THE ENGINE


NOTE:

When the boat is mounted with the two outboard motors, push the all engine start switch.

NOTICE

- **The starter motor consumes a large amount of current. Do not therefore run it continuously for more than 5 seconds at a time. If the engine does not start within 5 seconds, wait at least 10 seconds before running the starter motor again.**

COOLING WATER CHECK HOLE

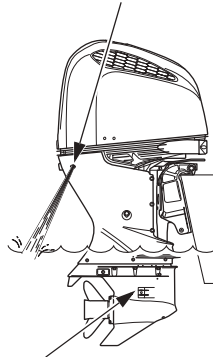

COOLING WATER INTAKE PORT (each side)

5. After starting, check whether the cooling water is flowing out of the cooling water check hole. Amount of water flowing out of the check hole might vary due to the thermostat operation, but this is normal.

NOTICE

If water does not flow out, or if steam comes out, stop the engine. Check to see if the screen in the cooling water intake port is obstructed and remove foreign materials if necessary. Check the cooling water check hole for clogging. If water still does not flow out, have your outboard motor checked by an authorized TOHATSU outboard motor dealer. Do not operate the engine until the problem has been corrected.

STARTING THE ENGINE

6. Check to see if the oil pressure indicator turns ON.

If it does not turn on, stop the engine and perform the following inspections.

- 1) Check the oil level (see page 58).
- 2) If the oil level is normal and the oil pressure indicator does not turn ON, consult with an authorized TOHATSU outboard motor dealer.

7. Warm up the engine as follows:
Above 5°C (41°F) – run the engine for 2 or 3 minutes.
Below 5°C (41°F) – run the engine for at least 5 minutes at 2,000 min⁻¹ (rpm).
Failure to completely warm up the engine will result in poor engine performance.

NOTICE


If the engine is not properly warmed-up before raising the engine speed, the warning buzzer and overheat indicator may activate and the engine speed will be automatically reduced.

NOTE:

Before leaving the dock, check the operation of the emergency stop switch.

(R1 type)

EMERGENCY STOP SWITCH

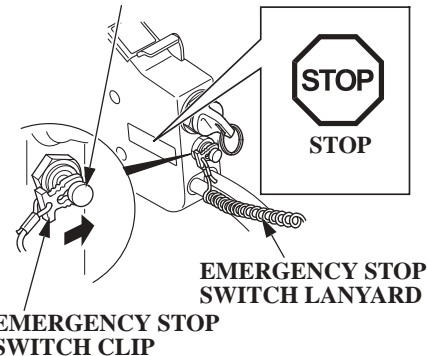

⚠ WARNING

Exhaust contains poisonous carbon monoxide which can cause unconsciousness and may lead to death. Never run the outboard motor in a boat house or other confined area.

NOTICE

To prevent damage to the outboard from overheating, never run the engine with the propeller out of water.

STARTING THE ENGINE

1. Insert the emergency stop switch clip at one end of the emergency stop switch lanyard into the emergency stop switch. Attach the other end of the lanyard securely to the operator.


⚠ WARNING

If the operator does not attach the emergency stop switch lanyard, and is thrown from the seat or out of the boat, the out-of-control boat can seriously injure the operator, passengers, or bystanders. Always properly attach the lanyard before starting the engine.


NOTE:

The engine does not start unless the emergency stop switch clip is set on the emergency stop switch.

**SPARE EMERGENCY
STOP SWITCH CLIP
(optional equipment)**

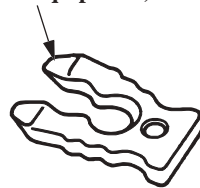


A spare emergency stop switch clip (optional equipment) can be stored in the tool bag.

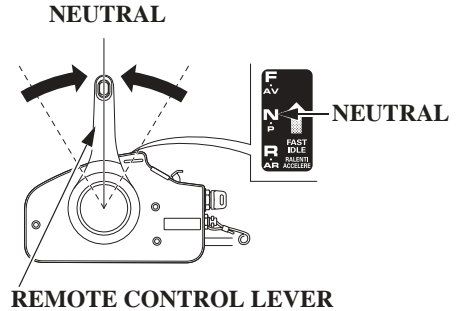

2. Set the control lever in the NEUTRAL position. The engine does not start unless the control lever is set in the NEUTRAL position.

STARTING THE ENGINE

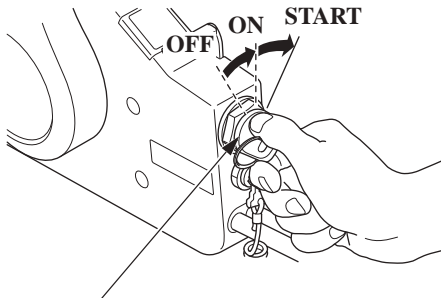


ENGINE SWITCH KEY

3. Turn the engine switch key to the START position and hold it there until the engine starts. When the engine starts, release the key, allowing it to return to the ON position.

NOTICE

- The starter motor consumes a large amount of current. Do not therefore run it continuously for more than 5 seconds at a time. If the engine does not start within 5 seconds, wait at least 10 seconds before running the starter motor again.
- Do not turn the engine switch key to the START position while the engine is running.

COOLING WATER CHECK HOLE

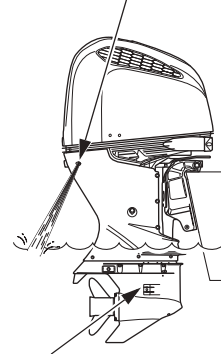

COOLING WATER INTAKE PORT
(each side)

4. After starting, check whether the cooling water is flowing out of the cooling water check hole. Amount of water flowing out of the check hole might vary due to the thermostat operation, but this is normal.


NOTICE

If water does not flow out, or if steam comes out, stop the engine. Check to see if the screen in the cooling water intake port is obstructed and remove foreign materials if necessary. Check the cooling water check hole for clogging. If water still does not flow out, have your outboard motor checked by an authorized TOHATSU outboard motor dealer. Do not operate the engine until the problem has been corrected.

5. Check to see if the oil pressure indicator turns ON.

If it does not turn on, stop the engine and perform the following inspections.

- 1) Check the oil level (see page 58).
- 2) If the oil level is normal and the oil pressure indicator does not turn ON, consult with an authorized TOHATSU outboard motor dealer.

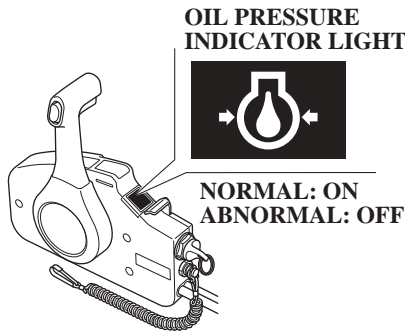

6. Warm up the engine as follows:
- Above 5°C (41°F) – run the engine for 2 or 3 minutes.
 - Below 5°C (41°F) – run the engine for at least 5 minutes at 2,000 min⁻¹ (rpm).
- Failure to completely warm up the engine will result in poor engine performance.

NOTICE

If the engine is not properly warmed-up before raising the engine speed, the warning buzzer and overheat indicator may activate and the engine speed will be automatically reduced.


NOTE:

Before leaving the dock, check the operation of the emergency stop switch.

STARTING THE ENGINE

(R2, R3 types)

EMERGENCY STOP SWITCH

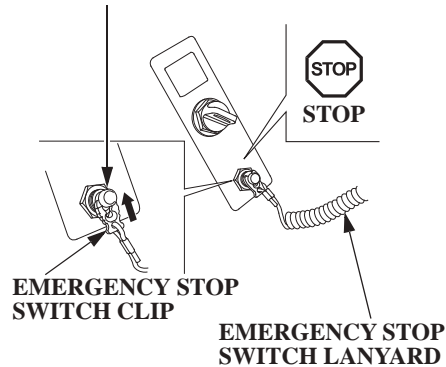

⚠ WARNING

Exhaust contains poisonous carbon monoxide which can cause unconsciousness and may lead to death. Never run the outboard motor in a boat house or other confined area.

NOTICE

To prevent damage to the outboard from overheating, never run the engine with the propeller out of water.

NOTE:

When the boat is mounted with the two outboard motors, perform the following on the right and left engines respectively.

1. Insert the emergency stop switch clip at one end of the emergency stop switch lanyard into the emergency stop switch. Attach the other end of the lanyard securely to the operator.


⚠ WARNING

If the operator does not attach the emergency stop switch lanyard, and is thrown from the seat or out of the boat, the out-of-control boat can seriously injure the operator, passengers, or bystanders. Always properly attach the lanyard before starting the engine.

NOTE:


The engine does not start unless the emergency stop switch clip is set on the emergency stop switch.

SPARE EMERGENCY STOP SWITCH CLIP (optional equipment)

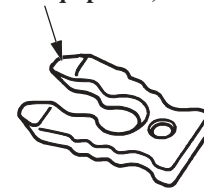


A spare emergency stop switch clip (optional equipment) can be stored in the tool bag.

STARTING THE ENGINE

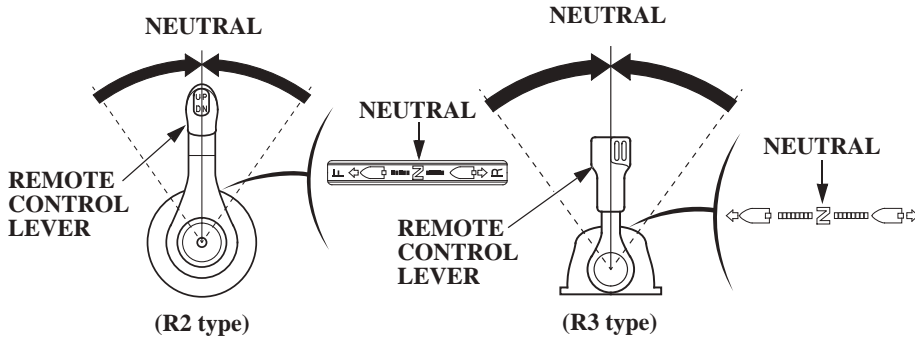

2. Set the control lever in the NEUTRAL position.
The engine does not start unless the control lever is set in the NEUTRAL position.

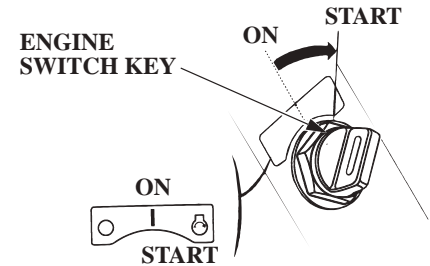

3. Turn the engine switch key to the START position and hold it there until the engine starts.
When the engine starts, release the key, allowing it to return to the ON position.

NOTICE


- The starter motor consumes a large amount of current. Do not therefore run it continuously for more than 5 seconds at a time. If the engine does not start within 5 seconds, wait at least 10 seconds before running the starter motor again.
- Do not turn the engine switch key to the START position while the engine is running.

STARTING THE ENGINE

NOTE:

When the boat is mounted with the two outboard motors, perform the above procedure on the right and left outboard motors respectively.

COOLING WATER CHECK HOLE

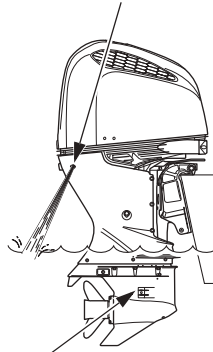


COOLING WATER INTAKE PORT (each side)

4. After starting, check whether the cooling water is flowing out of the cooling water check hole. Amount of water flowing out of the check hole might vary due to the thermostat operation, but this is normal.

NOTICE

If water does not flow out, or if steam comes out, stop the engine. Check to see if the screen in the cooling water intake port is obstructed and remove foreign materials if necessary. Check the cooling water check hole for clogging. If water still does not flow out, have your outboard motor checked by an authorized TOHATSU outboard motor dealer. Do not operate the engine until the problem has been corrected.

ENGINE OIL PRESSURE INDICATOR

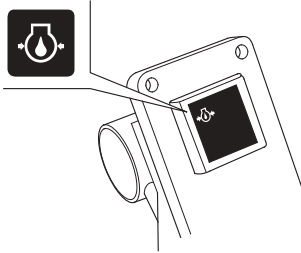

NORMAL: ON
ABNORMAL: OFF

5. Check to see if the oil pressure indicator turns ON.

If it does not turn on, stop the engine and perform the following inspections.

- 1) Check the oil level (see page 58).
- 2) If the oil level is normal and the oil pressure indicator does not turn ON, consult with an authorized TOHATSU outboard motor dealer.

6. Warm up the engine as follows:
Above 5°C (41°F) – run the engine for 2 or 3 minutes.
Below 5°C (41°F) – run the engine for at least 5 minutes at 2,000 min⁻¹ (rpm).
Failure to completely warm up the engine will result in poor engine performance.

NOTICE


If the engine is not properly warmed-up before raising the engine speed, the warning buzzer and overheat indicator may activate and the engine speed will be automatically reduced.

NOTE:

Before leaving the dock, check the operation of the emergency stop switch.

STARTING THE ENGINE

Station Select Mode

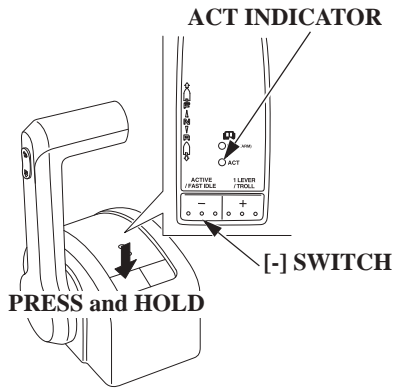

For multiple station type, use the [-] switch to change the operating station.

If you press and hold the [-] switch of the inactive station when all remote control lever is in the NEUTRAL position, you can operate the outboard motors using this station.

A long buzz sounds once and the ACT indicator comes on when the station can be operated.

Break-in Procedure

Break-in period: 10 hours

Break-in operation allows the mating surfaces of the moving parts to wear evenly and thus ensures proper performance and longer outboard motor life.

Break-in your new outboard motor as follows.

First 15 minutes:

Run the outboard motor at trolling speed. Use the minimum amount of throttle opening necessary to operate the boat at a safe trolling speed.

Next 45 minutes:

Run the outboard motor up to a maximum of 2,000 to 3,000 min^{-1} (rpm) or 10% to 30% throttle opening.

Next 60 minutes:

Run the outboard motor up to maximum of 4,000 to 5,000 min^{-1} (rpm) or 50% to 80% throttle opening. Short bursts of full throttle are acceptable but do not operate the outboard motor continuously at full throttle.

Next 8 hours:


Avoid continuous full throttle operation (100% throttle opening). Do not run the outboard motor at full throttle for more than 5 minutes at a time.

For boats that plane easily, bring the boat up on plane then reduce the throttle opening to the specified break-in settings called out above.

OPERATION

Gear Shifting (D1 type)



REMOTE CONTROL LEVER

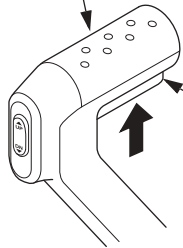

NEUTRAL RELEASE LEVER

FORWARD NEUTRAL REVERSE

REMOTE CONTROL LEVER

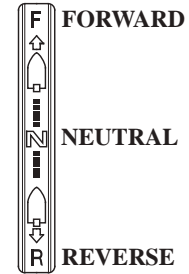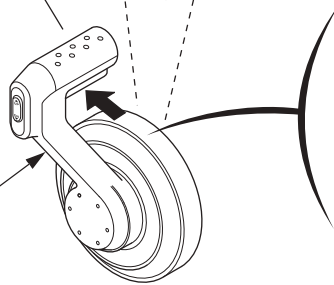

⚠ CAUTION

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.


While pulling the neutral release lever, move the control lever approximately 20° toward the FORWARD or REVERSE position to engage the desired gear.

Moving the control lever further from approximately 20° will increase throttle opening and boat speed.


The control lever will not move unless the neutral release lever is pulled up.

Gear Shifting (D2 type)


SINGLE TYPE

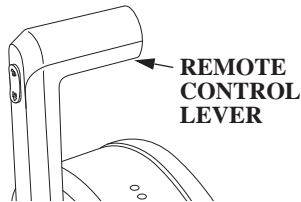

DUAL TYPE

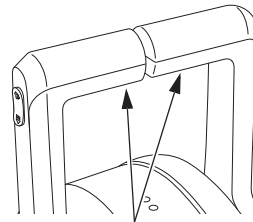

REMOTE CONTROL LEVERS

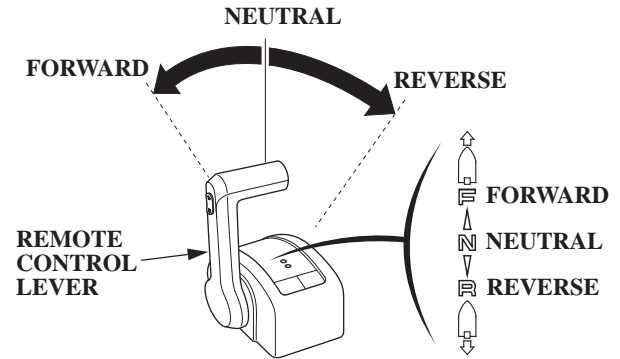

⚠ CAUTION

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.

Move the control lever(s) approximately 20° toward the FORWARD or REVERSE position to engage the desired gear.

When the boat is mounted with the two outboard motors, hold the control lever in the center as shown, and operate the right and left levers simultaneously.



Moving the control lever(s) further from approximately 20° will increase throttle opening and boat speed.

OPERATION

Gear Shifting

(R1 type) NEUTRAL RELEASE LEVER

REMOTE CONTROL LEVER

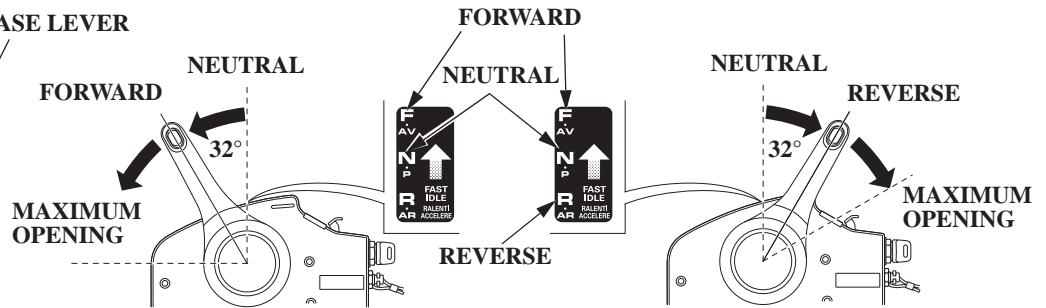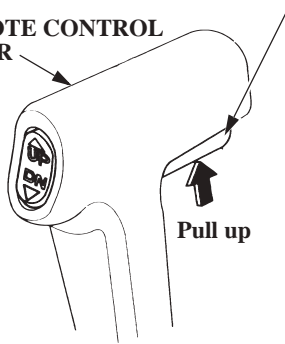

⚠ CAUTION

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.


While pulling the neutral release lever, move the control lever approximately 32° toward the FORWARD or REVERSE position to engage the desired gear.

Moving the control lever further from approximately 32° will increase throttle opening and boat speed.



The control lever will not move unless the neutral release lever is pulled up.

Gear Shifting (R2 type)

REMOTE CONTROL LEVER

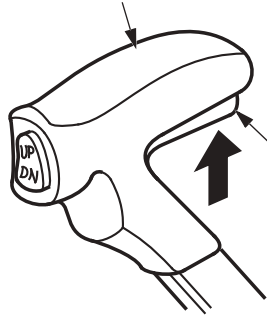

NEUTRAL RELEASE
LEVER

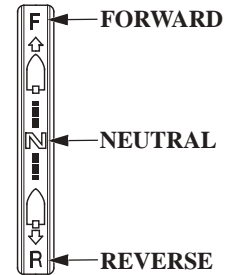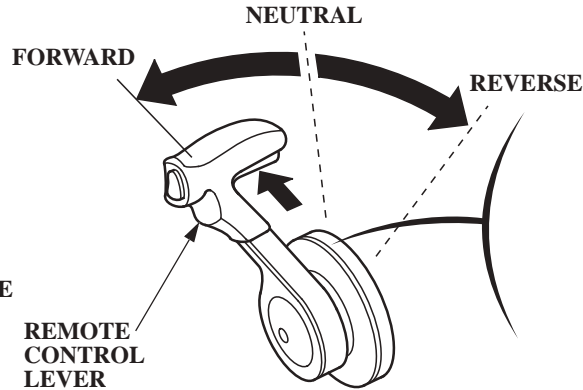

⚠ CAUTION

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.

While pulling the neutral release lever, move the control lever approximately 35° toward the FORWARD or REVERSE position to engage the desired gear.


Moving the control lever further from approximately 35° will increase throttle opening and boat speed.

The control lever will not move unless the neutral release lever is pulled up.


OPERATION

Gear Shifting (R3 type)


SINGLE TYPE

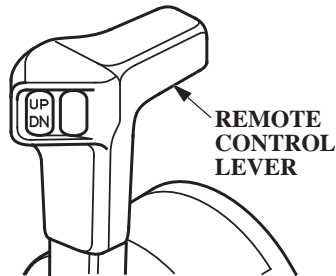

DUAL TYPE

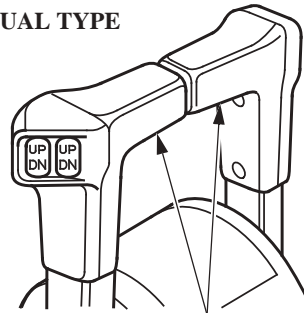

REMOTE CONTROL LEVERS

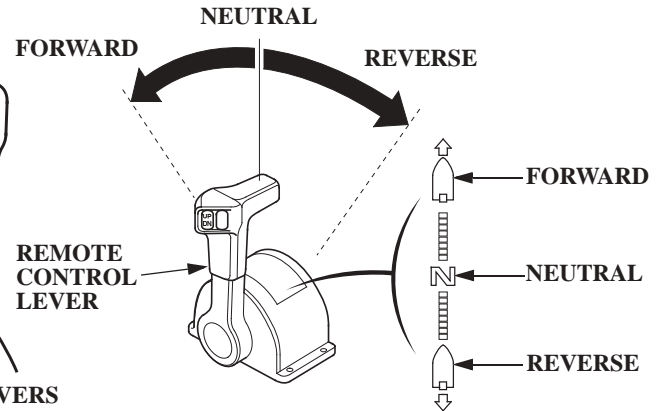

⚠ CAUTION

Avoid sharp and abrupt operation of the control lever. Operate it moderately. Operate the control lever and raise the engine speed after making sure that the gear was shifted securely.


Move the control lever(s) approximately 35° toward the FORWARD or REVERSE position to engage the desired gear.

When the boat is mounted with the two outboard motors, hold the control lever in the center as shown, and operate the right and left levers simultaneously.



Moving the control lever(s) further from approximately 35° will increase throttle opening and boat speed.

Cruising

POWER TRIM/TILT SWITCH

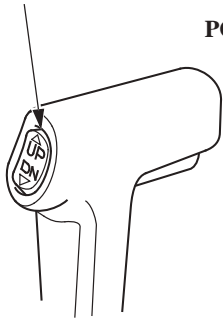


POWER TRIM/TILT SWITCH

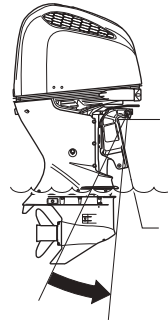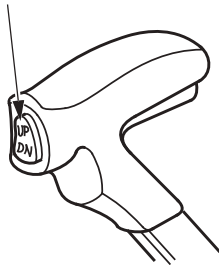

LOWERMOST POSITION


(single type)

POWER TRIM/TILT SWITCH

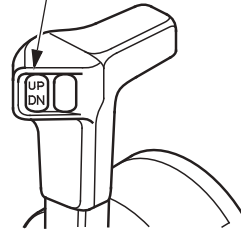


(dual type)

POWER TRIM/TILT SWITCH (LEFT) (RIGHT)

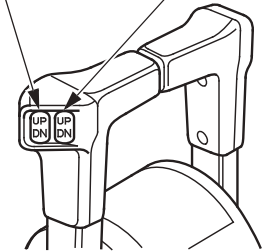


(single type)

POWER TRIM/TILT SWITCH

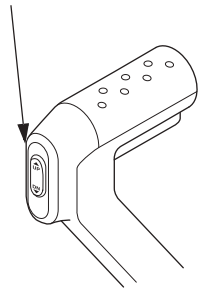


(dual type)

POWER TRIM/TILT SWITCH


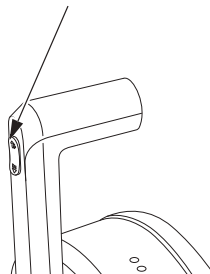


POWER TRIM/TILT SWITCH

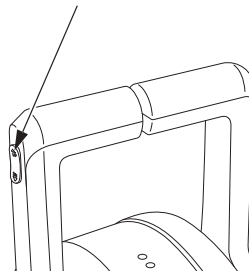

(panel type)

POWER TRIM/TILT SWITCH

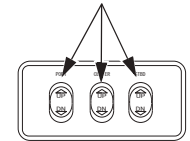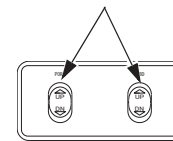

OPERATION

1. Press on the DN (down) of the power trim/tilt switch and trim the outboard motor at the lowermost position.

D2 type:

When the two or more outboard motors are mounted:


- 1) Press on the DN (down) of the power trim/tilt switch on the remote control lever and trim the outboard motors at the lowermost position.
- 2) With the outboard motors trimmed at the lowermost position, adjust the trim angle of the each outboard motor using the switch on the panel.

R3 type:

When the two outboard motors are mounted:

- 1) Press on the DN (down) of the power trim/tilt switch on the remote control lever and trim the outboard motors at the lowermost position.

- 2) With the outboard motors trimmed at the lowermost position, adjust the trim angle of the right and left outboard motors using the switch on the remote control lever simultaneously.

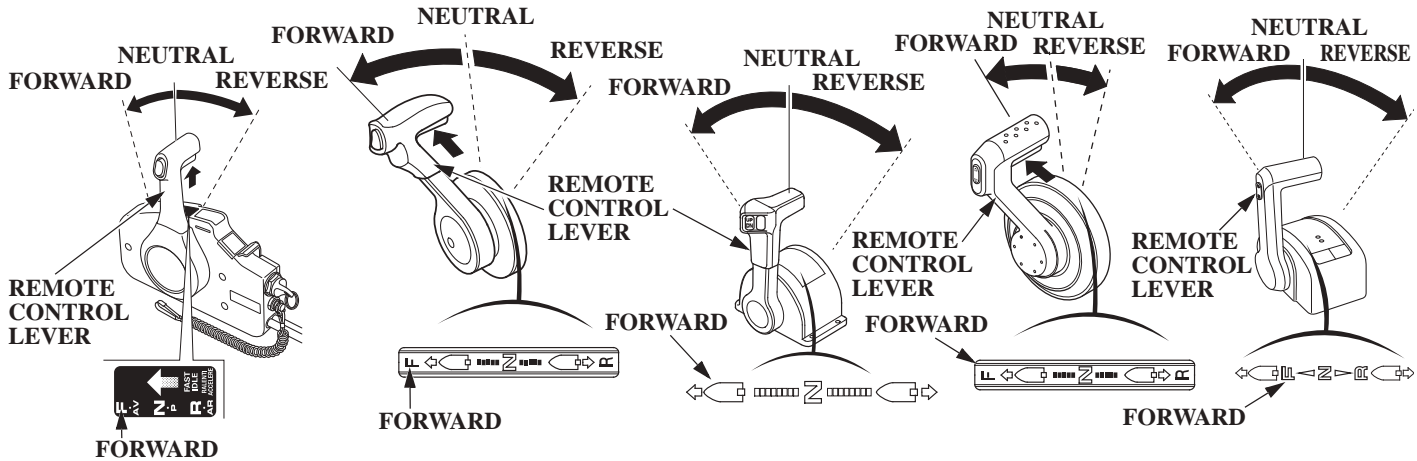

2. Move the control lever from **NEUTRAL** toward **FORWARD** position.

D1, D2 type:

Moving about 20° engages the gear. Moving the control lever further opens the throttle and increase the boat speed.

R1 type:

Moving about 32° engages the gear. Moving the control lever further opens the throttle and increases the engine speed.

R2, R3 type:

Moving about 35° engages the gear. Moving the control lever further opens the throttle and increase the boat speed.

For the sake of fuel economy, open the throttle about 80%.

OPERATION

NOTE:

- BFT200D/BFT225D:

When cruising at full throttle, note that the engine speed must be in the range between $5,000 \text{ min}^{-1}$ (rpm) and $6,000 \text{ min}^{-1}$ (rpm).

BFT250D:

When cruising at full throttle, note that the engine speed must be in the range between $5,300 \text{ min}^{-1}$ (rpm) and $6,300 \text{ min}^{-1}$ (rpm).

- If you feel that the engine speed jumped up when the hull jumped or at ventilation, cruise the boat by returning the throttle to the slow speed side.
- See “Propeller Selection” (page 55) for a relation between the propeller and the engine speed.


CAUTION

Do not operate without the engine cover. Exposed moving parts could cause injury; water may damage the engine.

NOTE:

For best performance, passengers and equipment should be distributed evenly to balance the boat.


Trolling Mode

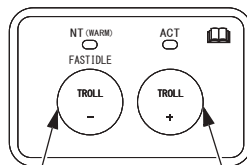

[-] SWITCH

[+] SWITCH

(ELECTRICAL REMOTE CONTROL BOX and FLUSH-MOUNT type)

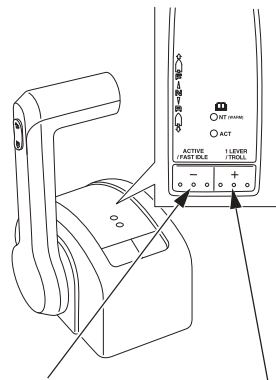

[-] SWITCH

[+] SWITCH

(ELECTRICAL REMOTE CONTROL BOX and TOP-MOUNT type)

[-] Switch: Reduce engine speed
[+] Switch: Increase engine speed

After the engine has warmed up, keeping **[+]** switch pushed when cruising with the throttle fully closed, changes the mode to trolling mode.

A long buzz sounds once.
When the mode is changed to trolling mode, the engine speed is 650 min^{-1} (rpm).

You can adjust the engine speed by 50 min^{-1} (rpm) every time you press the switch once. You will hear a short buzz.


The engine speed can be adjusted within the range of $650 - 1,000 \text{ min}^{-1}$ (rpm).

Continuing to press the switch will not decrease or increase the engine speed beyond the lower (650 min^{-1} (rpm)) or higher ($1,000 \text{ min}^{-1}$ (rpm)) limit.

If you try to do this, a short buzz sounds twice.

The throttle may be operated while in trolling mode. The trolling mode is cancelled when you reach $3,000 \text{ min}^{-1}$ (rpm).

One-Lever Mode (For multiple outboard motors type)

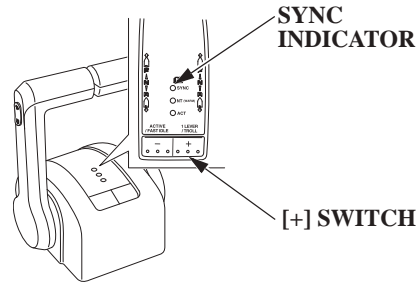


Shifting gear and the engine speed adjustment of the all outboard motors can be performed with one remote control lever when in one-lever mode.

If you press and hold the [+] switch when all remote control lever is in the NEUTRAL position, the mode changes to one-lever mode.

A long buzz sounds once and SYNC indicator comes on

OPERATION

Trimming the Outboard Motor

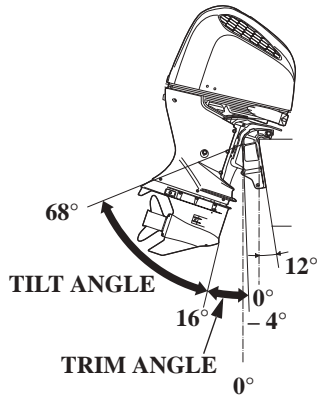


(VERTICAL LINE)

(when transom angle is 12°)


The BFT200D/BFT225D/BFT250D is equipped with the power trim/tilt system which can adjust the outboard motor angle (trim/tilt angle) while cruising and mooring. The outboard motor angle can also be adjusted while cruising and accelerating to obtain the maximum speed and optimum driveability and fuel economy.

(D1 type)

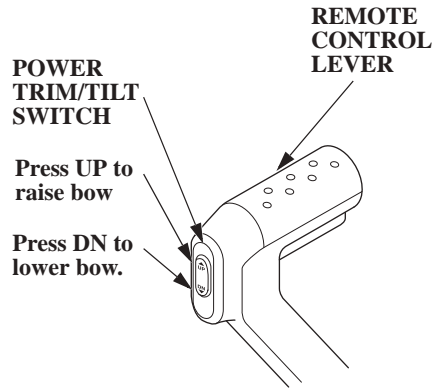


(D2 type)


(single type)

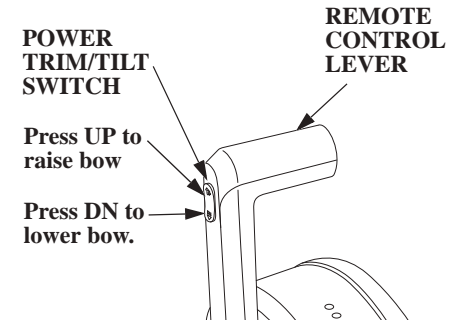


(dual type)

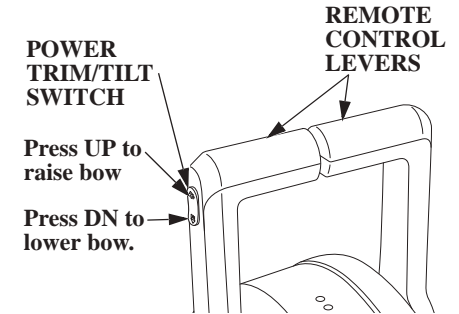

POWER TRIM/TILT SWITCH (R1 type)

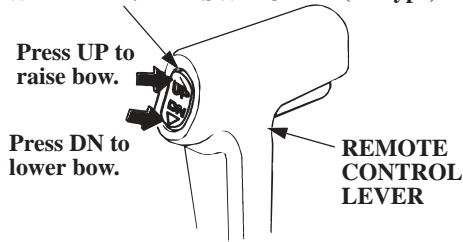


POWER TRIM/TILT SWITCH (R2 type)

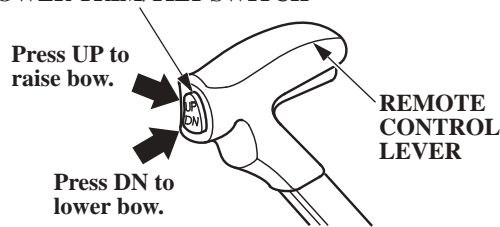


Consult an authorized TOHATSU Outboard Motor dealer for the method to adjust the tilt limit switch. Press either UP or DN (down) of the power trim/tilt switch and tilt the outboard motor to the best position in compliance with the cruising conditions.

POWER TRIM/TILT SWITCH (R3 type) Single Type

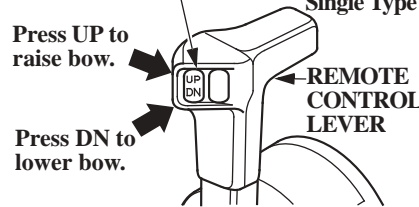


POWER TRIM/TILT SWITCH (LEFT) (RIGHT)

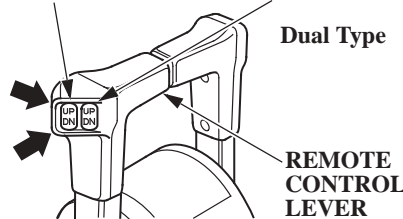

The power trim/tilt system operates when the switch is pressed, and it stops when the switch is released. To trim up slightly, press on UP momentarily but securely. To trim down slightly, press on DN (down) in the same manner.


PTT SWITCH PANEL

DUAL TYPE

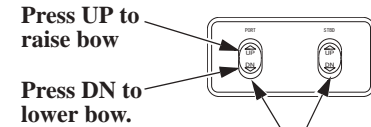

POWER TRIM/TILT SWITCH

TRIPLE TYPE

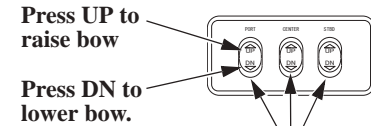

POWER TRIM/TILT SWITCH

NOTE:

For multiple outboard motors, the trim/tilt angle of all outboard motors is adjusted at the same time by using the power trim/tilt switch on the remote control lever and the trim/tilt angle of each outboard motor is adjusted by using each power trim/tilt switch on the panel.

OPERATION


⚠ CAUTION

- Improper trim angle results in unstable steering condition.
- Do not trim excessively while cruising through rough waves, or it may cause an accident.
- Excessive trim angle can result in cavitation and racing of the propeller, and trimming up the outboard motor excessively can cause damage to the impeller pump.


NOTE:

- Decrease the trim angle on high speed turns to reduce the possibility of propeller ventilation.
- Improper outboard motor trim angle can result in an unstable steering condition.


**OUTBOARD MOTOR
TRIMMED TOO LOW**

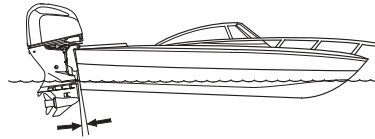

**OUTBOARD MOTOR
TRIMMED TOO HIGH**

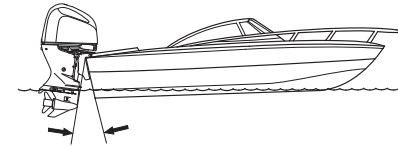

**OUTBOARD MOTOR TRIMMED
CORRECTLY**

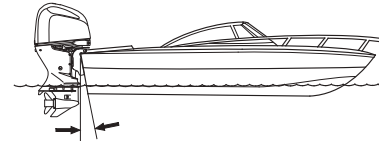

When cruising:

- (A) Into a high wind, trim the outboard motor down slightly to lower the bow and improve boat stability.
- (B) With a tail wind, trim the outboard motor up slightly to raise the bow and improve boat stability.
- (C) Through rough waves, do not trim the outboard motor too low or too high to avoid an unstable steering condition.

Trim Meter (optional equipment)

The trim meter indicates the trim angle of the outboard motor. Refer to the trim meter, and press the UP or DN (down) portion of the power trim/tilt switch to adjust the outboard motor trim angle to achieve boat performance and stability.


The illustration represents R1 type. Perform the same procedure for the other types.

▲ WARNING

When the boat is mounted with the two outboard motors, adjust with the switch on the control lever side.


Adjustment with the switch on the console side will impair the balance between the right and left outboard motors, which adversely affects operationability and stability of the outboard motors.

- BOW TOO LOW DUE TO**
1. LOAD IN THE FRONT
2. OUTBOARD MOTOR TRIMMED TOO LOW

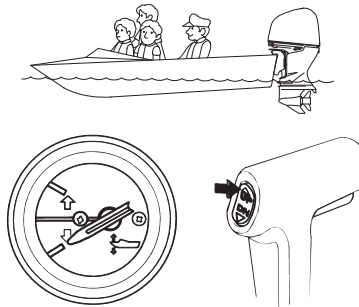

With the outboard motor trimmed low the trim meter will read as shown. To raise the bow increase the outboard motor trim angle by pressing the UP portion of the power trim/tilt switch.

- BOW TOO HIGH DUE TO**
1. LOAD IN THE REAR
2. OUTBOARD MOTOR TRIMMED TOO HIGH

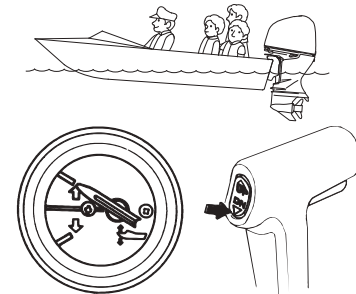

With the outboard motor trimmed high the trim meter will read as shown. To lower the bow decrease the outboard motor trim angle by pressing the DN (down) portion of the power trim/tilt switch.


OPERATION

Tilting the Outboard Motor

Tilt the outboard motor to prevent the propeller and gear case from hitting the bottom when the boat is beached or stopped in shallow water. Please tilt up simultaneously, when you mount the dual type outboard motor.

1. Move the shift lever or the control lever to the NEUTRAL position and stop the engine.
2. Press the UP of the power trim/tilt switch and tilt the outboard motor to the best position in compliance.


(D1 type)

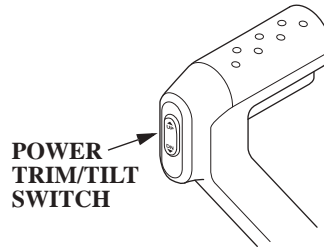

(D2 type)


(single type)

POWER
TRIM/TILT
SWITCH

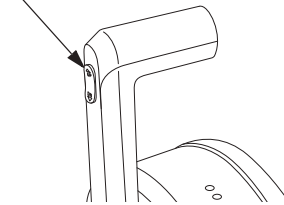


(dual type)


POWER
TRIM/TILT
SWITCH

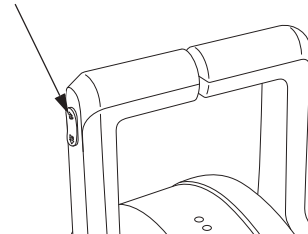

(R1 type)
POWER TRIM/TILT SWITCH

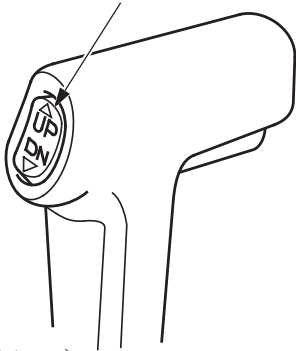


(R2 type)
POWER TRIM/TILT SWITCH

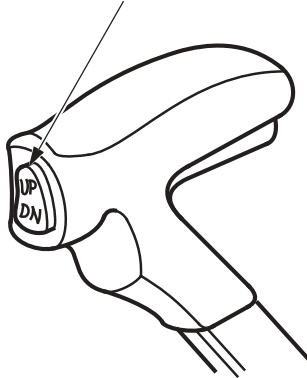


(R3 type)
(single type)
POWER TRIM/TILT SWITCH

POWER TRIM/TILT SWITCH

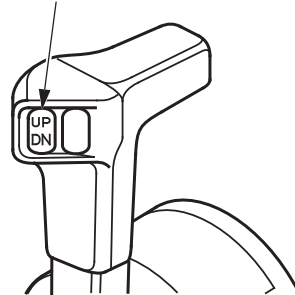

(R3 type)
(dual type)
POWER TRIM/TILT SWITCH

POWER TRIM/TILT SWITCH
(LEFT) (RIGHT)

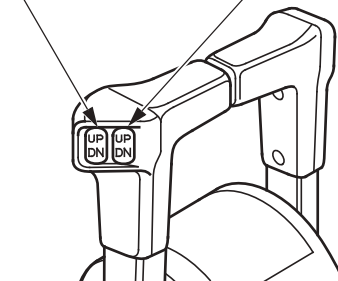

PTT SWITCH PANEL

DUAL TYPE



POWER TRIM/TILT SWITCH

TRIPLE TYPE




POWER TRIM/TILT SWITCH

NOTE:

For multiple outboard motors, the trim/tilt angle of all outboard motors is adjusted at the same time by using the power trim/tilt switch on the remote control lever and the trim/tilt angle of each outboard motor is adjusted by using each power trim/tilt switch on the panel.

OPERATION

Moorage

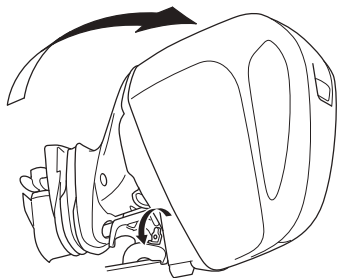


Tilt up the outboard motor using the tilt lock lever when mooring the boat. Shift the control lever into the NEUTRAL position and stop the engine before tilting up the outboard motor.

NOTE:

Before tilting up, leave the outboard motor in the running position for one minute after stopping the engine to drain the water from inside the engine.

Stop the engine and disconnect the fuel line from the outboard motor before tilting the outboard motor.

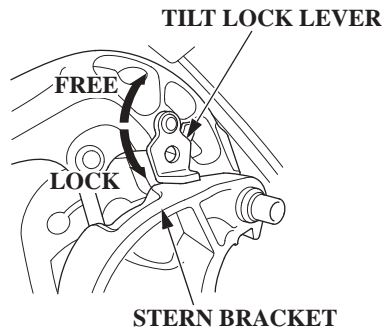


1. Raise the outboard motor as full as it goes using the power trim/tilt switch.
2. Move the tilt lock lever to the LOCK position and lower the outboard motor until the lock lever contacts the stern bracket.
3. Press the DN (down) of the power trim/tilt switch and fully shorten the trim rods.
4. To tilt down, raise the outboard motor slightly, move the tilt lock lever to the FREE position.


NOTE:

After tilting down the outboard motors, adjust the trim angle of the right and left outboard motors.

POWER TRIM/TILT SWITCH (LEFT) (RIGHT)

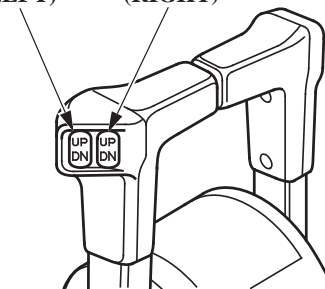


TRIM RODS

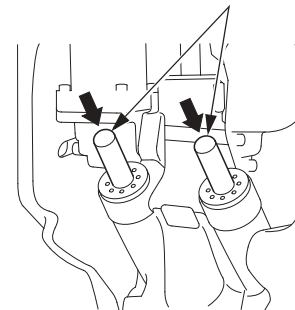

Power Tilt Switch

POWER TILT SWITCH

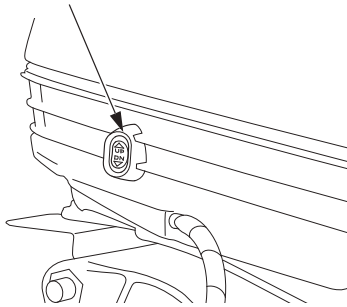


When you are away from the power trim/tilt switch on the control lever side, you can operate the power trim/tilt switch on the outboard motor side. The switch operation is the same as that of the switch on the control lever side.

⚠ CAUTION

Do not operate this power tilt switch on the outboard motor while sailing.

Manual Relief Valve

MANUAL RELIEF VALVE

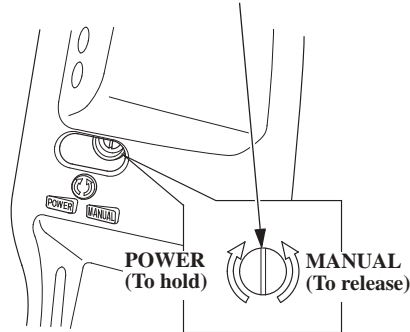

When power trim/tilt system does not operate because of dead battery or faulty power trim/tilt motor, the outboard motor can be manually tilted up or down by operating the manual relief valve.

Check that no person is under the outboard motor before carrying out this operation because if the manual relief valve is loosened (turned counterclockwise) when the outboard motor is tilted up, the outboard motor will suddenly tilt down.

To tilt the outboard motor manually, turn the manual relief valve under the stern bracket 1 or 2 turns counterclockwise using a screwdriver.


After tilting up/down manually, close the manual relief valve to lock the outboard motor in the position.

⚠ CAUTION

The manual relief valve must be tightened securely before operating the outboard motor or the outboard motor could tilt when operating in reverse.

OPERATION

Trim Tab Adjustment

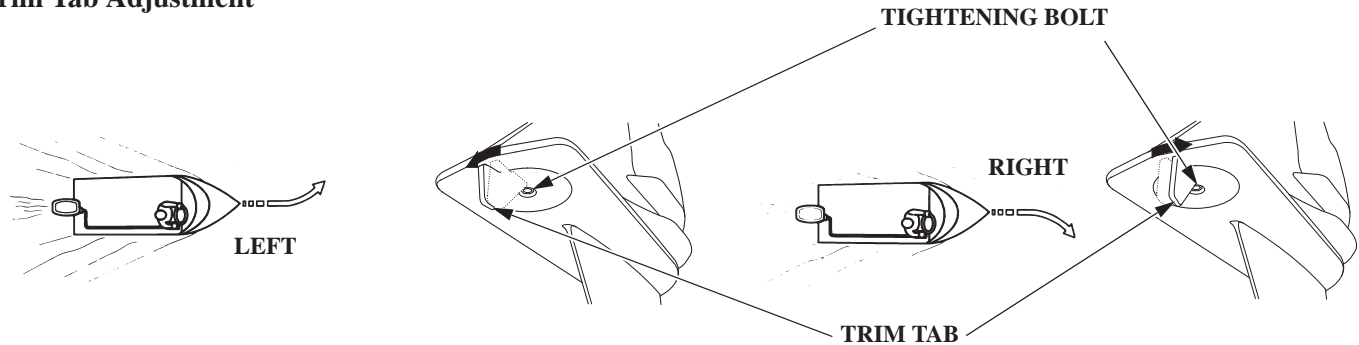

The trim tab is provided to adjust for “torque steer” which is a reaction of the propeller rotation or propeller torque. If during a high speed turn an unequal amount of effort is required to turn the boat right or left, adjust the trim tab so that an equal amount of effort is required.

Distribute the load evenly in the boat and run the boat in a straight course at full throttle. Slightly turn the steering wheel for both right and left turns to determine the amount of effort required.

If less effort is required to make left turns:

Loosen the trim tab tightening bolt and turn the rear end of the trim tab toward the left. Tighten the bolt securely.

If less effort is required to make right turns:

Loosen the trim tab tightening bolt and turn the rear end of the trim tab toward the right. Tighten the bolt securely.


Make small adjustments at a time and retest. Incorrect trim tab adjustment can cause adverse steering.

NOTICE


Painting or coating the anode will lead to rust and corrosion damage to the outboard motor.

Engine Protection System

<Engine Oil Pressure, Overheat, Water Separator, PGM-FI and ACG Warning Systems>

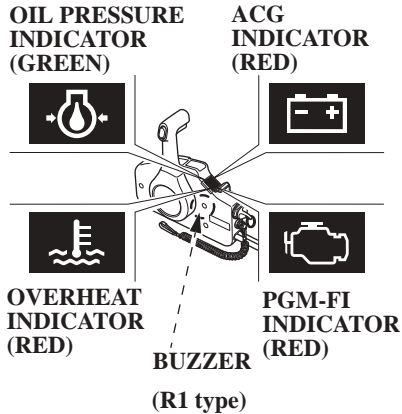

If the engine oil pressure drops and/or the engine overheats, either or both warning systems could be activated. When activated the engine speed will decrease gradually and the green oil pressure indicator will turn OFF and the red overheat indicator will turn ON. A continuous buzzer will sound

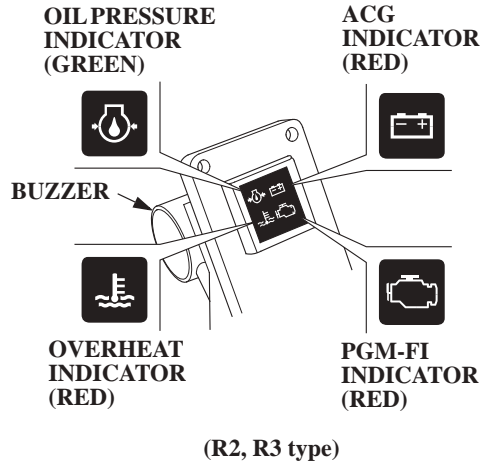

on all type.

The engine speed can not be increased with a larger throttle opening until the malfunction is corrected.

When the malfunction is corrected the engine speed will increase gradually.

If the engine overheats, the engine will stop in 20 seconds after the engine protection system will limit engine speed.

Each warning system of PGM-FI, ACG, oil pressure, overheat, and water separator is activated as described in the following table.

OPERATION

Symptom \ System	INDICATOR				BUZZER
	Oil pressure (Green)	Overheat (Red)	ACG (Red)	PGM-FI (Red)	CORRESPONDING SYSTEM
At starting	ON (2 sec)	ON (2 sec)	ON	ON (2 sec)	With the engine switch key turned on: ON (2 times)
During operation	ON	OFF	OFF	OFF	OFF
Low oil pressure	OFF	OFF	OFF	OFF	ON (continuously)
Overheat	ON	ON	OFF	OFF	ON (continuously)
ACG warning	ON	OFF	ON	OFF	alternating ON and OFF (at long intervals)
PGM-FI warning	ON*	OFF*	OFF	ON	alternating ON and OFF (at long intervals)
Water contamination	ON	OFF	OFF	OFF	alternating ON and OFF (at short intervals)

NOTE:

Some indicator and/or buzzer will be activated at the same time due to the occurrence of a malfunction.

*: Occasionally may blink due to the occurrence of a malfunction.

When the oil pressure warning system is activated:


1. Stop the engine immediately and check the engine oil level (see page 58).
2. If the oil is up to the recommended level, restart the engine. If the oil pressure warning system stops after 30 seconds, the system is normal.

NOTE:

If the throttle was closed suddenly after cruising at full throttle, the engine speed may drop below the specified idle speed. This could cause the oil pressure warning system to activate momentarily.

3. If the oil pressure warning system stays activated after 30 seconds, return to the closest boat landing and contact your closest authorized TOHATSU outboard motor dealer.

COOLING WATER CHECK HOLE

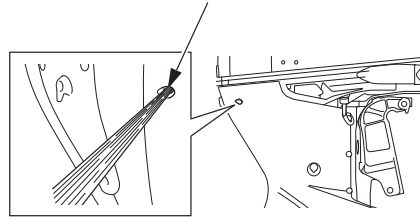


When the overheat warning system is activated:

1. Return the gearshift lever or control lever to the N (neutral) position immediately. Check to see if water is flowing out of the cooling water check hole.
2. If water is flowing out of the cooling water check hole, continue idling for 30 seconds. If the overheat warning system stops after 30 seconds the system is normal.

NOTE:

If the engine is turned off after running at full throttle, the engine temperature may rise above normal. If the engine is restarted, shortly after being turned off, the overheat warning system could be activated momentarily.

OPERATION

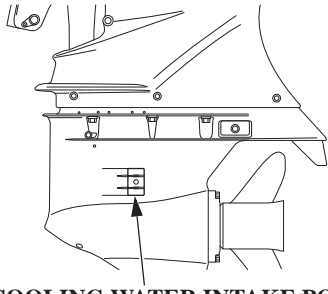

**COOLING WATER INTAKE PORT
(each side)**


3. If the overheat warning system stays activated, stop the engine. Tilt up the outboard motor and check the water intakes for obstructions. If there are no obstructions at the water intakes, return to the closest boat landing and contact your closest authorized TOHATSU outboard motor dealer.

When the PGM-FI activated:

1. Consult with an authorized TOHATSU outboard motor dealer.

When the ACG warning system is activated.

1. Check the battery (see page 127). If the battery is OK, consult with an authorized TOHATSU outboard motor dealer.

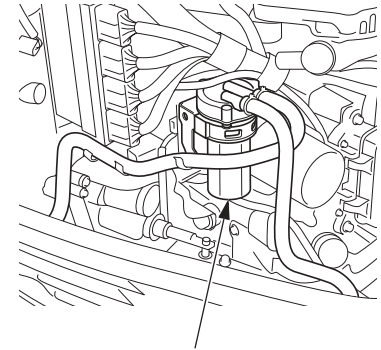

WATER SEPARATOR

When the water separator buzzer sounds:

1. Check the water separator for water contamination. If water is accumulated, drain them (see page 124).

<Over-rev Limiter>


This outboard motor is equipped with an engine over-rev limiter which activates when the engine speed increases excessively. The over-rev limiter can be activated while cruising, tilting up the outboard motor, or when ventilation occurs during a sharp turn.

When the over-rev limiter is activated:

1. Reduce the throttle opening immediately and check the trim angle.
2. If the trim angle is correct but the over-rev limiter stays activated, stop the engine, check the condition of the outboard motor, check to see if the correct propeller is installed and check it for damage.

Correct or service as necessary, by contacting your authorized TOHATSU outboard motor dealer.

<Anode>

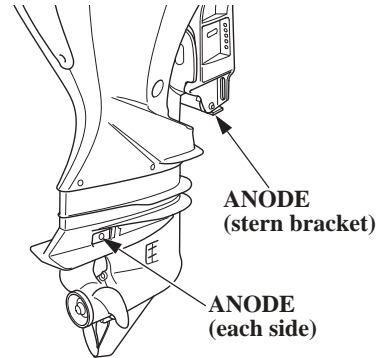

The anode is a sacrificial material which helps to protect the outboard motor from corrosion.

NOTICE

Painting or coating the anode will lead to rust and corrosion damage to the outboard motor.

There are also 4 small sacrificial anodes in the water passages of the engine block.

Shallow Water Operation

NOTICE

Excessive trim/tilt angle during operation can cause the propeller to raise out of the water and cause propeller ventilation and engine over-revving. Excessive trim/tilt angle can also damage the water pump and overheat the engine.

When operating in shallow water, tilt the outboard motor up to prevent the propeller and gear case from hitting the bottom (see page 94). With the outboard motor tilted up, operate the outboard motor at low speed.

Monitor the cooling water check hole for water discharge. Be sure that the outboard motor is not tilted so high that the water intakes are out of the water.

OPERATION

Multiple Outboard Motors


On boats equipped with more than one outboard motor, all motors normally operate at the same time.

If one or more motor(s) is stopped while the other(s) is running, put the stopped motor in “N” (neutral) and tilt it up so its propeller is above the water’s surface.


If the propeller of the stopped motor is left in the water, it may turn as the boat moves through the water, causing a reverse flow of water from the exhaust side. This reverse flow will happen if the stopped engine’s propeller is in the water, its gearshift is in “R” (reverse), and the boat is moving forward. Reverse flow can cause an engine malfunction.

9. STOPPING THE ENGINE

Emergency Engine Stop (D1, D2 types)

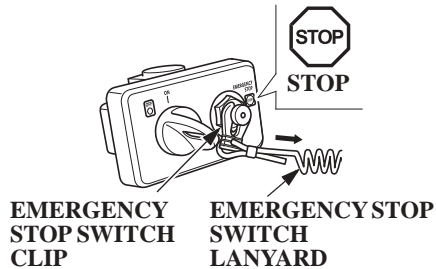

(R1 type)

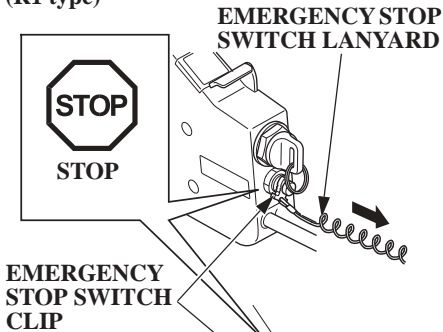

(R2, R3 type)

EMERGENCY STOP SWITCH LANYARD

Pull the curl cord of the emergency stop switch and remove the lock plate from the switch; this will stop the engine.

NOTE:

It is a good idea to stop the engine with the emergency stop switch lanyard from time to time to be sure that the emergency stop switch is operating properly.



Normal Engine Stop (D1, D2 type)

1. Move the shift lever to NEUTRAL position.


NOTE:

After sailing with the throttle fully open, cool down the engine by running it at the idle speed for a few minutes.

STOPPING THE ENGINE

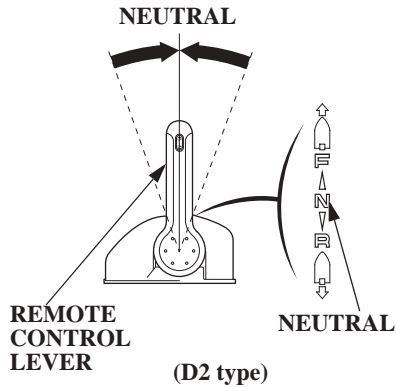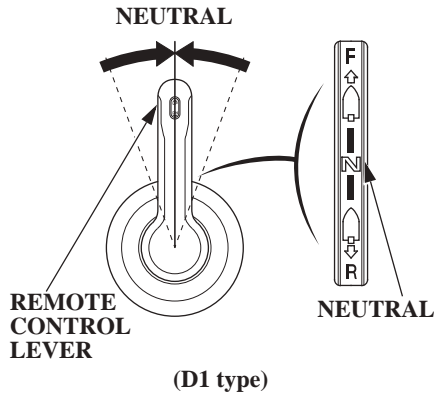


START/STOP SWITCH

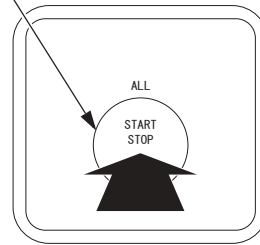

2. Push the start/stop switch to stop the engine.

NOTE:

In the event that the engine does not stop when the start/stop switch is pushed, disconnect the fuel line connector from the outboard motor.

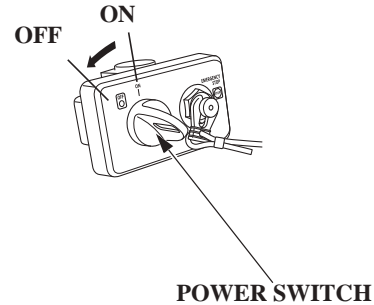






3. Turn the power switch key to the OFF position, and then remove and store it.

If you are using a portable fuel tank, disconnect the fuel line if you will be storing or transporting the outboard motor.

STOPPING THE ENGINE

Normal Engine Stop

(D1, D2 without START/STOP Switch type)
(R1, R2, R3 type)

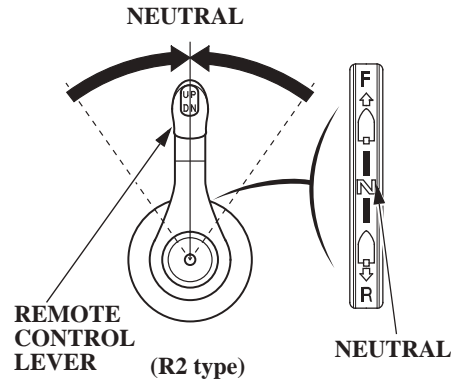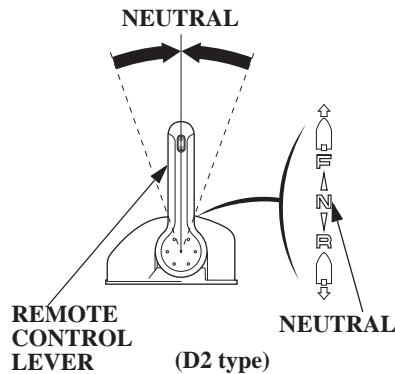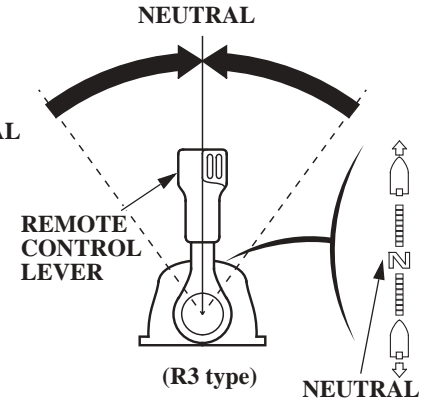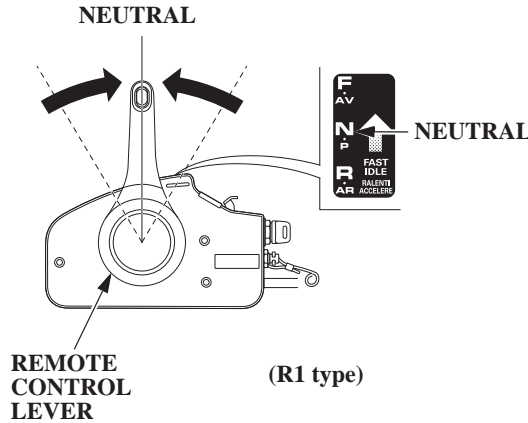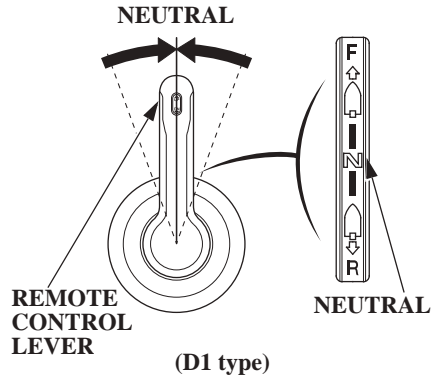


1. Move the shift lever to NEUTRAL position.


NOTE:

After sailing with the throttle fully open, cool down the engine by running it at the idle speed for a few minutes.

STOPPING THE ENGINE

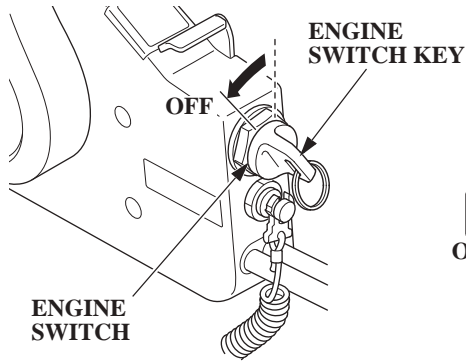

(R1 type)

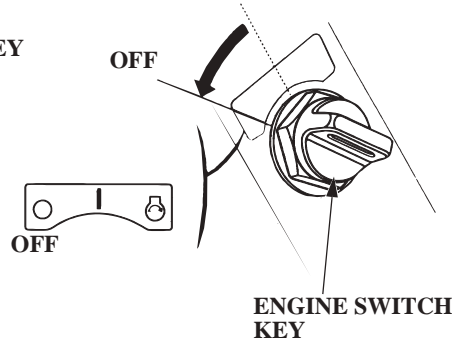

(D1, D2 without START/STOP Switch type)
(R2, R3 type)

2. Turn the engine switch key to the OFF position to stop the engine.

NOTE:

In the event that the engine does not stop when the engine switch is turned to OFF, disconnect the fuel line connector from the outboard motor.

3. Remove the engine switch key and store it.

If you are using a portable fuel tank, disconnect the fuel line if you will be storing or transporting the outboard motor.

Fuel Line Disconnection


Before transporting the outboard motor, disconnect and remove the fuel line.

⚠ WARNING

Gasoline is extremely flammable, and gasoline vapor can explode, causing serious injury or death.


- Be careful not to spill fuel. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before storing or transporting the outboard motor.
- Do not smoke or allow flames or sparks where fuel is drained or stored.

Transporting

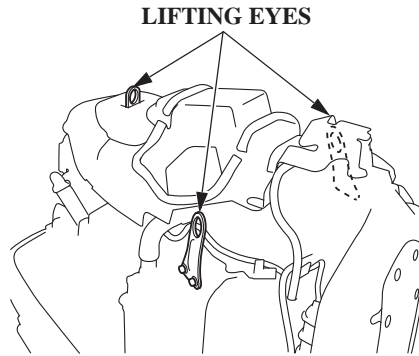

When transporting the outboard motor on a vehicle, perform the following.


1. Remove the engine cover (see page 56).

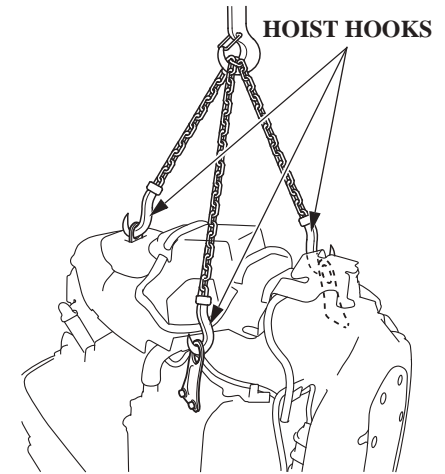

2. Set the hoist hooks against the lifting eyes and hang the outboard motor to remove it from the boat.

TRANSPORTING

OUTBOARD MOTOR STAND

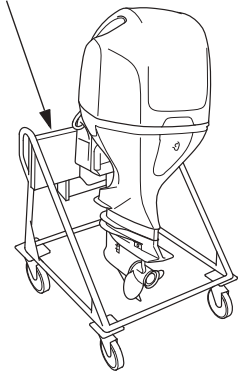

3. Secure the outboard motor on an outboard motor stand with the mounting bolts and nuts.
4. Remove the hoist hook and reinstall the engine cover (see page 56).

Trailer

When trailering or transporting the boat with the outboard motor attached, it is recommended that the outboard motor remain in normal running position.

NOTICE

Do not trailer or transport the boat with the outboard motor in the tilted position. The boat or outboard motor could be severely damaged if the outboard motor drops.

The outboard motor should be trailered in the normal running position. If there is insufficient road clearance in this position, then trailer the outboard motor in the tilted position using an outboard motor support device such as a transom saver bar, or remove the outboard motor from the boat.

11. CLEANING AND FLUSHING

After each use in salt water or dirty water, thoroughly clean and flush the outboard motor with fresh water.


NOTICE

Do not apply water or corrosion inhibitor directly to the electrical components under the engine cover, such as the AC generator, or the AC generator belt, timing belt. If water or corrosion inhibitor penetrates these components, they may be damaged. Before applying a corrosion inhibitor, cover the AC generator and belts with a protective material to prevent damage.


Shut off the engine before performing the cleaning and flushing.

1. Disconnect the fuel line from the outboard motor.
2. Tilt down the outboard motor.
3. Wash the outside of the outboard motor with clean, fresh water.

FLUSH PLUG CONNECTOR

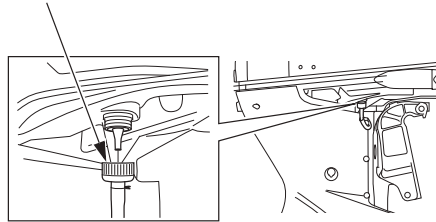

4. Remove the flush plug connector from the outboard motor.
5. Install the water hose joint (commercially available).

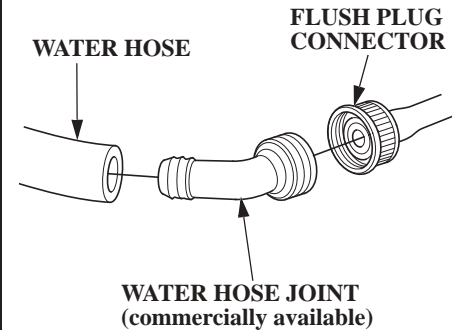

6. Connect a fresh water hose to the water hose joint.
7. Turn on the fresh water supply to the hose and flush the engine for at least 10 minutes.
8. After flushing, remove the water hose and water hose joint and reinstall the flush plug connector.
9. Tilt up the outboard motor and move the tilt lock lever to the LOCK position.

12. MAINTENANCE

Periodic maintenance and adjustment are important to keep the outboard motor in the best operating condition. Service and inspect according to the MAINTENANCE SCHEDULE.

⚠ WARNING

- Shut off the engine before performing any maintenance. If the engine must be run, make sure the area is well ventilated. Never run the engine in an enclosed or confined area. Exhaust contains poisonous carbon monoxide gas; exposure can cause loss of consciousness and may lead to death.
- Be sure to reinstall the engine cover, if it was removed, before starting the engine.

NOTICE

- **If the engine must be run, make sure there is water at least 100 mm (4 in) above the anticavitation plate, otherwise the water pump may not receive sufficient cooling water, and the engine will overheat.**
- **Use only TOHATSU Genuine parts or their equivalents for maintenance or repair. The use of replacement parts which are not of equivalent quality may damage the outboard motor.**


Tool Kit and Spare Parts (Tool Kit does not come with Counter Rotation Types)

The following tools and owner's manual are supplied with the outboard motor for maintenance, adjustment, and emergency repairs.


<Spare Emergency Stop Switch Clip>

A spare emergency stop switch clip is available from your outboard motor dealer.

Always carry a spare emergency stop switch clip onboard. The spare clip may either be stored in the tool bag or in an easily accessible location on the boat.

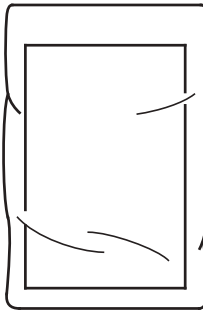

OWNER'S MANUAL

 

TOOL BAG



10 mm BOX WRENCH



PHILLIPS SCREWDRIVER



GRIP



6 mm HEX.
WRENCH



19 mm EYE WRENCH



SPARK PLUG
WRENCH

MAINTENANCE

MAINTENANCE SCHEDULE

ITEM	REGULAR SERVICE PERIOD (3) Perform at every indicated month or operating hour interval, whichever comes first.		Each use	After use	First month or 20 hrs.	Every 6 months or 100 hrs.	Every year or 200 hrs.	Every 2 years or 400 hrs.	Every 3 years or 600 hrs.	Every 6 years or 1200 hrs.	Refer to page
Engine oil	Check level		o								58
	Change				o	o					116
Engine oil filter	Replace						o (2)				—
Gear case oil	Change				o (2)	o (2)					—
Timing belt	Check-adjust						o (2)				—
ACG belt	Check-adjust						o (2)				—
Throttle linkage and Control Cable (10)	Check-adjust				o (2)	o (2)					—
Valve clearance	Check-adjust						o (2)				—
Spark plug (nickel)	Check-adjust/Replace					o					118
Spark plug (iridium)	(Optional part) Check						o				—
	(Optional part) Clean						o (2)				—
	(Optional part) Replace							o			—
Propeller and Cotter pin	Check		o				o				61
Anode metal (Outside engine) (6)	Check		o				o				65
Anode metal (Inside engine) (6)	Sleeve Check							o (2)			—
	Exhaust manifold Check							o (2)			—
	V bank bottom Replace									o (2)	—
Idling speed	Check-adjust				o (2)	o (2)					—
Lubrication	Grease				o (1)	o (1)					122
Fuel filter with water separator (Low pressure side)	Check		o			o					123
	Replace							o			125

NOTE:

- (1) Lubricate more frequently when used in salt water.
- (2) These items should be serviced by your servicing dealer, unless you have the proper tools and <are> mechanically proficient. Refer to the TOHATSU Shop Manual for service procedures.
- (3) For professional commercial use, log hours of operation to determine proper maintenance intervals.
- (6) When there is 1/3 or more consumption, please exchange.
- (10) Mechanical Remote Control type only.

MAINTENANCE

ITEM	REGULAR SERVICE PERIOD (3) Perform at every indicated month or operating hour interval, whichever comes first.	Each use	After use	First month or 20 hrs.	Every 6 months or 100 hrs.	Every year or 200 hrs.	Every 2 years or 400 hrs.	Every 3 years or 600 hrs.	Every 6 years or 1200 hrs.	Refer to page
Fuel filter (High pressure side)	Replace					o (2)				—
Thermostat and thermostat cover	Check/Replace					o (2)				—
Fuel line	Check	o (8)								65
	Replace	Every 2 years (if necessary) (2) (9)								—
Battery and cable connection	Check level-tightness	o								64, 127
Bolts and Nuts	Check-tightness			o (2)	o (2)					—
Crankcase breather tube	Check					o (2)				—
Cooling water passages	Clean		o (4)		o (4)					—
Coolant leak	Check	o								133
Water pump and Woodruff Key	Check					o (2)				—
Housing, Impeller	Check					o (2)				—
Emergency stop switch	Check	o								38
Engine oil leak	Check	o								—
Each operation part	Check	o								—
Engine condition (5)	Check	o								—
Power Trim/Tilt	Check				o (2)					—
Shift Cable (10)	Check-adjust			o (2)	o (2) (7)					—

NOTE:

- (2) These items should be serviced by your servicing dealer, unless you have the proper tools and <are> mechanically proficient. Refer to the TOHATSU Shop Manual for service procedures.
- (3) For professional commercial use, log hours of operation to determine proper maintenance intervals.
- (4) When operating in salt water, turbid or muddy water, the engine should be flushed with clean water after each use.
- (5) Upon starting, check for unusual engine sounds and cooling water flowing freely from the check hole.
- (7) The user who performs shift operation frequently will recommend you exchange of a shift cable around three years.
- (8) Check the fuel line for leaks, cracks, or damage. If it is leaking, cracked, or damaged, take it to your servicing dealer for replacement before using your outboard.
- (9) Check the fuel line for leaks, cracks, or damage. Replace the fuel line if there are signs of leaks, cracks, or damage.
- (10) Mechanical Remote Control type only.

MAINTENANCE

Engine Oil

Insufficient or contaminated engine oil adversely affects the service life of the sliding and moving parts.

Oil change interval:

20 operating hours after the date of purchase or first month for initial replacement, then every 100 operating hours or 6 months.


Oil capacity:

7.6 L (8.0 US qt, 6.7 Imp qt)
...when oil filter is not replaced
7.8 L (8.2 US qt, 6.9 Imp qt)
...when oil filter is replaced

Recommended Oil:


SAE 10W-30 engine oil or equivalent, API Service category SG, SH, SJ or SL.

Engine Oil Replacement

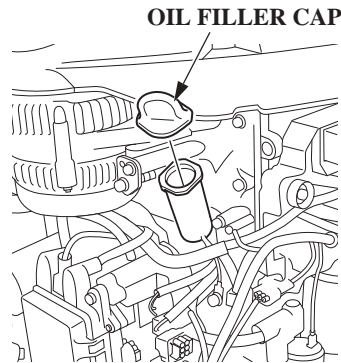

Drain the oil while the engine is still warm to assure rapid and complete draining.

1. Position the outboard motor vertically, and remove the engine cover (see page 56). Remove the oil filler cap.

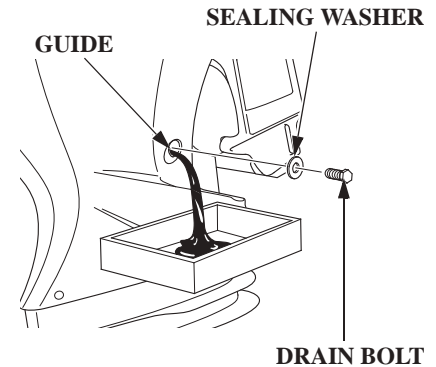


2. Place a suitable container under the guide.
3. Remove the engine oil drain bolt and sealing washer using the 12 mm wrench and drain the engine oil.

Install a new sealing washer and drain bolt, and tighten bolt securely.

TIGHTENING TORQUE:


23 N·m (2.3 kgf·m , 17 lbf·ft)

OIL LEVEL DIPSTICK

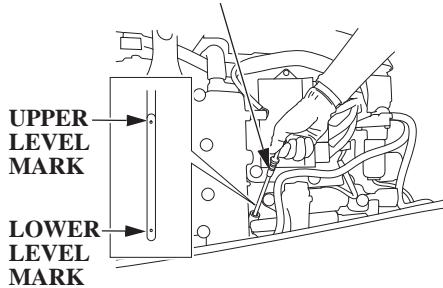

4. Refill to the upper level mark on the oil level dipstick with the recommended oil.

OIL FILLER CAP

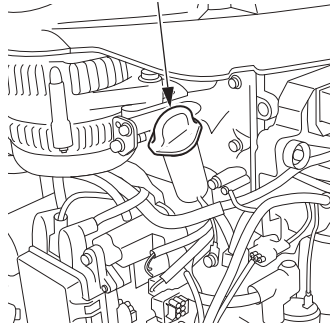

5. Reinstall the oil filler cap securely. Do not overtighten.

NOTE:

Please dispose of used outboard motor oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station for reclamation. Do not throw it in the trash or pour it on the ground.

Wash your hands with soap and water after handling used oil.

MAINTENANCE

Spark Plugs

To ensure proper engine operation, the spark plug must be properly gapped and free of deposits.

⚠ CAUTION

The spark plug becomes very hot during operation and will remain hot for a while after stopping the engine. Allow the engine to cool before servicing the spark plug.

Check-clean/Replace interval:

Every 100 operating hours or 6 months.


Recommended spark plug:

ZFR6K-11E (NGK)


NOTICE

Use only the recommended spark plugs or equivalent. Spark plugs which have an improper heat range may cause engine damage.

1. Disconnect the battery negative (–) terminal.
2. Unlock and remove the engine cover (see page 56).

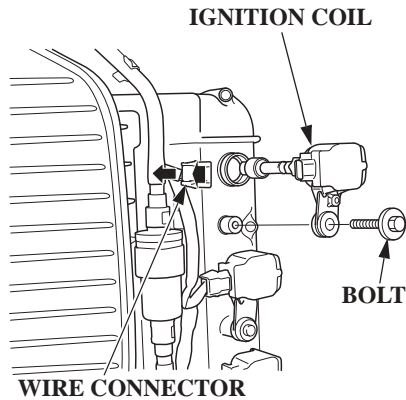


3. Disconnect the wire connector from the ignition coil by pushing on the lock tab and pulling on the connector. Pull on the plastic connector, not the wires.
4. Use a 10 mm wrench to remove the bolt holding the ignition coil. Remove the ignition coil by pulling it up slightly. Take care not give an impact or drop the ignition coil. Replace the ignition coil if drop it.

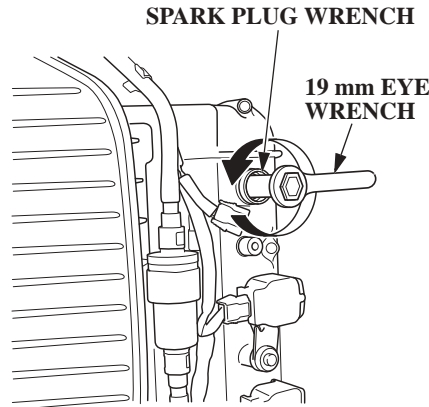


5. Use the spark plug wrench and 19 mm eye wrench to remove the spark plugs.

New plug

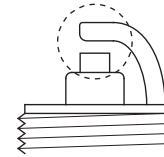


Plug needing replacement

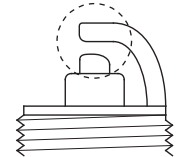

6. Inspect the spark plugs.
 - (1) If the electrodes are heavily corroded or carbon-soiled, clean with a wire brush.
 - (2) Replace a spark plug if the central electrode is worn. The spark plug can wear out in different ways. If the sealing washer shows signs of wear, or if the insulators are cracked or chipped, replace the spark plugs.

MAINTENANCE

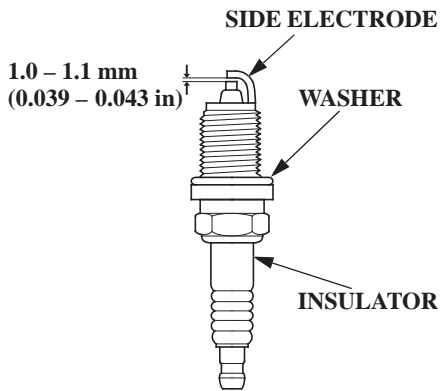

7. Measure the plug gaps with a feeler gauge. Correct the gap, if necessary, by carefully bending the side electrode.

The gaps should be:

1.0 - 1.1 mm (0.039 - 0.043 in)

8. Thread the plugs in by hand to prevent cross threading.

9. After the spark plugs are seated, tighten with a spark plug wrench to compress the washers.

TIGHTENING TORQUE:

18 N·m (1.8 kgf·m , 13 lbf·ft)

NOTE:

If installing new spark plugs, tighten 1/2 turn after the spark plug seats to compress the washers.

If reinstalling used spark plugs, tighten 1/8 - 1/4 turn after the spark plug seats to compress the washers.

NOTICE

The spark plugs must be securely tightened. An improperly tightened plug can become very hot and may cause engine damage.

10. Install the ignition coil. Reinstall the bolt.

11. Push the wire connector onto the ignition coil. Make sure it locks in place.

12. Repeat this procedure for the other five spark plugs.

13. Reinstall the engine cover.

Spark Plugs

<Optional Parts: Iridium Spark Plug>

To ensure proper engine operation, the spark plug must be properly gapped and free of deposits.

⚠ CAUTION

The spark plug becomes very hot during operation and will remain hot for a while after stopping the engine. Allow the engine to cool before servicing the spark plug.

Check/Clean interval:

Every 200 operating hours or every year.

Replace interval:

Every 400 hours or 2 years

Recommended spark plug:

IZFR6K-11E (NGK)

NOTICE

Use only the recommended spark plugs or equivalent. Spark plugs which have an improper heat range may cause engine damage.

Installation and removal procedure of the Iridium spark plugs are the same as the standard spark plugs.

These spark plugs have an iridium coated center electrode. Be sure to observe the following when servicing iridium spark plugs.

- Do not clean the spark plugs. If an electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one. The cleaning of the iridium spark plugs consult with your servicing dealer, unless the owner has the proper tools and is mechanically proficient.

- Use only a “wire-type feeler gauge” to check the spark plug gap if necessary. To prevent damaging the iridium coating of the center electrode, never use a “leaf-type feeler gauge.”
The gaps should be 1.0 – 1.1 mm (0.039 – 0.043 in).
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.

MAINTENANCE

Lubrication


Wipe the outside of the engine with a cloth dipped in clean oil. Apply marine anticorrosion grease to the following parts:

Lubrication interval:


20 hours or a month after the date of purchase for initial lubrication, then every 100 hours or 6 months.

NOTE:

- Apply anticorrosion oil to pivot surfaces where grease cannot penetrate.
- Lubricate more frequently when used in salt water.

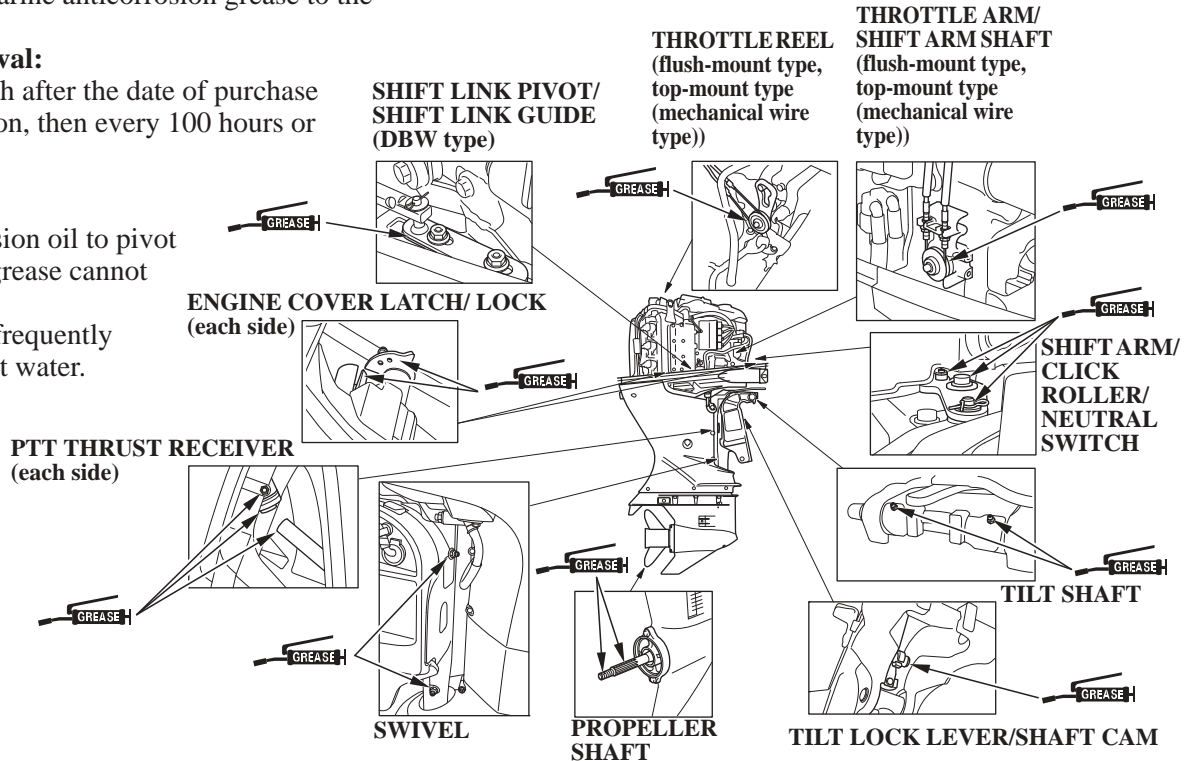

Fuel Filter with Water Separator

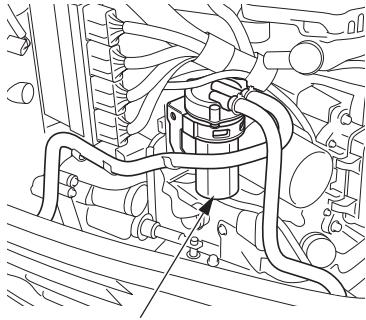

**FUEL FILTER with
WATER SEPARATOR**

The fuel filter with water separator is located near the junction box. Water or sediment accumulated in the fuel filter with water separator can cause loss of power or hard starting. Check and replace the fuel filter with water separator periodically. Clean it or consult with an authorized TOHATSU outboard motor dealer for cleaning.

Inspection interval:

Every 100 operating hours or 6 months.

Replacement interval:

Every 400 operating hours or 2 years


⚠ WARNING

Gasoline is extremely flammable, and gasoline vapor can explode, causing serious injury or death. Do not smoke or allow flames or sparks in your working area.

- Always work in a well-ventilated area.
- Be sure that any fuel drained from the outboard motor is stored in a safe container.
- Be careful not to spill fuel when replacing the filter. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before starting the engine.
- **KEEP OUT OF REACH OF CHILDREN.**

MAINTENANCE


<Inspection>

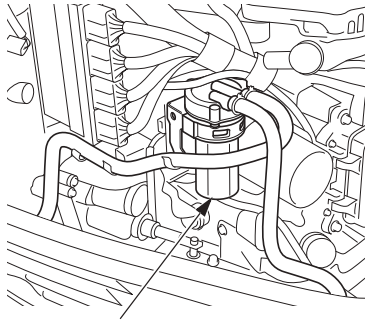

**FUEL FILTER with
WATER SEPARATOR**

1. Remove the engine cover (see page 56).
2. Looking through the translucent strainer cup, check the fuel filter with water separator for water accumulation and clogging. If the fuel filter with water separator is clogged, refer to page 125 to remove the filter and clean it.


If a water is remained in the fuel filter with water separator, refer to page 125 to remove the strainer cup and empty the water from the inside of the cup.

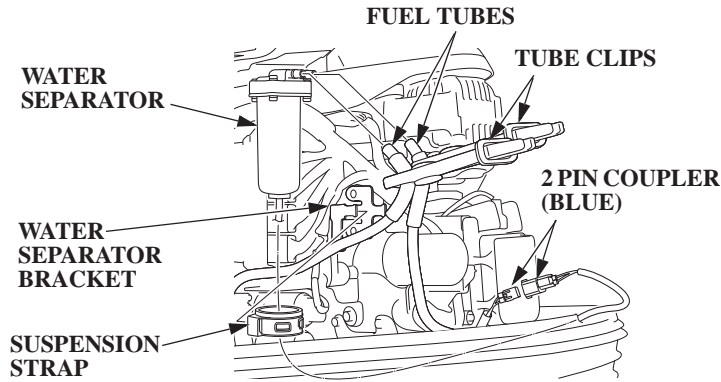

<Replacement>

1. Remove the engine cover (see page 56).
2. Disconnect the 2-pin coupler (blue).


3. Remove the suspension strap from the fuel filter with water separator bracket, then remove the suspension strap from the fuel filter with water separator.
4. Bind the two fuel tubes with the tube clips to prevent the fuel leakage, disconnect the fuel tubes.

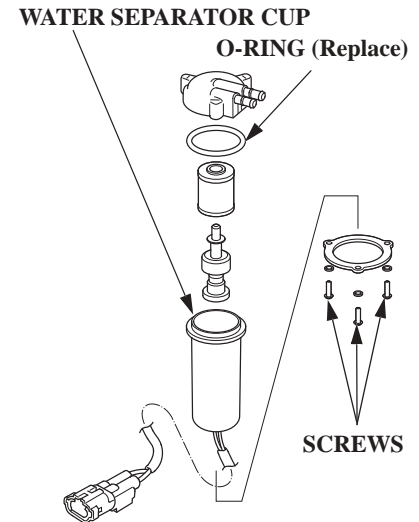

5. Remove the three screws holding the fuel filter with water separator, delete the water or deposit from the inside of the cup.
 6. Thoroughly clean the cup, and replace with a new fuel filter.
 7. Reassemble the water separator in the reverse order of removal. Use a new O-ring.
- TIGHTENING TORQUE:**
3.4 N·m (0.34 kgf·m, 2.5 lbs·ft)

MAINTENANCE

ALIGNING MARK

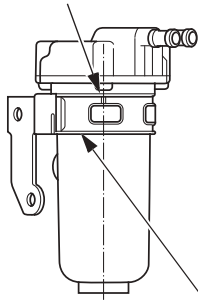

SUSPENSION STRAP

8. Align the aligning mark as shown in the figure, when installing the suspension strap on the fuel filter with water separator.
9. Prime the engine using the priming bulb (see page 66). Check for fuel leaks. Repair any fuel leaks if necessary.

NOTE:

If the buzzer sounds, water or sediment accumulation is found to be caused by excessive water or sediment accumulated in the fuel filter, inspect the fuel tank. Clean the fuel tank if necessary.

EMISSION CONTROL SYSTEM

The combustion process produces carbon monoxide and hydrocarbons. Control of hydrocarbons is very important because under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Problems that May Affect Outboard Motor Emissions

If you are aware of any of the following symptoms, have the outboard motor inspected and repaired by your authorized TOHATSU Dealer:

1. Hard starting or stalling after starting
2. Rough idle
3. Misfiring or backfiring during acceleration
4. Poor performance (driveability) and poor fuel economy

Battery

NOTICE


Battery handling differs according to the type of the battery and the instructions described below might not be applicable to the battery of your outboard. Refer to the battery manufacturer's instructions.

⚠ WARNING

Batteries produce explosive gases: If ignited, an explosion can cause serious injury or blindness. Provide adequate ventilation when charging.

- **CHEMICAL HAZARD:** Battery electrolyte contains sulfuric acid. Contact with eyes or skin, even through clothing, may cause severe burns. Wear a faceshield and protective clothing.

- Keep flames and sparks away, and do not smoke in the area.
ANTIDOTE: If electrolyte gets into your eyes, flush thoroughly with warm water for at least 15 minutes and call a physician immediately.
- **POISON:** Electrolyte is poison.
ANTIDOTE:
 - External: Flush thoroughly with water.
 - Internal: Drink large quantities of water or milk. Follow with milk of magnesia or vegetable oil, and call a physician immediately.
- **KEEP OUT OF REACH OF CHILDREN.**

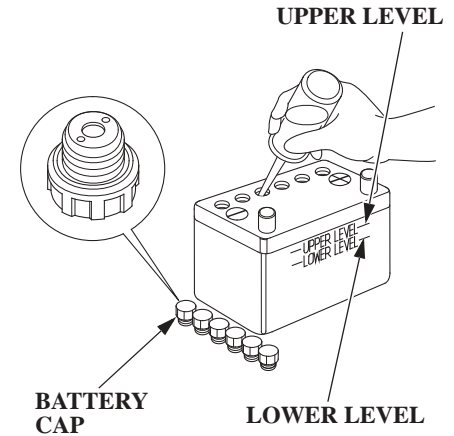

<Battery Fluid Level>

Check whether the battery fluid is between the upper and lower levels, and check the vent hole in the battery caps for clogging.


If the battery fluid is near or below the lower level, add the distilled water to the upper level.

MAINTENANCE

<Battery Cleaning>

1. Disconnect the battery cable at the battery negative (-) terminal, then at the battery positive (+) terminal.
2. Remove the battery and clean the battery terminals and battery cable terminals with a wire brush or sand paper.

Clean the battery with a solution of baking soda and warm water, taking care not to get the solution or water in the battery cells. Dry the battery thoroughly.

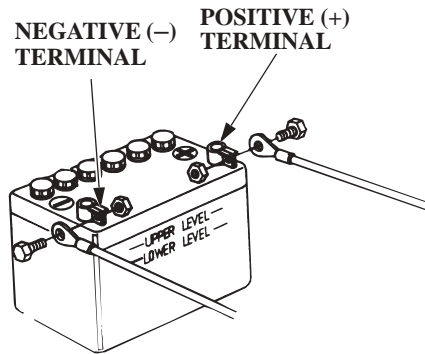

3. Connect the battery positive (+) cable to the battery positive (+) terminal, then the battery negative (-) cable to the battery negative (-) terminal. Tighten the bolts and nuts securely. Coat the battery terminals with grease.

⚠ CAUTION

When disconnecting the battery cable, be sure to disconnect at the battery negative (-) terminal first. To connect, connect at the positive (+) terminal first, then at the negative (-) terminal. Never dis/connect the battery cable in the reverse order, or it causes a short circuit when a tool contacts the terminals.

Fuse

Before replacing the fuse, check the current ratings of the electrical accessories and ensure that there are no abnormalities.

⚠ WARNING


- Never use a fuse with a different rating from that specified.
Serious damage to the electrical system or a fire may result.
- Disconnect the battery cable at the battery negative (–) terminal before replacing the fuse.
Failure to do so may cause a short circuit.

NOTICE


If the fuse is blown, check the cause, then replace the fuse with a spare fuse of the same rated capacity. Unless the cause is found, the fuse may blow again.

<Replacement>

SPARE FUSES (7.5 A, 10 A, 15 A, 30 A) **MAIN FUSES** (7.5 A, 10 A, 15 A, 30 A)

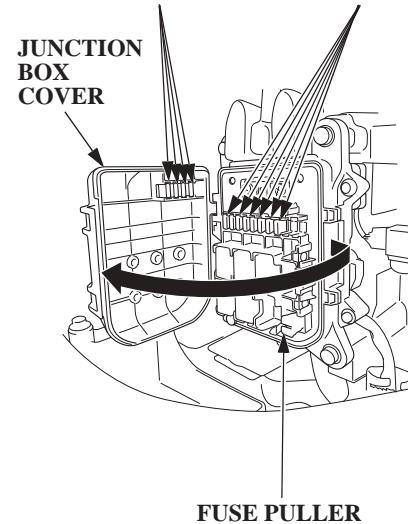

1. Stop the engine.
2. Disconnect the battery (see page 128).
3. Remove the engine cover (see page 56).
4. Open the junction box cover.

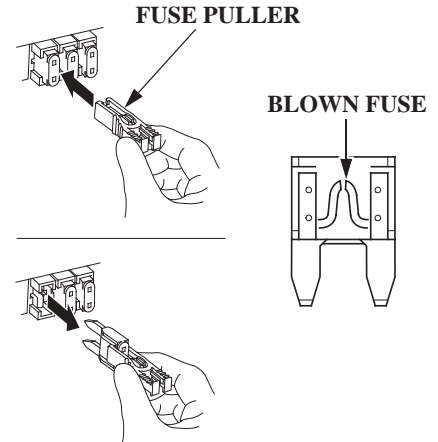

5. Pull the old fuse out of the clip with the fuse puller supplied in the fuse box.
6. Push a new fuse into the clips.

MAINTENANCE


Mechanical wire type

Fuse No.	Rating	Component(s) or Circuit(s) Protected
1	150 A	ACG, Battery
4	30 A	STARTER SOLENOID, AND RELAYS IN JUNCTION BOX
5	10 A	Power tilt relay, Warning buzzer, Indicator, Meter
8	10 A	Fuel pump (High pressure side)
9	15 A	Injector, ECU
10	10 A	DLC, Fuel pump (Low pressure side)
11	15 A	PTC

DBW type

Fuse No.	Rating	Component(s) or Circuit(s) Protected
1	150 A	ACG, Battery
4	30 A	STARTER SOLENOID, AND RELAYS IN JUNCTION BOX
5	7.5 A	REMOTE CONTROL SYSTEM
6	30 A	SHIFT ACTUATOR
7	15 A	THROTTLE BODY
8	10 A	Fuel pump (High pressure side)
9	15 A	Injector, ECU
10	10 A	DLC, Fuel pump (Low pressure side)
11	15 A	PTC

ACG Fuse

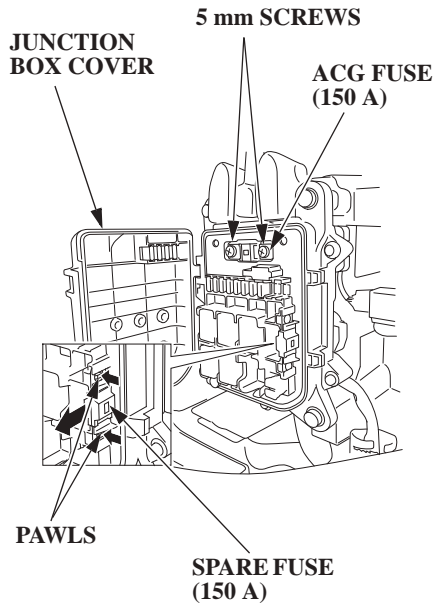

<Replacement>


A spare fuse is located on the junction box.

Push two pawls, then pull out the spare fuse.

1. Stop the engine.
2. Disconnect the battery (see page 128).
3. Remove the engine cover (see page 56).
4. Open the junction box cover.
5. Remove the old fuse by removing two 5 mm screws.
6. Install a new fuse by tightening two 5 mm screws.
7. After finishing replacement, close the junction box cover.

MAINTENANCE

Propeller

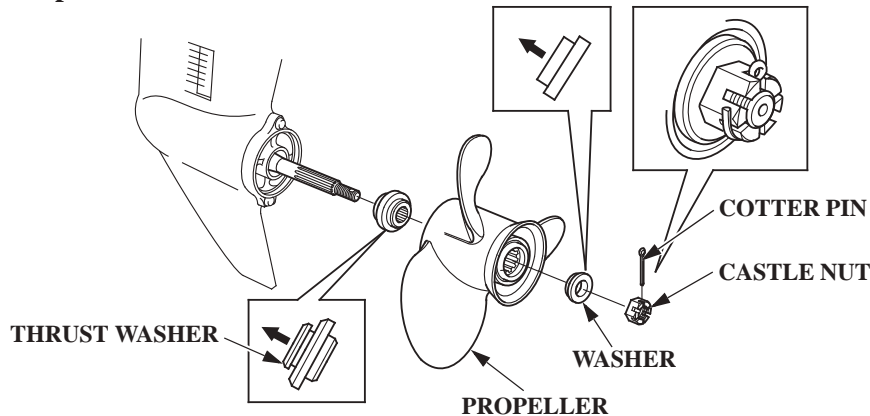

If the propeller is damaged by striking a rock, or other obstacle, replace the propeller as follows.

⚠ WARNING

- Before replacing the propeller, remove the emergency stop switch clip from the emergency stop switch to prevent any possibility of the engine being started while you are working with the propeller.
- The propeller blades may have sharp edges, so wear heavy gloves to protect your hands.

Replacement

1. Remove the cotter pin then remove the 18 mm castle nut, washer, propeller and thrust washer.
2. Install the new propeller in the reverse sequence to removal.
3. Tighten the castle nut with your hand first until the propeller has no play. Then, tighten the castle nut again with a tool until the groove in the castle nut aligns with the cotter pin hole. (Note that this tool is not included in the tools that come together with the outboard motor.)

TIGHTENING TORQUE:

1 N·m (0.1 kgf·m, 0.7 lbf·ft)

UPPER LIMIT OF TORQUE:

44.1 N·m (4.5 kgf·m, 33 lbf·ft)

4. Be sure to replace the cotter pin with a new one.

NOTE:

- Install the thrust washer with the grooved side toward the gear case.
- Use a genuine TOHATSU cotter pin and bend the pin ends as shown.

Inspect After Operating

1. Stop the engine and remove the engine cover (see page 56).
2. Confirm the cooling water leakage from the engine.

Submerged Outboard Motor

A submerged outboard motor must be serviced immediately after it is recovered from the water in order to minimize corrosion.


If there is a TOHATSU outboard motor dealership nearby, take the outboard motor immediately to the dealer. If you are far from a dealership, proceed as follows:

1. Remove the engine cover (see page 56), and rinse the outboard motor with fresh water to remove salt water, sand, mud, etc.

NOTICE

If the outboard motor was running when it submerged, there may be mechanical damage, such as bent connecting rods. If the engine binds when cranked, do not attempt to run the outboard motor until it has been repaired.

2. Change the engine oil (see page 116).
3. Remove the spark plugs (see page 118). Operate the starter to expel water from the engine's cylinder.

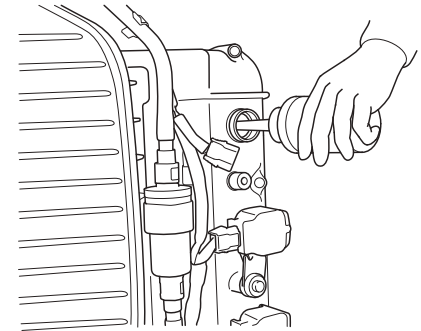

4. Put a teaspoon of engine oil into each spark plug hole to lubricate the inside of the cylinders. Reinstall the spark plugs.
5. Install the engine cover and lock the latch securely (see page 56).

MAINTENANCE

6. Attempt to start the engine.

- If the engine fails to start, remove the spark plugs, clean and dry the electrodes, then reinstall the spark plugs and attempt to start the engine again.
- If there was water in the engine crankcase, or the used engine oil showed signs of water contamination, then a second engine oil change should be performed after running the engine for 1/2 hour.
- If the engine starts, and no mechanical damage is evident, continue to run the engine for 1/2 hour or longer (be sure the water level is at least 100 mm (4 in) above the anticavitation plate).

- ### 7. As soon as possible, take the outboard motor to a TOHATSU outboard motor dealer for inspection and service.

For longer service life of the outboard motor, have your outboard motor serviced by an authorized TOHATSU outboard motor dealer before storage. However, the following procedures can be performed by you, the owner, with a minimum of tools.

Fuel

NOTE:

Gasoline spoils very quickly depending on factors such as light exposure, temperature and time. In worst cases, gasoline can be contaminated within 30 days. Using contaminated gasoline can seriously damage the engine (fuel system clogged, valve stuck). Such damage due to spoiled fuel is disallowed from coverage by the warranty.

To avoid this please strictly follow these recommendations:

- Only use specified gasoline (see page 59).
- Use fresh and clean gasoline.

- To slow deterioration, keep gasoline in a certified fuel container.
- If long storage (more than 30 days) is foreseen, drain fuel tank and vapor separator.


STORAGE

Vapor Separator Draining

⚠ WARNING

Gasoline is extremely flammable, and gasoline vapor can explode, causing serious injury or death. Do not smoke or allow flames or sparks in your working area.

- Be careful not to spill fuel. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, make sure the area is dry before storing or transporting the outboard motor.
- Do not smoke or allow flames or sparks where fuel is drained or stored.
- **KEEP OUT OF REACH OF CHILDREN.**

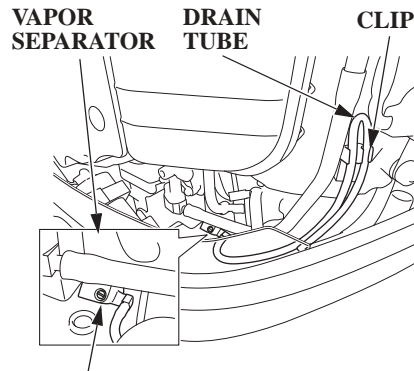

DRAIN BOLT

1. Unhook the drain tube from the clip on the lower left of the head cover.
2. Set the end of the tube toward the outside of the engine undercase.

3. Loosen the vapor separator drain bolt by using a commercially available flat tip screwdriver.
4. Tilt up the outboard motor.
5. Tilt down the outboard motor, and drain the vapor separator.
6. After draining thoroughly, tighten the drain bolt securely.
7. Clip the drain tube on the head cover.

Battery Storage

NOTICE


Battery handling differs according to the type of the battery and the instructions described below might not be applicable to the battery of your outboard motor. Refer to the battery manufacturer's instructions.

⚠ WARNING

Batteries produce explosive gases: If ignited, an explosion can cause serious injury or blindness. Provide adequate ventilation when charging.


- **CHEMICAL HAZARD:** Battery electrolyte contains sulfuric acid. Contact with eyes or skin, even through clothing, may cause severe burns. Wear a faceshield and protective clothing.

- Keep flames and sparks away, and do not smoke in the area. **ANTIDOTE:** If electrolyte gets into your eyes, flush thoroughly with warm water for at least 15 minutes and call a physician immediately.
- **POISON:** Electrolyte is poison. **ANTIDOTE**
 - External: Flush thoroughly with water.
 - Internal: Drink large quantities of water or milk. Follow with milk of magnesia or vegetable oil, and call a physician immediately.
- **KEEP OUT OF REACH OF CHILDREN.**

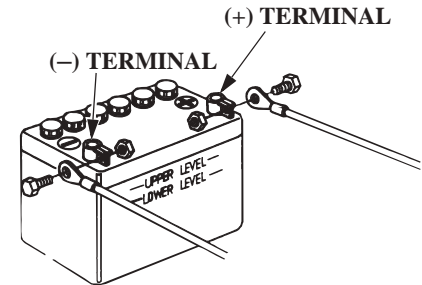


1. Disconnect the battery cable at the battery negative (-) terminal, then at the battery positive (+) terminal.
2. Remove the battery and clean the battery terminals and battery cable terminals with a wire brush or sand paper.
Clean the battery with a solution of baking soda and warm water, taking care not to get the solution of water in the battery cells. Dry the battery thoroughly.

STORAGE

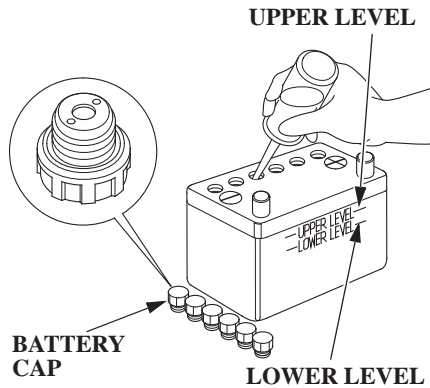


3. Fill the battery with distilled water to the upper level line. Never overfill the battery.
4. Store the battery on a level surface in a cool, dry, well ventilated place out of direct sunlight.
5. Once a month, check the specific gravity of the electrolyte and recharge as required to prolong battery life.

Outboard Motor Position

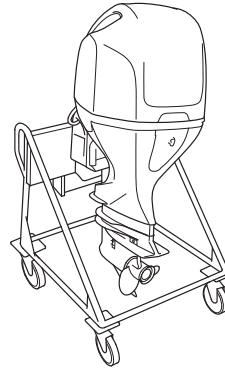

Transport and store the outboard motor either vertically, as shown above. Attach the stern bracket to stand and secure the outboard motor with bolts and nuts. Store the outboard motor in a well-ventilated area free from direct sunlight and humidity.

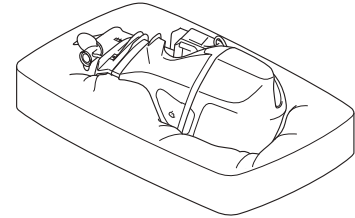

⚠ CAUTION

Do not place the outboard motor on its side during a prolonged period of storage. If you are obliged to place the outboard motor on its side, drain the engine oil, protect the outboard motor by wrapping it with the urethane material or the blanket as shown.

To protect the environment, do not dispose of this product, battery, engine oil, etc. carelessly by leaving them in the waste. Observe the local laws and regulations or consult your dealer for disposal.

15. TROUBLESHOOTING

WARNING SYSTEM COMES ON

SYMPTOM	POSSIBLE CAUSE	REMEDY
Overheat warning system comes on: <ul style="list-style-type: none"> • Overheat indicator comes on. • Overheat warning buzzer sounds. • Engine speed decreases and stops at last. • Engine speed cannot be increased by opening the throttle. • Engine will stop in 20 seconds after engine speed is limited. 	Cooling water intake port clogged.	Clean the cooling water intake port.
	Spark plugs have improper heat range.	Replace the spark plugs (see page 118).
	<ul style="list-style-type: none"> • Faulty water pump. • Thermostat clogged. • Faulty thermostat. • Cooling water passage clogged. • Exhaust gas invades cooling system. 	Consult with an authorized TOHATSU outboard motor dealer.
Oil pressure warning system comes on: <ul style="list-style-type: none"> • Oil pressure indicator does not come on. • Oil pressure warning buzzer sounds. • Engine speed decreases. • Engine speed cannot be increased by opening the throttle. 	Shortage of engine oil	Add engine oil to the specified level (see page 58).
	Improper engine oil is used.	Change the engine oil (see page 116).

TROUBLESHOOTING


SYMPTOM	POSSIBLE CAUSE	REMEDY
Water separator warning system comes on: <ul style="list-style-type: none">• Water separator warning buzzer sounds.	Water is accumulated in the water separator.	Drain the water separator (see page 124). Check the fuel tank and fuel line for water accumulation. If the buzzer sounds again, consult with an authorized TOHATSU outboard motor dealer.
PGM-FI warning system comes on: <ul style="list-style-type: none">• PGM-FI indicator comes on.• PGM-FI warning buzzer sounds intermittently.	PGM-FI warning system is faulty.	Consult with an authorized TOHATSU outboard motor dealer.
ACG warning system comes on: <ul style="list-style-type: none">• ACG indicator comes on.• ACG warning buzzer sounds intermittently.	Battery voltage is too high or low.	Check the battery (see page 127).
	Faulty ACG.	Consult with an authorized TOHATSU outboard motor dealer.

TROUBLESHOOTING

Emergency Gear Shifting (for DBW type)

If the gear cannot be shifted, perform shift operation manually according to the following procedures and return to port at possible engine speed.

1. Set the remote control lever in the NEUTRAL position (see page 20-21).
2. Stop the engine (see page 105).
3. Remove the engine cover (see page 56).
4. Shift gear into neutral by inserting the phillips screwdriver with the grip of the tool kit (see page 113) into the hole of the shift actuator and moving the shaft.

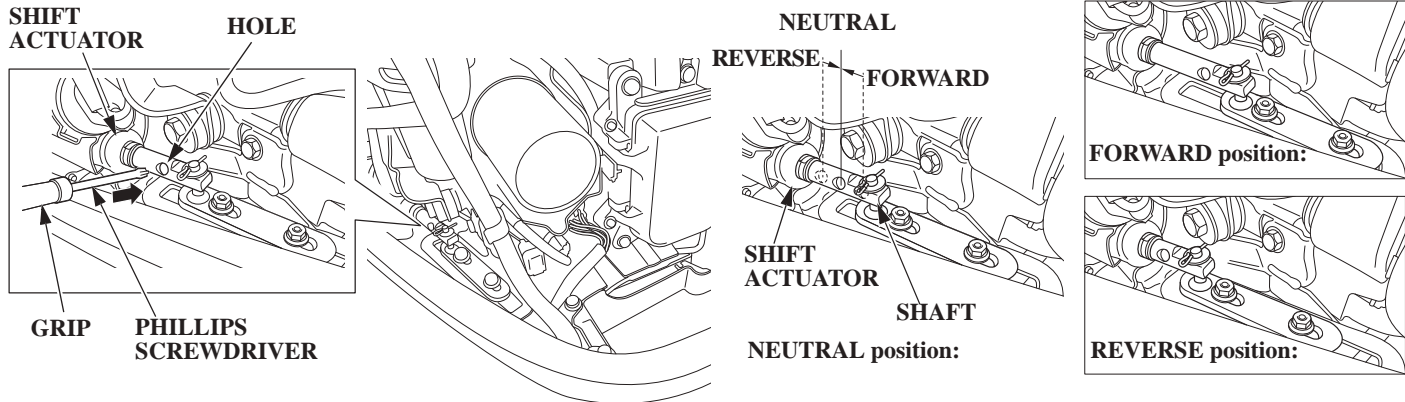

5. Start the engine (see page 66).
 6. Shift gear into “F” (Forward) or “R” (Reverse) by moving the shaft of the shift actuator with the phillips screwdriver with the grip of the tool kit.
- After returning to port, stop the engine and anchor the boat.

16. SPECIFICATIONS

MODEL	BFT200D		
Description Code	BBRJ		
Type	LRU	XRU XRD	XCRU
Overall length	948 mm (37.3 in)		
Overall width	660 mm (26.0 in)		
Overall height	1,789 mm (70.4 in)	1,916 mm (75.4 in)	
Transom height (when Transom angle at 12°)	508 mm (20.0 in)	635 mm (25.0 in)	
Dry mass [weight]*	279 kg (615 lbs)	284 kg (626 lbs)	285 kg (628 lbs)
Rated power	147.1 kW (200 PS)		
Full throttle range	5,000 – 6,000 min ⁻¹ (rpm)		
Engine type	4 stroke OHC 6-cylinder (V6)		
Displacement	3,583 cm ³ (218.6 cu-in)		
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)		
Remote control steering system	Motor-mounted		
Starter system	Electric starter		
Ignition system	Full transistor battery		

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12 V – 60 A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK) IZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

* Without battery cable, with propeller

This TOHATSU outboard is power rated in accordance with ISO8665 (propeller shaft output).

SPECIFICATIONS

MODEL	BFT225D	
Description Code	BBPJ	
Type	XRU XRD	XCRU
Overall length	948 mm (37.3 in)	
Overall width	660 mm (26.0 in)	
Overall height	1,916 mm (75.4 in)	
Transom height (when Transom angle at 12°)	635 mm (25.0 in)	
Dry mass [weight]*	286 kg (631 lbs)	287 kg (633 lbs)
Rated power	165.5 kW (225 PS)	
Full throttle range	5,000 – 6,000 min ⁻¹ (rpm)	
Engine type	4 stroke OHC 6-cylinder (V6)	
Displacement	3,583 cm ³ (218.6 cu-in)	
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)	
Remote control steering system	Motor-mounted	
Starter system	Electric starter	
Ignition system	Full transistor battery	

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard (GL-4) SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12 V – 60 A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK) IZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

* Without battery cable, with propeller

This TOHATSU outboard is power rated in accordance with ISO8665 (propeller shaft output).

SPECIFICATIONS

MODEL	BFT250D	
Description Code	BBNJ	
Type	XRU XRD	XCRU
Overall length	948 mm (37.3 in)	
Overall width	660 mm (26.0 in)	
Overall height	1,916 mm (75.4 in)	
Transom height (when Transom angle at 12°)	635 mm (25.0 in)	
Dry mass [weight]*	286 kg (631 lbs)	287 kg (633 lbs)
Rated power	183.9 kW (250 PS)	
Full throttle range	5,300 – 6,300 min ⁻¹ (rpm)	
Engine type	4 stroke OHC 6-cylinder (V6)	
Displacement	3,583 cm ³ (218.6 cu-in)	
Spark plug gap	1.0 – 1.1 mm (0.039 – 0.043 in)	
Remote control steering system	Motor-mounted	
Starter system	Electric starter	
Ignition system	Full transistor battery	

Lubrication system	Trochoid pump pressure lubrication
Specified oil	Engine: API standard SG, SH, SJ, SL SAE 10W-30 Gear case: API standard GL-4 SAE 90 Hypoid gear oil
Oil capacity	Engine: Without oil filter replacement: 7.6 L (8.0 US qt, 6.7 Imp qt) With oil filter replacement: 7.8 L (8.2 US qt, 6.9 Imp qt) Gear case: 1.47 L (1.55 US qt, 1.29 Imp qt)
D.C. output	12V – 60A
Cooling system	Water cooling with thermostat
Exhaust system	Underwater exhaust
Spark plugs	ZFR6K-11E (NGK) IZFR6K-11E (NGK)
Fuel pump	Electromagnetic type
Fuel	Unleaded gasoline (91 research octane, 86 pump octane, or higher)
Gear change	Forward – Neutral – Reverse (Dog clutch)
Steering angle	30° right and left
Tilt up angle	68° (when Transom angle is 12°)
Trim angle	– 4° to 16° (when Transom angle is 12°)

* Without battery cable, with propeller

This TOHATSU outboard is power rated in accordance with ISO8665 (propeller shaft output).

SPECIFICATIONS

Noise and Vibration

MODEL	BFT200D	BFT225D	BFT250D
CONTROL SYSTEM	R (Remote control)	R (Remote control)	R (Remote control)
Sound pressure level at operator's ears (2006/42/EC, ICOMIA 39-94)	83 dB (A)	84 dB (A)	85 dB (A)
----- Uncertainty	2 dB (A)	2 dB (A)	2 dB (A)
Measured sound power level (Reference to EN ISO3744)	95 dB (A)	95 dB (A)	97 dB (A)
----- Uncertainty	2 dB (A)	2 dB (A)	2 dB (A)
Vibration level at hand arm (2006/42/EC, ICOMIA 38-94)	–	–	–
----- Uncertainty	–	–	–

Reference to: ICOMIA Standard: as it specifies the engine operating conditions and measurement conditions.

Compass safe distance

MODEL	BFT200D	BFT225D	BFT250D
Compass safe distance (IEC 60945)	400 mm (15.8 in)		

For Drive by Wire (DBW) type only: DBW REMOTE CONTROL BOX, KEY SWITCH PANEL, CONTROL UNIT

17. "EC DECLARATION OF CONFORMITY" CONTENT OUTLINE

1) EC-DECLARATION OF CONFORMITY

2) THE UNDERSIGNED, (13), REPRESENTING THE MANUFACTURER, HEREWITH DECLARES THAT THE PRODUCT IS IN CONFORMITY WITH THE PROVISIONS OF THE FOLLOWING EC-DIRECTIVES

2006/42/EC, 2014/30/EU

3) REFERENCE TO HARMONIZED STANDARDS:

4) DESCRIPTION OF THE MACHINERY

5) Generic denomination: Outboard engine 6) Function: Propulsion system 7) MAKE: Honda/Tohatsu

8) TYPE:

9) SERIAL NUMBER:

10) Manufacturer:

Honda Motor Co., Ltd.
2-1-1 Minamiaoyama Minato-ku Tokyo 107-8556 Japan

11) Authorized representative and able to
compile the technical documentation:

Honda Motor Europe Ltd.
Cain Road
Bracknell, RG12 1HL
United Kingdom

12) SIGNATURE:

13) NAME:

13)
15)

14) TITLE

16) DATE:

16)
17)

17) PLACE:

“EC DECLARATION OF CONFORMITY” CONTENT OUTLINE

<p>1) DECLARATION CE DE CONFORMITE 2) LE SOUSSIGNÉ, (13), REPRÉSENTANT DU CONSTRUCTEUR, DÉCLARE PAR LA PRÉSENTE QUE LE PRODUIT EST CONFORME AUX DISPOSITIONS DES DIRECTIVES CE SUIVANTES 3) RÉFERENCE AUX NORMES HARMONISÉES 4) DESCRIPTION DE MACHINE 5) Denomination générique: moteur hors-bord 6) Fonction : Système de propulsion 7) MARQUE 8) TYPE 9) NUMÉRO DI SERIE 10) CONSTRUCTEUR 11) Représentant autorisé et en charge des éditions de documentation techniques 12) SIGNATURE 13) NOM 14) TITRE 15) Directeur Qualite 16) DATE 17) LIEU</p>	français (FRENCH)
<p>1) DICHIARAZIONE DI CONFORMITA' CE 2) IL SOTTOSCRITTO, (13), RAPPRESENTANTE DEL COSTRUTTORE, DICHIARA QUI DI SEGUITO CHE IL PRODOTTO E' CONFORME A QUANTO PREVISTO DALLE SEGUENTI DIRETTIVE COMUNITARIE 3) RIFERIMENTO ALLE NORME ARMONIZZATE 4) DESCRIZIONE DELLA MACCHINA 5) Denominazione generica: MOTORE FUORIBORDO 6) Funzione : Sistema di propulsione 7) MARCA 8) TIPO 9) NUMERO DI SERIE 10) FABBRICANTE 11) Rappresentante autorizzato e competente per la compilazione della documentazione tecnica 12) FIRMA 13) NOME 14) TITOLO 15) DIRETTORE DELLA QUALITA' 16) ADDÌ 17) LUOGO</p>	italiano (ITALIAN)
<p>1) EG-KONFORMITÄTSEERKLÄUNG 2) DER UNTERZEICHNER, (13), DER DEN HERSTELLER VERTRITT, ERKLÄRT HIERMIT, DAB DAS PRODUKT IN ÜBEREINSTIMMUNG MIT DEN BESTIMMUNGEN DER NACHSTEHENDEN EG-RICHTLINIEN IST 3) VERWEIS AUF HARMONISIERTE NORMEN 4) BESCHREIBUNG DER MASCHINE 5) Allgemeine Bezeichnung : Außenbordmotor 6) Funktion : Antriebsart 7) FABRIKAT 8) TYP 9) SERIEN NUMMER 10) HERSTELLER 11) Bevollmächtigter und in der Position, die technische Dokumentation zu erstellen 12) UNTERSCHRIFT 13) NAME 14) TITEL 15) Qualitätssicherung 16) DATUM 17) ORT</p>	deutsch (GERMAN)
<p>1) EG-VERKLARING VAN OVEREENSTEMMING 2) ONDERGETEKENDE, (13), VERTEGENWOORDIGER VAN DE FABRIKANT, VERKLAART HIERMEE DAT HET PRODUCT VOLDOET AAN DE BEPALINGEN VAN DE VOLGENDE EG-RICHTLIJNEN 3) REFERENTIE NAAR GEHARMONISEERDE NORMEN 4) BESCHRIJVING VAN DE MACHINE 5) Algemene benaming : buitenboordmotor 6) Functie : Aandrijfsysteem 7) FABRIKAT 8) TYPE 9) SERIEN NUMMER 10) FABRIKANT 11) Gemachtigde van de fabrikant en in staat om de technische documentatie samen te stellen 12) HANDTEKENING 13) NAAM 14) TITEL 15) Directeur Kwaliteitszorg 16) DATUM 17) PLAATS</p>	nederlands (DUTCH)
<p>1) ΕΚ-ΔΗΛΩΣΗ ΕΝΑΡΜΟΝΙΣΗΣ 2) Ο ΥΠΟΓΡΑΦΩΝ, (13), ΕΚΠΡΟΣΩΠΟΥΝΤΑΣ ΤΟΝ ΚΑΤΑΣΚΕΥΑΣΤΗ, ΔΙΑ ΤΟΥ ΠΑΡΟΝΤΟΣ ΔΗΛΩΝΕΙ ΟΤΙ ΤΟ ΠΡΟΪΟΝ ΒΡΙΣΚΕΤΑΙ ΣΕ ΕΝΑΡΜΟΝΙΣΗ ΜΕ ΤΙΣ ΠΡΟΒΛ ΕΦΕΙΣ ΤΩΝ ΚΑΤΩΘΙ ΟΔΗΓΙΩΝ ΤΗΣ ΕΕ 3) ΠΑΡΑΠΟΜΠΗ ΣΤΑ ΕΝΑΡΜΟΝΙΣΜΕΝΑ ΠΡΟΤΥΠΑ 4) ΠΕΡΙΓΡΑΦΗ ΜΗΧΑΝΗΜΑΤΟΣ 5) Γενική ονομασία : Εξωλέμβια μηχανή 6) Λειτουργία : Σύστημα Πρόωσης 7) ΕΡΓΟΣΤΑΣΙΟ ΚΑΤΑΣΚΕΥΗΣ 8) ΤΥΠΟΣ 9) ΑΡΙΘΜΟΣ ΣΕΙΡΑΣ 10) ΚΑΤΑΣΚΕΥΑΣΤΗΣ 11) Εξουσιοδοτημένος αντιπρόσωπος και είναι σε θέση να καταρτίσει τον τεχνικό φάκελο 12) ΥΠΟΓΡΑΦΗ 13) ΟΝΟΜΑ 14) ΤΙΤΛΟΣ 15) Υπεύθυνος Ποιότητας 16) ΗΜΕΡΟΜΗΝΙΑ 17) ΤΟΠΟΣ</p>	Ελληνικά (GREEK)
<p>1) EF OVERENSSTEMMELSESERKLÆRING 2) UNDERTEGNEDE, (13), DER REPRÆSENTERER FABRIKANTEN, ERKLÆRER HERMED AT PRODUKTET ER I OVERENSSTEMMELSE MED BESTEMMELSERNE I FØLGE EF DIREKTIVERNE 3) REFERENCE TIL HARMONISEREDE STANDARDER 4) BESKRIVELSE AF MASKINEN 5) FÆLLESBETEGNELSE : Utenbordsmotor 6) ANVENDELSE : Fremdrivningssystem 7) FABRIKANT 8) TYPE 9) SERIEN UMMER 10) FABRIKANT 11) AUTORISERET REPRÆSENTANT OG I STAND TIL AT UDARBEJDE DEN TEKNISKE DOKUMENTATION 12) SIGNATURE 13) NAVN 14) TITEL 15) Kvalitets Leder 16) DATO 17) STED</p>	dansk (DANISH)

“EC DECLARATION OF CONFORMITY” CONTENT OUTLINE

<p>1) DECLARACIÓN DE CONFORMIDAD 2) EL ABAJO FIRMANTE, (13), EN REPRESENTACIÓN DE FABRICANTE, DECLARA QUE EL PRODUCTO ES CONFORME CON LAS DISPOSICIONES DE LAS SIGUIENTES DIRECTIVAS CE 3) REFERENCIA A ESTÁNDARES ARMONIZADOS 4) DESCRIPCIÓN DE LA MAQUINARIA 5) Denominación genérica : Motor fueraborda 6) Función : Sistema de propulsión 7) MARCA 8) TIPO 9) NUMERO DE SERIE 10) FABRICANTE 11) Representante autorizado que puede compilar el expediente técnico 12) FIRMA 13) NOMBRE 14) CARGO 15) Director de calidad 16) FECHA 17) LUGAR</p>	español (SPANISH)
<p>1)DECLARAÇÃO CE DE CONFORMIDADE 2) O ABAIXO ASSINADO, (13), EM REPRESENTAÇÃO DO FABRICANTE, PELA PRESENTE DECLARA QUE O PRODUTO ESTÁ EM CONFORMIDADE COM O ESTABELECIDO NAS SEGUINTE DIRECTIVAS COMUNITÁRIAS 3) REFERÊNCIA AS NORMAS HARMONIZADAS 4) DESCRIÇÃO DA MÁQUINA 5) Denominação genérica : Motor fora de borda 6) Função : Sistema propulsor 7) MARCA 8) TIPO 9) NÚMERO DE SÉRIE 10) FABRICANTE 11) Mandatário com capacidade para compilar documentação técnica 12) ASSINATURA 13) NOME 14) TÍTULO 15) Director de Qualidade 16) DATA 17) LOCAL</p>	português (PORTUGUESE)
<p>1) EY-VAATIMUSTENMUKAISUUSVAKUUTUS 2) ALLEKIRJOITANUT, (13), JOKA EDUSTAA VALMISTAJAA, VAKUUTTA TÄTEN, ETTÄ TUOTE ON SEURAAVIEN EU-DIREKTIIVIN VAATIMUSTEN MUKAINEN 3) VIITTAUS YHTEISIIN STANDARDEIHIN 4) KUVAUS LAITTEESTA 5) Yleisarvomäärä : Peramoottori 6) Toiminto : Työntöjärjestelmä 7) MERKKI 8) MALLI 9) SARJANUMERO 10) VALMISTAJA 11) Valmistajan edustaja ja teknisten dokumenttien laatija 12) ALLEKIRJOITUS 13) NIMI 14) TITTELI 15) Laaturäällikkö 16) PÄIVÄMÄÄRÄ 17) PAIKKA</p>	suomi / suomen kieli (FINNISH)
<p>1) ЕО-ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ 2) ДОЛУ ПОДШИСАЛИЯТ СЕ (13), ПРЕДСТАВЛЯВАЩ ДИСТРИБУТОРА, ДЕКЛАРИРА, ЧЕ ПРОДУКТА СЪОТВЕТСТВА НА ИЗСКВАНИЯТА НА СЛЕДНИТЕ ЕВРОПЕЙСКИ ДИРЕКТИВИ 3) СЪОТВЕТСТВИЕ С ХАРМОНИЗИРАНИТЕ СТАНДАРТИ 4) ОПИСАНИЕ НА АРТИКУЛА 5) Общо наименование : ИЗВЪН БОРДОВИ ДВИГАТЕЛ 6) Функция : Задвижваща система 7) МАРКА 8) ТИП 9) СЕРИЕН НОМЕР 10) ПРОИЗВОДИТЕЛ 11) Упълномощен представител и отговорник за съставяне на техническа документация 12) ПОДПИС 13) ИМЕ 14) ТИТЛА 15) МЕНИДЖЪР НА КАЧЕСТВОТО 16) ДАТА 17) МЯСТО</p>	български (BULGARIAN)
<p>1) EG-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE 2) UNDERTECKNAD, (13), REPRESENTERANDE TILLVERKARE, FÖRSÄKRAR HÄRMED ATT PRODUKTEN ÖVERENSSTÄMMER MED BESTÄMMELSERNA I FÖLJANDE EG-DIREKTIVE 3) REFERERANDE TILL HARMONISERADE STANDARDER 4) BESKRIVNING AV UTRUSTNINGEN 5) Allmän benämning : Utomborotsmotor 6) Funktion : Framdrivningssystem 7) MERKKI 8) TYPBETECKNING 9) SERIENUMER 10) TILLVERKARE 11) Auktoriserad representant och ska kunna sammanställa teknisk dokumentationen. 12) SIGNATUR 13) NAMN 14) TITEL 15) Kvalitetschef 16) DATUM 17) ORT</p>	svenska (SWEDISH)
<p>1) DEKLARACJA ZGODNOŚCI WE 2) NIŻEJ PODPISANY (13), REPREZENTUJĄCY PRODUCENTA, DEKLARUJE Z CAŁĄ ODPOWIEDZIALNOŚCIĄ, ŻE PRODUKT SPEŁNIA WYMAGANIA ZAWARTE W NASTĘPUJĄCYCH DYREKTYWACH UNIJNYCH 3) ZASTOSOWANE NORMY ZHARMONIZOWANE 4) OPIS URZĄDZENIA 5) Ogólne określenie : Silnik zaburtowy 6) Funkcja : Układ napędowy 7) MARKA 8) TYP 9) NUMERY SERYJNE 10) PRODUCENT 11) Upoważniony Przedstawiciel oraz osoba upoważniona do przygotowania dokumentacji technicznej 12) PODPIS 13) NAZWISKO 14) TYTUŁ 15) Menadżer Jakości 16) DATA 17) MIEJSCE</p>	polski (POLISH)

“EC DECLARATION OF CONFORMITY” CONTENT OUTLINE

<p>1) MEGFELELOSEGI NYILATKOZAT 2) ALULÍROTT (13), MINT A GYARTÓ KÉPVISELŐJE NYILATKOZIK, HOGY AZ ALABBI TERMÉK MINDENBEN MEGFELEL A KÖVETKEZŐ EC ELŐÍRÁSOK RENDELKEZÉSEINEK: 98/37/EC, 89/336/EEC-93/68/EC: 3) ÖSSZHANGBAN A KÖV. SZABVÁNYOKKAL 4) A GÉP LEÍRÁSA 5) Általános megnevezés: KÜLSŐ CSÓNAKMOTOR 6) Funkció: Hajtás rendszer 7) GYÁRTOTTA 8) TÍPUS 9) SORSZÁM 10) GYÁRTÓ 11) Meghatalmazott képviselője és képes összeállítani a műszaki dokumentációt. 12) ALÁÍRÁS 13) NÉV 14) BEOSZTÁS 15) MINŐSÉGI IGAZGATÓ 16) KELTEZÉS DÁTUMA 17) KELTEZÉS HELYE</p>	magyar (HUNGARIAN)
<p>1) Prohlášení o shodě 2) ZÁSTUPCE VÝROBCE, (13), SVÝM PODPÍSEM POTVRZUJE, ŽE DANÝ VÝROBEK JE V SOULADU S NÁSLEDUJÍCÍMI SMĚRNICEMI A NORMAMI EVROPSKÉHO SPOLEČENSTVÍ: 3) ODKAZ NA HARMONIZOVANÉ NORMY: 4) POPIS VÝROBKU 5) Všeobecné označení: ZÁVĚSNÝ LODNÍ MOTOR 6) Funkce: Pohonný systém 7) ZNAČKA: 8) TYP: 9) VÝROBNÍ ČÍSLO: 10) VÝROBCE: 11) Zplnomocněný zástupce a osoba pověřená kompletačí technické dokumentace 12) PODPIS: 13) JMÉNO: 14) POZICE 15) Manažer kvality 16) DATUM: 17) MÍSTO:</p>	čeština (CZECH)
<p>1) ES VYHLÁSENIE O ZHODE 2) DOLUPODPÍSANÝ, (13), ZÁSTUPUJÚCI VÝROBCU, TÝMTO DEKLARUJE, ŽE PRODUKT JE V SÚLADE S USTANOVENIAMÍ NÁSLEDOVNÝCH SMERNÍC ES 3) REFERENCIA K HARMONIZOVANÝM ŠTANDARDOM 4) IDENTIFIKÁCIA STROJOV 5) Druhové označenie: ZÁVESNÝ LODNÝ MOTOR 6) Funkcia: Systém pohonu 7) VÝROBCA/ZNAČKA 8) TYP 9) SÉRIOVÉ ČÍSLO 10) VÝROBCA 11) Autorizovaný zástupca schopný zostaviť technickú dokumentáciu 12) PODPIS 13) MENO 14) POZÍCIA 15) MANAŽÉR KVALITY 16) DÁTUM 17) MIESTO</p>	slovenčina (SLOVAK)
<p>1) EF SAMSVARSÆRKLERING 2) UNDERTEGNEDE, (13), SOM REPRESENTERER FABRIKANTEN, ERKLÆRER HERVED AT PRODUKTET ER I OVERENSSTEMMELSE MED BESTEMMELSENE I FØLGENDE EU DIREKTIV 3) REFERANSER TIL HARMONISERED E STANDARDER 4) BESKRIVELSE AV MASKINEN 5) Felles benevnelse: Utenbordsmotor 6) Funksjon: Fremdrifts system 7) FABRIKANT 8) TYPE 9) SERIE NUMMER 10) FABRIKANT 11) Autorisert representant og i stand til å utarbeide den tekniske dokumentasjonen 12) SIGNATUR 13) NAVN 14) TITTEL 15) Kvalitetssjef 16) DATO 17) STED</p>	norsk (NORWEGIAN)
<p>1) DECLARATIE DE CONFORMITATE. 2) SUBSEMNATUL, (13), REPREZENTAND PE PRODUCATOR, DECLAR PRIN PREZE NTA CA PRODUSUL ESTE IN CONFORMITATE CU PREVEDERILE URMATOARELOR DIRECTIVE CE 3) REFERIRE LA STANDARDELE ARMONIZATE: 4) DESCRIEREA ECHIPAMENTULUI 5) Denumire generica: MOTOR IN AFARA BORDULUI (EXTERN) 6) Domeniu de utilizare: Sistem de propulsie 7) MARCA 8) TIPUL 9) NUMAR DE SERIE 10) PRODUCATOR 11) Reprezentant autorizat și abilitat să realizeze documentație tehnică 12) SEMNATURA 13) NUME 14) TITLUL 15) DIRECTOR DE CALITATE 16) DATA 17) LOCATIE</p>	română (ROMANIAN)
<p>1) EU VASTAVUSDEKLARATSIOON 2) ALLKIRJUTANU, (13), ESINDADES TOOTJAT, DEKLAREERIB SIINKOHAL, ET TOODE ON VASTAVUSES JÄRGMISTE EC DIREKTIIVIDE SÄTETEGA 3) VIIDE ÜHTLUSTATUD STANDARDITELE: 4) MEHHAANISM I KIRJELDUS 5) Üldnimetus: Pardaväliline mootor 6) Funktsioon: Tõukurstüsteem 7) VALMISTAJA: 8) TÜÜP: 9) SEERIANUMBER: 10) TOOTJA: 11) Volitatud esindaja, kes on pädev täitma tehnilist dokumentatsiooni 12) ALLKIRI: 13) NIMI: 14) AMET 15) Kvaliteedijuht 16) KUUPÄEV: 17) KOHT:</p>	eesti (ESTONIAN)

“EC DECLARATION OF CONFORMITY” CONTENT OUTLINE

1) EK ATBILSTĪBAS DEKLARĀCIJA 2) ZEMĀK MINĒTAIS, (13), KĀ RAŽOTĀJA PĀRSTĀVIS AR ŠO APSTIPRINA, KA ŠIS PRODUKTS PILNĪBĀ ATBILST VISIEM STANDARTIEM, KAS ĀTRUNĀTI SEKOJOŠAJĀS EC-DIREKTĪVĀS 3) Atsaucoties uz saskaņotajiem standartiem 4) Iekārtas apraksts 5) Vispārējais nosaukums : Piekarināmais laivas dzinējs 6) Funkcija : Virzošā spēka sistēma 7) Preču zīme 8) Tips 9) Sērijas numurs 10) Izgatavotājs 11) Autorizētais pārstāvis, kas spēj sastādīt tehnisko dokumentāciju 12) Paraksts 13) Vārds, Uzvārds 14) Tituls 15) Kvalitātes vadītājs 16) Datums 17) Vieta	latviešu (LATVIAN)
1) EB ATITIKTIES DEKLARĀCIJA 2) ŽĒMIAUI PASIRAŠES, (13), ATSTOVAUJANTIS GAMINTOJĀ DEKLARUOJA KAD PRODUKTAS ATITINKA REIKALAVĪMUS PAGAL ŠIAS EB DIREKTĪVAS. 3) NUORODA Į HARMONIZUOTUS STANDARTUS. 4) MAŠINOS APRAŠYMAS. 5) Bendras pavadinimas : PAKABINĀMĀS VARIKLIS 6) Funkcija : Varomasis būdas 7) MARKĒ. 8) TIPAS 9) SERIJINIS NUMERIS. 10) GAMINTOJAS. 11) Įgaliojasis atstovas ir ėalintis sudaryti techninę dokumentaciją 12) PARAŠAS. 13) V. PAVARDĖ 14) PAREIGOS 15) KOKYBĖS VADYBININKAS. 16) DATA. 17) VIETA	lietuvių kalba (LITHUANIAN)
1) ES-DEKLARACIJA O USTREZNOSTI 2) PODPISANI (13), PREDSTAVNIK PROIZVAJALCA, IZJAVLJAM DA IZDELKI USTREZAJO NASLEDNJIM DEKLARACIJAM 3) SKLADNOST Z NASLEDNJIMI STANDARDI 4) OPIS IZDELKOV 5) Vrsta stroja : Izvenkrmni motorji 6) Funkcija : Pogonski sistem 7) PROIZVAJA 8) TIP 9) SERIJSKA ŠTEVILKA 10) PROIZVAJALEC 11) Pooblašĉeni predstavnik ki lahko predloži tehniĉno dokumentacijo 12) PODPIS 13) IME 14) FUNKCIJA 15) Direktor presoje 16) DATUM 17) KRAJ	slovenščina (SLOVENIAN)
1) EB-YFIRLYSING 2) UNDIRRITAÐUR HR. (13) LYSI YFIR FYRIR HÖND FRAMLEIÐANDA AÐ VARAN UPPFYLLIR EFTIRFARANDI EC-TILSKIPANIR 3) TILVÍSUN UM HEILDARSTAÐAL 4) LÝSING Á VÉLBÚNAÐI 5) Flokkur : Utanborðsmótorar 6) Virkni : knúningsafl kerfi 7) FRAMLEIÐSLA 8) GERÐ 9) SERÍAL NÚMER 10) FRAMLEIÐANDI 11) Löggildir aðilar og fær um að taka saman tækniskjölin 12) UNDIRSKRIFT 13) NAFN 14) TITILL 15) Skráningarstjóri 16) DAGSETNING 17) STAÐUR	Íslenska (ICELANDIC)
1) AT UYGUNLUK BEYANI 2) AŞAĞIDA İMZASI BULUNAN VE İMALATÇININ YETKİLİ TEMSİLCİSİ OLAN (13) ÜRÜNÜN ŞU AT YÖNETMELİKLERİNİN HÜKÜMLERİNE UYGUN OLDUĞUNU BEYAN EDER. 3) UYUMLAŞTIRILMIŞ STANDARTLARA ATIF 4) MAKİNANIN TARIFI 5) Flokkur : Diştan takma motor 6) Virkni : tahrik sistemi 7) MARKA 8) TIP 9) SERİ NUMARASI 10) İMALATÇI 11) Teknik dosyayı hazırlamakla yetkili olan Toplulukta yerleşik yetkili temsilci 12) İMZA 13) ADI 14) ÜNVANI 15) Homologasyon Yöneticisi 16) TARİH 17) YER	Türk (TURKISH)
1) EK-IZJAVA O SUKLADNOSTI 2) POTPIŠANI (13), PREDSTAVNIK PROIZVOĐAČA, IZJAVLJUJE DA JE PROIZVOD U SUKLADNOSTI S ODRREDBAMA SLJEDEĆEG EK PROPISA 3) REFERENCA NA USKLAĐENE NORME 4) OPIS STROJA 5) Opća vrijednost : Vanbrodski motor 6) Funkcionalnost : Pogonski sustav 7) IZRADIO 8) TIP 9) SERIJSKI BROJ 10) PROIZVOĐAČ 11) Ovlašteni predstavnik i osoba za sastavljanje tehniĉke dokumentacije 12) POTPIS 13) IME 14) TITULA 15) Upravitelj homologacije 16) DATUM 17) MJESTO	hrvatski (CROATIAN)

18. INDEX

A		
ACG Fuse	131	
ACG Indicator/Buzzer	32	
Anodes		
Function	40	
Operation	103	
B		
Battery		
Cleaning	128	
Connections	49	
Electrolyte Level Inspection	127	
Leads Inspection	64	
Storage	137	
Break-in Procedure	79	
C		
Cleaning and Flushing	111	
Component Identification	11	
Controls and Features	20	
Control and Feature Identification		
Codes	2	
Cooling Water		
Check Hole	41	
Intake Port	41	
Cruising	85	
D		
Disposal	139	
E		
“EC DECLARATION OF CONFORMITY” Content		
Outline	147	
Emergency Stop		
Spare Switch Clip	39	
Switch	38	
Switch Lanyard/Clip	38	
Emission Control System	126	
Engine		
Cover		
Latch	41	
Removal/Installation	56	
Oil		
Change	116	
Level Inspection	58	
Refilling	58	
Protection System	99	
ACG Warning System	99	
Anode	103	
Oil Pressure Warning		
System	99	
Overheat Warning System	99	
Over-rev Limiter	103	
PGM-FI Warning System	99	
Water Separator Warning		
System	99	
Serial Number	4	
Switch	25	
F		
Fast Idle		
Button	31	
Lever	31	
Frame Serial Number	4	
Fuel		
Filter	123	
Inspection	124	
Replacement	125	
Level	59	
Line		
Connection	55	
Disconnection	109	
Priming	66	
Storage	135	
Fuse Replacement	129	

G			
Gasoline Containing Alcohol	60		
Gear			
Shifting	80, 81, 82, 83, 84		
I			
Installation			
Outboard Motor	47		
Height	46		
Location	46		
Inspect After Operating	133		
Interface Coupler	42		
L			
Lubrication	122		
M			
Maintenance	112		
Maintenance Schedule	114		
Manual Relief Valve			
Function	37		
Operation	97		
Moorage			
Power Trim/Tilt Type	96		
Multiple Outboard Motors	104		
N			
Neutral Release Lever	25		
O			
Oil Pressure Indicator/Buzzer	33		
Operating Hour Notification			
System	42		
Operation			
Gear Shifting	80, 81, 82, 83, 84		
Outboard Motor			
Installation	47		
Storage Position	138		
Outboard Motor Angle			
Inspection	48		
Over-rev Limiter	103		
Overheat Indicator/Buzzer			
Function	33		
Operation	99		
P			
PGM-FI Indicator/Buzzer	32		
Power Tilt Switch			
Function	36		
Operation	97		
Power Trim/Tilt Switch			
Function	34		
Operation	90, 94		
Pre-operation Checks	56		
Battery	64		
Engine Oil	57		
Fuel	59		
Fuel Filter	63		
Other Checks	65		
Propeller and Cotter Pin			
Inspection	61		
Propeller			
Inspection	61		
Selection	55		
Propeller Shaft			
Rotating Direction	3		
R			
Remote Control			
Box			
Identification	14, 17, 18		
Installation Location	54		
Cable Length	54		
Installation	51		
Lever			
Function	20, 21, 22, 23, 24		
Types	3		

INDEX

S

Safety	
Carbon Monoxide Poisoning	
Hazard	8
Information	7
Label Locations	9
Operator Responsibility	7
Shallow Water Operation	103
Spare Clip, Emergency Stop	
Switch	39
Spark Plugs	118, 121
Specifications	143
Starting the Engine	
D1, D2 types	66
R1 type	70
R2, R3 types	74
Stopping the Engine	
Emergency	105
Normal Stop	105, 107
Storage	135
Submerged Outboard Motor	
Servicing	133
Switch Panel	18

T

Tachometer	42
Tilt Lock Lever	40
Tilting the Outboard Motor	
Remote Control Type	94
Tool Kit and Spare Parts	65, 113
Trailing	110
Transom	
Height	45
Transporting	109
Trim Meter	
Function	36
Operation	93
Trim Tab	
Operation	40
Adjustment	98
Trimming the Outboard Motor	90
Troubleshooting	
Warning System Operation	140

V

Vapor Separator Draining	136
--------------------------------	-----

W

Water Separator Buzzer	33
------------------------------	----


MEMO

OWNER'S MANUAL

BFT 200D
BFT 250D
BFT 250D

TOHATSU CORPORATION

5-4, Azusawa 3-Chome, Itabashi-Ku
Tokyo 174-0051, Japan
Tel: +81-3-3966-3117 Fax: +81-3-3966-2951
www.tohatsu.com

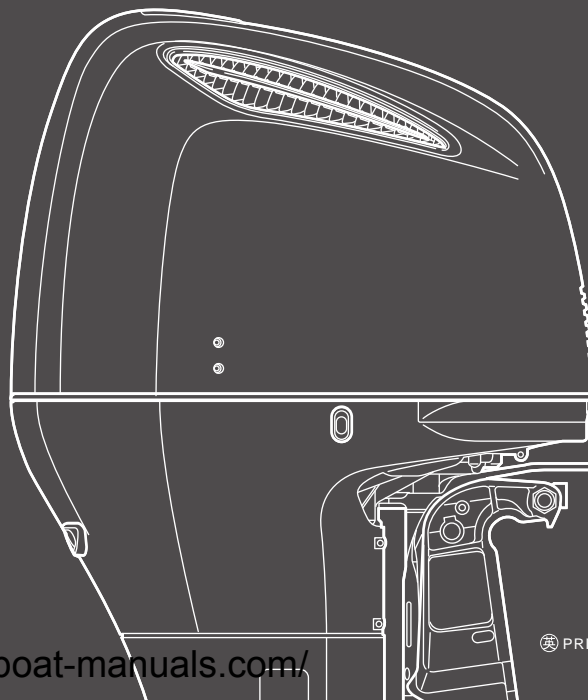

<https://www.boat-manuals.com/>

PRINTED IN JAPAN