

Outboard Gearcase Technician's Guide

Table of Contents

Section 1 – General Gearcase Information

Section 2 – 6 - 25 HP Gearcase

Section 3 – 25 - 50 HP (Non-Bigfoot) Gearcase

Section 4 – 50 & 60 HP (Non-Bigfoot) Cam and Follower

Section 5 – 75 – 125 HP Gearcase (Incl. 40-60 Bigfoot)

Section 6 – V6 EZ Shift Gearcase

Section 7 – V6 XR4, XR6, Mag II, Mag III Gearcase

Section 8 – 3.0L Gearcase

Section 9 – 225 EFI FourStroke Gearcase

Section 10 – High Performance Gearcases

Section 11 – Verado Gearcase

Section 12 – Tool Suppliers

Section 13 – Service Bulletins

Section 1 - General Gearcase Information

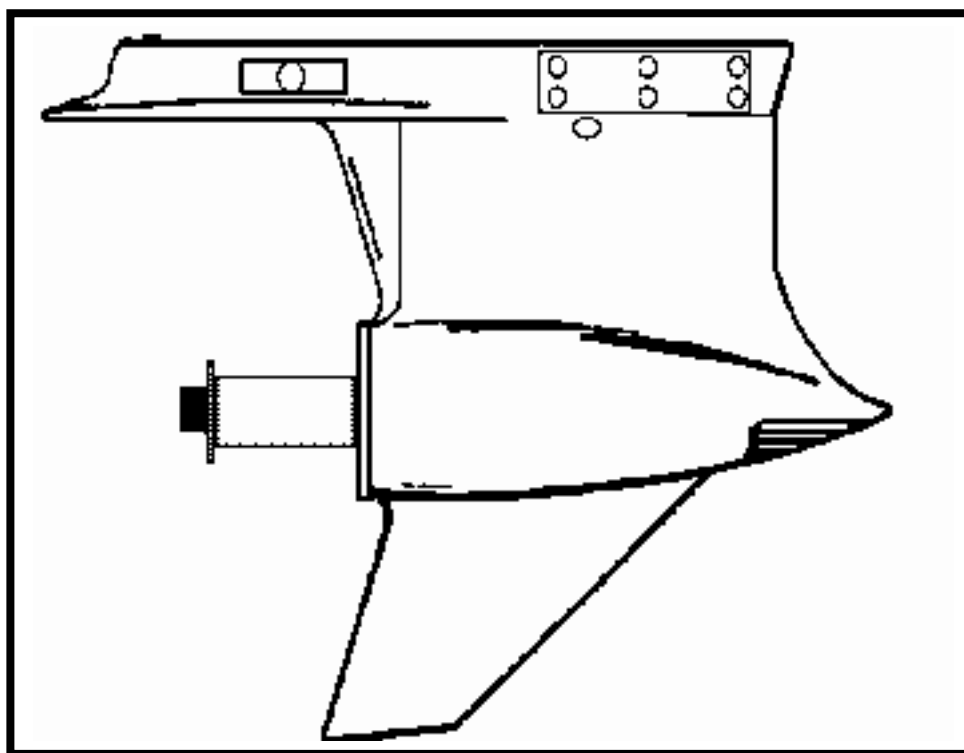


Table of Contents

Table of Contents.....	2
Table of Contents.....	3
Lower Unit Terms / Definitions.....	4
General Gear Case Service Recommendations.....	5
Bearings.....	5
Shims.....	5
Seals.....	6
Gear Case Lubrication.....	6
Gear Lube.....	6
Hi-Performance Gear Lube.....	8
Water Pump.....	10
Gear Housing Pressure Test (Typical).....	14
Upper Drive Shaft Bearing Preload – Typical.....	15
Preload Tool Adjustment.....	16
Driveshaft Styles.....	17
Drive Shaft Bushing Removal (75/90/115 4-Stroke Models).....	17
Standard Driveshaft Bearing and Shim Position.....	18
Preload Style Driveshaft Bearing and Shim Position.....	19
91-12349A2 Pinion Gear Locating Tool Instructions.....	20
Pinion Height Tool Instructions P/N 90-12555-1.....	22
Gear Position.....	23
Correct Pinion Gear Height.....	23
Pinion Gear Height Too High.....	23
Pinion Nut Installation.....	24
Backlash Flags Used on Current Mercury Outboards.....	24
V-6 135-250 HP Carb/EFI.....	25
Speedometer Hose Junction.....	26
Speedometer Coupler Part Numbers.....	26
Gear Manufacturing Processes.....	27

Lower Unit Terms / Definitions

Ratcheting Gearcase -- Refers to a gear case that will ratchet or rotate when unit is in gear and propeller shaft is turned in one direction.

Non-ratcheting Gearcase -- refers to a gear case that will not ratchet in either direction when unit is in gear.

Sportmaster -- gear case used in hi-performance applications recognized by low water pick-ups, crescent leading edge, torque tab added to skeg.

Torquemaster -- gear case used in hi-performance applications that uses modified pickups in stock location, torque tab added to skeg.

EZ Shift -- refers to the shift mechanism used on most 2.0, 2.4, and 2.5 litre outboards.

Desmodromic Shift -- see EZ shift

Torpedo Bore -- the area of the gear case that houses the forward/reverse/pinion gear, propeller shaft, and bearing carrier.

Right-Hand -- refers to the direction of propshaft rotation when in forward gear. Also known as clockwise. This is considered standard rotation.

Left-Hand -- refers to the direction of propshaft rotation when in forward gear. Also known as counter clockwise.

Anti-Ventilation Plate -- area of gear case located directly above the propeller. Aids in the performance of the boat. This part of the gear case is also mistakenly referred as the cavitation plate or ventilation plate.

Trim Tab -- device used at the rear of a gear case to correct steering torque. Some housings use a flat plate instead of the tab for propeller considerations. The tab or plate are also made to be a sacrificial anode to provide corrosion protection. Some gearcases use a painted trim tab with anodes located above the anti-ventilation plate. Do not apply any paint to an un-painted anode because the corrosion protection properties would be eliminated.

Gear Ratio -- to determine the gear ratio of a lower unit. Divide the total number of teeth on the pinion gear into the total number of teeth on the forward gear. Example: A 15 tooth pinion divided into a 28 tooth forward gear.

$$28 / 15 = 1.87$$

Notes

Seals

As a normal procedure, all O-rings and oil seals SHOULD BE REPLACED without regard to appearance. To prevent leakage around oil seals, apply Loctite 271 to outer diameter of all metal case oil seals. When using Loctite on seals or threads, surfaces must be clean and dry. To ease installation, apply Quicksilver 2-4-C w/Teflon on all O-rings. To prevent wear, apply 2-4-C w/Teflon on I.D. of oil seals.

To prevent corrosion damage after reassembly, apply Quicksilver Perfect Seal, 2-4-C w/Teflon or 101 Lube to external surfaces of bearing carrier and cover nut threads prior to installation. DO NOT allow Perfect Seal to enter bearings or O-ring area.

Gear Case Lubrication

When adding or changing gear case lubricant, visually check for the presence of water in the lubricant. If water is present, it may have settled to the bottom and will drain out prior to the lubricant, or it may be mixed with the lubricant, giving it a milky colored appearance. If water is noticed, the gear case should be checked for the source of the leak. Water in the lubricant may result in premature bearing failure or, in freezing temperatures, will turn to ice and damage the gear case.

Whenever you remove the fill/drain plug, examine the magnetic end for metal particles. A small amount of metal filings or fine metal particles indicates normal gear wear. An excessive amount of metal filings or larger particles (chips) may indicate abnormal gear wear.


Gear Lube

Premium Blend - All production outboard gearcases are shipped filled with Premium Blend Gear Lube. These units can use Premium Blend or can be filled with Hi Performance Gear Lube. If changing from one type to another, be sure gear case is completely drained before refilling.

Hi Performance Gear Lube - All Hi-Perf gearcases are shipped with Hi-Performance Gear Lube. The housings should always be refilled with Hi-Performance Gear Lube.


DRAINING GEAR CASE

1. Place outboard in a vertical position.
2. Place drain pan below outboard.
3. Remove fill/drain plug and vent plug and drain lubricant.

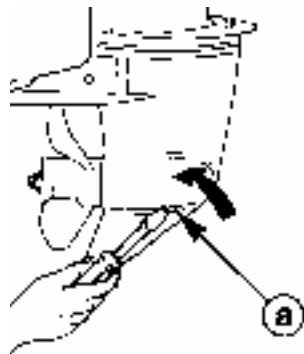

Notes

6. Install this "Vent" screw and sealing washer only and continue filling until excess starts to flow out of second "Vent" screw hole.
7. Rotate driveshaft clockwise approximately 10 revolutions. Let gear case sit for at least one minute to allow any trapped air to settle out, then top off lubricant level.

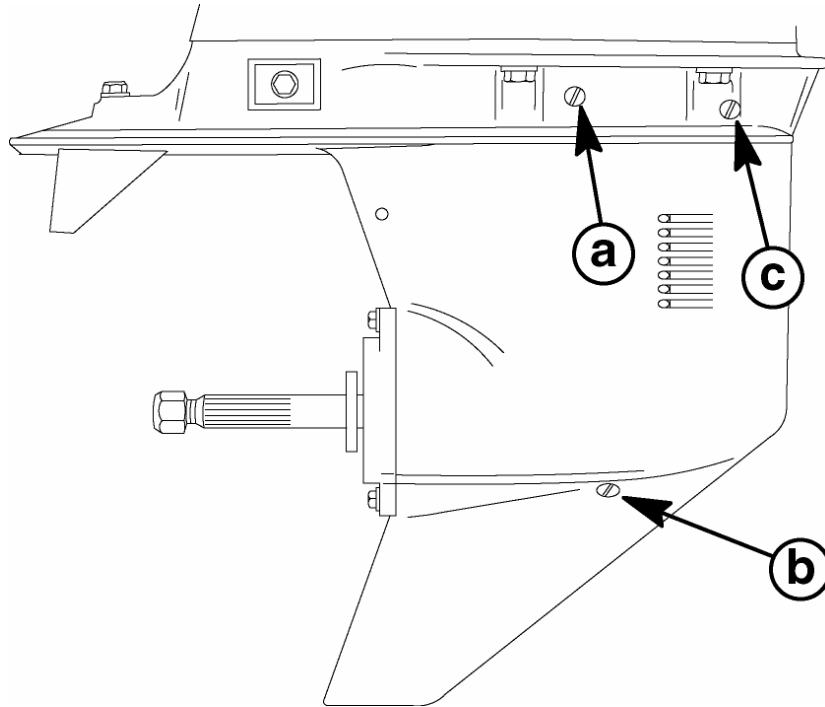

- a) Vent Screw – Torque to 60 lb-in. (6.8 Nm)
- b) Fill/Drain Screw - Torque to 60 lb-in. (6.8 Nm)
- c) Oil Level Vent Screw - Torque to 60 lb-in. (6.8 Nm)

8. Replace second lubricant "Vent" screw and sealing washer.

IMPORTANT: Do not lose more than one fluid ounce (30cc) of gear lubricant while reinstalling "FILL/DRAIN" screw.

9. Remove lubricant tube from Fill/Drain hole; install Fill/Drain screw and sealing washer.

Hi-Performance Gear Lube


All Outboards built in Fond du Lac will receive the Hi-Performance gear lubrication. The V-6 product recommendation in the operations manual will be changed to state the use of the Hi-performance lube.



Notes

Water Pump

The water pump is installed onto the drive shaft, and is designed to rotate whenever the engine is running.

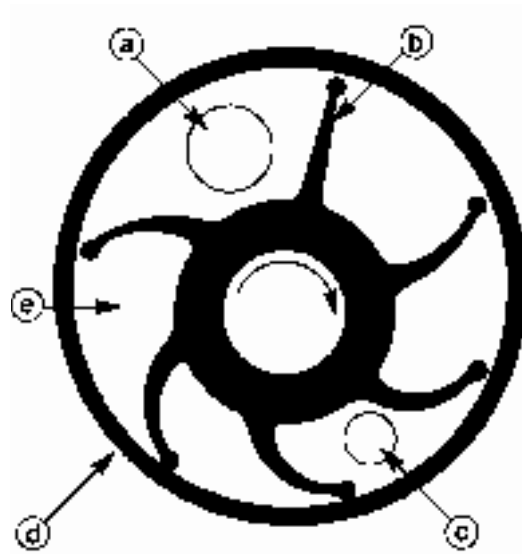

- a) Intake Port
- b) Impeller Vanes
- c) Discharge Port
- d) Pump Body
- e) Pump Cavity

A rubber-vanned impeller rotates in an eccentric metal housing - a housing in which the drive shaft is off center. The cavities between the vanes pick up water as they pass over the intake port of the pump. As the vane cavities pass over the discharge port, they are collapsed by the closer (off center) pump housing wall, causing displacement of the water from the pump.

The impeller is lubricated and cooled simply by the water that it is flowing through. Running the pump with no intake water will quickly destroy the impeller, as high friction and heat will develop between the rubber impeller vanes and the metal housing, making the impeller vanes hot and brittle.

WATER PUMP IMPELLER DRY RUNNING DAMAGE

Notes

60 sec. 1500 RPM - Vanes Set and Leading Edges Slightly Burned - Upper Sealing Rings



90 Sec. 1500 RPM - Vanes Set and Leading Edges Slightly Burned - in this example: Vane at 3 O'Clock Cracked - Leading Edge of Vanes at 5-7 O'Clock Cracked - Lower Sealing Rings Charred - Upper Flat



30 Sec. 2000 RPM - Vanes Set and Leading Edges Burned - Two Vanes Broken - Lower Sealing Rings Charred - Upper Flat



45-60 Sec. 2000 RPM - All Vanes Broken and Charred - Both Sealing Rings Charred




60 Sec. 2000 RPM - All Vanes Broken and Charred - Both Sealing Rings Charred



Notes

Gear Housing Pressure Test (Typical)

1. Remove vent plug and install pressure test gauge. Tighten securely.

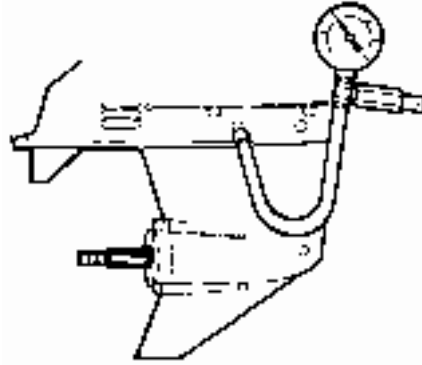

2. Pressurize housing to specification and observe gauge for specified time. Refer to the proper Service Manual for correct specification. Shift shaft seal should vent above highest specification.

NOTE: If specification is not listed, gear case should hold 10-12 psi.

3. Rotate drive shaft, prop shaft and move shift rod, while housing is pressurized to check for leaks.




4. If pressure drop is noted, immerse housing in water.
5. Re-pressurize to specification and check for air bubbles.
6. Replace leaking seals as necessary. Retest housing.

NOTE: It should hold pressure for the specified length of time.

7. Remove tester from housing and install vent plug.


Notes

Preload Tool Adjustment

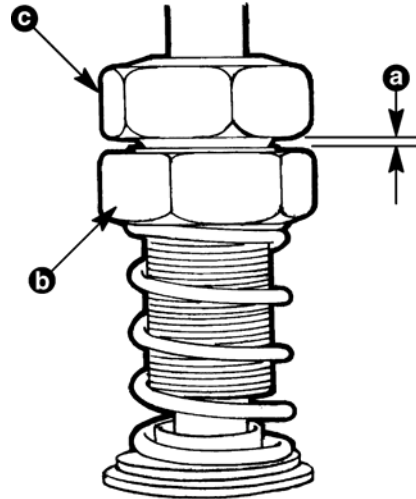

- a) Measure Dimension
- b) Bottom Nut [Screwed down approximately 1 in. (25.4 mm)]
- c) Top Nut


1. Measure distance.
2. Increase distance by 1 in. (25.4mm).

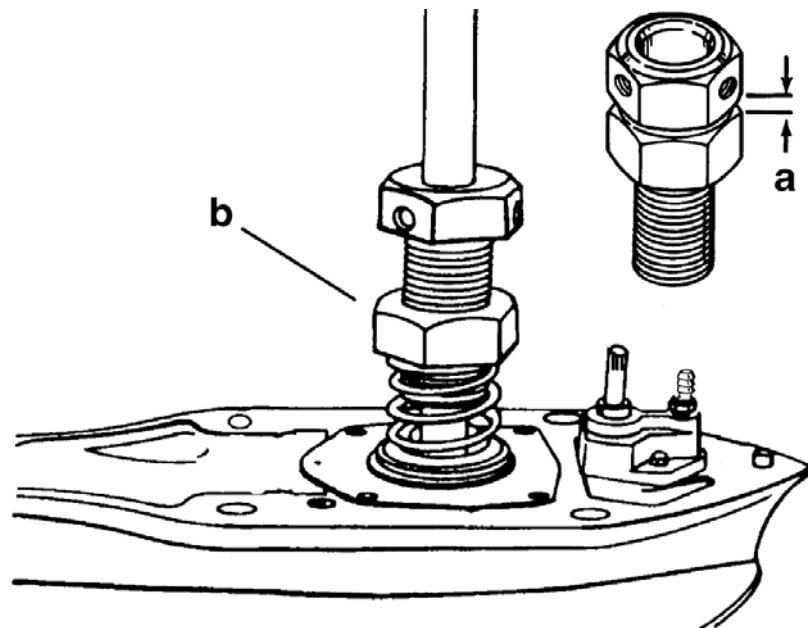


- a) Measure distance and increase by 1 in. (25.4 mm)
- b) Bottom Nut [screwed down by approximately 1 in. (25.4 mm)]

3. Rotate driveshaft 10 revolutions. This properly seats upper driveshaft tapered roller bearing.


Driveshaft Styles

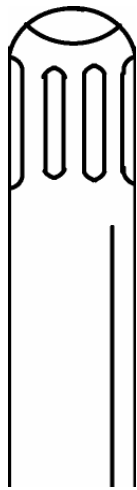

Standard

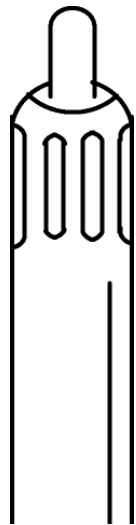

Pre-Loaded

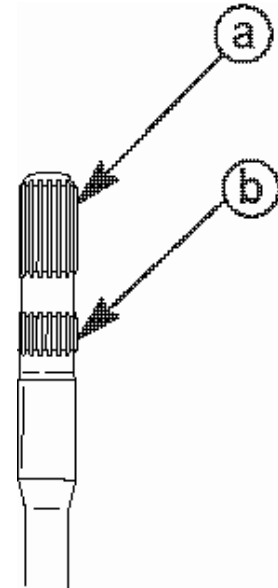


75/90/115 4-Stroke

**Refer to Service Bulletin
2001-8**

- a) Crankshaft/Driveshaft Splines
- b) Oil Pump Drive Splines (75/90 4-Stroke Only)

Drive Shaft Bushing Removal (75/90/115 4-Stroke Models)


1. Using a suitable punch, drive roll pin to inside of drive shaft housing.
2. Remove drive shaft bushing with Driveshaft Bushing Installation Tool 91-875215.

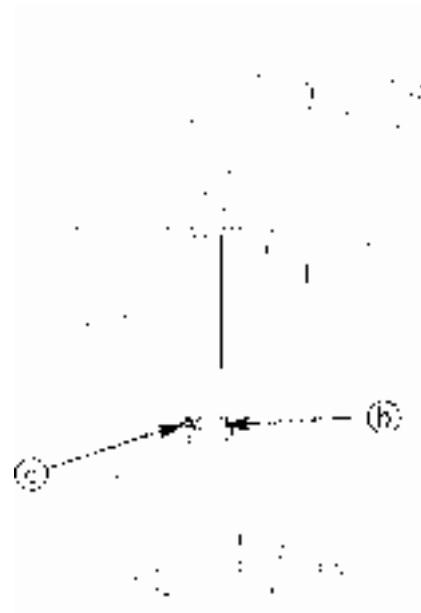


- a) Roll Pin
- b) Driveshaft Bushing Installation Tool 91-875215.
- c) Water Hose

Notes

Standard Driveshaft Bearing and Shim Position

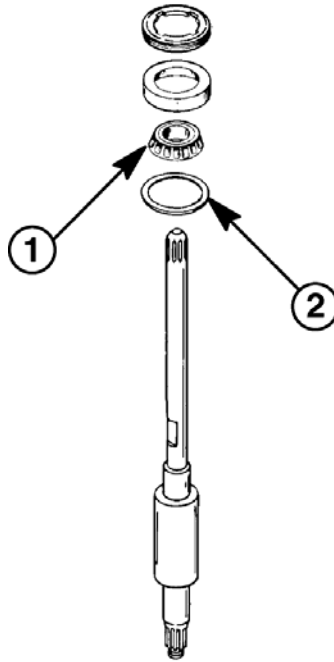

- 1) Upper Driveshaft Bearing
- 2) Shim

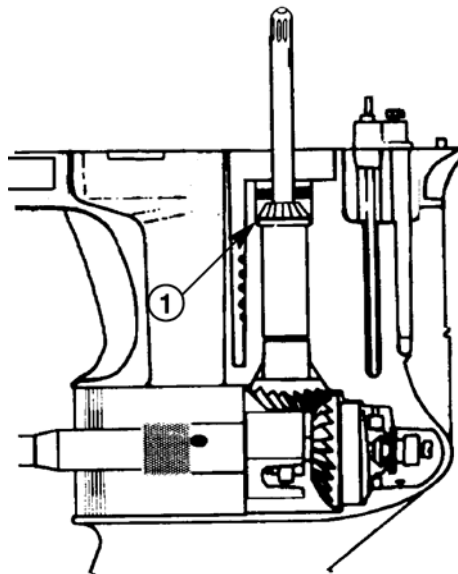

1) Shim Position

Pinion height is established for full tooth engagement and once set, is not changed. Driveshaft Bearing Preload Tool is used to apply upward pressure on Driveshaft Bearing for checking both pinion height and gear backlash.

Notes


91-12349A2 Pinion Gear Locating Tool Instructions

IMPORTANT: Forward gear assembly **MUST BE** installed in gear housing when checking pinion gear depth or an inaccurate measurement will be obtained.

Install Bearing Preload Tool (if required) on drive shaft following instructions in appropriate Service Manual.


Clean the gear housing bearing carrier shoulder and diameter.

Assemble tool as shown; **DO NOT** tighten collar retaining bolt at this time.

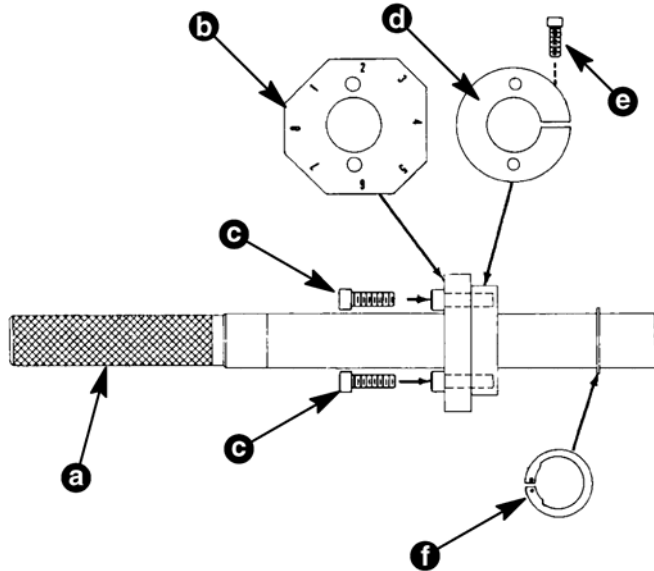

- a) Arbor
- b) Gauging Block; Install with numbers away from split collar
- c) Bolt; gauging block retainer
- d) Split Collar
- e) Bolt; Collar retaining
- f) Snap Ring

Insert tool into forward gear assembly; position gauging block under pinion gear as shown.

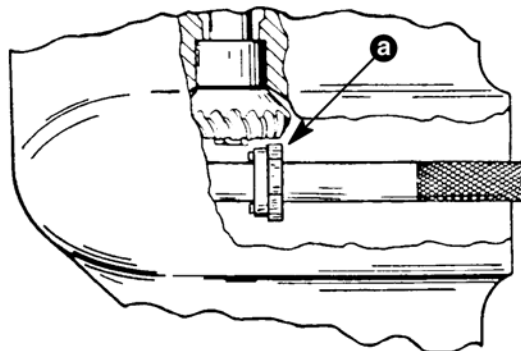

- a) Gauging Block

Notes

Remove tool, taking care not to change gauging block position, and tighten collar retaining bolt.

Insert tool into forward gear assembly; position proper numbered flat (from chart) of gauging block – under pinion gear.

Install proper locating disc against bearing carrier shoulder in gear housing.


Position access hole.

IMPORTANT: Pressure must be applied to drive shaft while checking clearance with feeler gauge. Apply pressure to drive shaft following instructions in appropriate Service Manual.

Determine pinion gear depth by inserting a feeler gauge thru access hole in locating disc.

The correct clearance between gauging block and pinion gear is .025 in. (0.64 mm). If clearance is incorrect, add (or subtract) shims from below the upper drive shaft bearing to raise (or lower) pinion gear.

IMPORTANT: On V-6 Outboards using 13/30 gear set, clearance between pinion gear and gauging block is .050 in. (1.27 mm). This is due to the smaller gear being manufactured from a smaller steel billet.

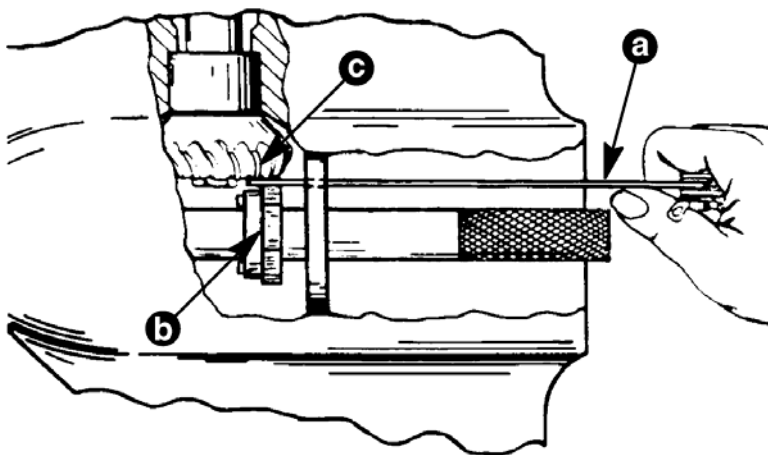

- a) Feeler Gauge
- b) Locating Tool
- c) Pinion

Notes

Pinion Height Tool Instructions P/N 90-12555-1


Model	Gear Ratio (Pinion Gear Teeth/Reverse Gear Teeth)	Use Flat No.	Use Disk No.
70 THRU 150 (IN-LINE) OUTBOARDS	2.3:1 (13/30)	8	1
	1.78:1 (14/25)	1	1
	2.0:1 (14/28)	1	1
	2.07:1 (14/29)	2	3
	2.33:1 (12/28)	8	1
V-6 OUTBOARDS 2 Litre 2.4 Litre 2.5 Litre	2.3:1 (13/30)	6 ¹	2
	2.3:1 (13/30)	7 ²	2
	1.78:1 (14/25)	1	1
	2.0:1 (14/28)	7	2
	1.87:1 (15/28)	7	2
V-6 OUTBOARD 3.0 Litre	1.62:1 (13/21)	4	2
	1.64:1 (17/28)	4	2
	1.75:1 (12/21)	4	2
	1.87:1 (15/28)	4	2
V-6 OUTBOARD 3.4 Litre	1.64:1 (17/28)	4	2

¹ Driveshaft WITH Pre-Load Pin

² Driveshaft WITHOUT Pre-Load Pin


Notes

Speedometer Hose Junction

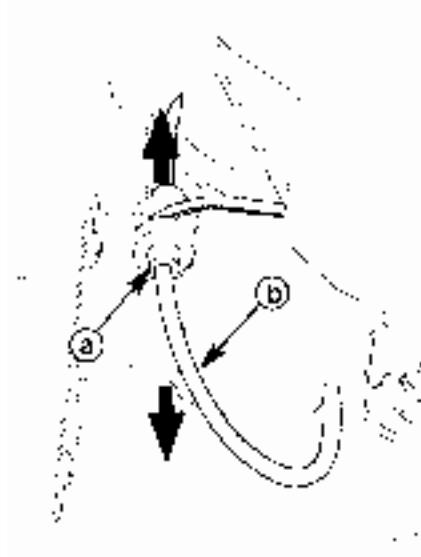


- a) Press In On Junction
- b) Pull Out on Hose

Speedometer Coupler Part Numbers

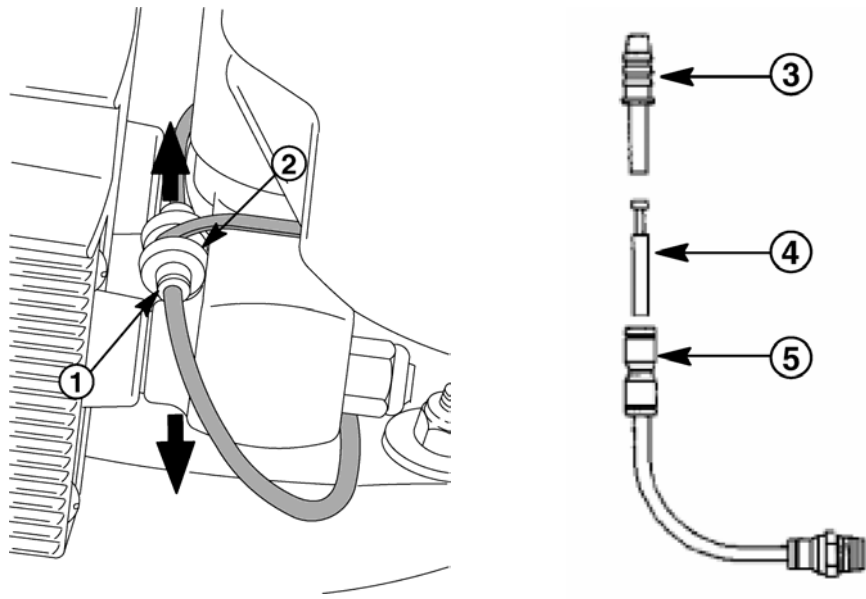

- 1) Coupler Fitting P/N 22-859448
- 2) Grommet P/N 25-821555
- 3) Adapter Fitting P/N 22-859731
- 4) Adapter Fitting P/N 22-859732
- 5) Coupler P/N 22-859747


Section 2

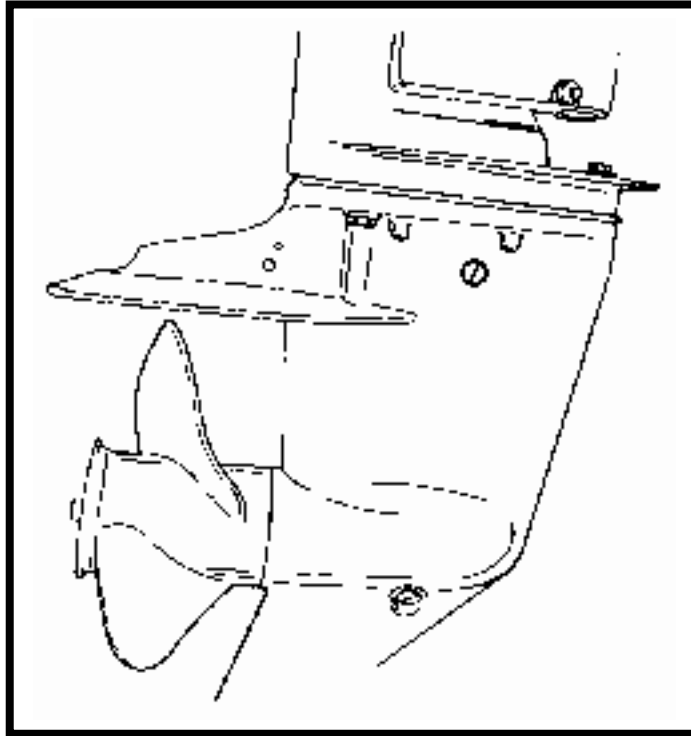

Notes

6-25 HP Gearcase

Shift Style

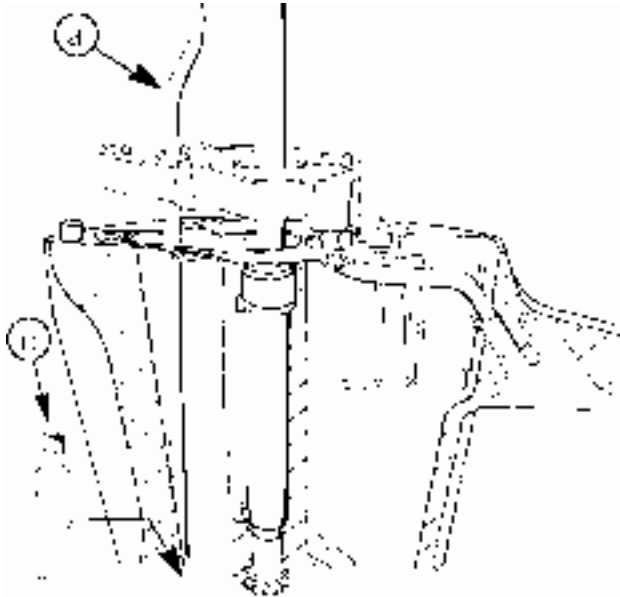


- a) Shift Shaft
- b) Shift Cam


6 Through 25 HP Gearcase Features

The 6 thru 25 HP gear case features no shims. After reassembly, visually inspect pinion height then manually check for forward/reverse gear backlash. If pinion height is incorrect or no backlash is present, assembly is incorrect. Locate problem and correct.

Tip: Bearing carrier is left-handed thread.

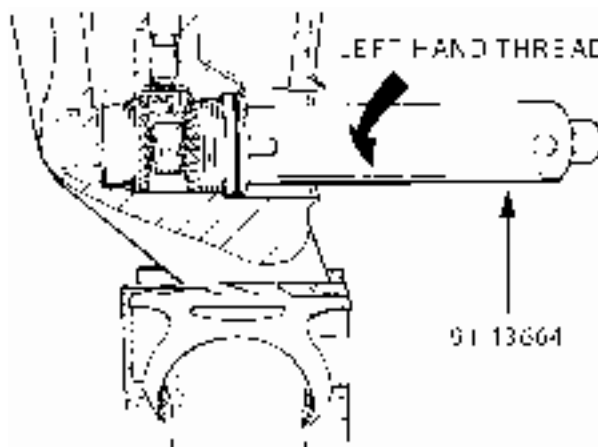


Section 3 – 25-50 HP (Non - Bigfoot) Vertical Pull Gearcase

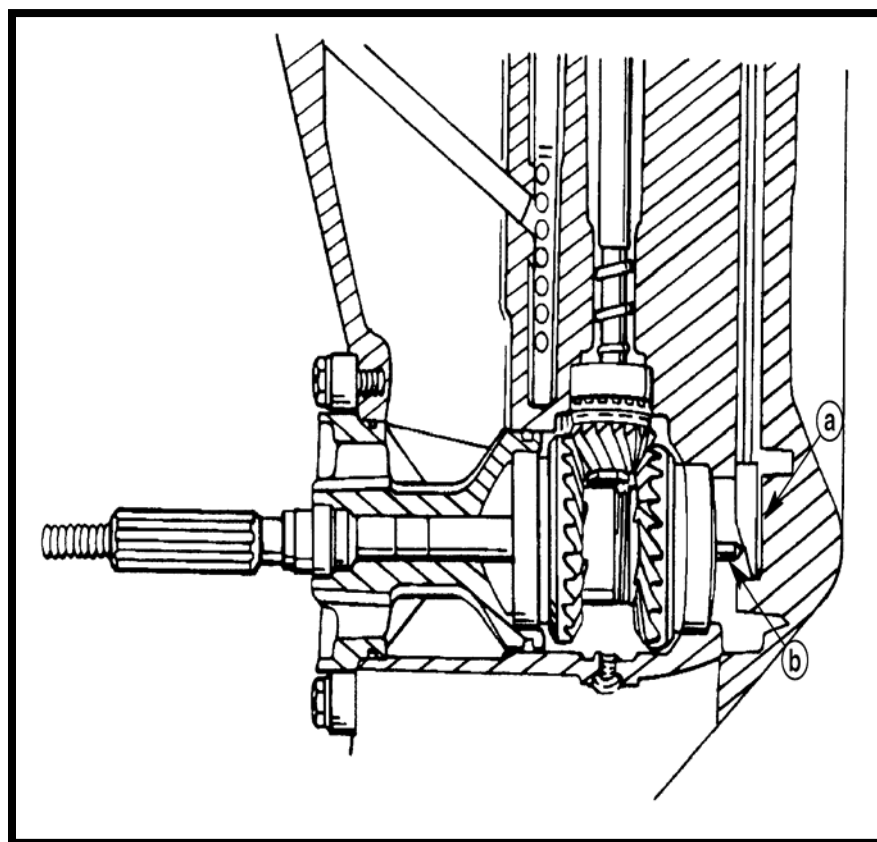

Notes

25 Through 50 HP (Non - Bigfoot) Vertical Pull Gearcase

Shift Style

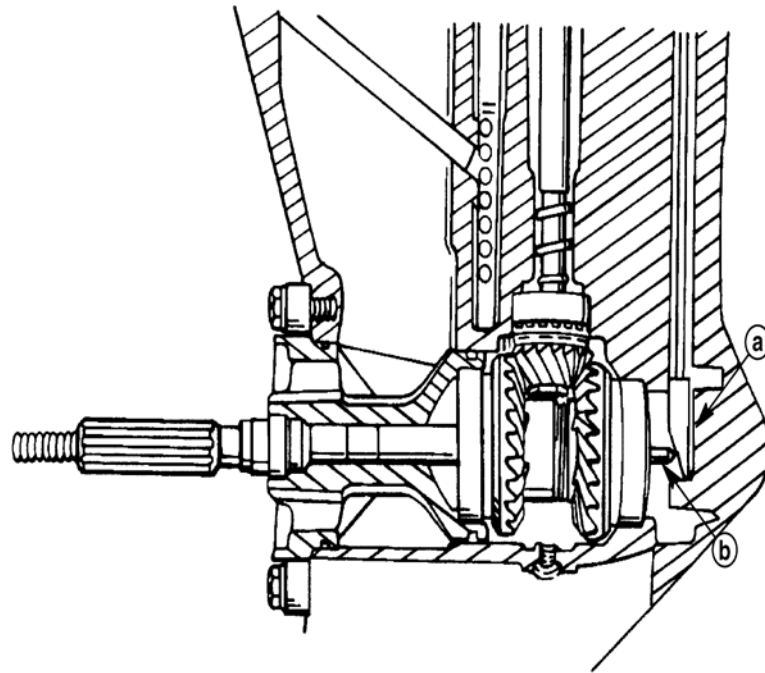


- a) Shift Cam
- b) Cam Follower

25 thru 50 HP Non-Bigfoot Vertical Pull Gearcase Features

The vertical pull gear case features no shims. This gear case is easily identified by the auxiliary water inlet located at the trim tab, underneath the anti-ventilation plate.

Tip: When it is necessary to rebuild this style of gearcase, review the service bulletins for information concerning gear ratio changes. A propeller change may be necessary.


Section 4 - 50 and 60 HP (Non - Bigfoot) Cam and Follower

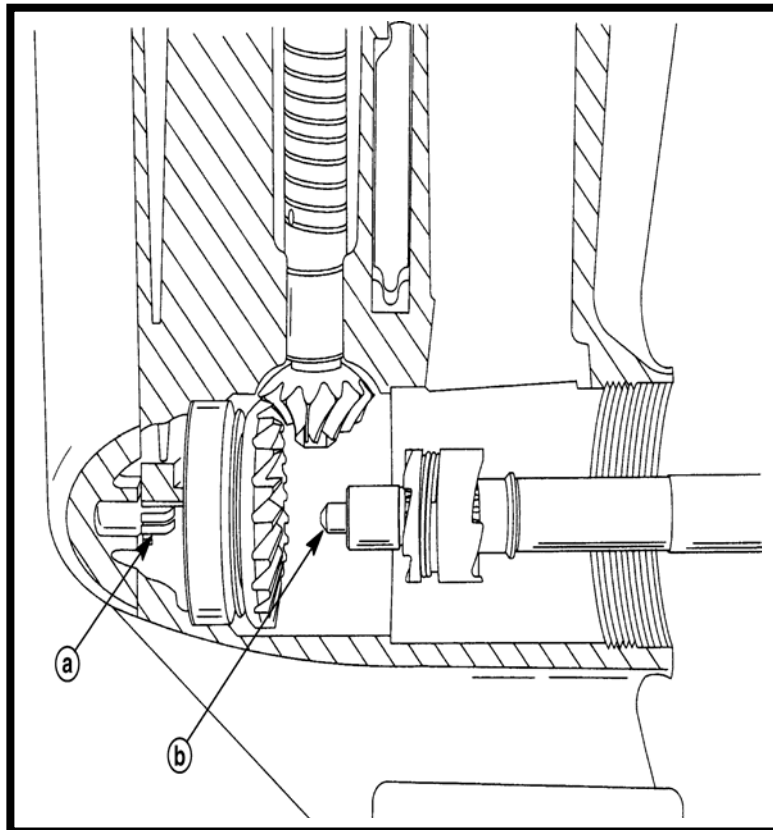

Notes

50 and 60 HP (Non - Bigfoot) Cam and Follower

Shift Style

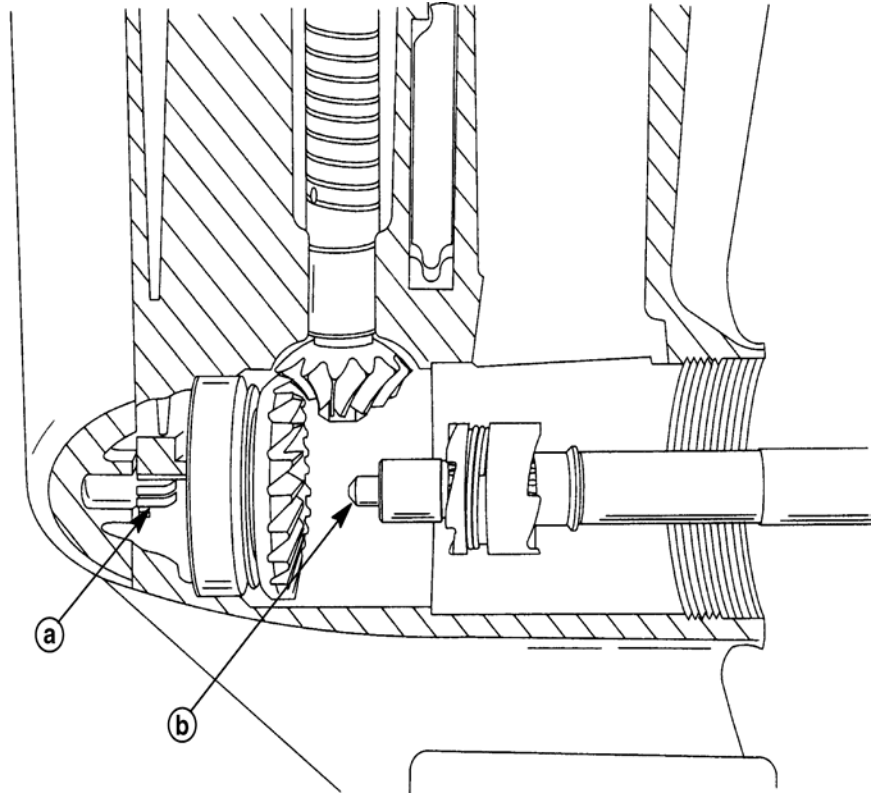

- a) Cam
- b) Follower

Section 5 – 75-125 HP Gearcase (Including 40-60 HP Bigfoot)


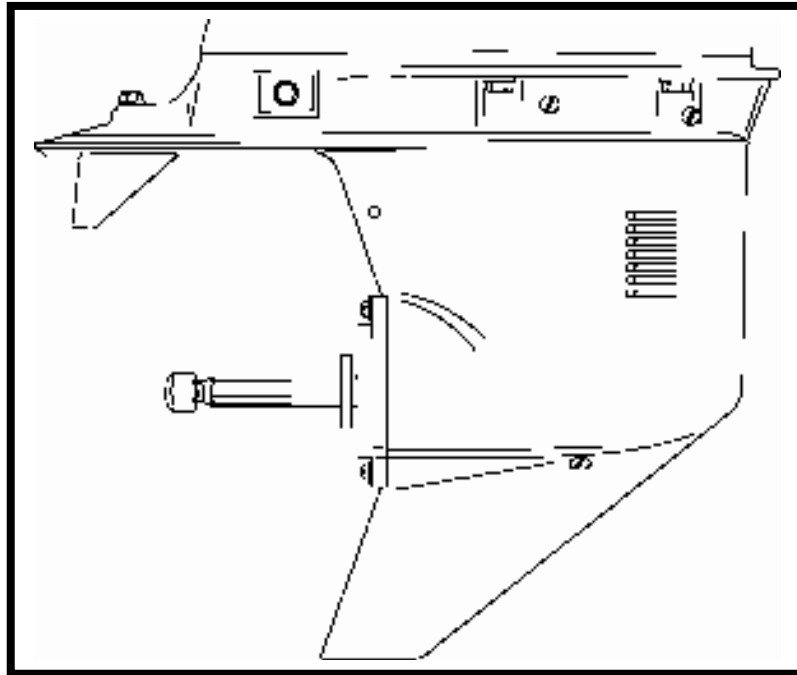


Table of Contents

Table of Contents.....	2
Table of Contents.....	3
75 Through 125 HP Gearcase Including 40-60 HP Bigfoot	4
Description	4
Cam Follower Components.....	5
Shim Locations - 40 Bigfoot thru 125 HP	6
Pinion Height / Forward Gear Shimming.....	7
Pinion Height Shimming.....	7
Forward Gear Backlash.....	7
Gearcase Improvements	8
60 Bigfoot thru 125 Clutch/Gear Styles.....	9
3-Jaw vs 6-Jaw.....	9
6-Jaw Gearcase Changes.....	10
Lower Shift Shaft Support	11
Shift Cam Installation 60 Bigfoot, 75-125/Bigfoot.....	12
40/50 Bigfoot (4-Stroke)	13
Forward Gear Bearing Retainer	14
Quiet Gears & Gear Ratio Change - Big Foot.....	14
Lower Drive Shaft Bearing Race Tool Application Chart.....	15
Face Seal Installation	15
Desmodromic (EZ Shift) Gearcase.....	16
Adapter Plate (EZ Shift)	16
Shift Link Bracket (EZ Shift)	16
Barrel Cup Retainer (EZ Shift).....	17
Control Cable Latch (EZ Shift)	17
Reverse Gear (EZ Shift).....	17
Shift Shaft Bushing (EZ Shift).....	18
Upper Shift Shaft Assembly (EZ Shift)	18
Shift Detent Assembly (EZ Shift).....	18
Shift Cam (EZ Shift)	18
Cam Follower (EZ Shift).....	19
Tiller Handle Kit - 75/90 & 115 EFI (4-Stroke).....	19

Notes

75 Through 125 HP Gearcase Including 40-60 HP Bigfoot

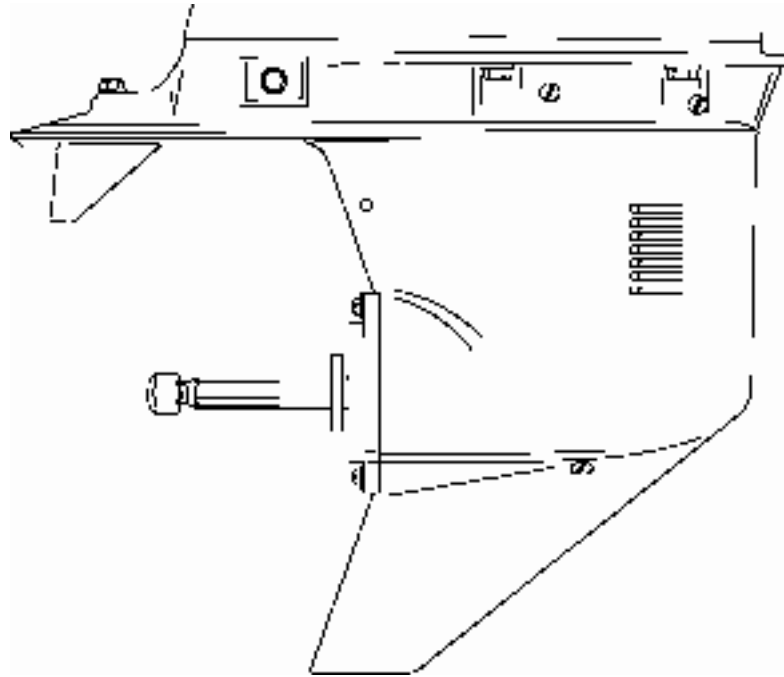


Description

This gear case is sometimes referred to as the "BIGFOOT" gear case when used on 40-60 HP engines. These combinations are used in applications where larger diameter propellers are necessary for improved boat handling. This gear case can also be termed the big bore 3 and 4 cylinder gear case.

Notes

Shim Locations - 40 Bigfoot thru 125 HP

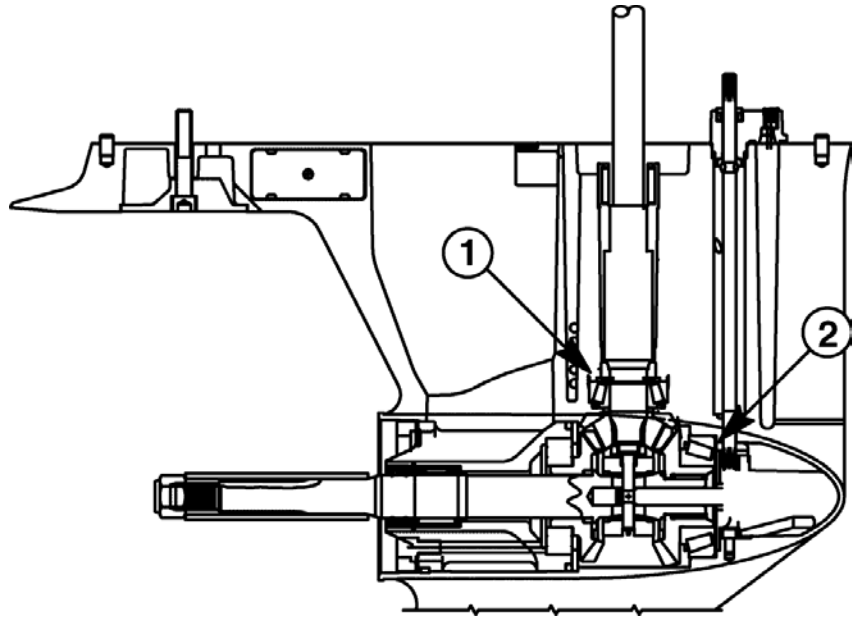


- 1) Pinion Height Shim Location
- 2) Forward Gear Shim Location

Notes

Gearcase Improvements

75-125 (Bigfoot) gearcases have had many improvements made for durability reasons. To easily identify the newer gear case, refer to the following pictures. Once these were introduced, the gear case is now referred to as either a 3-Jaw or 6-Jaw reverse clutch. A complete 3 Jaw gear case is no longer available (NLA). When a complete gear case is needed, a 6-Jaw gear case is used as a replacement. NOTE: When replacing a 3-Jaw with a 6-Jaw gear case, the upper shift shaft must also be changed. The shaft is included with the gear case, but extra labor time will be necessary to remove the powerhead. Removal of the powerhead is required to install the upper shift shaft. Refer to Service Bulletin 96-17

Identify gear case design to ensure correct components are being installed. Design I – “3 Jaw Reverse Clutch” gear case identified with straight machined edge for trim tab screw mounting surface. Design II – “6 Jaw Reverse Clutch” gear case identified with angled machined edge for trim tab screw mounting surface.

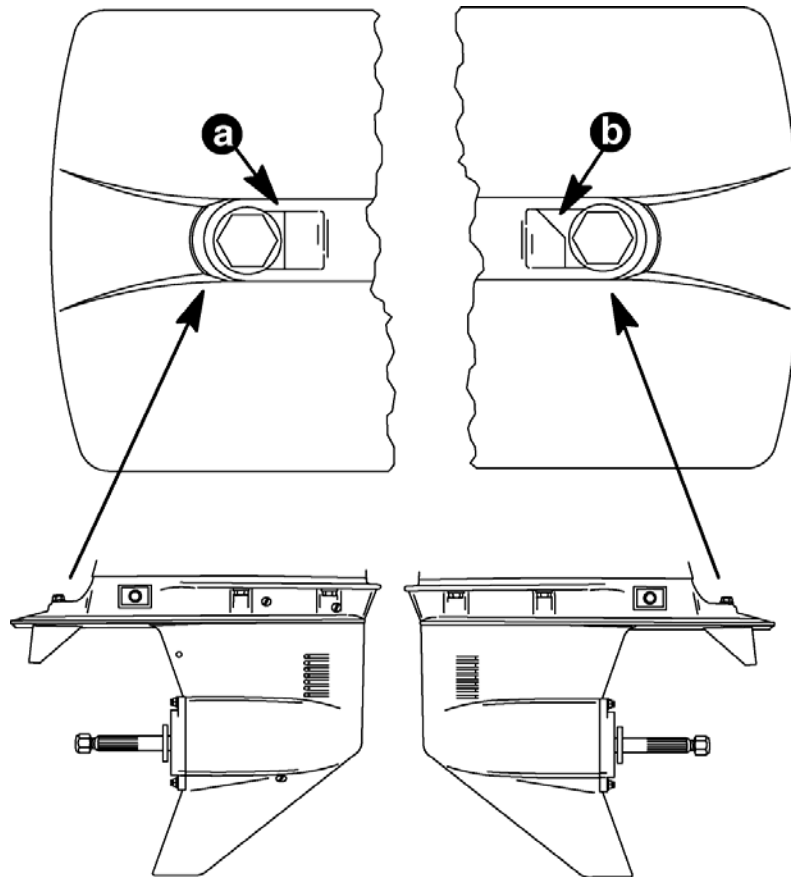

“3 Jaw Reverse Clutch” “6 Jaw Reverse Clutch”

- a) Design I – “3 Jaw Reverse Clutch” Gear Case Identifier
- b) Design II – “6 Jaw Reverse Clutch” Gear Case Identifier

NOTE: After the “6-Jaw Reverse Clutch” gear housing and updated Shift Shaft have been installed, replacement parts must be ordered from the “6-Jaw” section of a 1998 model year and newer parts list. “3-Jaw” and “6-Jaw” reverse clutch parts are NOT interchangeable.

Notes

6-Jaw Gearcase Changes

Some 1995, 1996 and 1997 model year engines have experienced low hour clutch failures. These failures are a result of the setup requirements. If adjusted incorrectly, the clutch may contact the forward gear at high idle, resulting in clutch and gear damage. You must remove all slack from the mechanism with a slight preload towards reverse when setting the shift on these engines. The redesigned lower unit desensitizes the adjustment procedure. The gears are further apart, allowing additional clutch movement on the propeller shaft. Required component changes are:

1. New clutch (6-Jaw reverse)
2. Shift cam (with larger neutral detent)
3. Follower (longer, with increased taper)
4. Propeller shaft (with longer clutch pin slot)
5. Cam follower spring (longer)
6. Cross pin retaining spring (heavier)
7. Reverse gear (6-Jaw)
8. Forward gear
9. Longer lower shift shaft (extends into casting below the shift cam)
10. Upper shift shaft link
11. Gear housing

USA starting serial number 0G590000


Tip: 6-Jaw internal components and the older 3-Jaw components MUST NOT be interchanged. Machining differences exist in the internal components and gear housing.

When rebuilding an older 3-Jaw lower unit that has a “jumping out of gear” failure, the complete gear case must be replaced. Inspection has revealed that the jumping out of gear damages the shift shaft hole. The hole becomes oval and after the rebuild, the replacement gears and clutch will not hold engagement.

Notes

Shift Cam Installation 60 Bigfoot, 75-125/Bigfoot


3-JAW STYLE

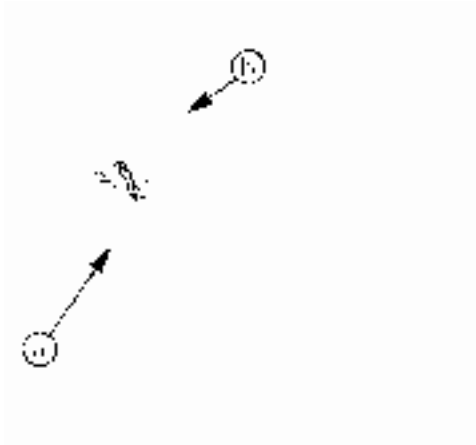

60 Bigfoot, 75/90/100/115/125 (2-Stroke) & 75/90 (4-Stroke)

- a) Shift Cam (marked with "UP" and part number only)
- b) Upper Shift Shaft Pilot Bore

NEWER 6-JAW STYLE

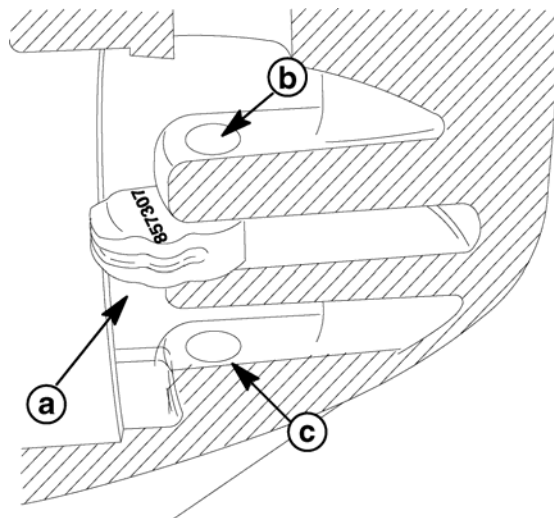


60 Bigfoot, 75/90/100/115/125 (2-Stroke) & 75/90 (4-Stroke)

- a) Shift Cam (marked with part number only)
- b) Upper Shift Shaft Pilot Bore
- c) Lower Shift Shaft Pilot Bore

Notes

Forward Gear Bearing Retainer

Additional groove and metal retainer 53-856823 was added to the forward gear to prevent the propeller shaft needle bearing from moving towards the rear of the gear. New service tool 91-877321A1 is required to set the needle bearing at 0.200 inch (5.08 mm) depth.

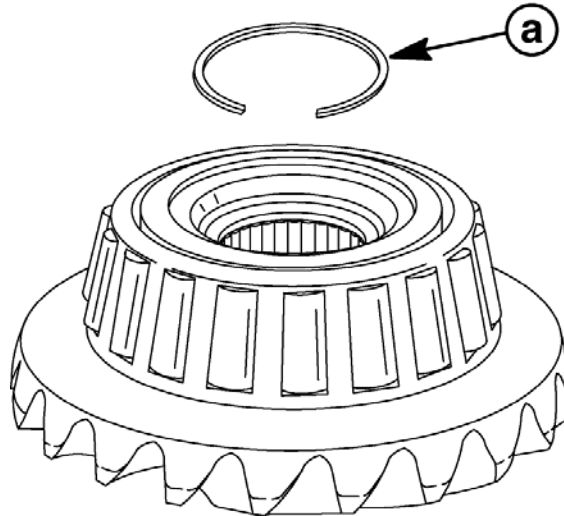

a) Snap Ring

When bearing moves towards the rear of the gear, shift effort is increased and unit may not have full shift engagement.

Quiet Gears & Gear Ratio Change - Big Foot

A quiet gear design was introduced in 2003 MY. .The 75/90 has a gear ratio change to 2.33:1 (12/28) from 2.07:1 (14/29). Refer to Outboard Service Bulletin 2002-01 for introduction (propeller chart changes). There are also owners manual and service manual changes.




Decal Number	Gear Teeth Pinion/Forward	Gear Ratio
12	12/28	2.33:1
14	14/29	2.07:1

Lower Drive Shaft Bearing Race Tool Application Chart


Gear Ratio	Pinion Gear P/N (Teeth)	Pinion Gear P/N (Teeth)	Bearing Cup Driver
2.07:1	43-19672 (14)	91-13778T1 (No Stamp)	91-13780 (Stamped 91-13780)
2.07:1	43-881259 (14)	91-889622A01 (Stamped 91-889622)	91-889623 (Stamped 91-889623)
2.31:1	(13)	91-13778T1 (No Stamp)	91-13780 (Stamped 91-13780)
2.33:1	(12)	91-889622A01 (Stamped 91-889622)	91-889623 (Stamped 91-889623)

Face Seal Installation

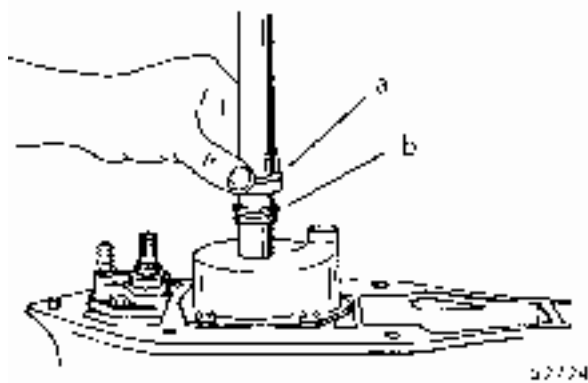


- a) Face Seal Tool
- b) Face Seal

NOTE: If tool is not available, lightly press seal against housing until a height of 0.350 in. \pm 0.030 in. (8.9mm \pm 0.76mm) is obtained.

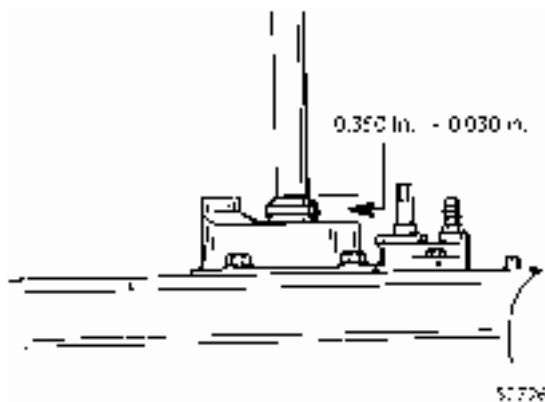


Section 6 - 2.0L, 2.4L and 2.5L V-6 EZ Shift

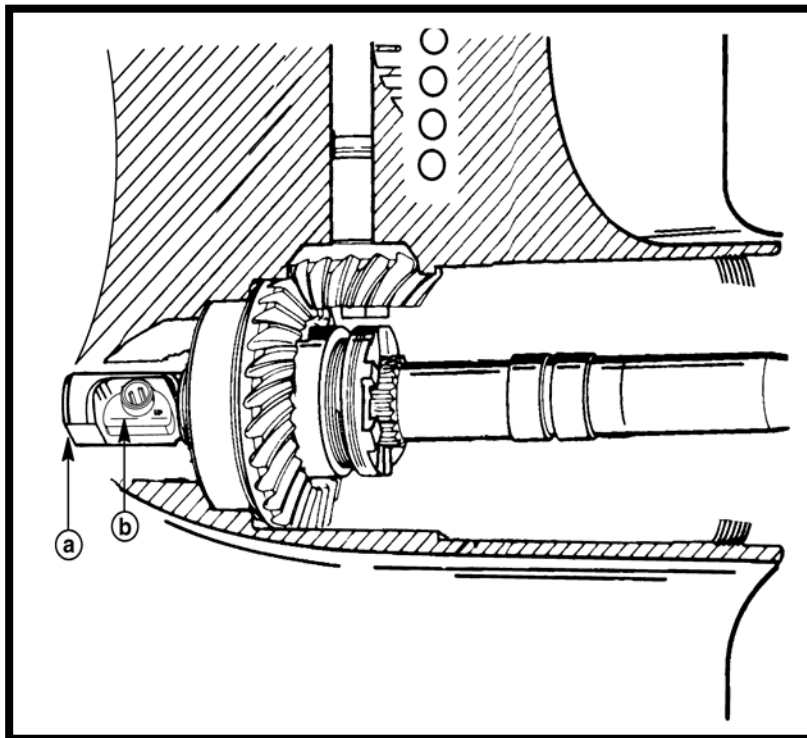

Notes


2.0L, 2.4L and 2.5L V-6 EZ Shift

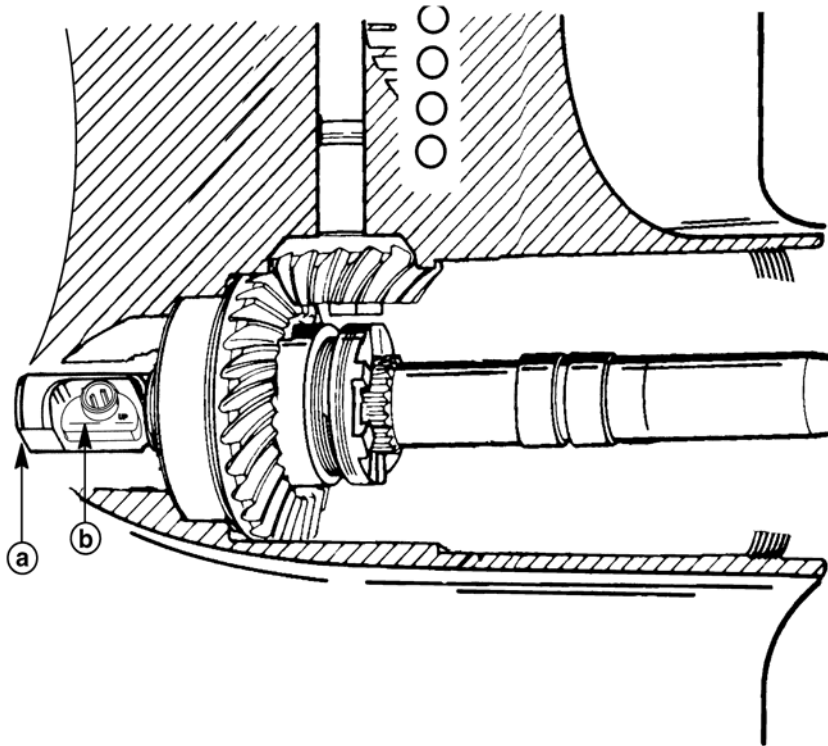

- a) Cam Follower
- b) Shift Cam

Notes

Pinion Height Shimming

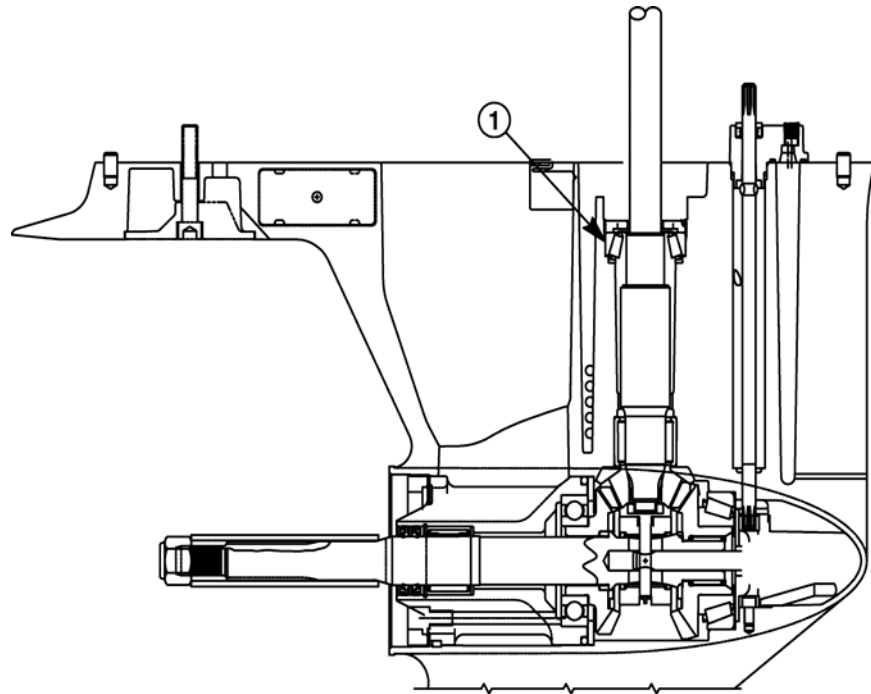

1) Pinion Height Shims

- Adding a shim at the upper driveshaft bearing race will increase pinion height.
- Removing a shim at the upper driveshaft bearing race will decrease pinion height.

Clutch Actuator Rod Change – 1991 135 thru 275

Notes

MARINER AND MERCURY

135 thru 200 - S/N OD044293 and above


275 - S/N OD038988 and above

The clutch actuator rod has changed and the forward spring and washer are not required on the right hand rotation lower units. Counter rotation lower units continue to use the clutch actuator rod with the two springs and washers. With the single spring system, shimming the spring to center the clutch cross pin is not required.

CLUTCH ACTUATOR ROD


	Previous 2 Springs	New 1 Spring
135-200	P/N 79911	P/N 816520
275	P/N 88523	P/N 816519

PREVIOUS RIGHT HAND ROTATION ROD ASSEMBLY

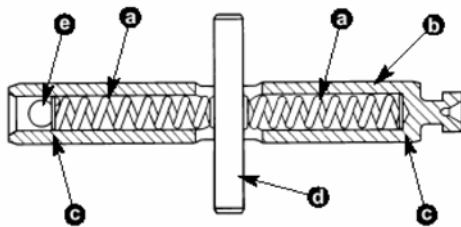

- a) Springs
- b) Clutch Actuator Rod
- c) Washers
- d) Clutch Cross Pin
- e) Retaining Pin


NEW RIGHT HAND ROTATION ROD ASSEMBLY

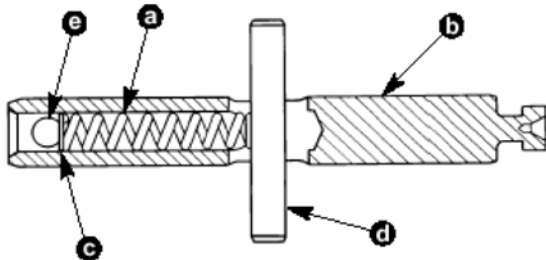

- a) Springs
- b) Clutch Actuator Rod
- c) Washers
- d) Clutch Cross Pin
- e) Retaining Pin

Notes

MEASURING ROD ASSEMBLY

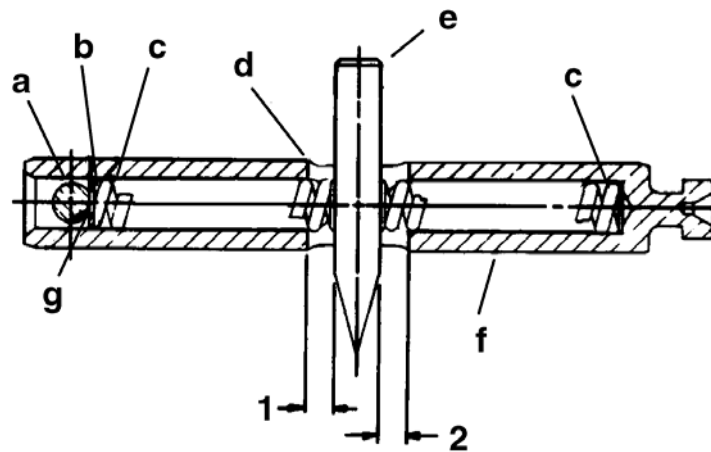

- a) Spring Locating Pin
- b) Shim Washer
- c) Compression Spring
- d) Elongated Slot
- e) Cross Pin Tool (91-86642)
- f) Clutch Actuator Rod
- g) Shim Washer Must Lie Flat on Spring Locating Pin

Gearcase Oil Slinger Eliminated - 1992 135 thru 200

Notes

MARINER AND MERCURY

1992 and newer

135 thru 200

S/N 0D154836 and above

Service Replacement Gearcase produced after 2/18/92

The gear case oil slinger p/n 23-43998 is not installed in the gear case on the models listed. This change was made in conjunction with enlargement of the oil circulation hole from 1/4 inch (6.3 mm) diameter to 3/8 inch (9.5 mm) diameter. The enlargement of the oil circulation hole was made prior to removing the oil slinger to eliminate any assembly error.



a) Oil Slinger


Gearcases with a 1/4 inch (6.3 mm) oil circulation hole must have the oil slinger installed.

IMPORTANT: Gearcases with the 1/4 inch (6.3 mm) diameter oil circulation hole REQUIRE the oil slinger (P/N 23-43998) to provide lubrication to the upper bearing.

Gearcases with a 3/8 inch (9.5 mm) oil circulation hole may or may not have the oil slinger installed without any adverse affect.

The oil circulation hole connects the torpedo area to the upper drive shaft bearing area.

135 thru 200 Gearcase

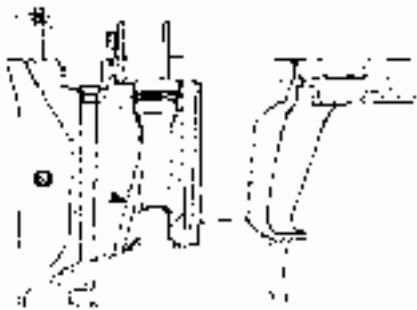

a) Oil Circulation Hole

Non-Ratcheting Gear Case Changes

Notes


1997 CHANGE

Clutch actuator rod – no longer machined for compression springs
compression spring(s) – removed from actuator rod, no longer required

Cross pin changed – old pin had two flat sides, new pin is round. The flat sides are not required because the compression springs have been removed.

One of the two detent pins has been removed and the pin which remains no longer has a hole in the back side of the pin.

Cross and detent pin retainer spring changed from two springs to one spring. The single spring no longer has the bent tab, which on older units, engaged the hole on the detent pin.

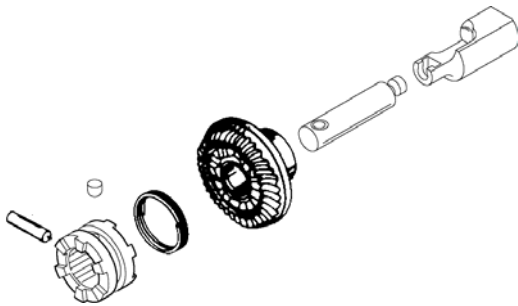


S/N 0G438000

Tip: When running non-ratcheting gearcase on a dyno, use ratchet strap to load the dyno head to gearcase to maintain a load on the forward gear tapered bearing.

Shift Cam

1997 CHANGE


A revised shift cam is used on 1997 models, this cam has a raised boss added to the top. This boss prevents the cam from moving up inside the gear case during operation. If the cam moves up on the shift shaft, the cam could contact the gear housing. The cam contact would limit the amount of clutch travel and, in turn, lower clutch and gear "jaw" life. The new cam can be identified by a casting number of 78956-2 and will back fit older units.

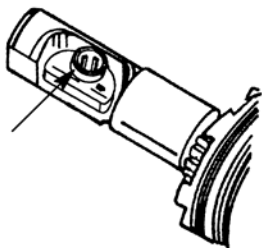

S/N 0G438000

Notes

Forward Gear Bearing Retainer

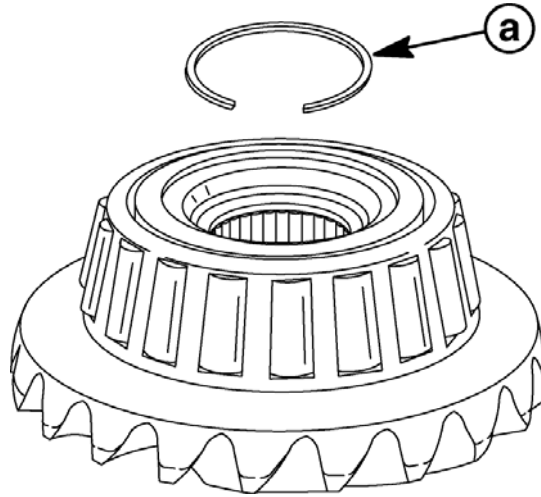

a) Snap Ring

Additional groove and metal retainer (53-856823) was added to the forward gear to prevent the propeller shaft needle bearing from moving towards the rear of the gear. When the bearing moves towards the rear of the gear, shift effort is increased and unit may not have full shift engagement. New service tool 91-877321A1 is required to set the needle bearing at 0.200 inch (5.08 mm) depth.

Section 7 - V-6 XR4, XR6, Mag II, Mag III

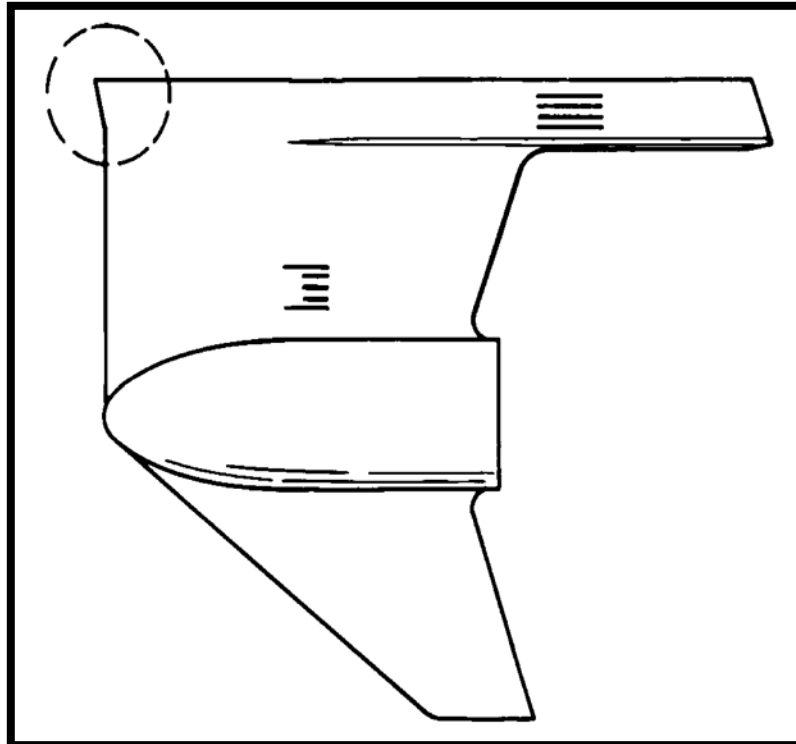



Table of Contents

Table of Contents.....	3
V-6 XR4, XR6, Mag II, Mag III	4
Early Model	4
Later Model	4
Pinion Height Shimming	5
Standard Rotation Backlash	6
Gear Housing (Driveshaft) - XR6/Magnum III - 1.78:1 Ratio	7
Gear Housing (Prop Shaft) - XR6/Magnum III - 1.78:1 Ratio	8
Notes on 4 1/4" Torpedo Bore V-6 Gearcase.....	9
Driveshaft Needle Bearing	9
Clutch Modifications	10


Notes

V-6 XR4, XR6, Mag II, Mag III

Early Model

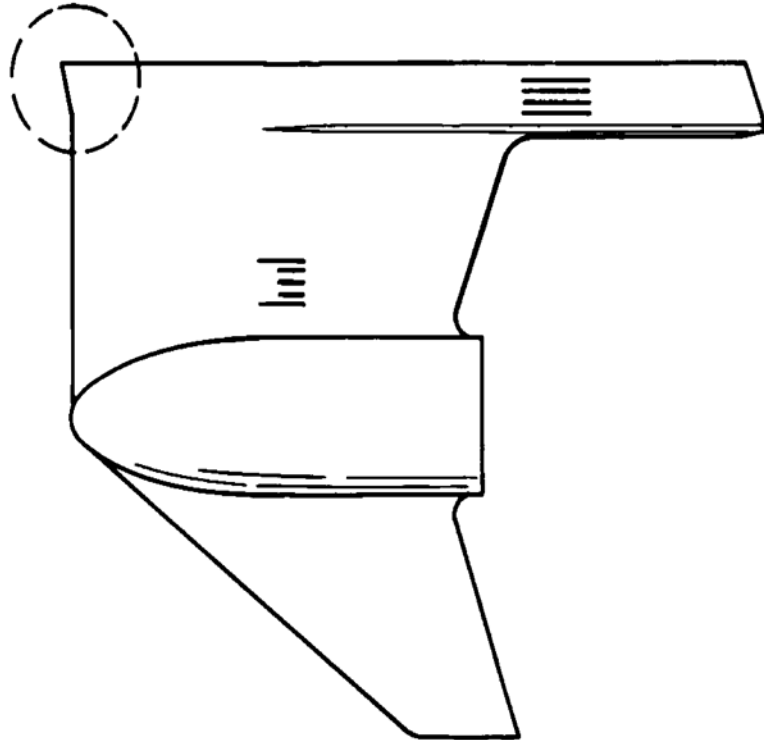


Later Model

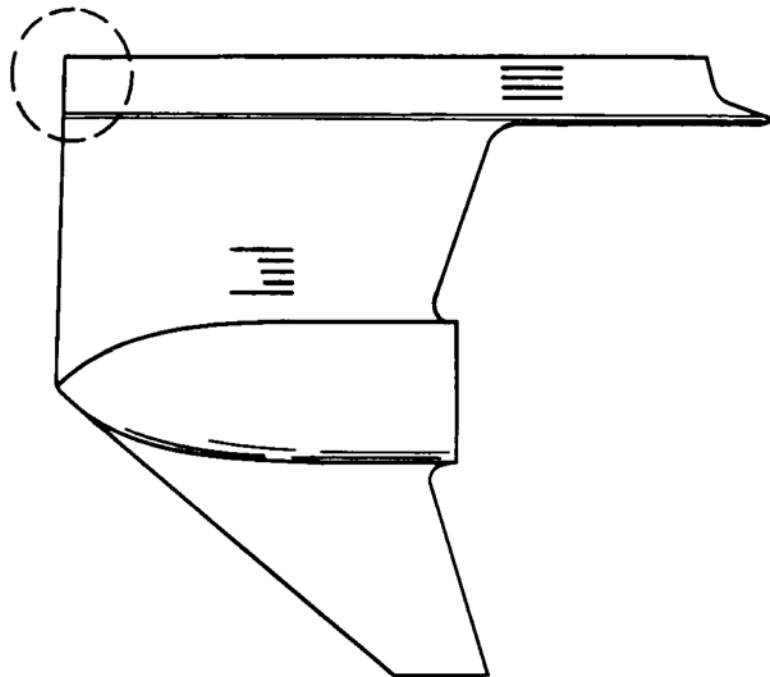

Notes

Standard Rotation Backlash

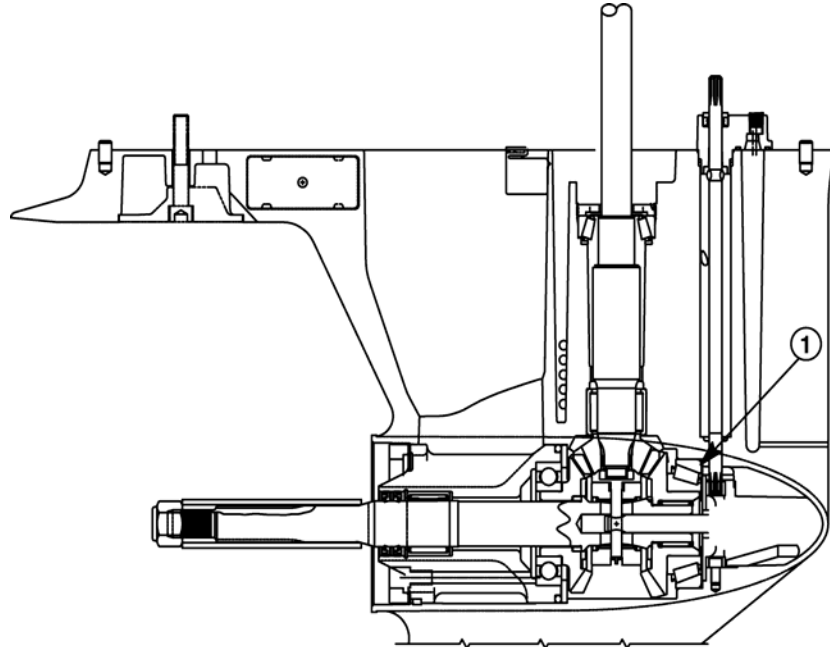

1) Forward Gear Shim Location


FORWARD GEAR BACKLASH (#1)

- Adding a shim at the forward gear bearing race will decrease forward gear backlash.
- Removing a shim at the forward gear bearing race will increase forward gear backlash.

REVERSE GEAR BACKLASH


NOTE: Reverse gear is not adjustable. However, reverse gear backlash which should be 0.030" - 0.048" (0.76mm - 1.21 mm) can be measured to determine proper assembly of gear case. If reverse gear backlash is not within specified tolerance, then gear case is not properly assembled or parts are excessively worn.

Gear Housing (Driveshaft) - XR6/Magnum III - 1.78:1 Ratio

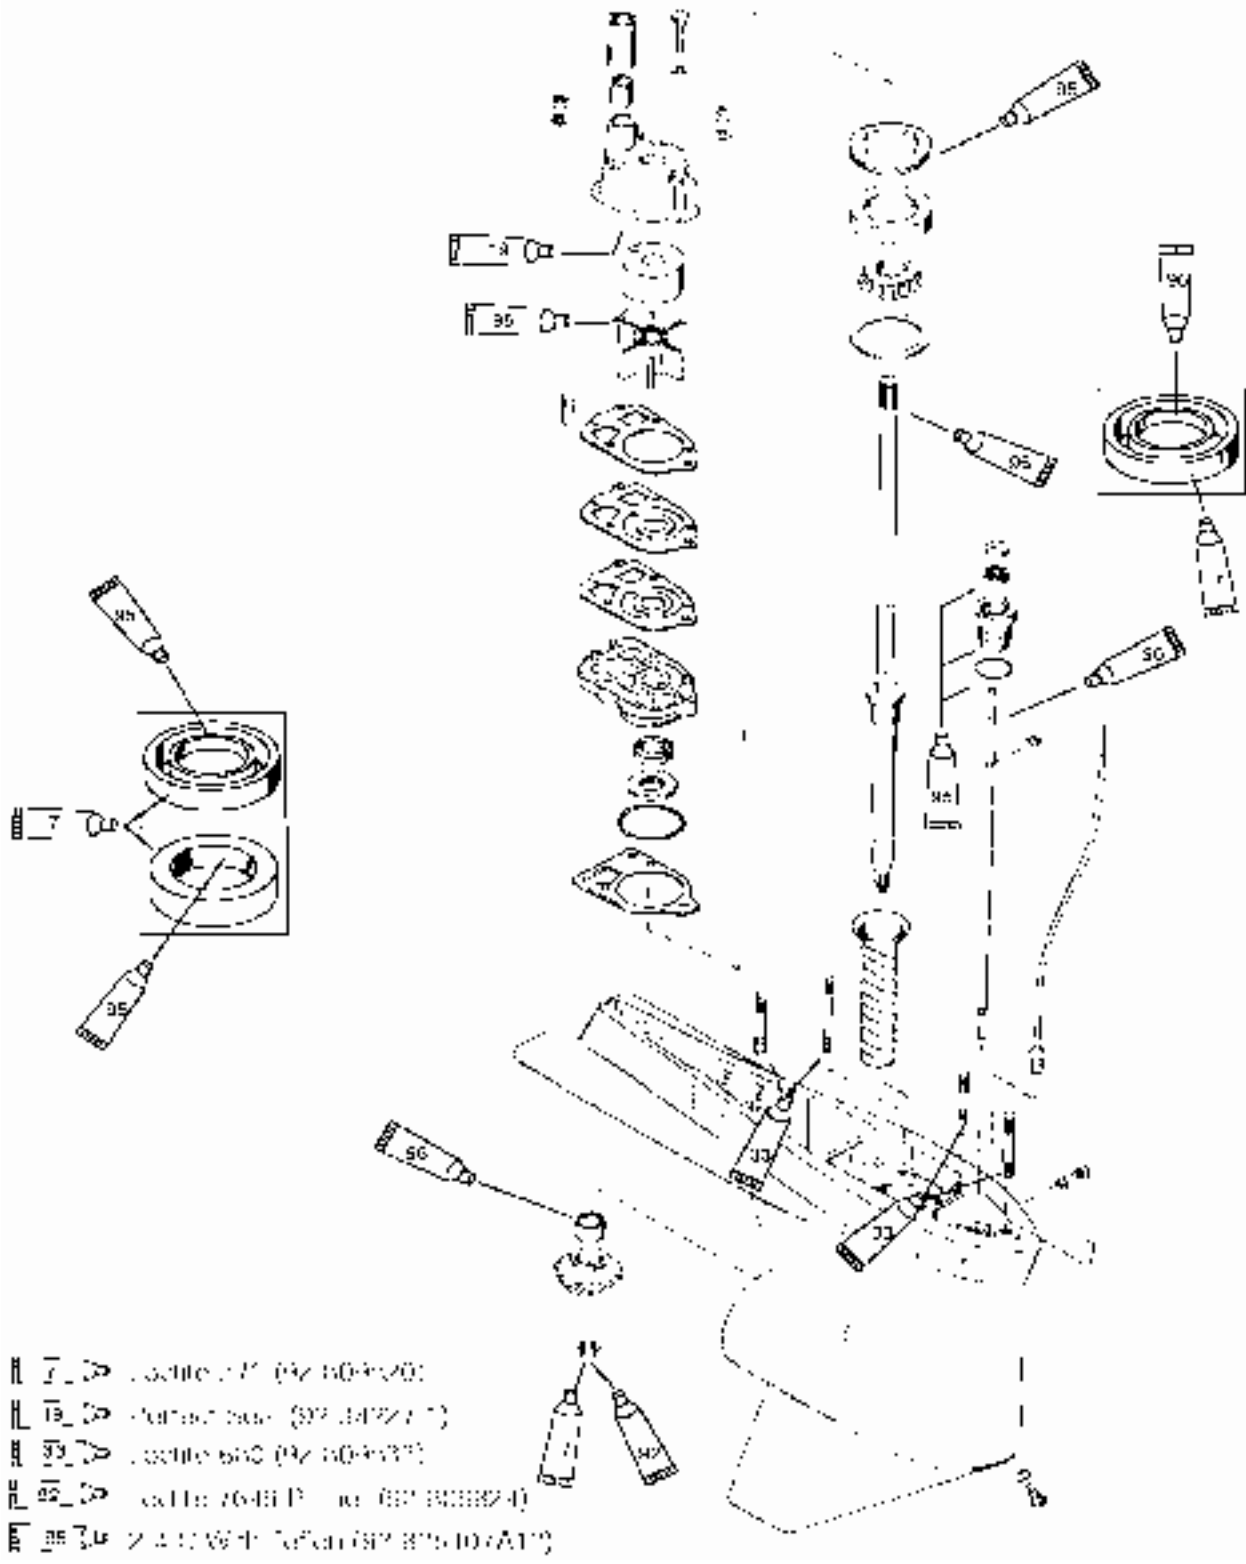

- 17 - Housing (XR6/Magnum III)
- 18 - Output gear (37 14721 1)
- 19 - Input gear (37 14721 1)
- 20 - Output shaft (37 14721 1)
- 21 - Input shaft (37 14721 1)
- 22 - Output bearing (37 14721 1)
- 23 - Input bearing (37 14721 1)
- 24 - Output seal (37 14721 1)
- 25 - Input seal (37 14721 1)
- 26 - Output nut (37 14721 1)
- 27 - Input nut (37 14721 1)
- 28 - Output lock washer (37 14721 1)
- 29 - Input lock washer (37 14721 1)
- 30 - Output lock ring (37 14721 1)
- 31 - Input lock ring (37 14721 1)
- 32 - Output lock ring (37 14721 1)
- 33 - Input lock ring (37 14721 1)
- 34 - Output lock ring (37 14721 1)
- 35 - Input lock ring (37 14721 1)
- 36 - Output lock ring (37 14721 1)
- 37 - Input lock ring (37 14721 1)
- 38 - Output lock ring (37 14721 1)
- 39 - Input lock ring (37 14721 1)
- 40 - Output lock ring (37 14721 1)
- 41 - Input lock ring (37 14721 1)
- 42 - Output lock ring (37 14721 1)
- 43 - Input lock ring (37 14721 1)
- 44 - Output lock ring (37 14721 1)
- 45 - Input lock ring (37 14721 1)
- 46 - Output lock ring (37 14721 1)
- 47 - Input lock ring (37 14721 1)
- 48 - Output lock ring (37 14721 1)
- 49 - Input lock ring (37 14721 1)
- 50 - Output lock ring (37 14721 1)
- 51 - Input lock ring (37 14721 1)
- 52 - Output lock ring (37 14721 1)
- 53 - Input lock ring (37 14721 1)
- 54 - Output lock ring (37 14721 1)
- 55 - Input lock ring (37 14721 1)
- 56 - Output lock ring (37 14721 1)
- 57 - Input lock ring (37 14721 1)
- 58 - Output lock ring (37 14721 1)
- 59 - Input lock ring (37 14721 1)
- 60 - Output lock ring (37 14721 1)
- 61 - Input lock ring (37 14721 1)
- 62 - Output lock ring (37 14721 1)
- 63 - Input lock ring (37 14721 1)
- 64 - Output lock ring (37 14721 1)
- 65 - Input lock ring (37 14721 1)
- 66 - Output lock ring (37 14721 1)
- 67 - Input lock ring (37 14721 1)
- 68 - Output lock ring (37 14721 1)
- 69 - Input lock ring (37 14721 1)
- 70 - Output lock ring (37 14721 1)
- 71 - Input lock ring (37 14721 1)
- 72 - Output lock ring (37 14721 1)
- 73 - Input lock ring (37 14721 1)
- 74 - Output lock ring (37 14721 1)
- 75 - Input lock ring (37 14721 1)
- 76 - Output lock ring (37 14721 1)
- 77 - Input lock ring (37 14721 1)
- 78 - Output lock ring (37 14721 1)
- 79 - Input lock ring (37 14721 1)
- 80 - Output lock ring (37 14721 1)
- 81 - Input lock ring (37 14721 1)
- 82 - Output lock ring (37 14721 1)
- 83 - Input lock ring (37 14721 1)
- 84 - Output lock ring (37 14721 1)
- 85 - Input lock ring (37 14721 1)
- 86 - Output lock ring (37 14721 1)
- 87 - Input lock ring (37 14721 1)
- 88 - Output lock ring (37 14721 1)
- 89 - Input lock ring (37 14721 1)
- 90 - Output lock ring (37 14721 1)
- 91 - Input lock ring (37 14721 1)
- 92 - Output lock ring (37 14721 1)
- 93 - Input lock ring (37 14721 1)
- 94 - Output lock ring (37 14721 1)
- 95 - Input lock ring (37 14721 1)
- 96 - Output lock ring (37 14721 1)
- 97 - Input lock ring (37 14721 1)
- 98 - Output lock ring (37 14721 1)
- 99 - Input lock ring (37 14721 1)
- 100 - Output lock ring (37 14721 1)

Gear Housing (Prop Shaft) - XR6/Magnum III - 1.78:1 Ratio

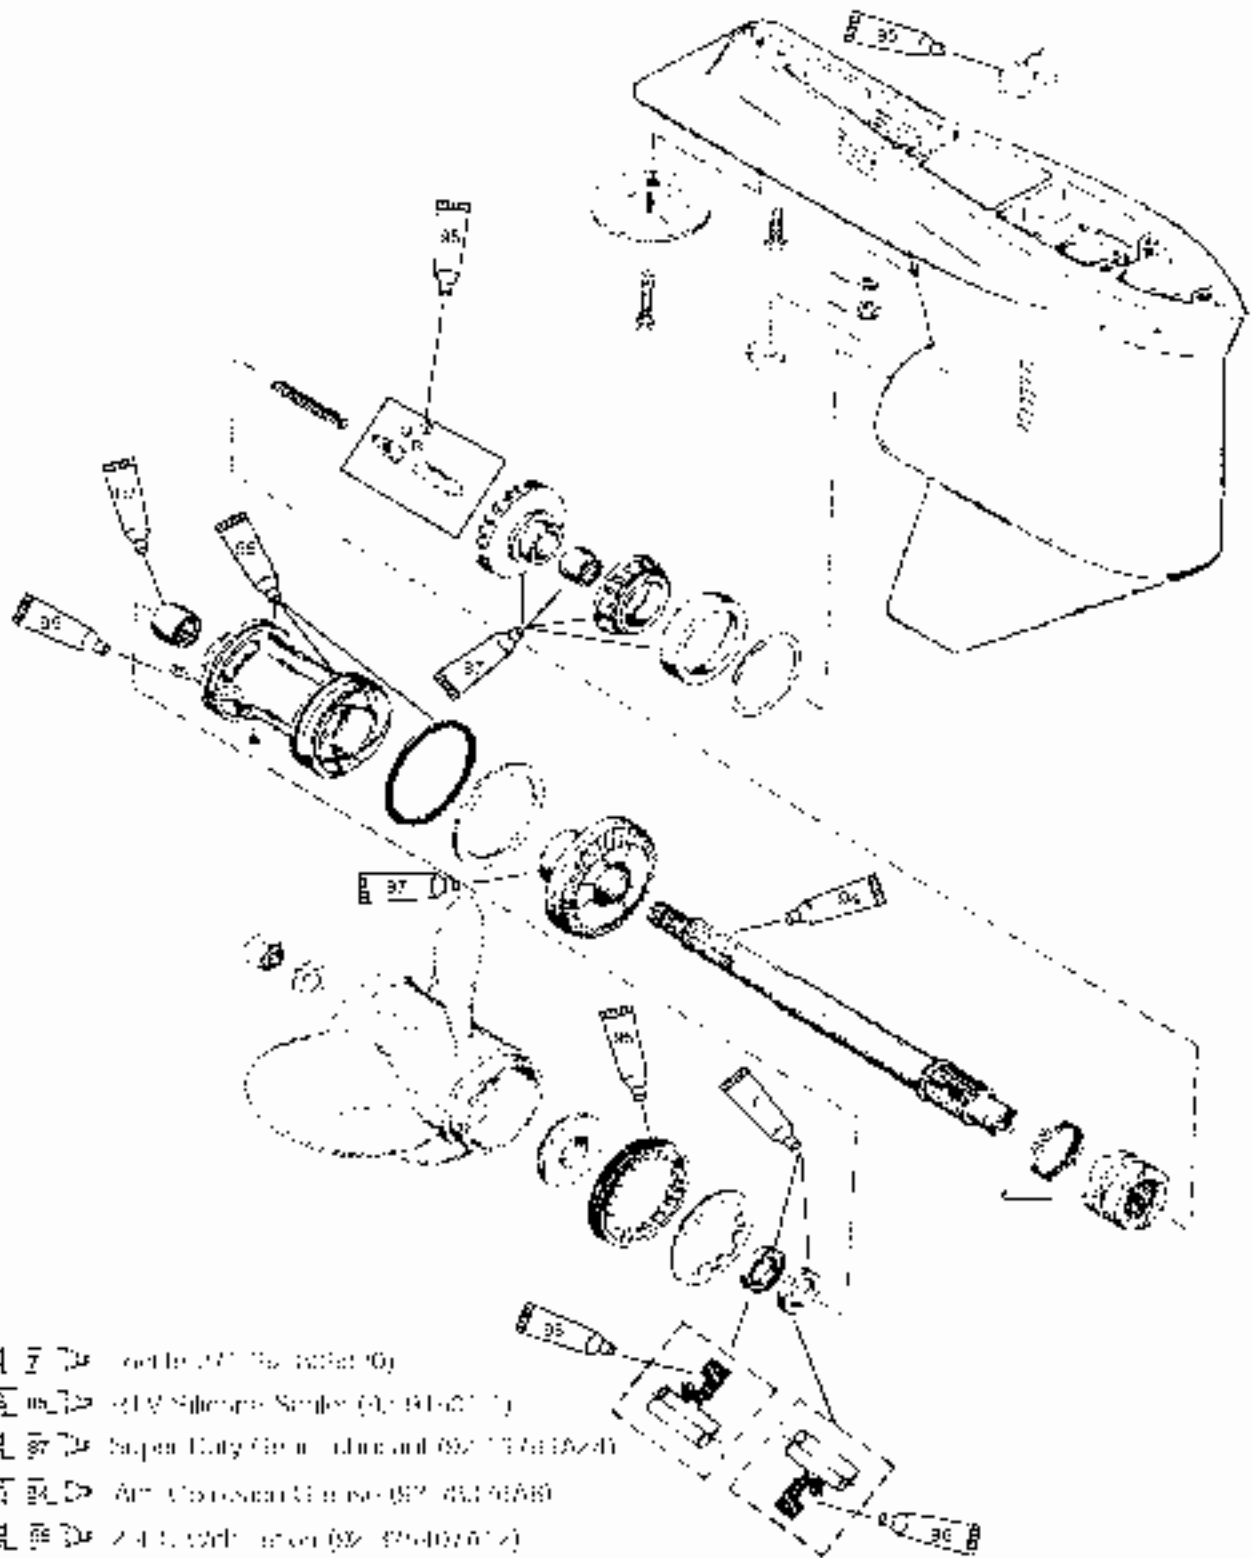

Section 8 - 3.0 Liter

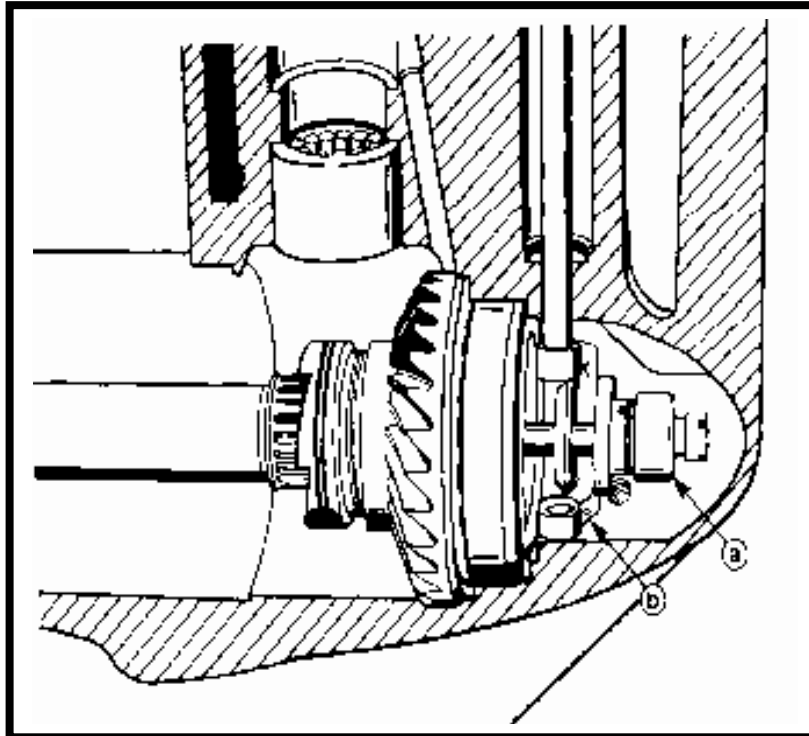



Table of Contents

Table of Contents.....	2
Table of Contents.....	3
3.0 Liter	4
Spool Shift	4
Pinion Height Shimming	5
Standard Rotation Backlash	6
Counter-Rotation Backlash	6
Shift Spool Identification.....	7
Shift Spool Identification.....	8
Spool Adjustment	9
All 3.0 Litre Product.....	10
Gear Case Change	10
Water Tube.....	10
Forward Gear Bearing Retainer	12
Propeller Shaft and Reverse Thrust Washer Inspection	12
3.0L Dual Upper Driveshaft Bearing.....	13
Drive Shaft Seal Carrier	14

Notes

3.0 Liter


Spool Shift

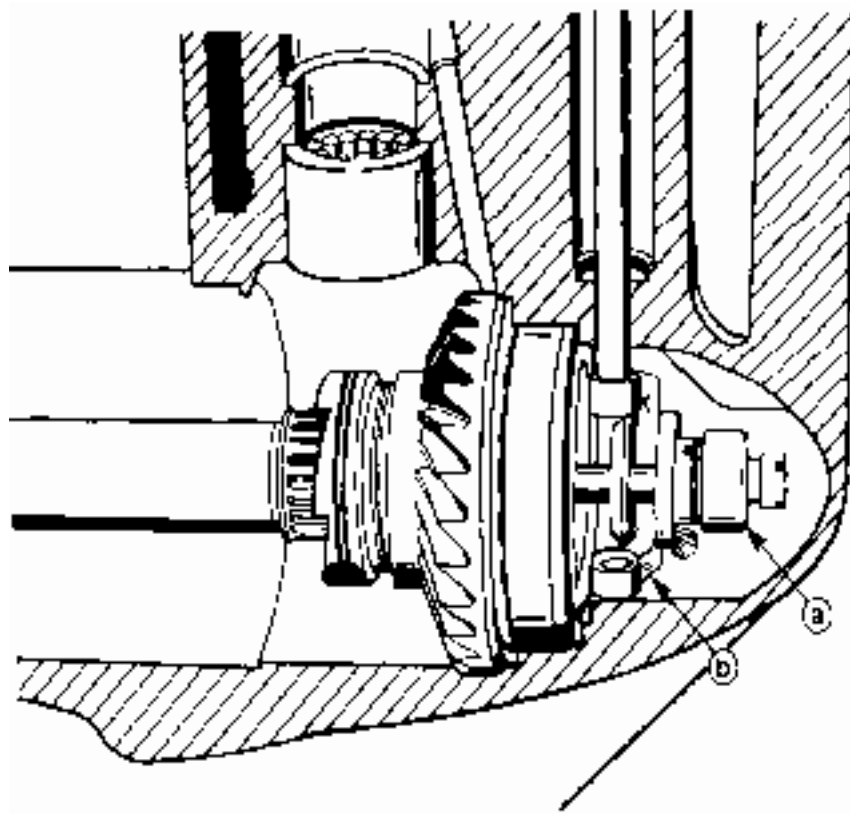

- a) Shift Spool
- b) Shift Crank

Notes

Standard Rotation Backlash

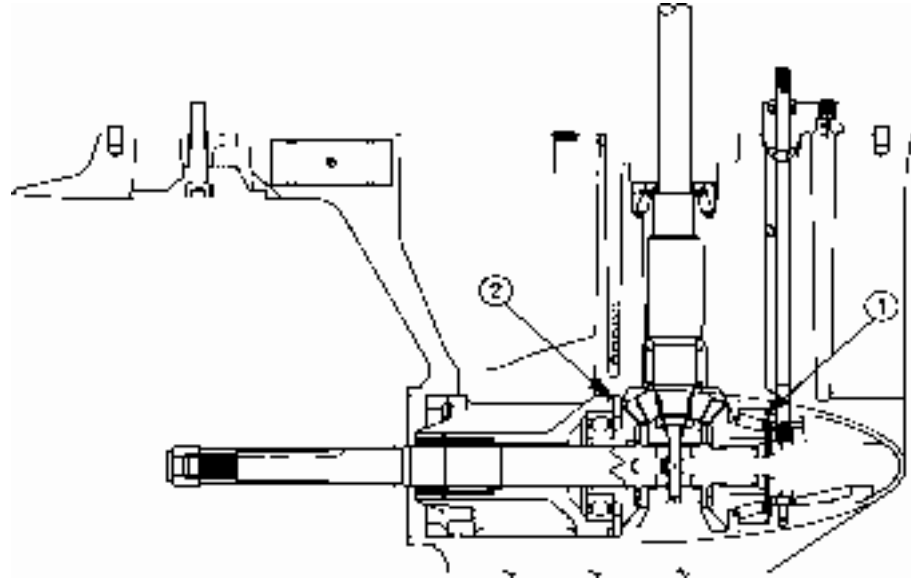

1) Gear Shim Location

2) Gear Shim Location

FORWARD GEAR BACKLASH (#1)

- Adding a shim at the forward gear bearing race will decrease forward gear backlash.
- Removing a shim at the forward gear bearing race will increase forward gear backlash.

REVERSE GEAR BACKLASH (#2)

- If reverse gear backlash is incorrect, gear case is assembled incorrectly or parts are worn.

Counter-Rotation Backlash

- The gear positions in a counter-rotation gear case are reversed. Reverse gear is located closest to the leading edge and forward gear is located closest to the propeller.

FORWARD GEAR BACKLASH (#2)

- Adding a shim at the forward gear bearing race will increase forward gear backlash.
- Removing a shim at the forward gear bearing race will decrease forward gear backlash.


REVERSE GEAR BACKLASH (#1)

- Adding a shim at the shoulder in the gear case will decrease reverse gear backlash.
- Removing a shim at the shoulder in the gear case will increase reverse gear backlash.

Notes


Shift Spool Identification

RATCHETING SHIFT SPOOL

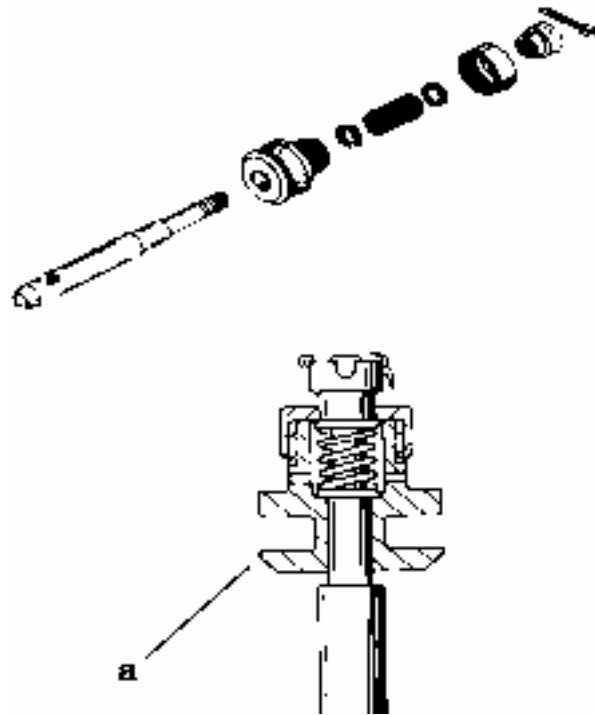

a) Ratcheting Spool

NON-RATCHETING SHIFT SPOOL

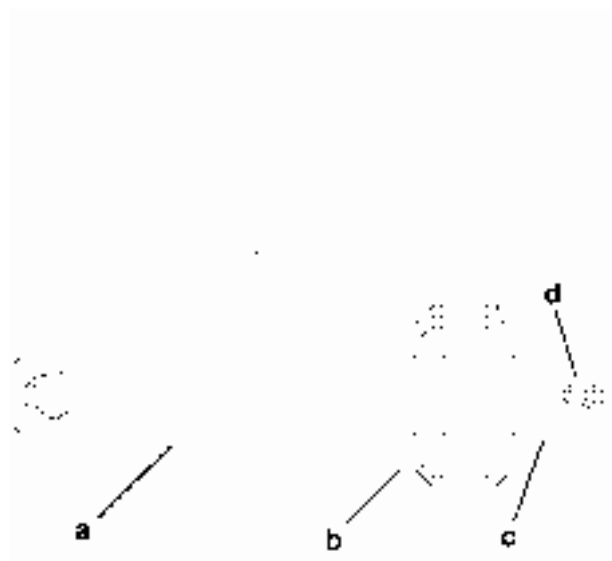


- a) Shift Spool Shaft
- b) Shift Spool
- c) Castle Nut
- d) Cotter Pin

Rounded clutch dogs can be attributed to incorrect adjustment, improper shifting or excessive idle speed.


Spool Adjustment

Inspect to insure that the spool has no more than 0.002-0.010 (0.05-0.25 mm) end play.

Notes

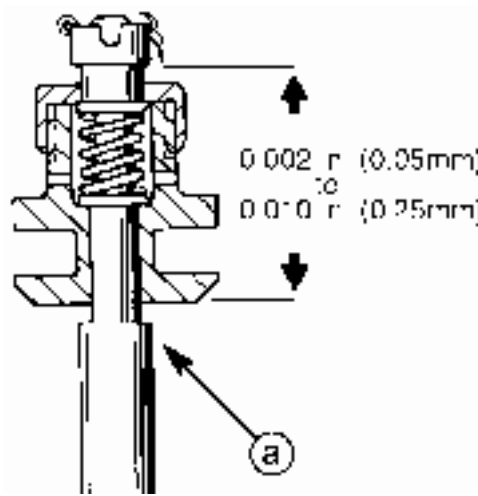

a) Ratcheting Type Spool

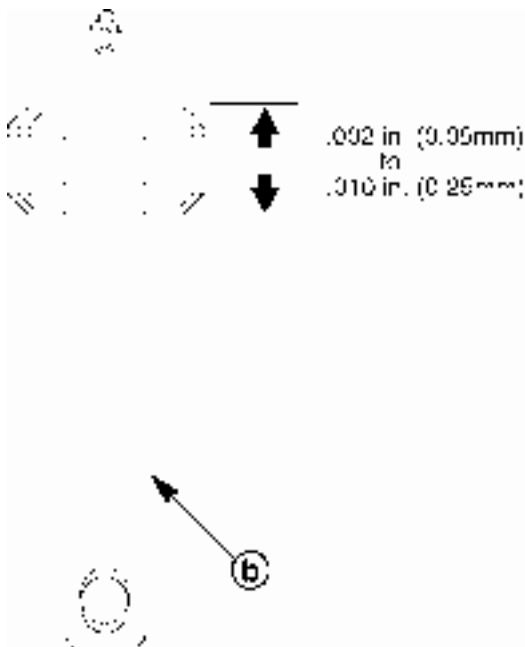

b) Non-Ratcheting Type Spool


If this adjustment did not produce the desired results it will be necessary to disassemble, clean, and reassemble the shift spool assembly. If the spool assembly has been already disassembled and cleaned it will be necessary to replace the shift spool assembly.

All 3.0 Litre Product

Notes

Gear Case Change

The gear case changed from 10 water pick-up holes to 16 water pick-up holes. This provides increased water pressure/flow into the cooling system. The new gear housing will back fit as a complete lower unit, however the original water tube coupler must be used. The water tube coupler supplied with the replacement lower unit is for the 1" water tube and will not seal the 3/4" tube used on the older engines. The gear housing can be used to repair older engines if the following parts are used:

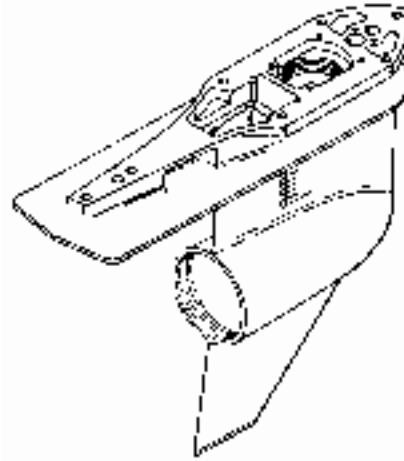

Standard rotation - the large bearing on the forward gear must be changed.

Counter rotation - the reverse gear bearing adaptor must be changed if the old gear housing has a casting number 1623-822442C2

Refer to Quicksilver Parts Bulletin 96-2

Water Tube

1997 CHANGE


To allow this increased pressure/flow from the 16 hole gear case into the powerhead the water tube diameter increased from 3/4" to 1" along with the necessary seals and castings. This will improve water flow and decrease water tube erosion.



Notes

Forward Gear Bearing Retainer


Additional groove and metal retainer (53-856823) was added to the forward gear to prevent the propeller shaft needle bearing from moving towards the rear of the gear. When bearing moves towards the rear of the gear, shift effort is increased and unit may not have full shift engagement. New service tool 91-877321A1 is required to set the needle bearing at 0.200 inch (5.08 mm) depth.

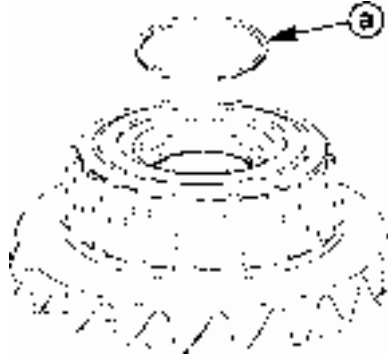


a) Snap Ring

When bearing moves towards the rear of the gear, shift effort is increased and unit may not have full shift engagement.

Propeller Shaft and Reverse Thrust Washer Inspection

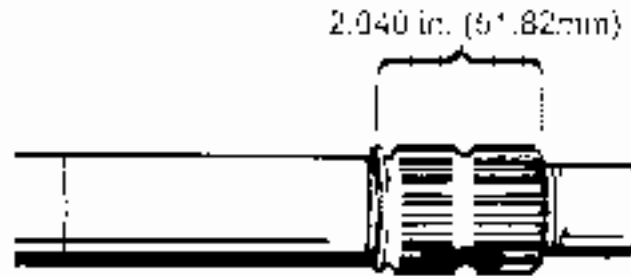

Measure propeller shaft FORWARD to REVERSE shoulder length. If measurement is under 2.040 in. (51.82mm), replace propeller shaft.

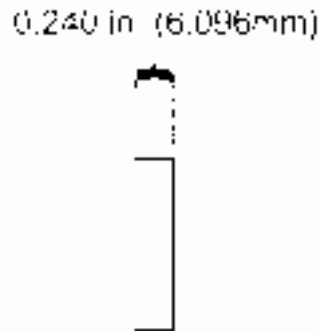

Inspect REVERSE thrust washer for wear or taper. Measure thickness of washer. If thickness is LESS than 0.240 in. (6.1mm), replace washer.

Drive Shaft Seal Carrier

- 3.0 Liter Opti/EFI
- Orange coating on carrier O-ring flaking off, replaced with black O-ring.
- Carrier changed to Yellow for contrast between carrier & O-ring.



Notes

Section 9 - 225 EFI FourStroke

Table of Contents

Table of Contents	2
225 EFI FourStroke - Shimming Standard Rotation Gearcase.....	3
Selecting the Pinion Shims	3
Selecting the Forward Gear Shims	5
Selecting the Reverse Gear Shims	7
Measuring Backlash.....	9
225 EFI FourStroke - Shimming Counter Rotation Gearcase	11
Selecting the Pinion Shims	11
Selecting the Reverse Gear Shims	13
Selecting the Forward Gear Shims	15
Selecting Propeller Shaft Shims.....	17
Measuring Backlash.....	18

225 EFI FourStroke - Shimming Standard Rotation Gearcase


Notes

Selecting the Pinion Shims


FORMULA

$$(T3) = 82.0 + P/100 - M3 - M4$$

T3 – SHIM THICKNESS

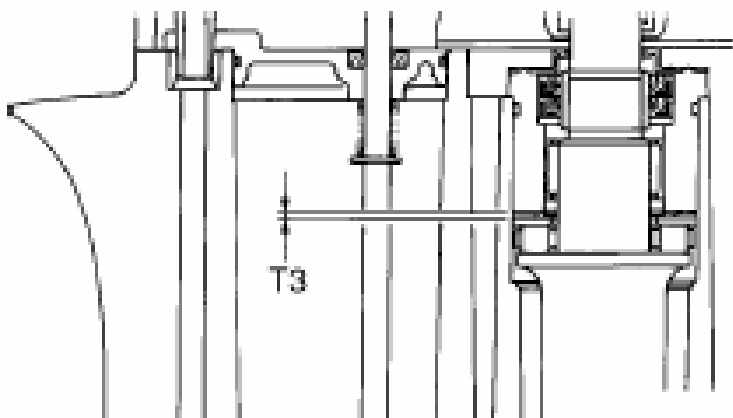


M4 – DISTANCE BETWEEN SHIMMING TOOL AND PINION

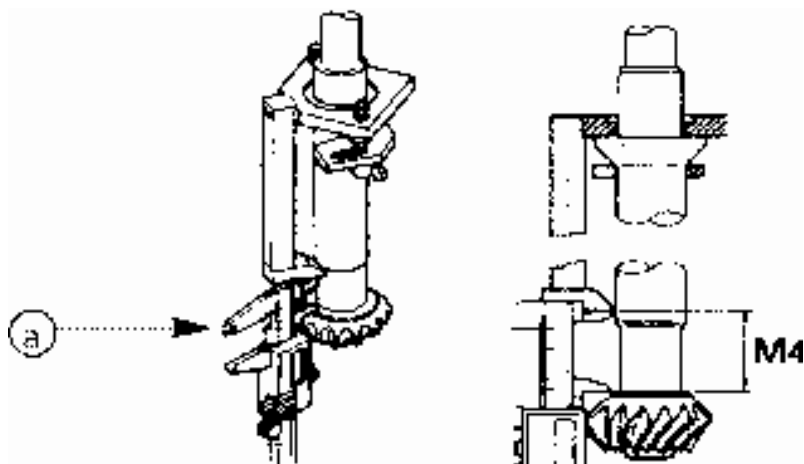

a) Calipers


Notes

M3 – DRIVE SHAFT BEARING CARRIER MEASUREMENT

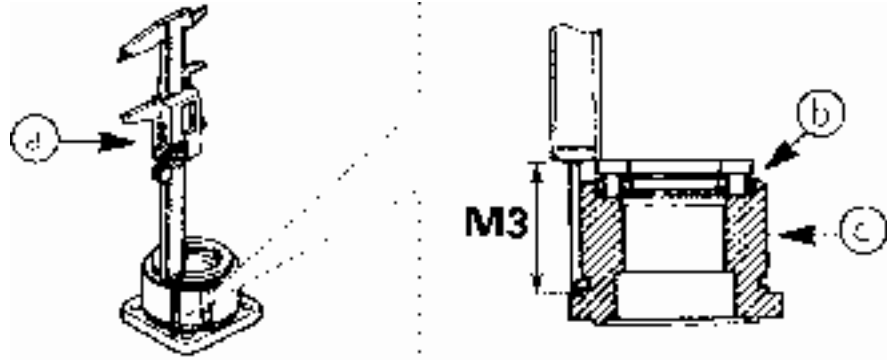

a) Calipers

“P” MARK – GEAR HOUSING DIMENSION DEVIATION FROM STANDARD

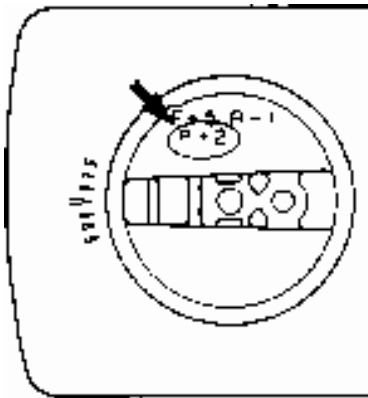


T3 RESULTS – ROUNDING TABLE

Calculated Numeral at 1/100 Place	Rounded Numeral
1, 2	0
3, 4, 5	2
6, 7, 8	5
9, 10	8

LAB EXERCISE

ACTUAL				
T3	= 82.0	+ P/100	- M3	- M4
_____	= 82.0	+ ____/100= _____	_____	_____

M1 – FORWARD GEAR BEARING HEIGHT

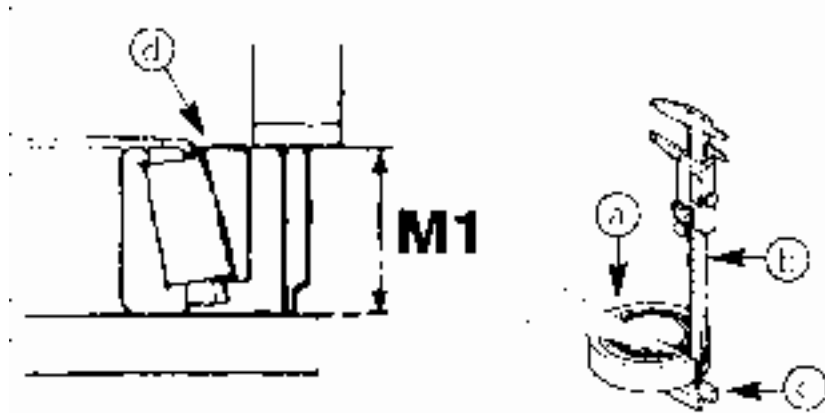

- a) Forward Gear Tapered Roller Bearing
- b) Caliper
- c) Shimming Plate (91-889586)
- d) Forward Gear Taperd Roller Bearing Race


T1 RESULTS – ROUNDING TABLE

Calculated Numeral at 1/100 Place	Rounded Numeral
1, 2	0
3, 4, 5	2
6, 7, 8	5
9, 10	8

LAB EXCERCISE

ACTUAL			
T1	= 29.5	+ F/100	- M1
_____	= 29.5	+ _____/100= _____	_____

“A” MARK – BEARING CARRIER DIMENSION DEVIATION FROM STANDARD

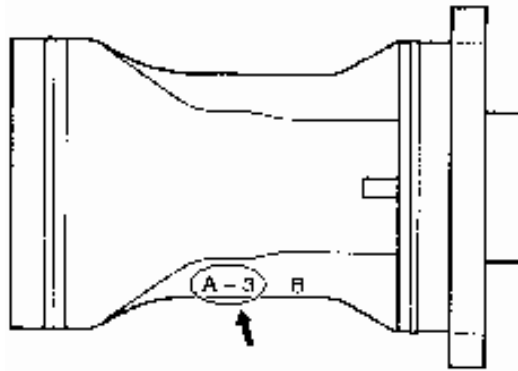

T2 RESULTS – ROUNDING TABLE


Calculated Numeral at 1/100 Place	Rounded Numeral
1, 2	0
3, 4, 5	2
6, 7, 8	5
9, 10	8

LAB EXCERCISE


ACTUAL				
T2	= 21.0	+ R/100	- A/100	- M2
_____	= 21.0	+ _____/100= _____	- _____/100= _____	_____

Notes

REVERSE GEAR

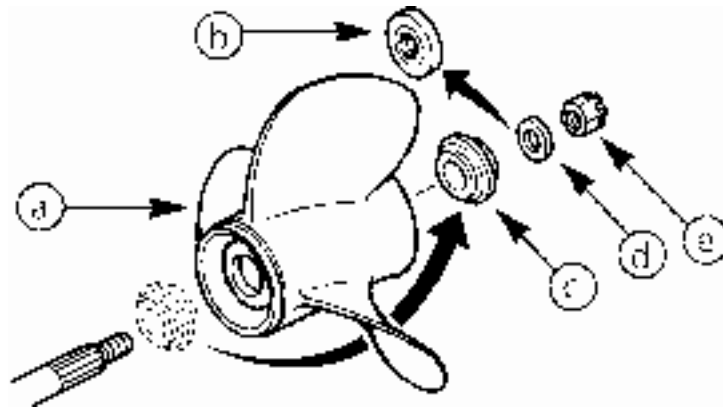

- a - Propeller
- b - Spline washer (DO NOT USE)
- c - Spacer
- d - Washer
- e - Nut

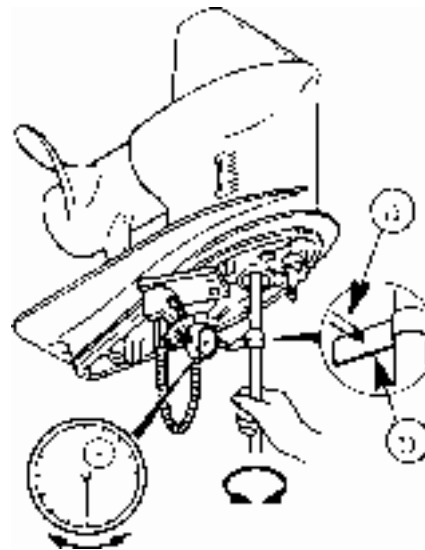

- a - Dial gauge plunger
- b - Backlash indicator

Forward Gear Backlash	Shim Thickness
Less than 0.70 mm	To be decreased by $(0.87 - M) \times 0.71$
More than 1.03 mm	To be increased by $(M - 0.87) \times 0.71$

M = Measurement

Available Shim Thickness: 0.10 mm, 0.12 mm, 0.15 mm, 0.18 mm, 0.30 mm, 0.40 mm, and 0.50 mm.

225 EFI FourStroke - Shimming Counter Rotation Gearcase


Notes

Selecting the Pinion Shims


FORMULA

$$(T3) = 82.0 + P/100 - M3 - M4$$

T3 – SHIM THICKNESS

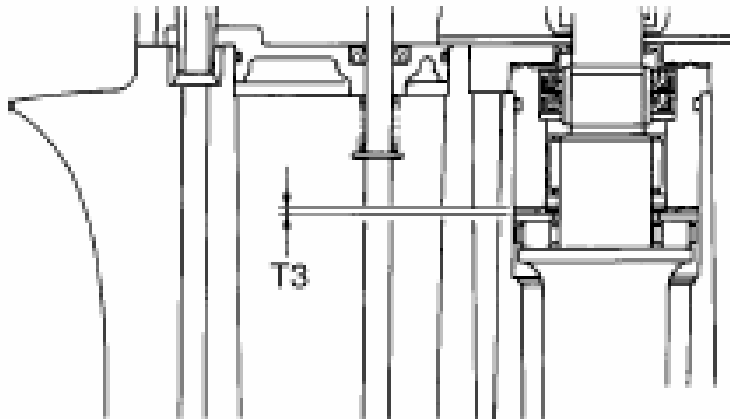


M4 – DISTANCE BETWEEN SHIMMING TOOL AND PINION

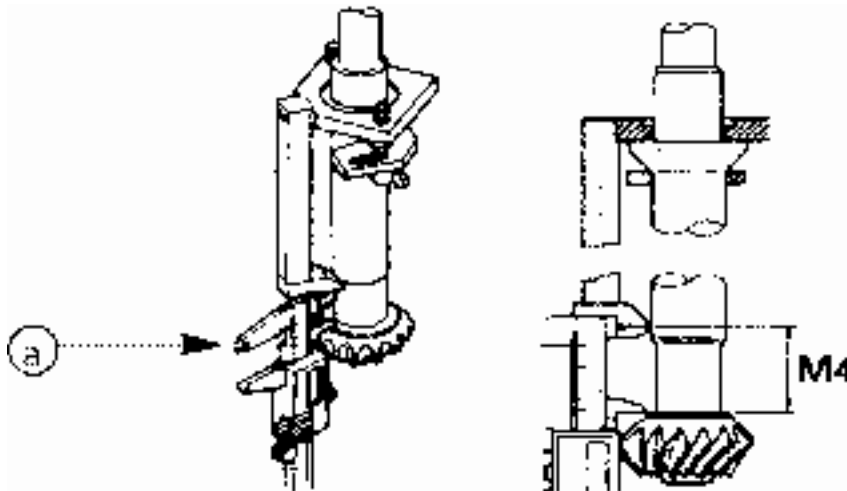


Notes

M3 – DRIVE SHAFT BEARING CARRIER MEASUREMENT

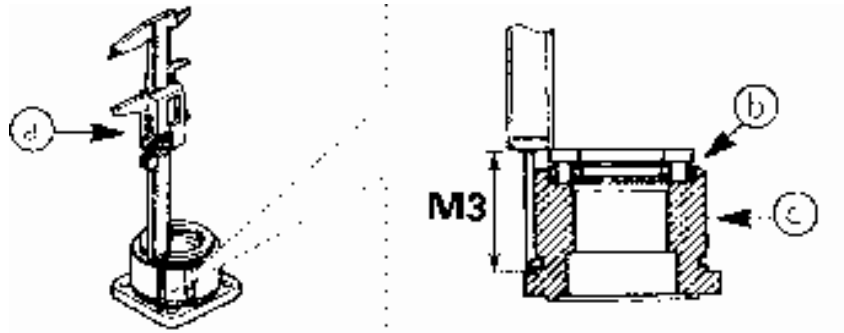

“P” MARK – GEAR HOUSING DIMENSION DEVIATION FROM STANDARD

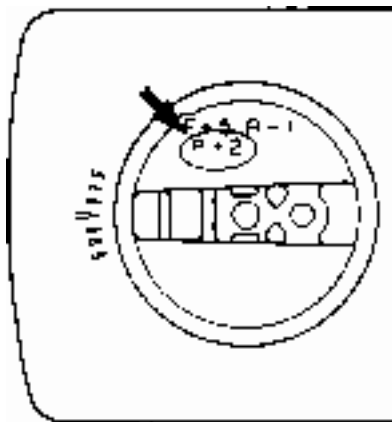


T3 RESULTS – ROUNDING TABLE

Calculated Numeral at 1/100 Place	Rounded Numeral
1, 2	0
3, 4, 5	2
6, 7, 8	5
9, 10	8

LAB EXERCISE

ACTUAL				
T3	= 82.0	+ P/100	- M3	- M4
_____	= 82.0	+ ____/100= _____	_____	_____

M1 – REVERSE GEAR BEARING HEIGHT

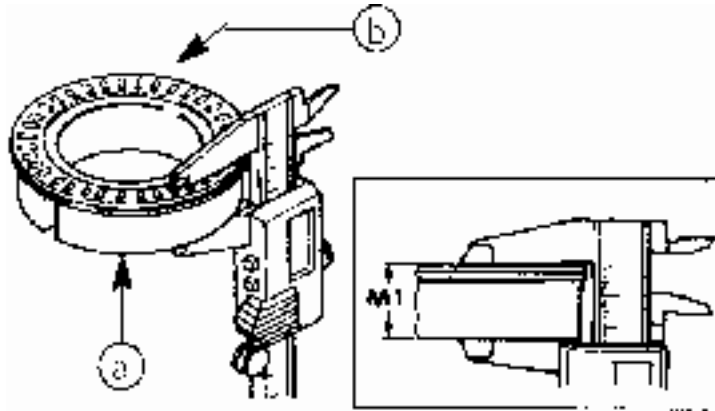

T1 RESULTS – ROUNDING TABLE

Calculated Numeral at 1/100 Place	Rounded Numeral
1, 2	0
3, 4, 5	2
6, 7, 8	5
9, 10	8

LAB EXCERCISE


ACTUAL			
T1	= 30.60	+ F/100	- M1
_____	= 30.60	+ _____/100= _____	_____

Selecting the Forward Gear Shims


FORMULA

$$(T2) = 8.45 + R/100 - A/100 - M5 + M6$$


T2 - FORWARD GEAR SHIM THICKNESS, M5 & M6 BEARING HEIGHT

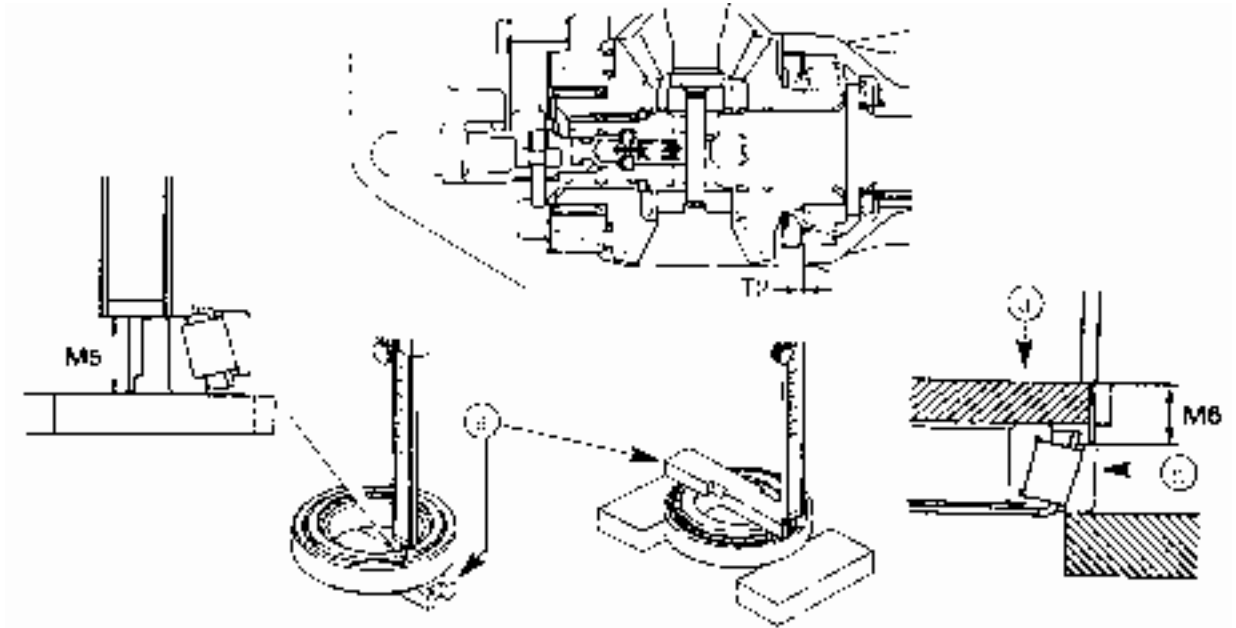

“R” MARK – GEAR HOUSING DIMENSION DEVIATION FROM STANDARD

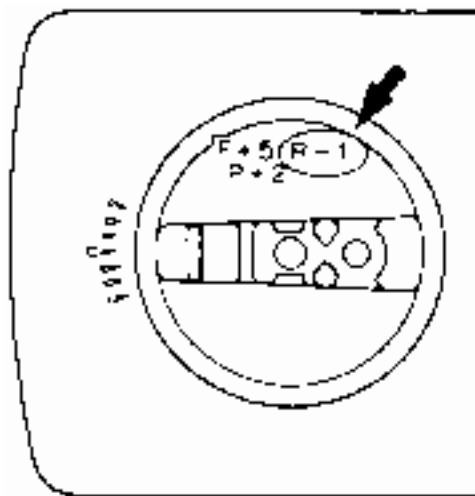

“A” MARK – BEARING CARRIER DIMENSION DEVIATION FROM STANDARD

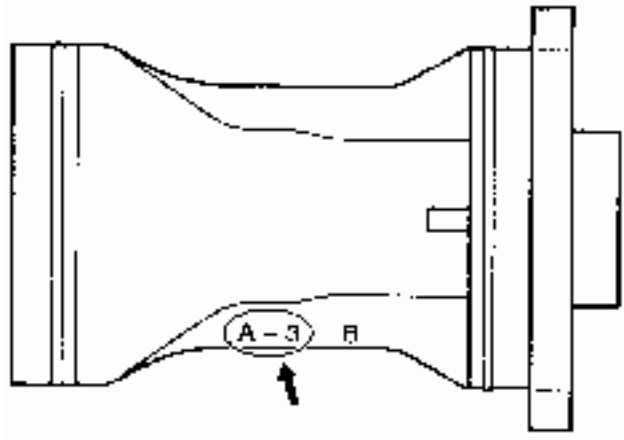

T2 RESULTS – ROUNDING TABLE

Calculated Numeral at 1/100 Place	Rounded Numeral
1, 2	0
3, 4, 5	2
6, 7, 8	5
9, 10	8


LAB EXCERCISE

ACTUAL					
T2	= 8.45	+ R/100	- A/100	- M5	+ M6
_____	= 8.45	+ _____/100= _____	- _____/100= _____	_____	_____


Notes

Measuring Backlash

REVERSE GEAR

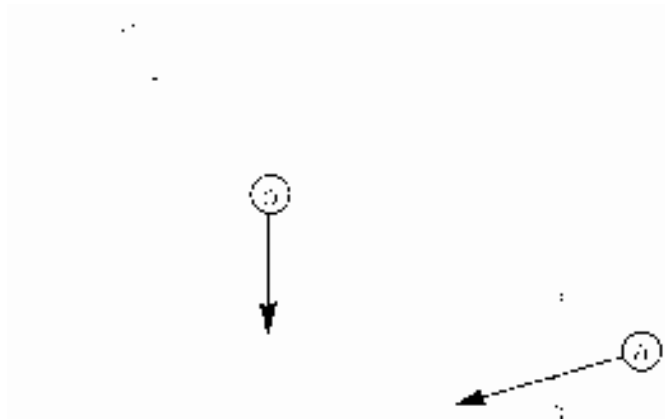

- a - Puller jaws (91-46086A1)
- b - Universal puller screw (91-85716)

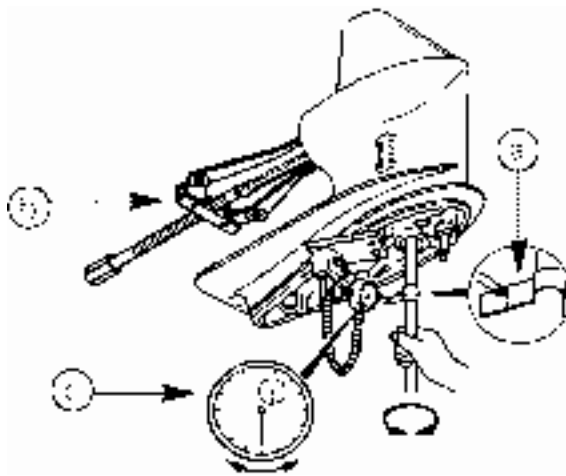


- a - Backlash indicator
- b - Puller
- c - Dial indicator

Reverse Gear Backlash	Shim Thickness
Less than 0.35 mm	To be decreased by $(0.53 - M) \times 0.71$
More than 0.70 mm	To be increased by $(M - 0.53) \times 0.71$

M = Measurement

Available Shim Thickness: 0.10 mm, 0.12 mm, 0.15 mm, 0.18 mm, 0.30 mm, 0.40 mm, and 0.50 mm.

Notes

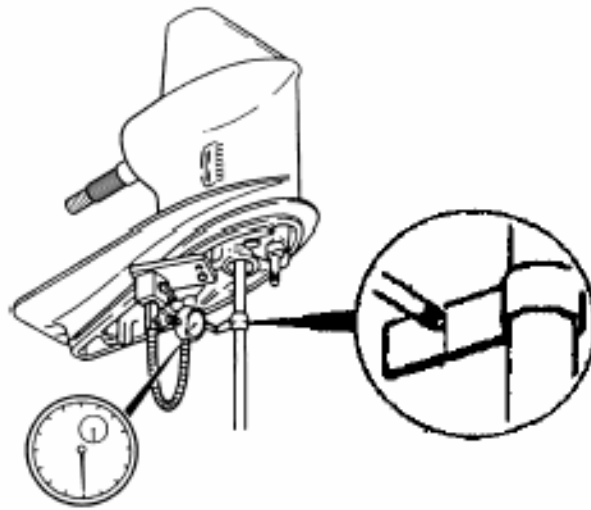

Forward Gear Backlash	Shim Thickness
Less than 0.70 mm	To be decreased by $(0.87 - M) \times 0.71$
More than 1.03 mm	To be increased by $(M - 0.87) \times 0.71$

M = Measurement

Available Shim Thickness: 0.10 mm, 0.12 mm, 0.15 mm, 0.18 mm, 0.30 mm, 0.40 mm, and 0.50 mm.

Section 10 - High Performance Gearcases


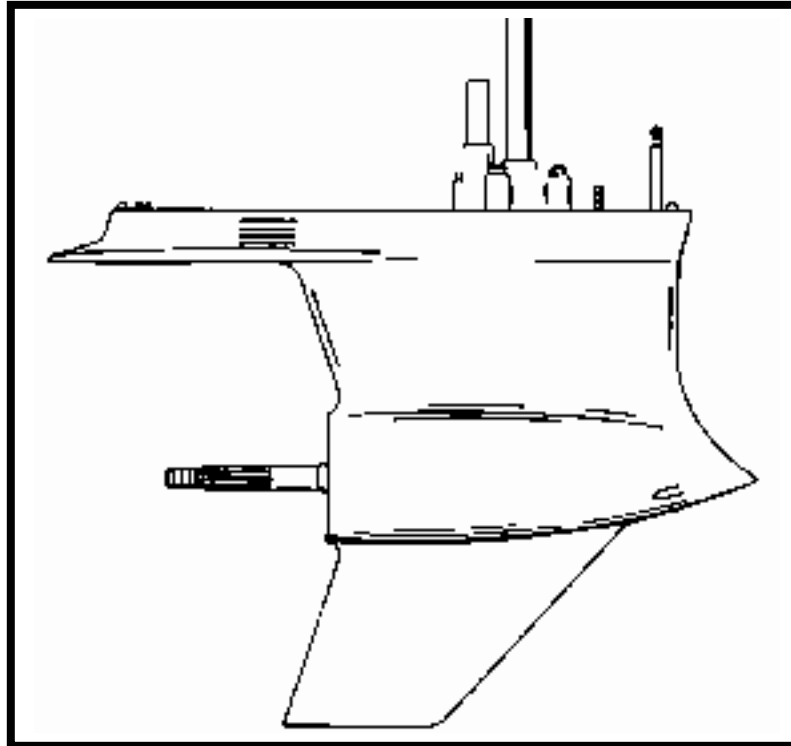


Table of Contents

Table of Contents.....	3
High Performance Gearcases.....	4
Warranty.....	4
Recommended Outboard Mounting Height.....	4
Standard Gear Housing Assembly.....	5
Mercury Hi-Performance Torque Master / Fleetmaster Gear Housing Assembly.....	6
Mercury Hi-Performance Sport Master Gear Case Assembly.....	7
Mercury Hi-Performance CLE Gear Housing Assembly.....	7
Hi-Performance Internal Components.....	8
2.5L Hi-Performance Gear Cases.....	9
3.0L Hi-Performance Gear Cases.....	10
Solid or Firm Motor Mounts.....	11
Draining/Inspecting Lubricant.....	12
Clutch Cross Pin.....	13
Propshaft Upgrade.....	14
Accessories.....	15

Notes

High Performance Gearcases

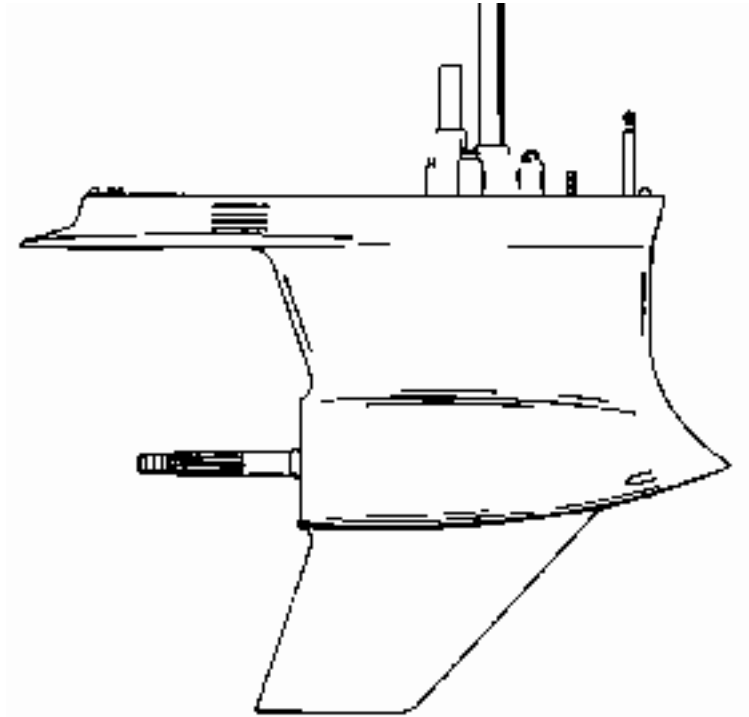

Outboards operated at a high transom mounting height may experience gear, bearing, bearing carrier, and propshaft failures. Mounting height limits for standard gear housings, are listed in the appropriate installation manuals/drawings and must not be exceeded, to assure both performance and durability.

Hi-Performance gear housing assemblies are required for higher than standard transom mounting height use.

Warranty

Gear, bearing, bearing carrier, and propshaft failures on standard gear housings used above the recommended mounting height limits, will not be considered for warranty.

Failures on standard gearcases modified with nose cones and low water pickups will not be considered for warranty.

Recommended Outboard Mounting Height

NOTE: Add 5 inches (125mm) to the following requirements for XL models. Standard Gear Housing Assemblies for long shaft 20 inch (508 mm) models are acceptable for use at transom mounting heights up to 25 inches (635 mm).

Notes

Mercury Hi-Performance Torque Master / Fleetmaster Gear Housing Assembly

NOTE: Torque Master gearcases have a satin finish and Fleetmaster gearcases are painted with silver paint.

These assemblies are recommended for use at mounting heights of 25 inches (635 mm) to 27 inches (685 mm). Particularly effective on boats that require a fair amount of positive trim to lift the bow

ADVANTAGES

1. Has only the 4 (2.5L) or 5 (3.0L) lower water inlets on the strut, to allow for higher installations, without ingesting air.
2. Cast in torque tab on skeg, to counteract steering torque, when using right-hand rotation propellers.
3. Uses all of the high performance internal components (refer to Internal Components following) for extra strength and durability.
4. The drain/fill plug is removed from the front of the torpedo and relocated in the bearing carrier. This eliminates a source of cavitation at higher speeds.
5. Provides a slightly higher blow-out speed than the standard production case because it will run with less "crab-angle" and the relocation of the oil drain/fill plug. This will depend on the boat and the amount of trim-angle required to achieve the desired bow-lift.

DISADVANTAGES

1. May be prone to a little more weed ingestion at idle, because of less inlet area (higher water inlet velocity).
2. Mounted below 25 inches (635 mm), the Torque Master may be slower than the production gear case, because of increased hydrodynamic drag.
3. Has a little more exhaust restriction because of heavy duty bearing carrier, resulting in a little less developed horsepower.

Notes

DISADVANTAGES

1. Has the same exhaust restriction as the Torquemaster, because of the heavy duty bearing carrier resulting in a little less developed horsepower than the standard gear case.
2. More prone to weed-ingestion at idle, because of smaller water inlet area and high water velocity. Although, the 4 hole CLE inlet is the best compromise between weed ingestion and speed.
3. Very slow gear case running sub-surface, because of the increase in hydrodynamic drag.
4. Running too deep may also cause the torque tab to over compensate for the lack of propeller torque and cause ill handling.
5. Does not react well to boats requiring a high degree of positive trim, to achieve desired bow-lift.

NOTE: See pages 49 & 50 of "Everything You Should Know About Propellers - Fourth Edition" for a full explanation of "Blow-Out".

WARNING

Loss of boat control at high speed can result in serious injury or death. Testing for blow-out should be done by a highly experienced and competent driver. Certain boats (especially V-Bottoms) may react violently to a high speed blow-out. An experienced driver can usually feel a blowout starting to occur before the boat loses lift and veers to one side. Never perform blowout testing with passengers. Always wear high quality, high performance life jacket. Always have a safety boat present. Read the lanyard stop switch information in the operation and maintenance manual before electing to install, use, or not to use such a switch.

Hi-Performance Internal Components

Combined with the cast-in torque tab, moving the oil fill screw, redesigning and relocating the water inlets, some internal components are also different from the standard gear housings assemblies. These differences allow operation at higher transom heights.

Bearing Carrier - Thicker and stronger casting.

Bearing Carrier Retaining Nut - Thicker and stronger.


Bearing Carrier Bearings - Larger for increased durability.

Propeller Shaft - Larger one piece carbon steel chrome plated for increased strength.

Drive Shaft - One piece carbon steel chrome plated for increased strength.


Clutch Cross Pin - Threaded for increased retention.

2.5L Hi-Performance Gear Cases

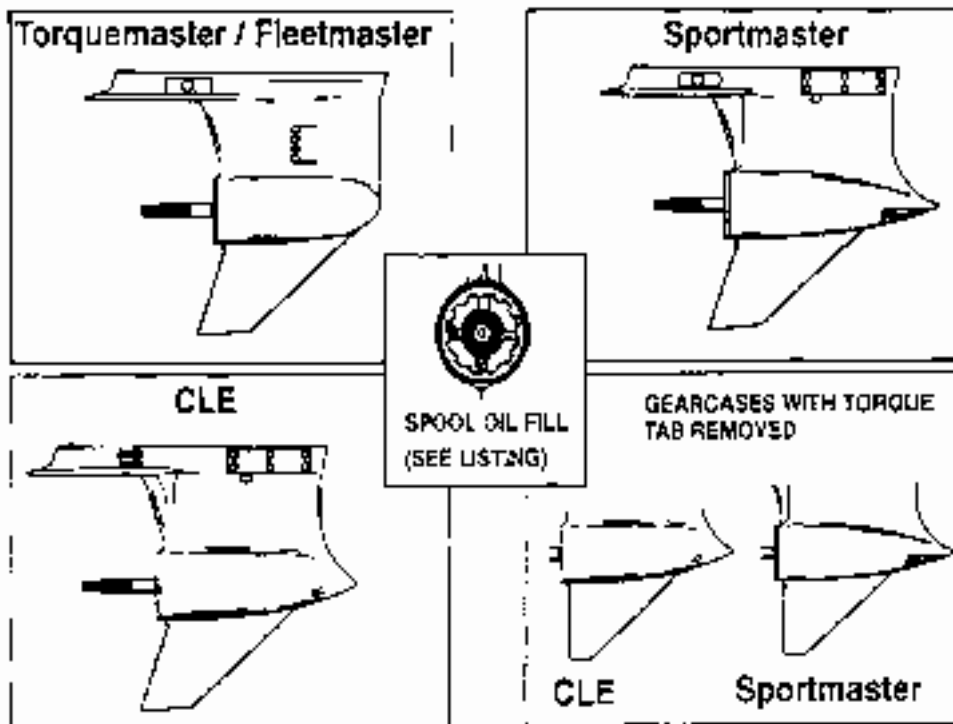

	Torquemaster	Sportmaster	CLE
Profile	Rounded Nose	Pointed Nose	Pointed Nose
Finish	Satin	Polished	Painted
Water Pickup	4 Upper Holes (Per Side)	3 Lower Nose Holes	4 Lower Nose Holes
Oil Fill	Spool Only	Spool Only	Nose & Spool
Oil Vent	Port Side	Starboard Side	Starboard Side
Torque Tab	Yes	With or Without	With or Without
Trim Tab	Flat Anodic Plate	Flat Anodic Plate	Flat Anodic Plate
Upper Side Anodes	Yes	Yes	Yes
Rotation	Standard (RH)	Standard (RH) and Counter Rotation (LH)	Standard (RH) and Counter Rotation (LH)
Gear Ratio	1.87 & 2.00	1.62 – 1.75 – 1.87-2.00	1.87 – 2.00

3.0L Hi-Performance Gear Cases


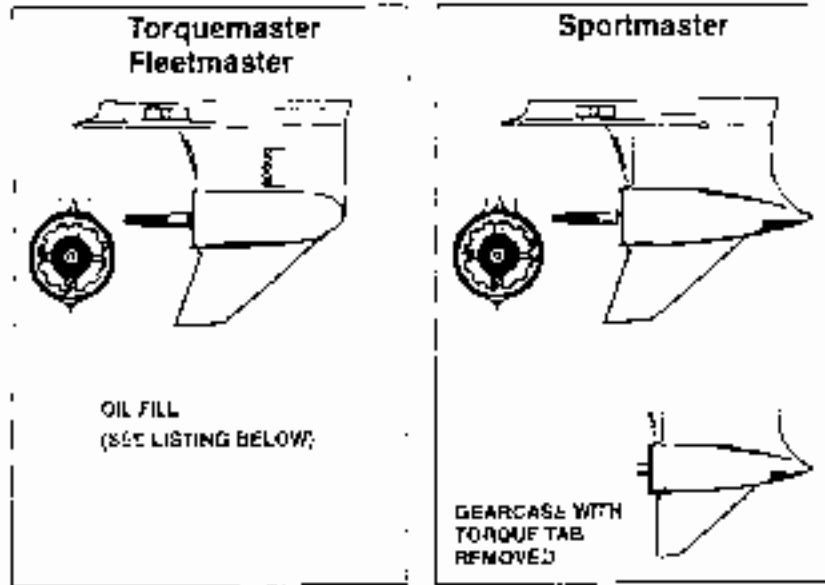


	Torquemaster	Sportmaster	CLE
Profile	Rounded Nose	Rounded Nose	Pointed Nose
Finish	Satin	Silver Paint	Satin
Water Pickup	5 Upper Holes (Per Side)	5 Upper Holes (Per Side)	3 Lower Nose Holes
Oil Fill	Spool Only	Nose	Spool Only
Oil Vent	Port Side	Port Side	Starboard Side
Torque Tab (Skeg)	Yes	No	With or Without
Trim Tab	Flat Anodic Plate	Flat Anodic Plate	Flat Anodic Plate
Upper Side Anodes	Yes	Yes	Yes
Rotation	Standard (RH)	Standard (RH) and Counter Rotation (LH)	Standard (RH) and Counter Rotation (LH)
Gear Ratio	1.62 & 1.75	1.75	1.62 & 1.75

Notes

Draining/Inspecting Lubricant

1. Place gear housing in a suitable holding fixture or vise, with the driveshaft in a vertical position, as shown.
2. Position a clean drain pan under gear housing and remove "Fill" and "Vent" screws from gear housing.

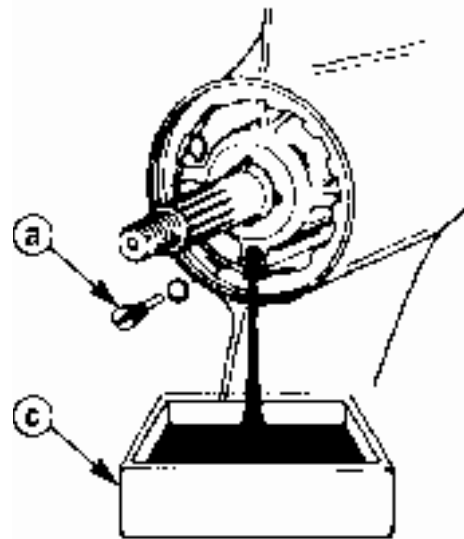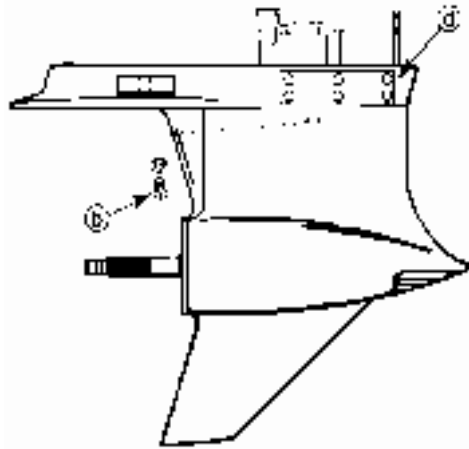

- a) Fill Screw (Located in the bearing carrier)
- b) Vent Screw
- c) Drain Pan
- d) Water Passage Covers

NOTE: Inspect o-rings under water passage covers, if overheating conditions exist.


Notes

Propshaft Upgrade

The diameter of the spline area for the propeller has been increased and the number of splines has changed from 15 to 19 spline. These new propshafts give greater durability in surface type applications. The heavy duty propshaft requires use of propellers with replaceable hubs.

Hub kit part number for heavy duty propshaft: 840389A2

Propshafts are for illustration only and do not represent any particular model.

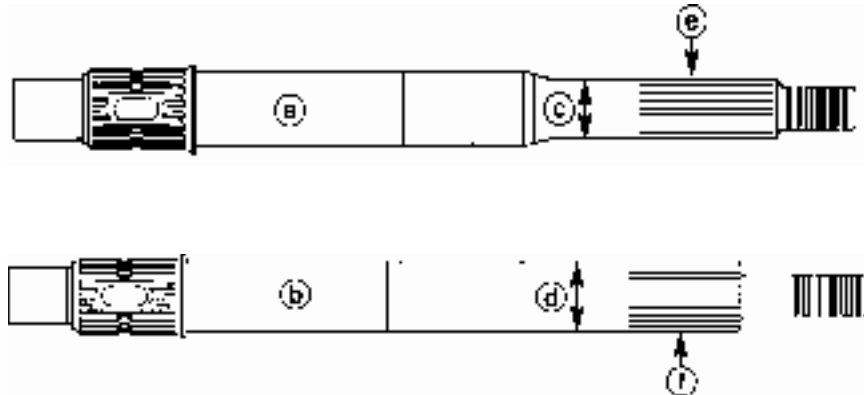

- a) Standard Mercury Racing Propshaft Prior to 2001 Model Year
- b) Heavy Duty Mercury Racing Propshaft Starting With 2001 Model Year
- c) Diameter of 1 in (25 mm)
- d) Diameter of 1.25 in (32 mm)
- e) 15 Splines
- f) 19 Splines

Tip: HD Propshaft Cover Nut Tool is required for disassembly/reassembly (91-840393).

Notes


WATER INLET COVER

P/N 881150Q 1 or 881150K 1

- Used to cover the front inlets of the 3.0 Liter dual water inlet lower units.
- The cover will prevent air from being drawn into the front inlets when engine is being run using the side water inlets only.



WATER INLET PLATE KIT P/N 832066A 1

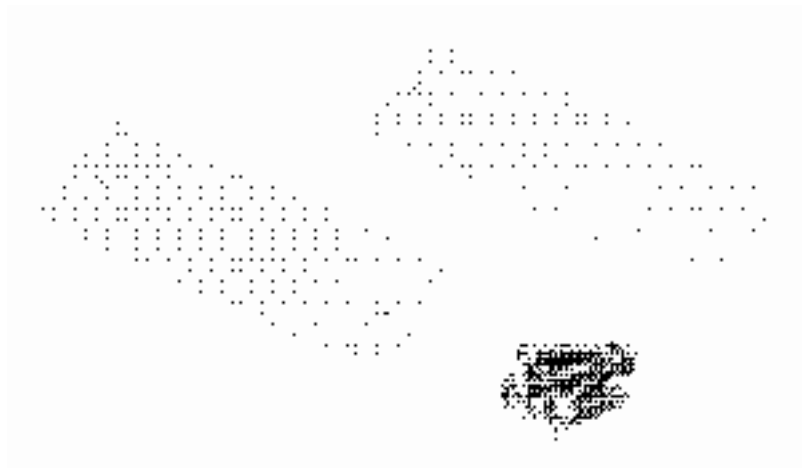




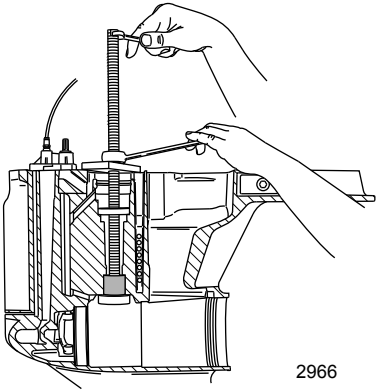

Recommended only where overheating is a known to be problem, they increase the chance if debris getting caught in the water intake.

Covers the 5-hole inlet on the Mercury / Mariner 225/250 (3.0L, 1994-1996) outboards.



Notes:

Verado L6 and L4 SC Gear Housing

Special Tools
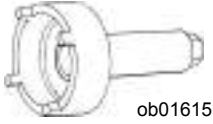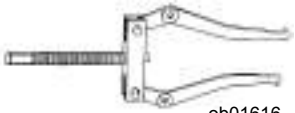
<p>Bearing Carrier Retainer Nut Wrench</p>	<p>91-61069T</p>
 <p>ob01615</p>	<p>Installs and removes the bearing carrier retainer nuts.</p>
<p>Puller Jaws Assembly Puller Bolt</p>	<p>91-46086A1 91-85716</p>
 <p>ob01616</p>	<p>Removes bearing carrier and bearing races.</p>
<p>Slide Hammer Puller</p>	<p>91-34569A1</p>
 <p>ob01617</p>	<p>Removes bearings and bearing races.</p>
<p>Bearing Removal and Installation Kit</p>	<p>91-31229A7</p>
 <p>2966</p>	<p>Installs and removes the bearings in all gearcases. 91-31229A7 tool assembly includes the following components: 11-24156 Hex Nut 12-34961 Washer 91-15755T Bearing Carrier 91-29310 Plate 91-29610 Pilot Plate 91-30366T1 Mandrel 91-31229 Puller Shaft 91-32325T Driver Head 91-32336 Driver Needle Bearing 91-36379 Puller/Head Gear 91-36569T Driver Head 91-36571T Pilot Washer 91-37292 Roller Bearing 91-37311 Driver Head 91-37312 -Driver Head 91-37323 Driver Head Rod 91-37324 Pilot Washer 91-38628T Puller/Driver Head 91-52393 Driver Needle Bearing 91-52394 Head Pull Rod</p>
<p>Pilot Washer</p>	<p>91-36571T</p>
 <p>ob01619</p>	<p>Used in pinion gear and pinion bearing installation.</p>

Notes:

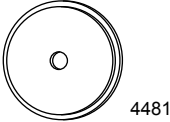
<p>Guide Plate</p>	<p>91-816243</p>
	<p>Centers the rod used to drive in the forward gear bearing on a standard rotation gearcase, and the reverse gear bearing on a counter rotation gearcase.</p>
<p>Oil Drain Funnel</p>	<p>91-892866A01</p>
	<p>Diverts draining engine oil from contacting the anti-splash and anti-cavitation plates.</p>

Gear Housing Components

IMPORTANT: For step by step procedures please reference the current service manual

The gear housing for the L6 and L4 is significantly larger to incorporate larger gears, and increasing the durability. The exclusive hydrodynamic profile increases blowout speed in most applications for safer high speed operation. Dual water pickups ensure proper cooling under most running conditions. Improved corrosion resistance through EDP (Electro Deposition Painting) of all internal water passages.

Gear Housing Specifications	
L6 Gear Ratio	1.85:1
L4 SC Gear Ratio	2.08:1

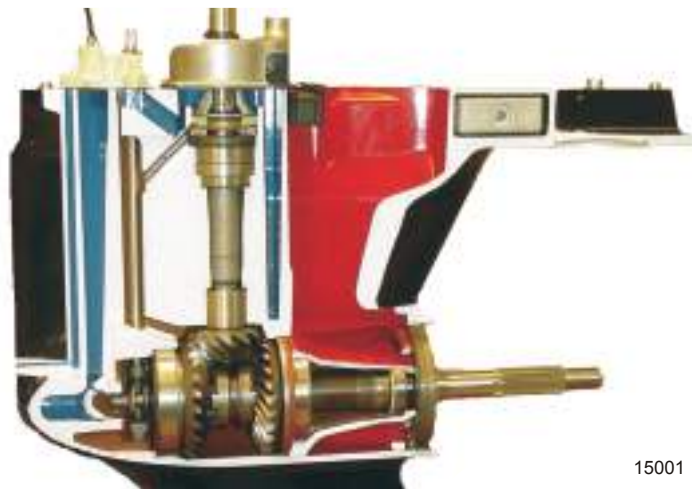

Driveshaft

The driveshaft is similar to the earlier 3.0L with exception to the fine pitch splines for added strength, and wear resistant high temperature driveshaft seals.


Consider the following procedure if the pinion gear is seized onto the drive shaft:

- a. Place gear housing in vise using soft jaw vise covers.
- b. Place a block of wood on gear housing mating surface.
- c. Use a mallet and carefully tap gear housing away from driveshaft.

IMPORTANT: Be careful when the driveshaft is removed. Pinion bearing rollers are free to fall out of the pinion bearing.


NOTE: The shim and bearings are packaged as an assembly.
NOTE: The upper driveshaft cup is a slip fit within the driveshaft bore and may show signs of movement. All other bearing cups are press fit and should not show any signs of movement.

Notes:

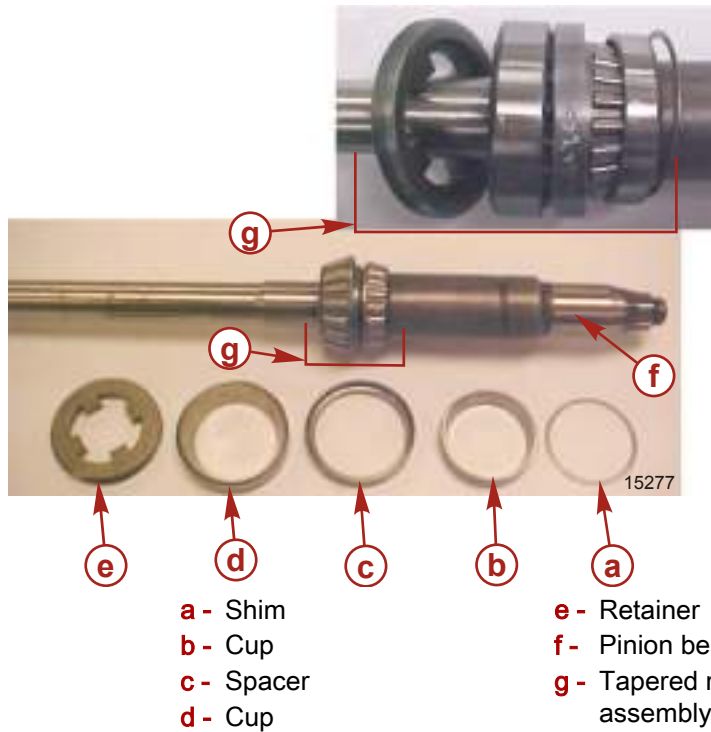

Drive Shaft Seal Carrier

Gear housing operating pressure can become excessive under certain conditions, triggering the driveshaft oil seal carrier to be pushed upward. This upward pressure bends the base plate of the water pump, which causes water pump impeller and base plate damage. The seal carrier in the Verado gear housing is retained with a snap ring to ensure its position.

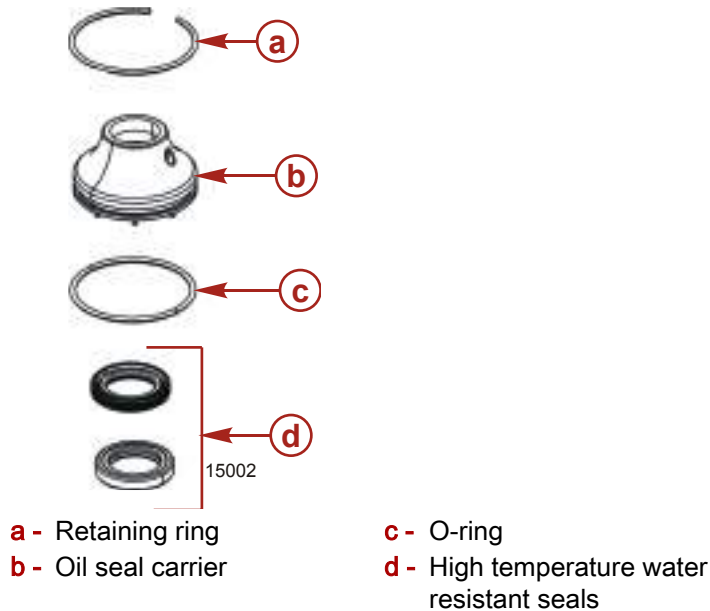

Notes:

Shift Crank

The shift crank in a standard rotating gear housing has the locating tab facing aft towards the propeller of this gear housing. In counter rotating gear housing, the locating tab faces towards the bow of the boat.



a - Locating tab

Prop shaft

The following factors are unique to the Verado prop shaft:

- The prop shaft and clutch have additional splines for added strength.
- The prop shaft end play has been eliminated by way of a dual taper roller bearing design.
- The tapered roller bearing is packaged as an assembly.
- Gear and propeller shaft assembly can only be removed from gear housing after driveshaft and pinion gear have been removed.



- | | |
|---------------------------------------|-------------------------|
| a - Tapered roller bearing | e - Eliminated end play |
| b - Additional clutch splines | f - Retaining ring |
| c - Tapered roller bearing | g - Thrust washer |
| d - Utilizes existing 3.0L propellers | h - Cup |

Notes:


Bearing Carrier and Gear Assembly



- a - Ball bearing
- b - Tapered roller bearing
- c - Bearing carrier

The propeller shaft utilizes two tapered roller bearing and cup assemblies for propeller shaft support. The tapered bearing is behind the bearing carrier seals. The reverse gear assembly on standard gear housing (or forward gear and bearing adaptor on counter rotation gear housing) must be removed from the bearing carrier to gain access to this bearing for inspection. The other tapered bearing is located inside the gear assembly.

NOTE: Gear bearing should not be removed from gear unless replacement is necessary. Bearing is not reuse able if bearing is removed.

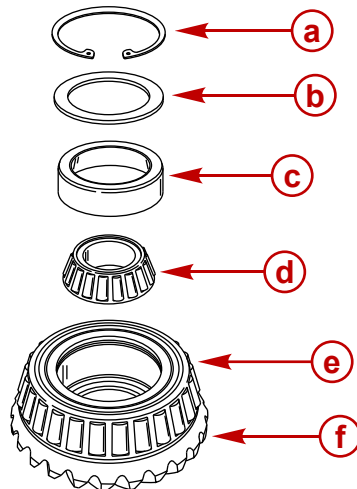

ob01642

- a - Snap ring
- b - Flat washer
- c - Tapered bearing race
- d - Tapered roller bearing
- e - Gear bearing
- f - Gear

Counter Rotation Gear Housing Components


Notes:

Gear Housing Components Comparison

Components	Standard	Counter
Driveshaft	Identical	
Water Pump	Identical	
Shift Shaft	Identical	
Anodes	Identical	
Prop Shaft	Identical	
Bearing Carrier	Bearing adaptor does not apply	Bearing adaptor
Bearing Removal Tool (for applications with bearing adaptor)		91-816245
Gear Housing	Identical	

Reverse Gear

Reverse gear shimming is the same as forward gear on a standard rotation.

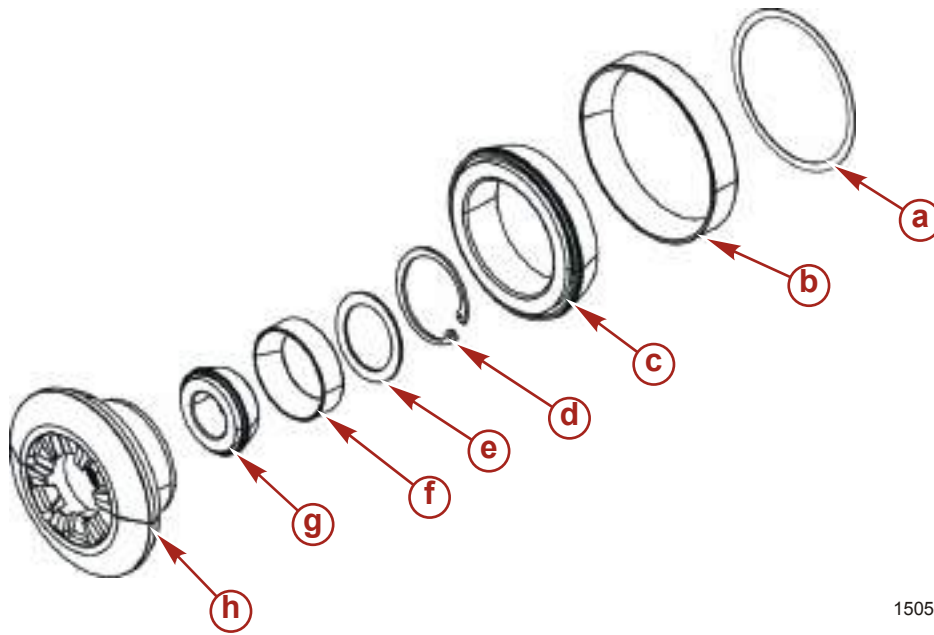

15050


- a - Shim
- b - Cup
- c - Roller bearing
- d - Retaining ring
- e - Thrust washer
- f - Cup
- g - Roller bearing assembly
- h - Reverse gear

Forward Gear

Shimming behind the bearing adaptor sets the forward gear backlash. The condition of the bearing surface on the forward gear, is an indication of the condition of the bearings. Replace the bearings if the surface of the gear and/or thrust washer is pitted, grooved, scored, worn unevenly, discolored from overheating or has embedded metal particles.

Notes:

IMPORTANT: Do not remove the roller bearing from the bearing adaptor unless replacement is necessary. The roller bearing should not be used after it has been removed from bearing adaptor.

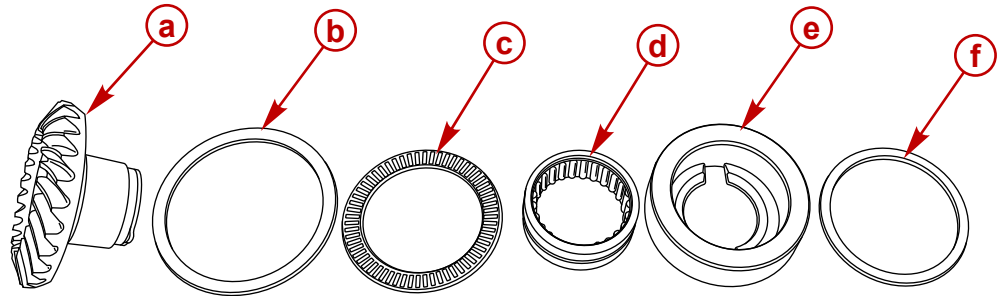


ob01596

- a - Forward gear
- b - Thrust washer
- c - Thrust bearing
- d - Roller bearing
- e - Bearing Adaptor
- f - Shim

Gear Housing Set Up

Pinion Gear Height

Use the Pinion Gear Locating Tool 91-56048001, when the prop shaft is installed.

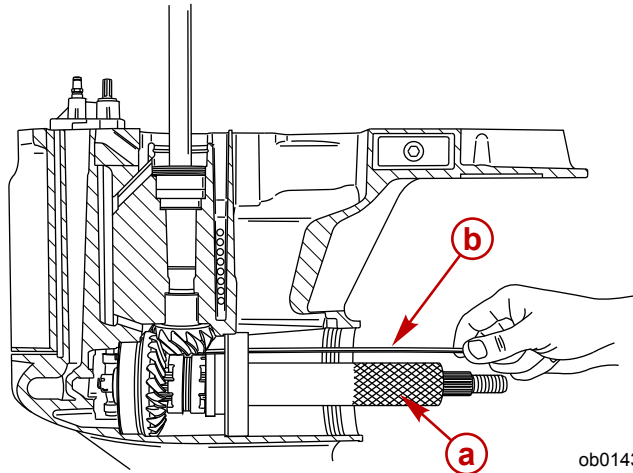


ob01433

- a - Pinion Gear Locating Tool
- b - Feeler gauge

Pinion Gear Locating Tool	91-56048001
---------------------------	-------------

Use Pinion Gear Locating Tool ,91-12349A05 when the prop shaft is not installed.

Notes:

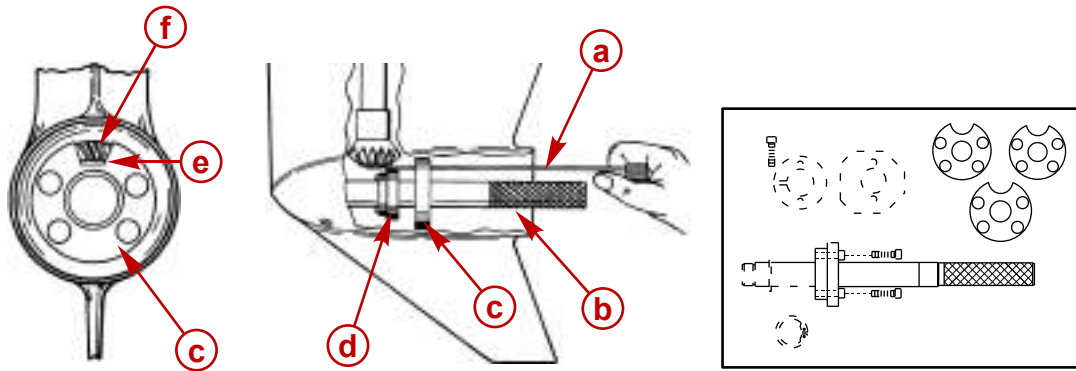


3174

- a - Feeler gauge
- b - Pinion Gear Locating Tool
- c - Disc #2
- d - Flat #4
- e - .64 mm (.025 in.)
- f - Pinion gear

Pinion Gear Locating Tool	91-12349A05
---------------------------	-------------

Propeller Shaft Bearing Preload

A preload on the propeller shaft is set using a spacer and shim between the shaft and the rear propeller shaft bearing. All gear housing components must be installed and correctly shimmed before checking propeller shaft bearing preload. The propeller shaft tapered roller bearing must be properly seated in the race during installation. Driveshaft retainer should be torqued to specification listed in the current service manual.

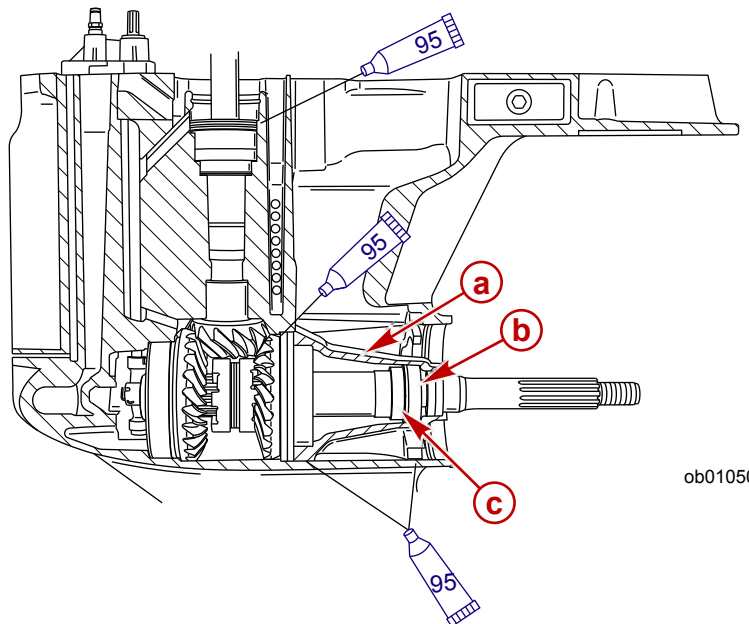


ob01050

- a - Bearing carrier assembly
- b - Propeller shaft bearing
- c - Preload spacer

Notes:

Fatigue Spalling

- Flaking of surface metal resulting from fatigue.



17187

Heat Discoloration


- Heat discoloration can range from faint yellow to dark blue resulting from overload or incorrect lubricant.
- Excessive heat can cause softening of races or rollers.
- To check for loss of temper on races or rollers a simple file test may be made. A file drawn over a tempered part will grab and cut metal, whereas, a file drawn over a hard part will glide readily with no metal cutting.
- Replace bearings if overheating damage is indicated. Check seals and other parts.



17188

Galling

- Metal smears on roller ends due to overheat, lubrication failure or overload.
- Replace bearing - check seals and check for proper lubrication.




17539

Brinelling

- Surface indentations in raceway caused by rollers either under impact loading or vibration while the bearing is not rotating.

Notes:


- Replace shaft if damaged.

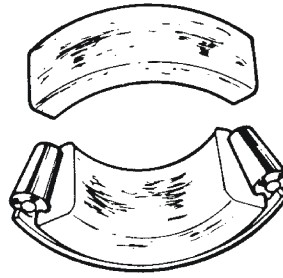

17554

Fretting

- Corrosion set up by small relative movement of parts with no lubrication.
- Replace bearing.
- Clean related parts.
- Check seals and check for proper lubrication.

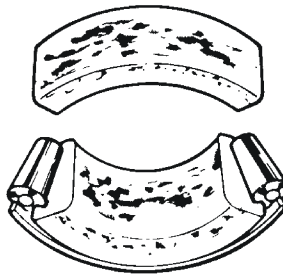

17556