



Dear Grady-White Owner:

Welcome aboard!

Buying and owning a boat is a very special experience. Of all the many products you'll ever own we want your Grady-White experience to be the absolute best. That means providing the descriptions, explanations and technical support that you need to enjoy your Grady-White with confidence and security.

Your Grady-White exceeds all US Coast Guard safety standards and is built to standards certified by the National Marine Manufacturers Association (NMMA). Best of all, your boat is built to Grady-White standards, standards that have served our owners through some truly extraordinary conditions since our first models built in 1958.

The seaworthiness and safety of your Grady-White is highly dependent on the operation, maintenance and care of your boat, so please read this manual thoroughly and keep it around for reference. If you need further explanation or "hands-on" help don't hesitate to ask the people at your Grady-White dealership; they have experience with the systems and operations of your boat. If for any reason you need additional help, please feel free to call us at the factory. We sincerely want to provide you with the help and information that will make your Grady-White experience delightful.

Thanks for choosing a Grady-White. All of us at the factory and at your dealership are dedicated to earning your confidence in Grady-White Boats. Again, welcome aboard.

Sincerely yours,

Kris Carroll

President

GRADY-WHITE BOATS, INC.

CONSUMER INFORMATION

OWNER'S PACKET

Your Grady-White has many features and accessories that have existing printed material provided by the various equipment manufacturers. This information is compiled in a package that we will reference throughout this manual as an "Owner's Packet." This Owner's Packet includes a Grady-White Owner's Manual and Engine Manual(s) to advise on operation, service, specifications, maintenance, warranty, and other useful facts. While reading your Grady-White manual, you will find other technical literature referenced as resources for detailed information. The Owner's Packet will also consist of operation guides, informative labels and product warranties you will need to be acquainted with. Your Owner's Packet can also be used to retain instructions and data compiled on additional equipment and accessories installed after delivery.

Sportfish, Cruisers, Yachts Owner's Manual a book published by the National Marine Manufacturer's Association (NMMA), has been included with your Owner's Packet as a supplement. This publication will be referenced in your Grady-White Owner's Manual to present additional instructions and information on basic boating.

WARRANTY INFORMATION

The Grady-White warranty is located on the last page of this manual. **Upon the purchase of your new Grady-White Boat, the dealer will fill out a warranty card.** This card will be kept on file at the dealership and at the Grady-White factory. A copy will be provided for your records and should be kept with other valuable documents for future reference. For questions regarding your warranty please contact your dealership.

DEALER'S RESPONSIBILITIES

Throughout the fabricating and assembly processes your Grady-White has undergone a series of strict inspections. Subsequent to the final factory overview your dealer must perform additional pre-delivery checks and approve your Grady-White for delivery.

Dealer responsibilities include providing the following:

- An orientation of the general operation of your Grady-White.
- A warranty card to be completed and signed by the dealer and the customer. This warranty card is to be sent to Grady-White Boats to validate the warranty.
- An explanation of safety issues regarding the use of containment systems and components.
- A complete Owner's Packet containing literature and information regarding your Grady-White and its separate warranted product's operation, installation and maintenance instructions.
- A review of all warranties, pointing out the importance of mailing warranty and registration to various manufacturers within the required time limits.
- Guidance on acquiring local and out of area service during and out of warranty periods.

TABLE OF CONTENTS

WELCOME ABOARD

CONSUMER INFORMATION

Owner's Packet, Warranty Information, Dealer's Responsibilities, Consumer Responsibilities,
Hazard Warning Symbols

CHAPTER 1: SAFETY

Required Safety Equipment	1-1
Fire Extinguisher	1-1
Personal Flotation	1-1
Sound Signaling Device (Horn)	1-1
Visual Distress Signals	1-1
Lighting	1-1
Additional Recommended Equipment	1-1
Registration Numbers	1-1
Emergency Stop Switch	1-2
Emergency Information	1-2
Rendering Assistance	1-2
Accident Reporting	1-2
Lightning Precautions	1-2
Boating Safety Tips	1-2
Loading Capacity	1-4
Carbon Monoxide	1-5
Suggested Boating Classes and Reading Material	1-6

CHAPTER 2: GENERAL INFORMATION

Fueling	2-1
Fuel System	2-2
Fuel Select Valve	2-2
Pollution Regulations	2-3
Discharge of Oil or Hazardous Substances	2-3
Disposal of Plastic or Garbage	2-3
Trailering	2-4
Predeparture	2-4
Approaching/Leaving the Dock	2-4
Towing	2-4
Anchoring	2-4
Shallow Water	2-5
General Information on Boat Handling	2-5
Twin Engine Boats	2-6
Commonly Used Nautical Terms	2-7

TABLE OF CONTENTS

CHAPTER 3: PERFORMANCE

Performance Factors	3-1
Engine Efficiency	3-1
Weather Conditions	3-1
Load Distribution	3-1
Marine Growth	3-1
Propeller	3-1
Trim	3-2
Propulsion System	3-2
Engine Warranty	3-2
Throttle/Shift Control	3-2
Steering	
Mechanical Steering	3-3
Hydraulic Steering	3-3
Tilt Steering	3-3

CHAPTER 4: GAUGES AND SWITCHES

Mercury and OMC Engine Instrumentation	4-1
Fuel Gauge	4-1
Oil Quantity Gauge	4-1
Tachometer	4-1
Trim Gauge	4-1
Voltmeter	4-1
Water Pressure Gauge (OMC rig only)	4-2
Water Temperature Gauge (Mercury rig only)	4-2
Water Temperature, Oil Level, and Fuel System Warning	4-2
Yamaha Engine Instrumentation	4-2
Digital Speedometer	4-2
Digital Tachometer	4-3
Digital Fuel Management Gauge	4-3
Switch Panel	4-4
Bilge Pump	4-4
Cockpit Lights	4-4
Fuel	4-4
Horn	4-4
Livewell	4-4
Washdown	4-4
Navigation/Anchor Lights	4-4
Primer Pump Switch	4-4
Wipers	4-5

TABLE OF CONTENTS

CHAPTER 5: MAINTENANCE AND SERVICE

General	5-1
Exterior Fiberglass Finish	5-1
Maintenance	5-1
Cleaning	5-1
Finish/Waxing	5-1
Repairing	5-2
Bottom Paint	5-3
Grady Drives	5-3
Canvas	5-3
Maintenance	5-3
Snaps	5-3
Vinyl	5-4
Storage	5-4
Upholstery	5-4
Vinyl/Polyethylene/Plexiglas	5-5
Shower Sump	5-5
Scuppers	5-5
Caulking	5-5
Hardware Mounting	5-5
Hardware/Hardtop Frame/Stainless Steel Rails	5-5
Maintenance for Anodized Aluminum	5-6
Fuel Tank Compartment	5-6
Batteries	5-7
Light Bulb Replacement Guide	5-8
Accessory Wire Color Code & Fuse/Breaker Size	5-9

CHAPTER 6: WINTERIZATION AND STORAGE

General	6-1
Boat Storage	6-1
Cleaning and Lubricating the Boat	6-2
Draining and Water Systems	6-2
Batteries	6-2
Engines	6-2
Fuel System	6-3
Storage Checklist	6-3

CHAPTER 7: MODEL SPECIFIC INFORMATION

TABLE OF CONTENTS PAGE	
Model Specific Information on Your Grady-White Boat	7-1

WARRANTY

TRANSFERABLE WARRANTY

CHAPTER 1

REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements. See *Sportfish, Cruisers, Yachts Owner's Manual*, page 17, for details on the following required safety equipment.

- **FIRE EXTINGUISHER**

Boats should be equipped with a marine approved fire extinguisher.

- **PERSONAL FLOTATION**

All passengers must have an USCG approved personal flotation device (PFD).

Children and non-swimmers are advised to wear a PFD at all times.

- **SOUND SIGNALING DEVICE (HORN, BELL OR WHISTLE)**

Your Grady-White is equipped with a horn that meets USCG requirements.

- **VISUAL DISTRESS SIGNALS**

USCG approved visual distress signals are required on U. S. waters.

- **LIGHTING**

Grady-White boats are equipped with navigational lights that meet requirements for inland and international waters.

ADDITIONAL RECOMMENDED EQUIPMENT

In addition to the required safety equipment there are additional items that will provide an extra margin of safety and convenience for you and your passengers while boating. For an extended list of basic gear, tools and spare parts reference the pamphlet *Sportfish, Cruisers, Yachts Owner's Manual* enclosed with this manual.

Keep tools and spare parts in good condition. Replace parts removed from spare parts kit. Most importantly use US Coast Guard approved or marine certified parts where applicable. Conditions found requiring corrective action should be worked on by a qualified repairman.

REGISTRATION NUMBERS

Federal and State laws require a powerboat to be registered in the State where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number or Hull Identification Number (HIN) is required on the registration form. The HIN is located on the upper right hand corner of the transom and is the most important identifying factor. The HIN should be included on all documents and any correspondence to provide you timely service.

SAFETY

EMERGENCY STOP SWITCH

Some Grady-Whites are equipped with an emergency stop switch. This is a safety feature that if used properly will shut the engines down if the operator leaves or falls from the helm position. This ignition shutdown switch includes a shut-off switch, switch clip, lanyard and lanyard clip. The lanyard clip is attached to the operator. If a situation arises where the boat should stop, a pull on the cord to release the clip from the shut-off switch will shut down the engines. To reset the emergency stop switch simply reinstall the switch clip. The decision to use the emergency stop switch rests with the owner/driver. See page 72 in *Sportfish, Cruisers, Yachts Owner's Manual*.

EMERGENCY INFORMATION

While boating, unpleasant situations may develop; therefore, you should prepare yourself on how to cope with them whether they happen aboard your vessel or someone else's. Anticipate a game plan for specific situations such as fire, man overboard or collision etc., to give you the confidence and ability necessary to handle an emergency. The key is to remain calm. For emergency procedures, see Section 4 in *Sportfish, Cruisers, Yachts Owner's Manual*.

- **RENDERING ASSISTANCE**

The owner or operator of a vessel is required by law to render all practical or necessary to any person or vessel affected by collision, accident or casualty. **However, you are not required to endanger your vessel or passengers to render assistance.**

- **ACCIDENT REPORTING**

Report all boating accidents to your local authorities. Federal regulations require boat operators that are involved in an accident to submit a written report within 48 hours. **In the event of death or disappearance, notification is required immediately** by phone or radio in addition to the written report. These reports can be submitted to the State Boating Law Administrator. Forms can be obtained through the USCG, local harbor patrol offices, sheriff and police stations.

- **LIGHTNING PRECAUTIONS**

This awareness is included to ensure the safety of the owner and passengers. Always be mindful of the weather! When a lightning storm advances certain safety precautions should be taken. Dock the boat and seek shelter on land. If this is not possible seek refuge inside the boat until the storm has passed. **Stay out of the water!** Lightning will seek a ground when it strikes and may pass through metal components if it hits your boat. For this reason avoid contact with metal parts of the boat under these conditions.

BOATING SAFETY TIPS

Safety is an important aspect of boating. Your safety as well as the safety of your passengers and vessel is your responsibilities. The following precautions and the ones mentioned in *Sportfish, Cruisers, Yachts Owner's Manual* will add to you and your passengers' boating safety and pleasure.

- Before operating your Grady-White **READ AND STUDY ALL OPERATION AND MAINTENANCE MANUALS**. It is important that you fully understand how to use your boat. Contact your Grady-White dealer for questions. Proper use and service will insure quality performance and longevity of your boat.

- A written float plan left with a **RESPONSIBLE** person can serve as valuable information should you not return as scheduled. Upon returning your primary responsibility is to notify the person of your return.
- **NEVER** operate or allow anyone to operate your boat while under the influence of drugs or alcohol.
- **Individuals under the age of 16 should not be allowed to operate your boat. Inexperienced drivers should have constant and direct supervision.**
- Instruct at least one passenger on the fundamentals of basic boating and safe operation in the event of an emergency.
- While boating, passengers should be settled in a safe position. Use hand holds and rails for steadiness. Do not allow bow, transom or gunwale riding. The captain is ultimately responsible for their passenger's safety.
- Keep your boat speed under control. Respect for other boaters and those on shore are common courtesy. The boat's operator is responsible for injury or damage caused by the boat or the wake. Your wake could swamp a smaller craft and endanger its passengers. Stay alert for posted "**No Wake Zones**".
- Become familiar with the handling personality and limitations of your boat.
- **Never allow swimmers/skiers to enter or exit the boat with engines running.** A shift lever in neutral could become engaged accidentally.
- Obtain information and a chart for new areas when possible.
- Clean water and air are responsibilities for all persons. Use litter containers on board and dispose of refuse properly. See discharge regulations in next section.
- **Know and obey the "Rules of the Road".** See *Sportfish, Cruisers, Yachts Owner's Manual*, page 19, for a better understanding of right of ways, signals and waterway markers.

SAFETY

LOADING CAPACITY

Though overloading is a primary cause of many boating accidents improper loading is equally hazardous. Boaters should know the amount of weight on board and evenly distribute the weight.

Near the steering wheel you will find a metal Coast Guard Capacity Information Tag indicating the maximum weight and person capacity for your boat. This tag will also designate the maximum horsepower limit for an outboard. You and your passengers will be in jeopardy and your warranty void if any of these stipulations are exceeded.

The capacity plate indicates maximum load under normal conditions. The capacity plate does not release the operator from the accountability of rational judgment. Allow yourself an extra margin in rough waters and adverse conditions by reducing the boat's capacity. Maintain a watch on weather conditions.


Example: 208 Adventure Capacity Plate

MAXIMUM CAPACITIES	
8 PERSONS OR 1130 LBS	
2135 LBS. PERSONS, MOTOR, GEAR	
230.0 H.P. MOTOR	
THIS BOAT COMPLIES WITH U.S. COAST GUARD SAFETY STANDARDS IN EFFECT ON THE DATE OF CERTIFICATION	
MANUFACTURER:	GRADY WHITE BOATS
MODEL: 208 ADVENTURE	GREENVILLE, NC
DESIGN COMPLIANCE WITH NMMA REQUIREMENTS BELOW IS VERIFIED. MFR RESPONSIBLE FOR PRODUCTION CONTROL	
LOAD AND H.P. CAPACITY * BASIC FLOTATION	
STEERING, FUEL AND ELECTRICAL SYSTEMS	
COMPARTMENT VENTILATION * MANEUVERABILITY	
NAVIGATION LIGHTS	
NMMA NATIONAL MARINE MANUFACTURERS ASSN [®]	



This label means that your Grady-White is certified by the NMMA (National Marine Manufacturers Association). With this tag you are assured that your fuel system, lighting, ventilation, steering, flotation, capacities and horsepower ratings are not only in compliance with the US Coast Guard regulations but meet the more stringent standards of the NMMA. The NMMA is a national trade organization serving all elements of the recreational boating industry, as well as manufacturers of boating equipment. With this tag, you can have complete confidence in the safety of your Grady-White.

CARBON MONOXIDE



**(CO) IS PRODUCED BY ALL GASOLINE ENGINES AND GENERATOR SETS.
 AVOID BRAIN DAMAGE OR DEATH FROM CARBON MONOXIDE.
 KEEP COCKPIT AND CABIN AREAS WELL VENTILATED.
 AVOID BLOCKAGE OF EXHAUST OUTLETS.
 SIGNS OF EXPOSURE INCLUDE NAUSEA, DIZZINESS AND DROWSINESS.**

Carbon Monoxide, commonly written (CO), is a colorless, odorless gas emitted from any boat's exhaust. The gas is similar in weight to the air we breathe; therefore, it cannot be expected to rise or fall, but will accumulate in confined spaces.


Carbon monoxide is **poisonous**, and potentially **fatal** if breathed over an extended period of time. Symptoms of CO poisoning include: dizziness, nausea, headache, sleepiness, vomiting, throbbing in the temples, muscular twitching and an inability to think clearly. **If you or anyone else experience these symptoms, immediately get away from fumes and into an area where plenty of FRESH air can be consumed. If any symptoms from above persist, seek medical attention.**

Carbon monoxide can accumulate in cabins and under canvas. If your boat is equipped with a canvas that encloses the aft cockpit and propulsion equipment, do not operate the boat with this canvas closed.

Operators need to be aware of the influence of other boats on their vessel, as well as, the effects they have on neighboring crafts. Of primary concern is the operation of an auxiliary generator with boats moored along side each other. This situation creates an atmosphere which is filled with CO, and extremely dangerous.



BE AWARE of the significance your exhaust may have on other vessels. Likewise, **BE AWARE** that the operation of other vessel's equipment may influence the carbon monoxide concentration on *your* vessel.



**EXHAUST FUMES FROM ENGINES CONTAIN (CO). BOATS WITH CANVAS DEPLOYED ARE MORE LIKELY TO COLLECT EXHAUST FUMES.
 AVOID BRAIN DAMAGE OR DEATH FROM (CO).
 KEEP COCKPIT AND CABIN AREAS WELL VENTILATED.
 SIGNS OF EXPOSURE INCLUDE NAUSEA, DIZZINESS AND DROWSINESS.**

SAFETY

SUGGESTED BOATING CLASSES AND READING MATERIAL

Like a car, boats must be operated according to safety rules and traffic regulations. Although we include some basic boating tips in this manual, a thorough review of the safety rules and regulations for boating is beyond the scope of this text.

We support the work of the United States Coast Guard Auxiliary and the United States Power Squadrons. We urge you to exercise the opportunity to attend any instructional classes sponsored by these organizations. Reference page 8 of *Sportfish, Cruisers, Yacht Owner's Manual* for training options and page 23 for information on charts and maps. For further knowledge on boating we advise that you review the following publications.

- **PILOTING, SEAMANSHIP AND SMALL BOAT HANDLING**

(Chapman)*

Motor Boating and Sailing

Post Office Box 2319 -- F.D.R. Station

New York, New York 10022

*Available on CD ROM

- **PLEASURE BOATING AND SEAMANSHIP**

US Coast Guard Auxiliary

306 Wilson Road Oaklands

Newark, Delaware 19711

- **BOATMAN'S HANDBOOK**

by Tom Bottomly

Motor Boating and Sailing

Post Office Box 2319 -- F.D.R. Station


New York, New York 10022

FOR MORE INFORMATION ON BOATING SAFETY COURSES IN YOUR AREA CALL:

- BOATING EDUCATION HOTLINE..... 1-800-336-BOAT (2628),
- US COAST GUARD BOATING HOTLINE 1-800-368-5647 or
- CONTACT YOUR LOCAL COAST GUARD.

CHAPTER 2 GENERAL INFORMATION

FUELING



Safety during fueling requires CAUTION and COMMON SENSE.

Please study the following precautions carefully, and consult your dealer if you have any questions. Prior to your initial fill-up, check your engine manual to confirm the type of fuel specified by the manufacturer. Never use fuels containing alcohol. The alcohol can deteriorate the rubber materials used to make up your fueling system. Methanol based fuels absorb water, making fuel more corrosive to the metals in tanks and carburetors. For outboards with an oil injection system check the engine manual for the approved type of oil and fill the tank completely.

BEFORE FUELING

- Shut down all engines.
- Turn battery select switch(es) to "OFF" to insure that all fans, lights, etc. are off.
- Close all ports, hatches, windows and engine compartments to prevent fumes from accumulating in closed areas.
- Extinguish cigarettes and all other lighted materials.
- Have a fire extinguisher near.

DURING FUELING

- Observe all safety regulations for the safe handling of fuel.
- Keep the fuel supply nozzle in contact with the fuel tank opening to prevent any static sparks.

AFTER FUELING

- Secure the fuel cap and check fuel lines and connections for leakage. Wash and clean up any spilled fuel. Dispose of clean up rags or sponges on shore. Do not store these clean up rags in the boat.
- After fueling ventilate all ports, windows, hatches and other closed areas. Conduct a "sniff test" to make certain all fumes are vacant before using the battery select switch(es).
- Select your first tank cautiously. Take into consideration the distribution of your load as fuel is consumed. Performance will be influenced by weight distribution. If your boat is equipped with two fuel tanks use the fuel select valve (see FUEL SELECT VALVE on next page) to select the proper tank.



See warnings and check list in Section 6, page 37 of the *Sportfish, Cruisers, and Yachts Owner's Manual*. Reference the Fuel Tank Compartment section under Maintenance for more information on cleaning the fuel storage area.

GENERAL INFORMATION

FUEL SYSTEM

After fueling, inspect the fuel hoses, connections and tanks for tightness, signs of leaks and deterioration. Annually conduct a more detailed inspection of fuel system components, especially those hidden from routine inspection. Replace deteriorated hoses, clamps, connections or fittings immediately.

If you are experiencing fuel flow problems there is a simple method to determine if the problem is in your fuel system or your engine. Connect a six-gallon portable tank to your engine. If the problem persists the likely cause is with the engine(s) itself. If the problem goes away the source must be in the boat fuel system. One component that should be inspected if a restriction occurs is the anti-siphon valve. If fuel does not flow properly through this part it must be cleaned and/or replaced. **DO NOT** remove the anti-siphon valve and replace with a regular barb.


 **WARNING** 

LEAKING FUEL IS A FIRE AND EXPLOSION HAZARD. INSPECT SYSTEM REGULARLY. EXAMINE FUEL SYSTEM FOR LEAKS OR CORROSION AT LEAST ANNUALLY.

© NIMA 1993 NO. 200

FUEL SELECT VALVE

If your boat is equipped with dual fuel tanks you will have a manual fuel select valve installed. This valve allows you to choose from which tank fuel will be consumed. Remember, as the fuel is consumed and the fuel load redistributes the performance will be influenced. Select the tank that allows the best performance for your boat.

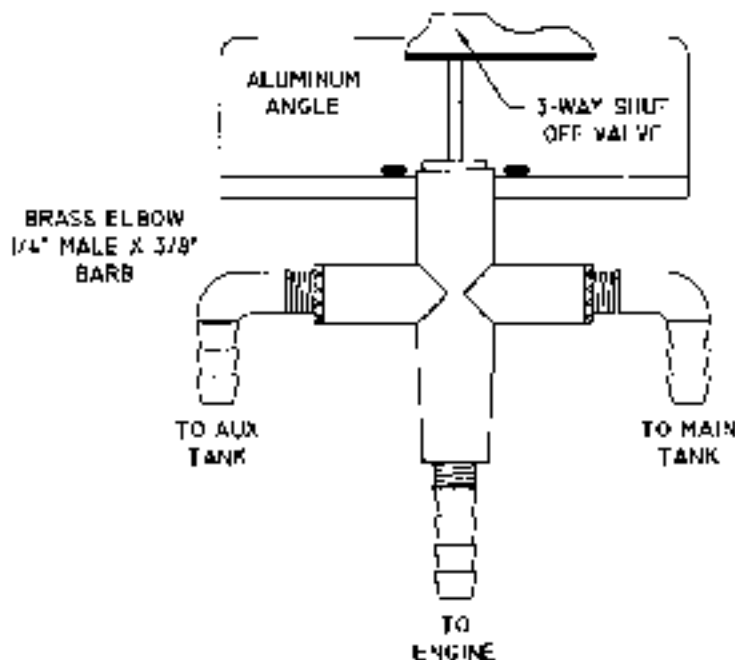

GENERAL INFORMATION

POLLUTION REGULATIONS

The U.S. Coast Guard defines restrictions on the discharge of oil or hazardous substances, and plastics or garbage in the "Federal Requirements for Boating and Boating safety". You should have received this pamphlet when you registered your boat. Detailed below is a summary of those regulations; however, you should read the pamphlet and also become familiar with any local restrictions where you operate your vessel. Passengers or crew members aboard your boat should also be notified of these regulations.

DISCHARGE OF OIL OR HAZARDOUS SUBSTANCES




The Federal Water Pollution Control Act prohibits the discharge of oil or hazardous substances, which may be harmful, into or upon U.S. navigable waters. Vessels 26 feet in length or over must display a placard at least 5" x 8". The placard should state the following:

DISCHARGE OF OIL PROHIBITED

THE FEDERAL WATER POLLUTION CONTROL ACT PROHIBITS THE DISCHARGE OF OIL OR CITY WASTE UPON OR INTO ANY NAVIGABLE WATERS OF THE U.S. THE PROHIBITION INCLUDES ANY DISCHARGE WHICH CAUSES A FILM OR DISCOLORATION ON THE SURFACE OF THE WATER OR CAUSES A SLUDGE OR EMULSION BENEATH THE SURFACE OF THE WATER. VIOLATORS ARE SUBJECT TO SUBSTANTIAL CIVIL AND/OR CRIMINAL SANCTIONS INCLUDING FINES OR IMPRISONMENT.

DISPOSAL OF PLASTICS OR GARBAGE

The MARPOL ANNEX V is the Act to prevent pollution from ships and other vessels. Federal regulations prohibit the discharge of plastic garbage anywhere in the marine environment. Plastic includes, but is not limited to: synthetic fishing nets, ropes, lines, straws, six pack holders, styrofoam cups and lids, bottles, buckets and plastic bags. These regulations also restrict the disposal of other types of garbage within specified boundaries from shore. Any vessel 26 feet and over must display the placard below or a similar version which details the regulations. The placard must be at least 4" x 9" and should be available from your dealer.

<p><i>It is illegal for any vessel to dump plastic trash anywhere in the ocean or navigable waters of the United States. Annex V of the MARPOL TREATY is an</i></p>		<p><i>International Law for a cleaner, safer marine environment. Violation of these requirements may result in civil penalty up to \$25,000, fine and imprisonment.*</i></p>	
<p>3 to 12 miles</p> 		<p>12 to 25 miles</p> 	
<p>U.S. Lakes, Rivers, Bays, Sounds and 3 miles from shore</p> <p>ILLEGAL TO DUMP Plastic & Garbage</p> <p>Paper Metal Rags Crockery Glass Dunnage Food</p>		<p>ILLEGAL TO DUMP Plastic Dunnage, lining & packing materials that float, also if not ground to less than one inch:</p> <p>Paper Crockery Rags Metal Glass Food</p>	
<p>Outside 25 miles</p> <p>ILLEGAL TO DUMP Plastic</p> 		<p>*UP TO \$50,000 AND 5 YRS.</p>	
<p>State and local regulations may further restrict the disposal of garbage.</p>			

GENERAL INFORMATION

TRAILERING

The adjustment and balance of your boat on the trailer determines how easily your boat may be transported. The tongue weight on the hitch ball should be 5-10% of the total weight of your boat, motor and trailer. Tail-heavy loads cause swaying while trailering. The rollers and/or bunks of your trailer should be adjusted so that the weight is distributed evenly across the stern and forward throughout the keel sections. Your dealer can help adjust your trailer properly.

Trailering and relative information can be found on page 94 in *Sportfish, Cruisers, Yachts Owner's Manual*.

PREDEPARTURE

See the checklist on page 35 in *Sportfish, Cruisers, Yachts Owner's Manual* before starting out.

APPROACHING/LEAVING THE DOCK

Unlike an automobile, the stern of your boat reacts first when turning. A turn to the right will swing the stern to the left and vice-versa. Remember that turning your boat away from an object, such as a dock, will tend to swing the stern toward that object. Reference procedures for approaching and leaving the dock, in your publication of *Sportfish, Cruisers, Yachts Owner's Manual*.

TOWING

In the event of a mishap or power loss you may need to tow a boat or be towed. You should not tow a boat larger than your own. Always use safety and good judgement when towing. Never tow a boat if you are not equipped with the proper lines. Passengers should never grasp a towline; it should be secured to the boat. See page 30 in *Sportfish, Cruisers, Yachts Owner's Manual*.

WARNING

As a precaution passengers on both boats should stay clear of the towline, lines under stress could snap and fly in either direction causing injury.

ANCHORING

Some factors that determine the size and type of anchor most suitable for your boat include the size of your boat and the type of lake, sea or river bottom in your boating area. *Sportfish, Cruisers, Yachts Owner's Manual* has a list of tips concerning anchoring starting on page 46.


WARNING

Never anchor off the stern of the boat especially in strong winds or currents. The weight of the stern and flat surface to the seas can easily cause water to enter over the transom and swamp the boat.

GENERAL INFORMATION

SHALLOW WATER

Most boats that become grounded can be floated off with motor(s) tilted to reduce the draft at the transom. Sometimes a rocking motion, side to side, will break the suction of mud from the keel. Disperse weight from the point the boat is grounded.



Do not lower or start engines if the propeller is in mud or sand. Wait until the boat is refloated to avoid damage to the cooling system(s) of your engine(s).

When boating in water with tidal changes be mindful of water level fluctuations. If you are grounded on an incoming tide you can wait until the tide is high enough to refloat your boat. However, if you are grounded on an outgoing tide you should act quickly to refloat your boat. If this is not possible set an anchor to keep the boat from being driven farther aground. The anchor can be set to counteract the wind or current. The anchor can also be used to help pull the boat free. Many inland areas have rocks and stumps that could crack or puncture a fiberglass hull. Be familiar with the boating area. Caution should be taken in shallow water.

GENERAL INFORMATION ON BOAT HANDLING

The best method of learning how to handle your Grady-White boat and obtaining the best performance from your boat is to practice and experiment. After several hours of operation you should experiment with the throttle settings to discover the setting that will be the most comfortable and economical range for your particular load conditions.

We suggest that you make a speed and RPM chart to obtain the most economical operation. Operate the boat at various speeds and check the fuel consumption. Compute the amount of operating time remaining when the fuel gauge drops into the red band. Make a log of this type of information and have it available when using your boat.

Further statistics you may want to determine could include the following:

- Minimum speed for effective steering.
- Turning radius at different speeds.
- Response to steering at low speeds.
- Accelerating and deceleration rates.
- Time and distance to bring the boat to a stop at different speeds.
- Control of the boat using both engines in close quarters.

Also read the section in *Sportfish, Cruisers, Yachts Owner's Manual* for information on safe operating speed.

GENERAL INFORMATION

TWIN ENGINE BOATS

Twin engine boats are easier to maneuver than single engine crafts; however, they still require practice to ensure comfortable operation. The boat will run ahead or backward in a straight line when both engines are working together at the same speed. While backing the engines can be used to steer to port as well as starboard.



Moving ahead on one engine will cause the bow to swing away from the running engine side and to move forward at the same time. Backing up with one engine will cause the bow to swing toward the running engine side and the boat to move backward.

Running one engine ahead and one engine astern will cause the boat to turn end-for-end in little more than its own length.

Running both engines in the same direction at different speeds will cause the boat to move in the direction dictated by the faster engine but its influence will be modified by the slower engine.

GENERAL INFORMATION

COMMONLY USED NAUTICAL TERMS

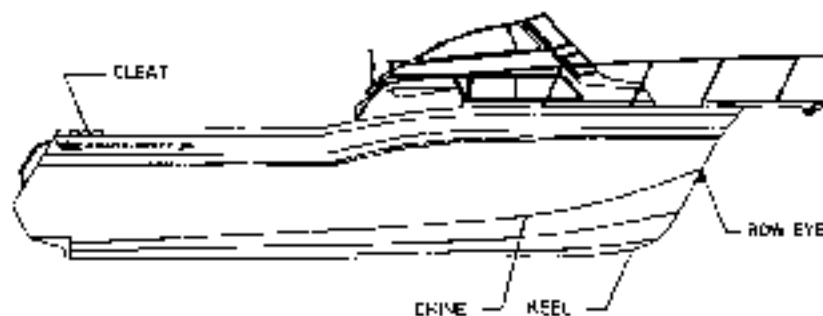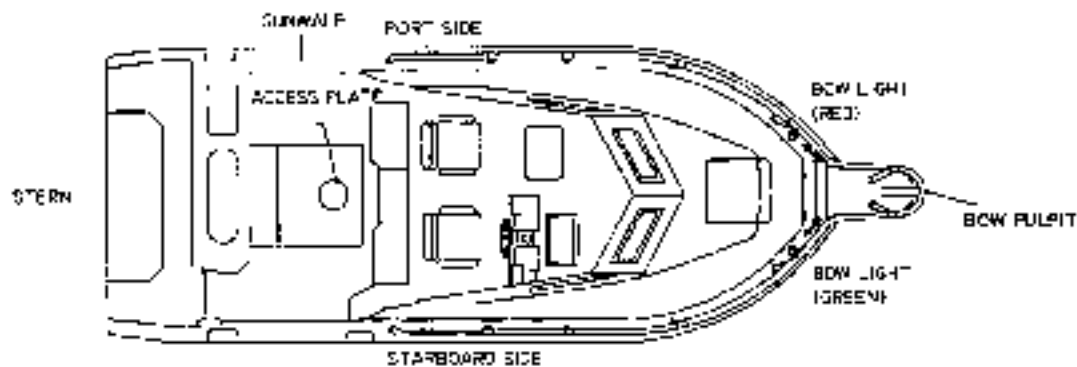

ABEAM - a line perpendicular to a boat's keel

ACCESS PLATE - a removable, watertight cover that provides quick entry to enclosed areas for maintenance or visual inspection

AFT - toward the rear or stern of the boat

BEAM - the greatest width of the boat

BILGE - the lower interior area of the hull

BOW - the forward section of the boat

BOW EYE - a U-shaped hull fitting used to attach the trailer winch to the boat

BULKHEAD - vertical partition in the boat

CHINE - point where the topside and bottom of the boat join

CLEAT - deck fitting with arms or horns on which lines are fastened

DECK - upper structure which covers the hull

DRAFT - depth of water required to float a boat

FATHOM - a depth measurement equal to six feet

FREEBOARD - distance measured between waterline and deck

GUNWALE (GUNNEL) - point where the deck and hull join

HATCH - an opening in the deck to provide access below

HEADROOM - vertical distance between the deck and cabin or canopy ceiling

HULL - major component that provides a watertight platform buoyant enough to float a craft and its load

KEEL - the major longitudinal member of a hull - the lowest external portion of the boat

KNOT - a measurement of speed equal to nautical miles per hour

LEE - the side that is sheltered from the wind

LIST - a tilt or lean to one side

PORT - a term designating the left side of the boat when facing forward

SCUPPER - holes permitting water to drain overboard from deck to cockpit

SHEER - curve or sweep of the deck as viewed from the side

STARBOARD - a term designating the right side of the boat when facing forward

STERN - rear of the hull

STRINGER - longitudinal members fastened inside the hull to add rigidity and strength

WAKE - the movement of water created by a moving boat

WINDWARD - side facing the direction of the wind (against the wind)

CHAPTER 3 PERFORMANCE

PERFORMANCE FACTORS

Maximum performance is dependent on many factors and cannot be guaranteed. These factors will vary with changing conditions. Some of these factors are listed below. Reference the troubleshooting guide on page 65, in *Sportfish, Cruisers Yachts Owner's Manual*.

ENGINE EFFICIENCY

Assuming your boat is equipped with the correct engine, the engine is properly tuned and the drive system is in good condition, operation will be most efficient at the RPM stated in the engine manual. Efficiency will decrease if normal care and maintenance are not performed. If the engine is neglected, power will drop and speed will decrease. In addition expensive repairs may become necessary. Be sure to follow all instructions in the engines' Operation Manuals.

WEATHER CONDITIONS

Weather conditions sway engine performance. Barometric pressure and humidity affect horsepower. A change of weather could amount to a 10% loss in horsepower on some hot days.

LOAD DISTRIBUTION

A decrease in performance will be noted when gear, equipment, passengers and fuel are added. This extra load will affect the performance of your boat according to the distribution of the weight. Another type of extra load that could affect performance is the accumulation of water in the bilge. Keep the bilge dry to eliminate this type problem.

MARINE GROWTH

Maximum performance is only obtained when your hull bottom is clean. Growth on the bottom of the boat will increase resistance and decrease speed. These conditions will also increase fuel consumption.

PROPELLER

The condition of the prop has a major influence on the performance of your boat. The engine should be equipped with the best size prop for normal conditions. Unusual uses or weight conditions may require special props. A damaged prop can affect your boat's top speed, cause vibrations, create a sudden drop in RPMs or even increase fuel consumption.

CAUTION

When replacing propellers stay within the engine manufacturers maximum and minimum RPM ranges. This information is covered in your engine Manual. If your boat does not have a tachometer consult your dealer for propeller changes.

PERFORMANCE

TRIM

Most outboard models are equipped with power tilt and trim mechanisms. The purpose of power tilt is to raise the engine for launching, loading or trailering. Power trim may be used to adjust the boat's planing performance and running attitude. See power trim, page 52 and 72, in *Sportfish, Cruisers, Yachts Owner's Manual*.

PROPULSION SYSTEM

• OUTBOARD

Information concerning the outboard engine(s) is located in the Operation and Maintenance Manuals supplied by the engine manufacturer. Details on engine functions such as the lubrication system, cooling system and alarm/monitoring system are outlined in these manuals. Your familiarization with this engine reference material will result in the proper usage and service that is essential for safe and enduring engine performance. These manuals are included with the Owner's Packet.

DO NOT INHALE EXHAUST FUMES! EXHAUST CONTAINS CARBON MONOXIDE, A GAS THAT IS DANGEROUS AND POTENTIALLY LETHAL.

WARNING

Do not attempt to service any engine or drive component without being totally familiar with the safe and proper service procedures. Certain moving parts are exposed and can be dangerous.

CAUTION

Do not paint the outboard motor with anti-fouling paint designed for heat hulls. Many of these paints can cause severe damage to the engines.

ENGINE WARRANTY

A warranty registration card is included with all engine manuals and should be completed and returned to the engine manufacturer as soon as possible.

THROTTLE/SHIFT CONTROL

The throttle/shift control, located at the helm, controls the flow of fuel to the engine and act as a gear shift lever to control the forward and aft thrust of the propeller.

For more information and a diagram of single and twin controls see page 70 and 71 in *Sportfish, Cruisers, Yachts Owner's Manual*. If your throttle or shift cables need replacing use the same style and length as the original equipment.

STEERING

• MECHANICAL STEERING

Grady-White boats that use mechanical steering are equipped with No Feedback Mechanical Steering. No feedback steering provides easier steering and increased control by offsetting the engine torque.

The mechanical steering system is designed to require a minimum of maintenance; however, you should periodically inspect the steering system (especially the control heads, cable ends and attachments) for wear, rust or corrosion and lubricate the parts when needed. If you notice a change in the "feel" of the system such as binding, looseness, noise or sticking immediately have a qualified marine technician perform a thorough check.

On outboard models the push rod at the end of the cable is vulnerable to freezing if it is not greased routinely. When the boat is not in use the motor should be turned so that the push rod is not exposed to the elements. If you operate in salt water areas, lubrication is extremely important and you should make frequent inspections for corrosion.

• HYDRAULIC STEERING

Hydraulic steering systems (not to be confused with power steering) require regular preventative maintenance for continued safe and reliable operation. The oil level in the helm pump must be maintained within acceptable operating levels. A low oil level will allow air to get into the steering system and result in unresponsive steering. The oil level should always be within 1/2 inch from the base of the fill hole, located on the front top portion of the helm pump. Check the entire steering system regularly for oil leaks. Unobserved leaks over a period of time will result in unresponsive and/or possible loss of steering.

All moving mechanical linkages, sliders, etc. must be greased as needed with a high quality marine grease. Refer to the steering manual for specific recommendations and additional maintenance requirements.


Any slow or sudden change in the "feel" of your steering system indicates an immediate need for a thorough inspection. All repairs and replacements to steering systems should be made only by a qualified marine technician.

• TILT STEERING

Tilt steering is available as an optional feature on certain models. This accessory will be in conjunction with either mechanical steering or hydraulic steering depending on the model. This feature enables the operator to tilt the wheel up or down. Refer to the steering system's manual for information on oil levels with hydraulic tilt steering.

CHAPTER 4 GAUGES AND SWITCHES

MERCURY AND OMC ENGINE INSTRUMENTATION

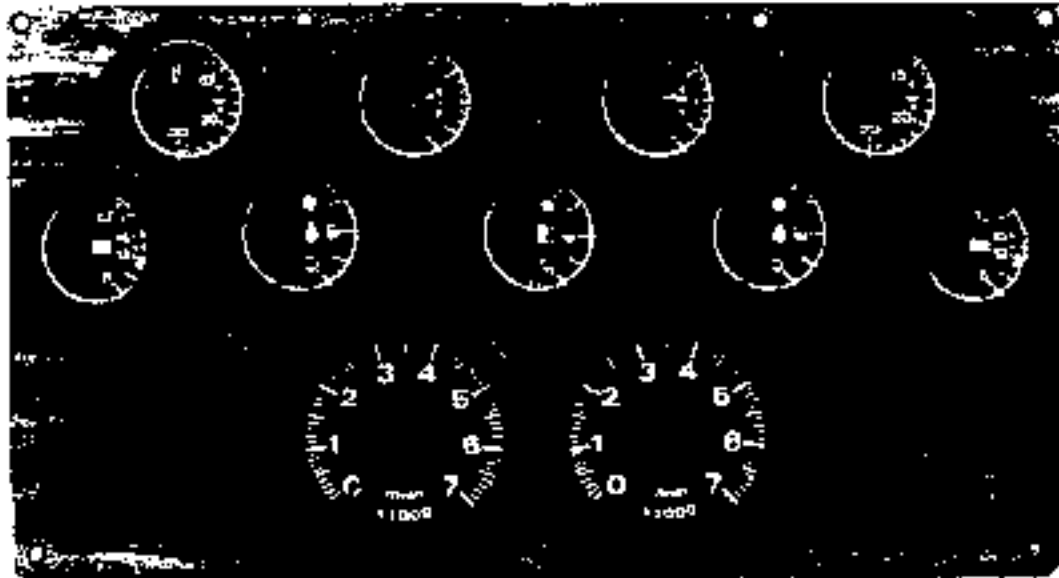

- **FUEL GAUGE**

The fuel gauge indicates the fuel level. When reading this gauge remember two things: (1) the accuracy of your gauge varies with the attitude of your boat in the water (trim or list), (2) the fuel pickup tube inside the gas tank is not capable of withdrawing all of the fuel from the tank. For these reasons never operate your boat at extremely low fuel levels.

- **OIL QUANTITY GAUGE**

OMC and Mercury pre-rigs are equipped with an oil quantity gauge that indicates the oil level in the tank.

- **TACHOMETER GAUGE**

The tachometer indicates engine revolutions per minute (RPMs). Consult your engine Owner's Manual for the recommended operating RPM range.

- **TRIM GAUGE**

The trim gauge indicates the angle of thrust of the lower unit of the engines.

- **VOLTMETER**

The voltmeter indicates the battery charge with the engines off and the charging system output with the engine running. A reading of 12 or 13 volts with the engines off is normal indicating a fully-charged battery. Readings below 11 indicate a weak battery which may not start the engine(s). A reading of 13 to 15 volts when the engine is running is normal. Readings over 15 volts may indicate regulator problems. Low or fluctuating readings may indicate loose connections or trouble in the regulator and alternator circuit.

- **WATER PRESSURE GAUGE (OMC RIG ONLY)**

The water pressure gauge indicates the water pressure in the engine cooling system. Readings help determine if water pressure is too low for adequate cooling. See the engine Owner's Manual for recommended operating range.

GAUGES AND SWITCHES

- **WATER TEMPERATURE GAUGE (MERCURY RIG ONLY)**

This gauge indicates the temperature of the cooling water circulating through the engine. When the temperature exceeds the recommended operating range for your engine immediately shut off the engine to prevent damage. Overheating is often caused by obstruction of your engine's water intake on the lower unit. Check the water intake strainer first if you experience trouble.

- **WATER TEMPERATURE, OIL LEVEL AND FUEL RESTRICTION WARNING SYSTEMS**

Outboard engines have several warning systems. The buzzer for these systems is located under the dash. Some models also have indicator lights in addition to the audible alarm. The purpose of the buzzer is to alert the driver to potentially damaging engine operating conditions. Consult your engine Owner's Manual for exact location and function of these systems.

YAMAHA ENGINE INSTRUMENTATION



DIGITAL SPEEDOMETER

- **BATTERY VOLTAGE INDICATOR**

This feature indicates the battery charge when the engine is off and indicates the alternator output when the engine is running. A reading of 12 or 13 volts is normal indicating a fully-charged battery. Readings below 11 indicate a weak battery which may not start the engines. A reading of 13 to 15 volts when the engine is running is normal. Readings over 15 volts may indicate regulator problems. Low or fluctuating readings may indicate loose connections or trouble in the regulator and alternator circuit.

- **CLOCK**

This feature is battery powered and may need to be reset if the battery select switch is turned to the "off" position.

GAUGES AND SWITCHES

- **FUEL METER**

This feature indicates the gas tank fuel level. When reading this gauge remember two things:

- The accuracy of your gauge varies with the attitude of your boat in the water (trim or list)
- The fuel pickup tube inside the gas tank is not capable of withdrawing all of the fuel from the tank.

For these reasons never operate your boat at extremely low fuel levels.

- **LOW FUEL WARNING INDICATOR**

This feature indicates when the fuel level in the main fuel tank is becoming low.

- **OVERHEAT WARNING INDICATOR**

This feature indicates when the temperature of the cooling water circulating through the engine is too high. When the temperature exceeds the recommended operating range indicated by your engine owner's manual, immediately shut off your engine to prevent damage. Overheating is often caused by obstruction of your engine's intake on the lower unit. Check the intake strainer first if you experience trouble.

- **SPEEDOMETER**

This feature indicates boat speed in miles per hour, knots per hour or nautical miles per hour.

- **TRIP METER**

This feature indicates the distance traveled since the meter was last set.

- **HOUR METER**

This feature records the cumulative number of hours the motor has been in use.

DIGITAL TACHOMETER

- **OIL LEVEL WARNING LIGHT**

Refer to your engine owner's manual for information regarding oil level and warning light.

- **REVOLUTIONS PER MINUTE (RPM's)**

Consult your engine Owner's Manual for the recommended operating RPM range.

- **TRIM**

This feature indicates the angle of thrust of the lower unit of the engine.

DIGITAL FUEL MANAGEMENT GAUGE

- **ECONOMIZER**

The economizer feature on the fuel management gauge gives readings in gallons per hour and miles per gallon.

- **SYNCHRONIZER**

The synchronizer tells the operator when the engines are running at the same RPMs.

- **TOTALIZER**


The totalizer feature displays the amount of fuel consumed since it was last set. To reset the totalizer press the SET and MODE buttons together.

The digital fuel meter can display information for the port side only, the starboard side only, and then a total consumption. For more detailed information refer to engine Owner's Manual.

GAUGES AND SWITCHES

SWITCH PANEL

At the helm station you will find an accessory switch panel. These accessory switches are specified below.

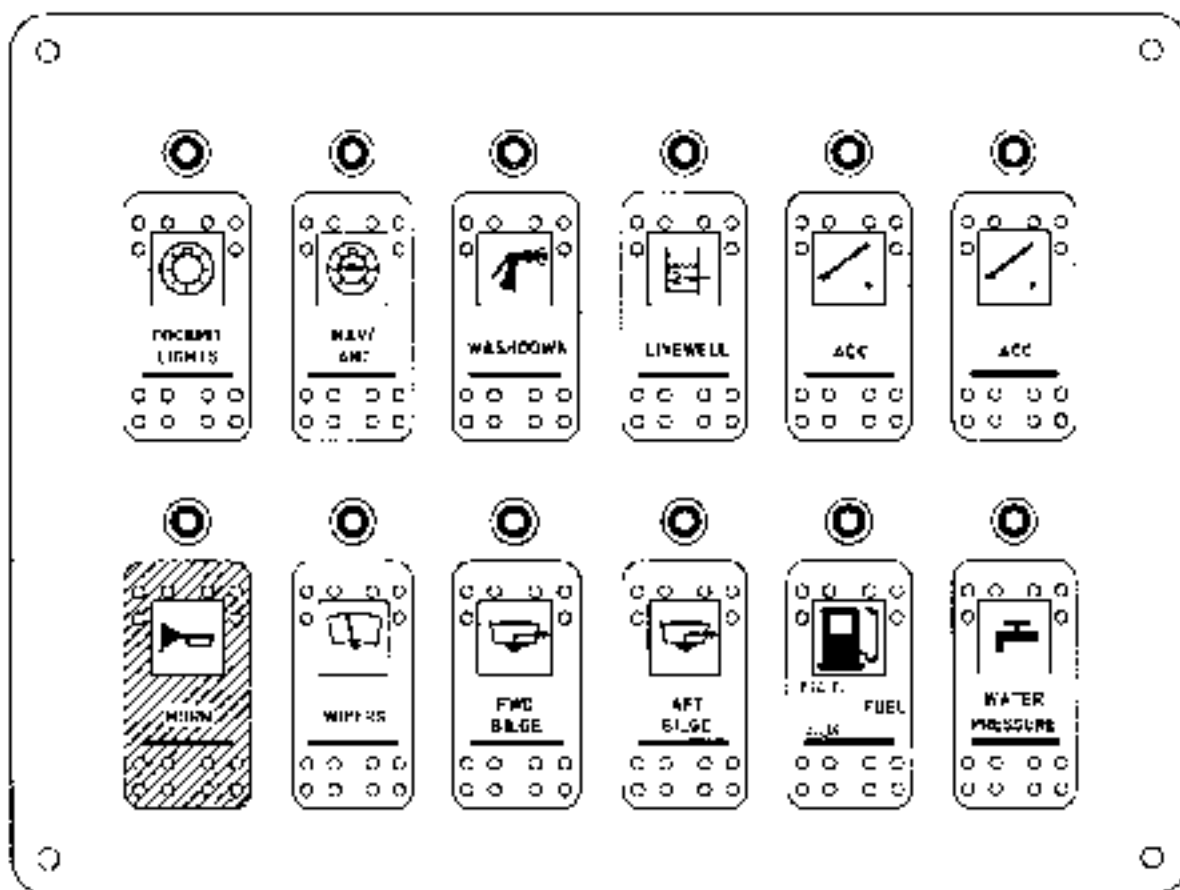

THIS REPRESENTS A GENERIC SWITCH PANEL LAYOUT. ACTUAL PANELS WILL DIFFER DEPENDING ON THE MODEL OF BOAT, AND THE OPTIONAL EQUIPMENT INCLUDED DURING MANUFACTURING

- **BILGE PUMP**

This two-way switch serves as an overriding manual switch in the event of failure of the automatic switch in the bilge.

- **COCKPIT LIGHTS**

The cockpit lights provide illumination for the cockpit area.

- **FUEL**

This two-position switch (MAIN-AUX) provides separate fuel quantity readings from each tank. This switch only operates the fuel level gauge and does not select the tank in use.

- **HORN**

The horn meets the requirements of the United States Coast Guard's emergency sound signaling device.

- **LIVEWELL**

This switch activates the livewell. Reference the Livewell operation section in Chapter Seven of this manual for information on this feature.

GAUGES AND SWITCHES

- **WASHDOWN**

This switch pressurizes the washdown system. Reference the Washdown operation section in Chapter Seven for information on this feature.

- **NAVIGATIONAL/ANCHOR LIGHTS**

Your boat is equipped with lights that meet international lighting regulations. The three position switch (NAV-OFF-ANCHOR) changes the lighting configuration to running or anchor lights. Note that this switch also operates the gauge lights.

- **WIPERS**

This switch activates the windshield wipers.

- **ACCESSORY**

Switches, fuses and breakers labeled "ACC" are unused. These components are provided for the addition of non-factory installed accessories.

Switch identification labels are available through your dealer for non-factory installed options.

CHAPTER 5 MAINTENANCE AND SERVICE

GENERAL

The amount of maintenance required to keep your boat operating properly and to maintain the appearance is dependent on how the boat is used, amount of usage, salt or fresh water, geographic location, etc.

Your hull and deck are constructed by the "hand lay-up method" using the highest quality fiberglass mat and woven roving. This method of construction ensures a proper fiberglass-to-resin ratio and a uniform thickness which together result in a much stronger boat than those constructed of "chopped glass". This is an expensive process but ensures that your Grady-White is the strongest most durable fiberglass boat possible.

Keep the bilge area clean and dry. Leaks found early and corrected will less likely cause damage, do not allow grease, grime and dirt to build up.

Proper maintenance of your boat is not only a source of pride; it is the key to maintaining your boat's value. A few simple steps will keep your fiberglass Grady-White looking showroom bright for years.

EXTERIOR FIBERGLASS FINISH

The exterior finish of your Grady-White is a thin layer of resin with a finished color pigment called gelcoat. It is used for cosmetic purposes and makes routine maintenance relatively simple. Although gelcoat has a hard smooth surface, it does contain microscopic pores that will allow surface discoloration if not kept clean.

• MAINTENANCE

Normal exterior finish maintenance of your Grady-White is similar to the care you would give your automobile. Do not use caustic, highly alkaline cleaners or those containing ammonia. These cleaning agents may darken gelcoat. The resulting stain is a chemical reaction and can be removed with a rubbing compound followed by waxing.

• CLEANING

The best way to prevent discoloration and soil build-up is to hose the boat with fresh water after each outing or on a regular basis. This build-up is the result of use and environmental pollutants. Clean the boat regularly with a mild household detergent and plenty of fresh water. Avoid strong detergents, citrus based cleaners or bleaches; these are potentially harmful to the appearance and durability of your boat's gelcoat. Use a sponge on smooth surfaces and the deck. A brush can be used on the nonskid areas. Rinse away all grime and residue.

• FINISH/WAXING

Gelcoat will age or dull naturally. As the gelcoat begins to lose gloss from constant exposure to the natural environment and pollutants it will require some special attention to restore the original gloss and color.

MAINTENANCE & SERVICE

Polishing compound (fine abrasive) or rubbing compound (coarse abrasive) is recommended for use on fiberglass finishes to remove scratches and stains, or restore severely weathered surfaces. Compound can be applied by hand or mechanical means. Avoid contact with metal components; these compounds will deteriorate their protective coatings, leading to rust and failure. The following process will help restore your fiberglass finish:

- Clean the affected area with good detergent.
- Remove stubborn stains or discoloration by gently wet sanding the affected areas with 600 grit "wet or dry" sandpaper. **ALWAYS SAND IN ONE DIRECTION.** Use plenty of water and sand curves in the same direction. Dry the area to make sure all the discoloration has been removed. Repeat this process if necessary.
- Buff using a polishing compound suitable for fiberglass, an electric buffer (1750-1800 RPM) and an 8-inch lamb wool pad.

CAUTION

Keep buffer moving. Do not allow it to rest in one spot. Heat build up will quickly distort the surface.

- When buffing is complete wash away compound with clear water then dry.

CAUTION

Excessive compounding can wear away the gelcoat.

- Once the area is clean it may be waxed. This will enhance the gloss while providing a seal to retard staining or soil accumulation.

Check with a local dealer for advice on a suitable wax for that region. The wax film will seal the pores as well as enhance the looks of your boat. **DO NOT wax surfaces that may be walked on as they will become slippery.** While waxing your boat inspect the surface for any damage. Have the damage corrected as soon as possible.

• REPAIRING

Gelcoat is a very durable material but is susceptible to scratches, blistering, and web-like cracks (crazing) over time. Gelcoat is elastic enough, however, to withstand strong blows while flexing with the hull's movement. Gelcoat problems are cosmetic and will not effect the structural integrity of your boat. Some gelcoat damage and imperfections such as nicks and scratches can be repaired by obtaining a color match patch kit. This kit and instructions can be purchased through your Grady-White dealer. Acetone, a cleaning agent for gelcoat, can also be purchased through your dealer.

WARNING

M.E.K. (Methyl ethyl ketone peroxide), gelcoat and acetone are flammable and hazardous chemicals that must be handled properly. Follow instructions on the containers carefully. Be aware that gelcoat produces heat and put off fumes; therefore, when you are finished with catalyzed chemicals, submerge completely in water until cool.

BOTTOM PAINT

If you leave your boat in the water for more than a few days the hull bottom, below the waterline, should be treated with anti-fouling paint. This paint will help protect the bottom from marine growth and barnacles that inhibit performance. Since anti-fouling paint slowly dissolves to prevent marine growth yearly inspection and cleaning of the hull bottom is advised. Repaint whenever necessary. We suggest the use of an epoxy barrier coat to be applied in conjunction with the anti-fouling paint to help prevent blistering. For more information see your local dealer.

GRADY DRIVES

Moisture may enter the engine bracket so a drain has been provided. Any moisture entering the bracket should drain to the bottom. The drain plug should be removed periodically to drain the bracket. The Grady Drive is made of aluminum therefore use the proper type of bottom paint.

CANVAS

Grady-White's canvas is made using the highest quality vinyl and latest sewing techniques. The canvas will not be completely leak proof. The seam holes in your canvas may stretch and tend to leak. However, you can correct this problem by applying *Apséal® or Uniseal™ to the seams.

Please understand that Grady-White does not warrant the fit and design of the canvas to be entirely watertight.

• MAINTENANCE

To maintain your boat's top and other canvas follow these guidelines:

Fabric should be cleaned regularly to prevent the buildup of soil and penetrate the fabric. Simply brush off any loose dirt and hose down canvas and clean with a mild solution and warm water. Do not use petroleum-based or ammonia cleaners on canvas or clear vinyl as they will yellow. For heavily soiled fabric remove top from frame. Soak the fabric in a solution of 1/2 cup of Clorox™ and 1/4 cup of Ivory or Lux soap per gallon of warm water. Let soak until mildew and stains can be brushed out with a common kitchen brush. Rinse thoroughly with cold water until all soap is removed. Allow fabric to air dry completely. **DO NOT STEAM PRESS OR DRY IN AN ELECTRIC OR GAS DRYER** This will damage the canvas fabric. Water repellent was applied to your canvas during manufacturing. After extended cleaning some of the repellent may have diminished and re-treatment of the fabric is recommended. Do not use wax-based products. Use a water based repellent like *Apséal® or Uniseal™. Scotch-guard® is effective for short-term use only.

• SNAPS

- Zippers and snaps will loosen with use. Use care when starting the zipper to prevent damage. Lubricate the snap buttons and zippers with petroleum jelly.
- Fasteners should be unsnapped as close to the button as possible.

MAINTENANCE & SERVICE

• VINYL

- Clean clear vinyl thoroughly with denatured alcohol and then apply a protective layer of clear wax. **Do not** use paste wax, as it will turn the vinyl yellow. This process should be repeated as necessary to maintain the protective wax coating.
- Store and secure canvas before trailering.
- Dry all canvas before storing to prevent mildew.
- Remove the top, front and side panels; **roll** them for storage. This procedure is necessary to prevent the front and side vinyl pieces from cracking. **NEVER FOLD THESE PIECES!**

• STORAGE

Consider the following steps when putting your folding top canvas option in the stored position:

- Fold the top and zip it into the canvas cover provided.
- Pivot the covered top into the stowed position on the foredeck. The canvas cover is equipped with a strap on each side and an eyelet in each strap. Place the eyelets over the male fasteners located on the port and starboard foredeck.
- Twist the male fastener 90 degrees to engage.



CAUTION

Secure the folded top when in the stowed position, this will prevent damage or the loss of your canvas.

UPHOLSTERY

Your exterior vinyl upholstery may be cleaned with a mild solution of household detergent and fresh water. Commercial cleaners for vinyl also work well.

Since the seams of your exterior upholstery are not waterproof your upholstery should be stored in the cabin or covered when not in use.

Most cabin cushions are removable and may be dry-cleaned. Some cabin cushions are of a Herculon-type fabric and may be cleaned with upholstery cleaner.



CAUTION

DO NOT MACHINE-WASH CABIN FABRICS.

VINYL/POLYETHYLENE/PLEXIGLAS

In the cockpit area of your boat vinyl and plexiglass are used for trim, and polyethylene is used for the toe rails and rod racks. Routine maintenance for vinyl should include regular cleaning with soapy water, and the application of a surface protector at least twice per year. The use of glass cleaner and a soft cloth can maintain plexiglas, used to cover your instruments and radio box. Polyethylene can be cleaned with products such as 409 or any spray and wipe cleaner.

SHOWER SUMP

A shower in the head compartment drains into a contained "sump" which is used to prevent hair, soap scum and bacteria from accumulating in the bilge and creating odors. This sump should be cleaned regularly. The sump pump box contains a filter that should be rinsed with clean water. The filter should always be installed when using the shower to prevent the sump pump from becoming clogged.

SCUPPERS

Grady-White boats have self-bailing cockpits, meaning that water on the cockpit floor drains by gravity through large aft scuppers, not into the bilge. The aft drains (scuppers) have an external scupper flap assembly that restricts the flow of water back into the boat. Inspect the flaps periodically to make sure that they are free of debris. The scupper flaps may need periodic replacement if the rubber becomes damaged or no longer seals properly in the thru hull.

CAULKING

Deck fittings, bow rails, window, hatches, etc., have been caulked or gasketed with the highest quality material to ensure a waterproof joint with the boat. However, the working action of normal use will tend to flex the joint and eventually break down the seal between them. Periodically inspect the caulking or gaskets for leaks. Recaulk or replace the gaskets necessary or have your dealer do the repair.

HARDWARE MOUNTING

When drilling holes to mount hardware, in the boat surface, seal each hole properly. Sealing will prevent water leakage that is crucial in fiberglass areas that have been reinforced with plywood. A hole sealed improperly allows water inside the fiberglass that leads to saturation of the plywood reinforcement.

HARDWARE/STAINLESS STEEL RAILS

The hardware on your Grady-White is made of laboratory grade 316 stainless steel and needs regular cleaning to maintain its "less staining" properties. The key to maintaining your stainless steel is to keep it clean with a mild solution of soap and FRESH water.

MAINTENANCE & SERVICE

REQUIRED MAINTENANCE PROCEDURE FOR ANODIZED ALUMINUM COMPONENTS

(Lean Bars, Rod Holders, T-Top and Hardtop Frames, Outriggers, Etc.)

Due to the nature of anodized aluminum and the harsh exposure conditions of the marine environment, it is important to follow a required maintenance procedure. Failure to follow a preventative maintenance procedure will most likely result in aluminum pitting.

These parts must be washed periodically with a very mild soap and water solution. Grady White recommends washing with a mild soap (such as Ivory Liquid) after each use and every two to three weeks if stored in an outside marine environment. Strong cleaners and soaps must not be used; never use abrasive cleaners or products that contain chlorine bleach. These products can remove the anodized coating.

Give special attention to the upper tubes of a hardtop or T-top frame. The area just below the top is shielded by the canvas or fiberglass top and does not receive the natural rinse that rainwater provides. Failure to thoroughly clean and maintain this area will allow contaminants that attack the anodized aluminum to remain on the frame.

For maximum protection coat parts with a non-abrasive metal protector. The best protectors will displace moisture, remove contaminants, and leave a wax film protecting the anodized aluminum. Follow the application guidelines for the product you choose. A sample of one metal protector has been provided with your boat.

Metal Protectors:

Boeshield T-9

PMS Products Inc.

76 Veterans Dr.

Holland, MI 49423

800-962-1732

Aluma Guard

Rupp Marine, Inc.

Unit 1104761 Anchor Ave.

Port Salerno, FL 34992

561-286-5300

Premier Polish

Aquatech

6726 Netherlands Drive, Suite 200

Wilmington, NC 28405

800-853-7760



CAUTION

Do not use abrasive cleaning products, pads, steel wool or steel brushes. These products will damage the finish.

FUEL TANK COMPARTMENT

The fuel tank storage area needs to be rinsed periodically especially when used in a salt-water environment. Dirt that accumulates in this area attracts salt and causes salt crystals to form on your metal fuel tank. Salt crystals corrode most metal surfaces if left untreated over a period of time. To help protect your tank from rust and corrosion rinse the compartment with FRESH water. Remove the access plates from the fuel tank lid and inspect this area for leaks or unsecured lines.

The access plates on your fuel tank lids keep the fuel compartments sealed. Over time the opening and closing of these plates causes the o-rings to wear-out. Replace these o-rings as necessary to maintain the watertight integrity of the plates.

MAINTENANCE & SERVICE

BATTERIES


Batteries should be secured in a non-metallic tray to avoid electrolyte spills. An insulated boot should cover battery terminals. Fluid levels should be checked at least once a month depending on usage. Fill the battery to the upper level with distilled water. Never overfill the battery.

Keep terminals clean by scrubbing them with a stiff brush and a mixture of baking soda and water. Afterwards, apply a light coat of grease. The mixture should not enter the battery.

When not in use check the battery monthly by using a battery hydrometer that measures the specific gravity.

CAUTION

Never disconnect the battery when the engine is running. This can cause damage to the charging system. When replacing your battery reference your engine Owner's Manual for recommended battery type and required performance specifications.

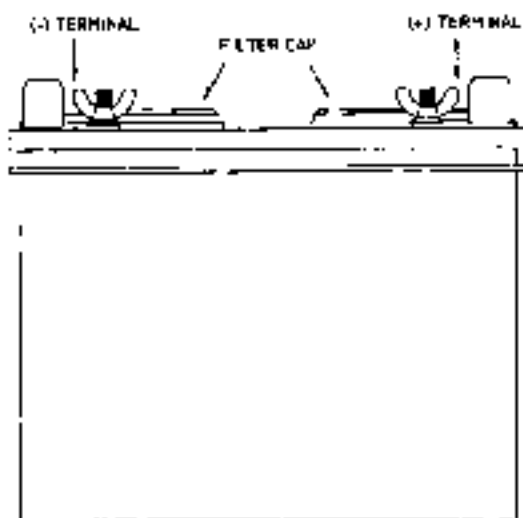

Batteries contain sulfuric acid, a harmful and potentially volatile chemical. When handling batteries, exercise caution and follow these guidelines.

- Avoid contact with skin, eyes or clothing.
- Protective gloves, eye wear, and clothing should be worn to minimize risk to yourself.
- Batteries produce explosive gases. Keep sparks, flame and cigarettes away. Ventilate when charging or using in an enclosed space.

• **KEEP OUT OF REACH OF CHILDREN**

This is not a complete set of guidelines; it is your responsibility to safely maintain your batteries and avoid injury. Use good judgement and remain alert to prevent an accident.

In the event of an accident or exposure, immediately reference these guidelines, then seek prompt medical advice or attention.

Antidote:

- **EXTERNAL** - Flush with water
- **INTERNAL** - Drink large quantities of water or milk. Follow with milk of magnesia, a beaten egg or vegetable oil. Contact physician immediately.
- **EYES:** Flush with water and get prompt medical attention.

CAUTION

When disconnecting and reconnecting battery cables, the black cable must be connected to the negative terminal and the red cable must be connected to the positive terminal. Reversing this procedure will immediately damage your system.

MAINTENANCE & SERVICE

LIGHT BULB REPLACEMENT GUIDE

The following chart provides identification of replacement light bulbs for your Grady-White. All of the lights shown may not be used on every model boat. If you have difficulty finding replacement bulbs under the part numbers listed contact your Grady-White dealer for further assistance. Always use the specified replacement bulb. Improper substitution may result in electrical malfunction, insufficient lighting, boat damage or personal injury.

The following are Registered Trademarks: Perko, Attwood, Gem, Ramco, Guest, GE, Sylvania and Phillips.



18" REDUCED GLARE HARDTOP MAST LIGHT
LIGHT MANF.: PERKO
REPLACEMENT BULB #: PERKO 338 DP2 CLR



INTERIOR CABIN LIGHT
LIGHT MANF.: RAMCO
REPLACEMENT BULB #: RAMCO 280 OR
GE OR SYLVANIA OR PHILLIPS 64



COCKPIT LIGHT
LIGHT MANF.: ATTWOOD
REPLACEMENT BULB #: ATTWOOD #90




STERN POLE LIGHT
LIGHT MANF.: PERKO
REPLACEMENT BULB #: PERKO 357 012 DP



READING LIGHT FOR CABIN
LIGHT MANF.: GEM
REPLACEMENT BULB #: GEM 1831 2KCP OR
GE/SYLVANIA #1142




REDUCED GLARE WINDSHIELD MASTLIGHT
LIGHT MANF.: PERKO
REPLACEMENT BULB #: PERKO 338 DP2 CLR



COMBINATION BOWLIGHT
LIGHT MANF.: ATTWOOD
REPLACEMENT BULB #: GE 264IL (12V / 10W)



DOMF LIGHT
LIGHT MANF.: PERKO
REPLACEMENT BULB #: PERKO 337-013 DP



SEPARATE SIDE BOWLIGHTS
LIGHT MANF.: ATTWOOD
REPLACEMENT BULB #: GE 264IL (12V / 10W)



NIGHT VISION DOME LIGHT
LIGHT MANF.: GUEST
REPLACEMENT BULB #: GUEST P-3680 OR GE 912



REDUCED GLARE CONSOLE GRABRAIL MASTLIGHT
LIGHT MANF.: PERKO
REPLACEMENT BULB #: PERKO 338 DP2 CLR

MAINTENANCE & SERVICE

ACCESSORY WIRING COLOR CODE AND FUSE/BREAKER SIZE CHART

ACCESSORY	WIRE SIZE / COLOR	AMP	LOCATION
LIGHTS			
BOW LIGHT	16 GA. GRAY	15.0	ACCESSORY PANEL
AFT POLE LIGHT	16 GA GRAY/WHITE		ACCESSORY PANEL
MAST LIGHT	16 GA GRAY/RED		ACCESSORY PANEL
PANEL LIGHTS	16 GA DARK BLUE		ACCESSORY PANEL
CABIN LIGHTS	16 GA DARK BLUE/GREEN	10.0	FUSE BLOCK
LIVWELL LIGHT	16 GA. BLU/RED	W/ LIVWELL PUMP	
COCKPIT LIGHTS	16 GA DARK BLUE	10.0	ACCESSORY PANEL
SPREADER LIGHTS	14 GA DARK BLUE/WHITE	10.0	HARDTOP / T-TOP FUSE BLOCK
PUMPS			
BILGE PUMP (FORWARD)			
ATTWOOD 1251	16 GA BROWN/BLACK	4.0	ACCESSORY PANEL
AUTO FLOAT SWITCH (FORWARD)	16 GA BROWN/RED	5.0	NEAR BATTERY / BATTERY BOX
HULL PUMP (AFT)			
ATTWOOD 1700	16 GA BROWN	10.0	ACCESSORY PANEL
AUTO FLOAT SWITCH (AFT)	16 GA BROWN/WHITE	7.5	NEAR BATTERY / BATTERY BOX
SHOWER SUMP PUMP (FLOAT SWITCH)	16 GA BROWN/ORANGE	4.0	FUSE BLOCK
WATER PRESSURE PUMP (CABIN SHOWER)	12 GA ORANGE/BLUE	15.0	ACCESSORY PANEL
WATER PRESSURE PUMP	16 GA ORANGE/BLUE	5.0	ACCESSORY PANEL
WASHDOWN PUMP	12 GA ORANGE/BROWN	15.0	ACCESSORY PANEL
LIVWELL PUMP			
RULE 700 GPH	16 GA ORANGE/BROWN	5.0	ACCESSORY PANEL
RULE 1100 GPH	16 GA ORANGE/BROWN	8.0	ACCESSORY PANEL
IN-LINE MACERATOR PUMP	12 GA ORANGE/GRAY	20.0	ACCESSORY PANEL
HEAD PUMP (ELECTRIC)	10 GA RED	25.0	ACCESSORY PANEL
MACERATOR PUMP (MARINE HEAD)	10 GA RED	25.0	ACCESSORY PANEL
MISCELLANEOUS			
HORN			
WINDSHIELD WIPER (ACTUATOR)	12 GA ORANGE/WHITE	15.0	ACCESSORY PANEL
PORT	16 GA ORANGE/GREEN	5.0	ACCESSORY PANEL
STARBOARD	16 GA ORANGE/BLACK		ACCESSORY PANEL
WINDSHIELD WIPER (POSITION)	16 GA ORANGE		
ACCESSORY SWITCH	16 GA ORANGE	10.0	ACCESSORY PANEL
ACCESSORY GROUNDS (BRANCH)	16 GA BLACK	N/A	
ACCESSORY GROUNDS (MAINS)	6 OR 10 GA BLACK	N/A	
HYDRAULIC TRIM TABS	16 GA HARNESS (SUPPLIED)	20.0	FUSE BLOCK
MAIN FUEL TANK (SENDER)	16 GA PINK	N/A	ACCESSORY PANEL
AUXILIARY FUEL TANK (SENDER)	16 GA PINK/WHITE	N/A	ACCESSORY PANEL
ACCESSORY PANEL POWER LEAD	8 OR 10 GA RED	40.0	CIRCUIT BREAKER NEAR BATTERY
VHF (HARDTOP RADIO BOX) POWER LEAD	10 GA RED/WHITE	10.0	NEAR BATTERY / BATTERY BOX
VHF GROUND	10 GA BLACK/WHITE	N/A	
12 VOLT ACCESSORY OUTLET	10 GA RED/ORG	15.0	FUSE BLOCK
MEMORY WIRE	16 GA RED/PINK	10.0	NEAR BATTERY / BATTERY BOX
OIL SENDER (STBD)	16 GA LT. BLUE	N/A	
OIL SENDER (PORT)	16 GA LT. BLUE/WHITE	N/A	
BILGE BLOWER (100 ONLY)	16 GA. BRN/YEL	5.0	ACCESSORY PANEL
FUEL GROUNDS	16 GA GREEN	N/A	

WINTERIZATION AND STORAGE

CHAPTER 6 WINTERIZATION AND STORAGE

GENERAL

For boats stored during the winter or an extended period of time some precautions should be taken. Prior to and during the storage process the boat and its systems should be checked for maintenance or repairs. Arrange repairs during the storage period. Avoid costly damage and delay when launching your boat by having it stored and winterized properly. See page 61, in Sportfish, Cruisers, Yachts Owner's Manual for a checklist on winterizing and storage.

BOAT STORAGE

To avoid personal injury and property damage it is advised to take extra precautions when lifting or moving the boat for storage. Grady-White Boats are equipped with stern lifting eyes and a bow towing eye. These eyes are provided for moving and temporary lifting. For permanent lifting, you will need to have or add a bow lifting ring option. Eyes should be inspected regularly to insure structural integrity.

WARNING

THE BOAT SHOULD NOT BE STORED BY USING THE PAD EYES, UNLESS THE BOAT IS EQUIPPED WITH A BOW LIFTING RING. PAD EYES SHOULD BE INSPECTED PERIODICALLY IF USED FOR LIFTING.

While transporting a boat by a lift or tow motor the structure should remain as close to ground level as possible. If slings are necessary for lifting or transporting they should be in proper condition and tied together to prevent any movement (separating or slipping) which could cause damage to the boat. If tow motors are used to move the boat the forks should be padded and in a secure location under the hull near the chine. The forks should be long enough to prevent the boat from rocking forward and aft causing it to become unbalanced.

When storing your boat on the trailer raise and block the trailer axle to prevent tire deterioration. This is an excellent time to lubricate and pack the wheel bearings per the manufacturer's instructions.

Make sure the keel, chines and transom are fully supported. Indoor storage is beneficial particularly if your climate produces freezing weather. The storage unit should not be airtight but should be ventilated. Ventilation is extremely important both around and through the boat.

For outdoor storage use a canvas cover to prevent "sweating".

WARNING

BOATS WITH PLASTIC SHRINK WRAP DURING STORAGE MUST LEAVE THE FUEL FILL AND VENT FITTING OUTSIDE OF THE ENCLOSURE TO PREVENT THE TRAPPING OF DANGEROUS FUMES OR SPILLAGE FROM THERMAL EXPANSION.

WINTERIZATION AND STORAGE

CLEANING AND LUBRICATING THE BOAT

Clean and wax your boat before storage. If you store your boat in the water, there may be a layer of growth on the bottom. As it dries, this debris will harden. Clean, scrub and scrape the bottom promptly when the boat is removed from the water. Remove all marine growth and other foreign matter from the hull. Clean the inside of hull openings, thru-hull fittings and scupper drains. Inspect the hull for damage. Remember to avoid harsh cleaners, citrus solutions and bleaches; these could have harmful effects on your boat's gelcoat and metal components.

Check cleats and rails for corrosion and tightness. Clean stainless steel as directed under MAINTENANCE AND SERVICE. Use a quality metal preservative like T-9™ on metal surfaces to prevent salt-water damage. Check for loose silicone, hinges and unsealed gaskets. Replace or tighten where necessary. Heavy seas pounding and twisting the hull can cause leaks in your windows, doors and hatches. Check hinges for corrosion. Lubricate hinges as necessary.

The T-9™ metal protection product was developed by Boeing™ Aviation for long-term protection of aircraft. It works by coating and penetrating fasteners and fixtures, displacing moisture and creating a clear wax film that lubricates and protects metals for months. T-9 can be used to protect deck hardware, engines, electronics and firing racks.

DRAINING & WATER SYSTEM

Remove the garboard drain plug to keep the bilge dry. Store your boat with the bow elevated for drainage.

Drain all water tanks, lines and pumps to prevent freeze damage. The fresh water system may be drained by running any faucet until the tank is empty. When empty turn the faucet off to prevent pump damage. Residual water will not damage the tank. If desired, the fresh water system may have a non-toxic antifreeze added. This antifreeze can be purchased at marine or camping dealerships. To drain other lines close seacocks and run the pumps until the lines are dry then open the seacocks. In warmer climates draining will help prevent water stagnation.

Drain portable heads. Remember to drain the upper and lower tanks. Water should be removed from deck pump-out lines.

BATTERIES

Check the electrolyte level in your battery and fully charge the battery before storing. A weak battery loses its charge more rapidly than a strong battery. Ideally, you should disconnect the battery and cover the terminals with grease to prevent corrosion.

ENGINES


See your engine Operator's Manual regarding the winterizing procedures. Follow instructions carefully and your engine may survive any severe weather conditions. Change all filters. Check hoses and clamps. If you have developed any vibrations during the season look for loose engine bolts, bent shafts or bent propellers.

WINTERIZATION AND STORAGE

FUEL SYSTEM

The fuel tank compartment should be rinsed with fresh water to keep salt crystals from forming and corroding the fuel tank. After rinsing, make sure all water is drained from the compartment.

Make sure your fuel does not contain alcohol. Fuels that contain alcohol will absorb humidity. The resulting condensation will separate from the fuel as temperatures drop during the winter months. An accumulation of this condensation can lead to fuel corrosion. There are also fuel additives available to inhibit condensation. Keep tanks full but do not overfill. This is also a good time to have your fuel filters/water separators replaced.

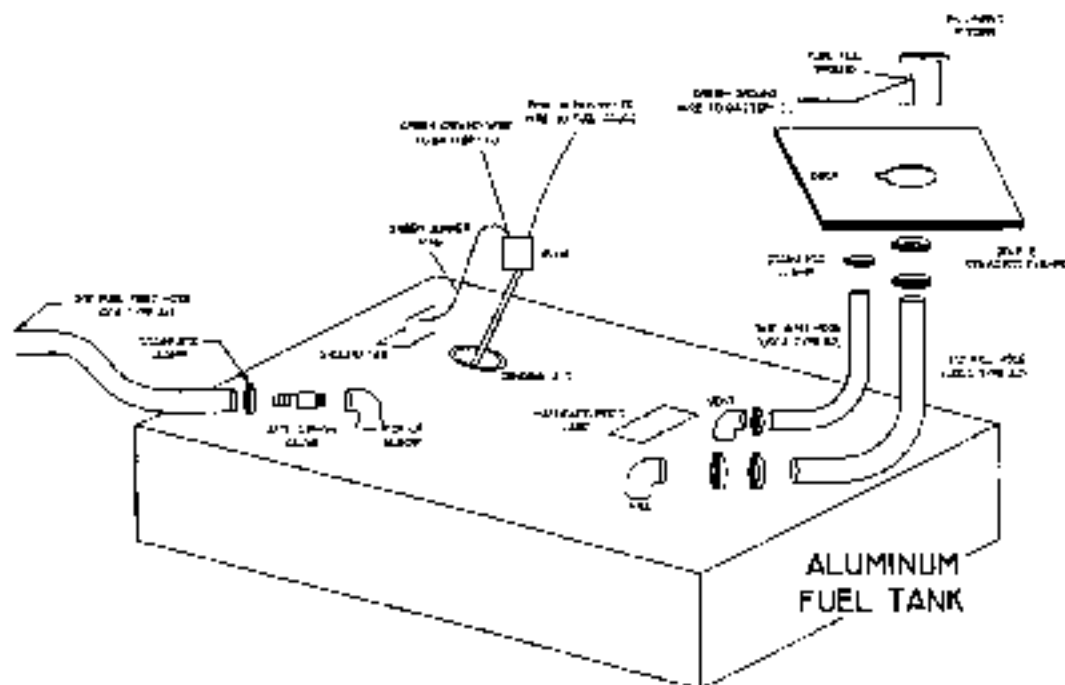

STORAGE CHECKLIST

In addition to winterization guidelines the following checklist can be used as a guide for storing your boat. Additional details should be added as needed for your personal application.

- Remove all loose items and personal effects.
- Remove any detachable and valuable equipment such as electronics. Store all electronics inside. Your compass, if built in, should be covered for the winter. Ultraviolet rays from the sun will cloud the compass and make it difficult to read.
- Winterize all equipment as directed in the manufacturer's manuals.
- Store cushions indoors to prevent mildew.
- Clean the exterior and interior of the boat. Remove all grease, oil, salt spray, etc.
- Remove garbage. Clean storage areas, fish boxes and livewells. Prop fishbox lids open.
- Lubricate hinges, valves, the backs of electrical panels and other surfaces that will rust.
- Check underwater items. Hardware should be in good condition and tight.
- Inspect electrical systems and have any repairs performed.

LIMITED WARRANTY

REGISTRATION OF PURCHASE:

The "Federal Boat Safety Act of 1971" requires all boat manufacturers to maintain a record of all first retail purchasers and their current addresses for the purpose of notification in case of defective parts or equipment, or in case of non-compliance with standards or regulations set forth by this act. Under the act, failure to complete and return your factory warranty card for our records will waive your right to notification of defect and/or repair at manufacturer's expense.

FIVE YEAR HULL TRANSFERABLE WARRANTY

Grady-White warrants to the original retail purchaser of each new Grady-White boat that under normal use the hull will be free from structural defects for a period of five years from the date of delivery to the original retail purchaser. Any structural defects covered by the warranty will be repaired free of charge at either the Grady-White factory in Greenville, North Carolina, or at an authorized Grady-White dealer location as elected by Grady-White. Transportation to and from the point of repair will be the responsibility of the owner, with all repairs subject to prior written authorization by Grady-White Boats, Incorporated. **NO BOAT IS TO BE SENT TO THE GRADY-WHITE FACTORY WITHOUT SUCH WRITTEN AUTHORITY.**

The Five Year Hull Structural Warranty is transferable to the second and subsequent owners for the remainder of the five (5) years from the date of delivery to the original purchaser. There is no fee involved in the transfer of warranty to the new owner. The Grady-White Boats Transferable Warranty Form must be completed and returned to Grady-White at the time of sale. Upon receipt of this form, Grady-White will update it's records to reflect the new ownership and warranty coverage will be provided for the remainder of the five (5) years.

ONE YEAR MATERIAL AND WORKMANSHIP WARRANTY

Grady-White further warrants to the original retail purchaser of each Grady-White boat that under normal use, it will be free from defects in workmanship and material for a period of 12 months from the date of delivery to the original retail purchaser. Necessary repairs under this warranty will be made free of charge at Grady-White's factory in Greenville, North Carolina or at an authorized Grady-White dealer as elected by Grady-White. Transportation to and from the point of repair will be the responsibility of the owner, with all repairs subject to prior written authorization. **NO BOAT OR PART THEREOF IS TO BE SENT TO THE GRADY-WHITE FACTORY WITHOUT SUCH WRITTEN AUTHORITY.**

EXCLUSIONS

- This warranty specifically does not include the following:
- Damage caused by abuse, negligence, vandalism, lack of maintenance, improper storage or accident.
- Any statements, representations, or warranties given by dealer or other third persons other than those provided within this warranty.
- Any unit which is part of a rental fleet, used for racing or commercial purposes
- The following consequential damages: a) loss of time; b) inconvenience; c) towing charges; d) expenses for travel, lodging, telephone, and gasoline; e) loss or damage to personal property or loss of revenue; f) loss of use of the boat
- This warranty specifically does not apply to engines, outdrives, propellers, controls, steering, bilge pumps, and any other part expressly warranted by the manufacturer thereof. In addition, also excluded are gel coat cracking, gel coat crazing, gel coat blistering or flaking, chlorine, windshields, glass breakage, all vinyl upholstery and canvas, instruments and gauges, and leakage around windshields, windows, hatches, and other apertures.
- Any boat which has been overpowered according to the maximum Grady White recommended engine horsepower specifications on the capacity plate affixed to the boat

WARRANTY CLAIM PROCEDURES

Upon the discovery of a defect, the owner is to promptly contact the Grady White dealer from whom the original retail purchaser purchased the boat, who will effect the corrective action under this warranty upon prior written authorization from Grady-White Boats, Incorporated.

THESE WARRANTIES ARE EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, DURATION OF ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE SHALL BE LIMITED TO AND COINCIDENT WITH THE DURATION OF THESE EXPRESSED WARRANTIES

THIS WARRANTY SHALL NOT BE VALID UNLESS THE FACTORY WARRANTY POSTCARD IS PROPERLY EXECUTED AND MAILED WITHIN 10 DAYS OF THE PURCHASE OF YOUR GRADY-WHITE BOAT

Grady-White Boats Transferable Warranty Form

(Not for original owner use)

* Note: For second owner use in transferring remainder of 5 year hull structural warranty.

Please complete the following:

Hull Identification # _____

Name _____

Address _____

City: _____

State: _____ Zip Code _____

Telephone _____

Dealership or Previous Owner _____

ABOUT YOUR BOAT

1. What is your boat model number? (Example: 192, 272, etc.) _____

2. Date purchased? _____

3. What type of power is your boat equipped with?

Inboard/Outboard Dual Outboard Inboard/Outboard

4. Which engine brand does your boat have?

Johnson Mercury Evinrude Yamaha Other

5. Engine horsepower (total if twin power)

H.P. _____

6. Engine serial # _____

7. Propeller size _____

Engine serial # _____

ABOUT YOUR DECISION TO BUY A GRADY-WHITE BOAT

8. Is your Grady-White boat the first boat you have owned?

Yes No (If no, please complete the following about your last boat.)

Builder's name: _____ Length: _____

Why did you sell this boat? _____

How long did you own this boat? _____

9. Please rank your two most important uses for your Grady-White. (1 = most important, 2 = second most important)

Weekend Living Aboard Serious Offshore Fishing Skin Diving
 Socializing/Entertainment Extended Cruising/Traveling Other (please specify) _____
 Water Skiing & Water Sports Tournament Fishing
 Casual Fishing Casual Cruising

10. Please rank your three most important reasons for buying your Grady-White boat. (1 = most important, 2 = second most important, 3 = third most important)

Boat Show Brand of Motor Safety/Seaworthiness
 GW Dealer Friends Recommendation Low Maintenance
 Reasonable Price Exterior Styling Resale Value
 Hull Design/Ride Previous GW Experience Cabin Features
 Cockpit Layout Quality Other

PLEASE TELL US ABOUT YOURSELF

11. Which of the following magazines do you subscribe to or read often?

- | | | |
|--|---|---|
| <input type="checkbox"/> ALASKA MAGAZINE | <input type="checkbox"/> LA SPORTSMAN | <input type="checkbox"/> SKIN DIVER |
| <input type="checkbox"/> BOATING | <input type="checkbox"/> MOTORBOATING & SAILING | <input type="checkbox"/> SPORT FISHING |
| <input type="checkbox"/> BOATING WORLD | <input type="checkbox"/> NEW ENGLAND FISHERMAN | <input type="checkbox"/> TEXAS FISH & GAME |
| <input type="checkbox"/> CHESAPEAKE BAY | <input type="checkbox"/> NEW JERSEY FISHERMAN | <input type="checkbox"/> TRAILER BOATS |
| <input type="checkbox"/> DUCKS UNLIMITED | <input type="checkbox"/> OFFSHORE | <input type="checkbox"/> TIDE |
| <input type="checkbox"/> FLORIDA SPORTSMAN | <input type="checkbox"/> POWER & MOTORBOATING | <input type="checkbox"/> WALL STREET JOURNAL |
| <input type="checkbox"/> GREAT LAKES FISHERMAN | <input type="checkbox"/> SALT WATER FLY FISHING | <input type="checkbox"/> WESTERN OUTDOOR NEWS |
| <input type="checkbox"/> ILLINOIS BOATING | <input type="checkbox"/> SALT WATER SPORTSMAN | <input type="checkbox"/> YACHTING |
| <input type="checkbox"/> LONG ISLAND FISHERMAN | <input type="checkbox"/> SEA MAGAZINE | <input type="checkbox"/> OTHER |

12. What is your age?

- Under 25 25 - 34 35 - 44 45 - 54 55 - 64 65 +

13. Are you...?

- Married Single Widowed

14. You are...?

- Male Female

15. Do you have any children living at home?

- Yes No If yes, how many?

What is the age of your oldest child?

- 0-5 6-10 11-15 15 +

16. Which of the following best describes your educational background?

- | | |
|---|---|
| <input type="checkbox"/> Some High School | <input type="checkbox"/> College Graduate |
| <input type="checkbox"/> High School Graduate | <input type="checkbox"/> Some Post-Graduate Work |
| <input type="checkbox"/> Some College or Technical School | <input type="checkbox"/> Post-Graduate Degree or More |

17. What is your total annual household income?

- | | |
|--|--|
| <input type="checkbox"/> Under \$ 30,000 | <input type="checkbox"/> \$ 70,001 - \$ 85,000 |
| <input type="checkbox"/> \$ 30,001 - \$ 40,000 | <input type="checkbox"/> \$ 85,001 - \$ 100,000 |
| <input type="checkbox"/> \$ 40,001 - \$ 50,000 | <input type="checkbox"/> \$ 100,001 - \$ 150,000 |
| <input type="checkbox"/> \$ 50,001 - \$ 60,000 | <input type="checkbox"/> Over \$ 150,000 |
| <input type="checkbox"/> \$ 60,001 - \$ 70,000 | |

18. Does your family own a second home, where you most often go your boating?

- Yes No

If yes, where is your second home?

_____ City _____ State

19. Compared to other boaters, would you say you use your boat:

- Much more often More often About the same amount of time Less often Much less often

Thank you for completing this questionnaire. When we receive this information, you will automatically begin receiving the Grady-White Anchor Line newsletter.

Please return to:
 GRADY-WHITE BOATS, INC.
 CUSTOMER RELATIONS DEPT.
 PO BOX 1527
 GREENVILLE, NC 27835-1527

CHAPTER 7

TABLE OF CONTENTS

SPECIFICATIONS/OPTIONAL FEATURES	7-2
OPERATION OF STANDARD FEATURES	
Instrumentation And Switches	
Instrument Panel	7-3
Switch Panel.....	7-4
Typical Outboard Switch Panel Wiring	7-5
Auxiliary Fuse Panel.....	7-6
Main Circuit Breaker.....	7-6
Accessory Outlet - 12 volt	7-6
Rigging Compartment.....	7-6
Compass.....	7-7
Bilge Pump/Float Switch.....	7-7
Bilge Pump Location	7-7
Seacocks.....	7-8
Livewell - Raw Water.....	7-8
Washdown Operation.....	7-8
Cockpit Shower.....	7-8
Trim Tabs	7-9
Trim Tab Pump Location.....	7-9
Battery Select Switch.....	7-10
Single Engine	7-10
Twin Engine	7-10
OPERATION OF OPTIONAL FEATURES	
Head Operation Instructions	
Hand Pump Marine Head	7-11
Marine Electric Head.....	7-11
Portable Head.....	7-12
Portable Head With Deck Pump-Out.....	7-12
Portable Head With In Line Macerator	7-12
Outriggers	7-13
Advantages.....	7-13
Instructions.....	7-13
Care and Maintenance	7-13
DIAGRAMS	
Access Plate and Rigging Tube	7-14
Accessory Wiring.....	7-15
Fresh Water System.....	7-16
Hardtop Wiring.....	7-17
Head Layout - Marine.....	7-18
Head Layout - Portable w/Macerator.....	7-19
Labels and Location	7-20
Livewell Layout.....	7-21
Livewell/Washdown System.....	7-22
Thru Hull Detail	7-23

SPECIFICATIONS

BEAM-AMIDSHIP.....	8' 6"
BRIDGE CLEARANCE.....	6' 6"
BRIDGE CLEARANCE W/HARDTOP.....	8' 9"
KEEL TO TOP OF WINDSHIELD BAR.....	7' 11"
CENTERLINE LENGTH.....	24' 9"
FRESH WATER CAPACITY.....	10 GALLONS
FUEL CAPACITY - AUX.....	40 GALLONS
FUEL CAPACITY - MAIN.....	125 GALLONS
HULL DRAFT.....	1' 3"
ENGINE SHAFT LENGTH.....	SINGLE 30"
	DUAL 25"
TRANSOM WIDTH.....	7' 10"
DRY WEIGHT.....	4043 LBS
STEERING TYPE.....	HYDRAULIC
CONTROL CABLE LENGTH.....	PORT - 22'
	STBD - 20'
MAXIMUM CAPACITIES	
PERSONS.....	8 (or 1200 lbs.)
WEIGHT.....	2800 lbs.
OUTBOARD MAXIMUM HP.....	350 HP

OPTIONAL FEATURES

ACCESSORIES

- Auxiliary Fuel Capacity - 56 Gallons (Twins Only)
- Boat Lifting Ring
- Bow Pulpit
- Cockpit Bolsters
- Hardtop Rod Holders
- Hardtop W/Radio Box & Spreader Lights
- Head - Marine Head W/Electric Flush
- Head - Marine Head W/Holding Tank & Pump Out
- Head - Portable
- Head - Portable W/In Line Macerator
- Rod Storage - Folding Cabin Rack (6)
- Stereo/CD System
- Windshield Washer - (Stbd)
- Windshield Wiper - (Port)

CANVAS

- Drop Curtain
- Hardtop Front & Side Curtains
- Vista Top W/Curtains And Boot

OPERATION OF STANDARD FEATURES

INSTRUMENTATION AND SWITCHES

Grady White installs full instrumentation on pre-rig boats. The instruments are electrically connected to the ignition key and will operate when the ignition switch is in the "on" position. See Instruments, page 73, in *Sportfish, Cruisers, Yachts Owner's Manual*.

INSTRUMENT PANEL

Not all boats are equipped with the same type of instrumentation. Consult your dealer for specific information on the type of instrumentation included on your boat.

• ENGINE WATER TEMPERATURE GAUGE

This gauge indicates the temperature of the cooling water circulating through your engine. When the temperature exceeds the recommended operating range for your engine immediately shut off your engine to prevent damage. Overheating is often caused by obstruction of your engine's water intake on the lower unit. Check the water intake first if you experience trouble.

• FUEL GAUGE

The fuel gauge indicates the fuel level. When reading this gauge remember:

- The gauge accuracy varies with the attitude of your boat (trim or list).
- The fuel pickup tube is not capable of withdrawing all the fuel from the tank.

For these reasons never operate your boat at very low fuel levels.

• TACHOMETER GAUGE

The tachometer indicates engine revolutions per minute (RPMs). Consult the engine manual for recommended operating RPMs.

• TRIM GAUGE

The trim gauge indicates the angle of thrust of the lower unit of the engine. Reference TRIM under PERFORMANCE for adjustment recommendations.

• VOLTMETER

This meter indicates the battery charge. A reading of 12 or 13 volts is normal denoting a fully charged battery. Readings below 11 imply a weak battery and may cause the engine to fail. A normal reading while engine is running is 13-15 volts. Readings over 15 volts may indicate regulator problems. Low or fluctuating readings may imply loose connections (belts) or trouble in the regulator and alternator circuit. A voltage drop soon after the engine is shut down indicates a bad battery or a heavy load on the electrical system.

• WATER PRESSURE GAUGE

This gauge indicates the water pressure in the engine cooling system. Readings help determine if water pressure is too low for adequate cooling. Consult the engine owners manual for a recommended operating range.

• WATER TEMPERATURE, OIL LEVEL, AND FUEL SYSTEM WARNING BUZZER

Outboard models may have a warning buzzer. The buzzer is located in the throttle control or under the dash. Consult your engine owner's manual for exact location and functions.

258 VOYAGER

SWITCH PANEL

An accessory switch panel is installed the helm. All boats are not equipped with the same accessories. Consult your dealer for information or questions regarding the accessories included on your boat.

- **BILGE PUMP**

This two-way switch serves as an overriding manual switch in the event of failure of the automatic switch in the bilge.

- **COCKPIT LIGHTS**

The cockpit lights provide illumination in the cockpit area.

- **HORN**

The horn meets the requirements of the USCG sounding device.

- **LIVEWELL**

This switch activates the optional livewell system.

- **NAVIGATIONAL/ANCHOR LIGHTS**

The three-position switch (NAV-OFF-ANC) changes the lighting configurations to running or anchor lights.

- **TRIM/TILT**

The trim/tilt switch is located on the throttle control. Trim changes the thrust angle of the engine (reference TRIM under PERFORMANCE). Tilt raises the drive unit for trailering.

- **TRIM TAB**

These switches control the optional hydraulic trim tabs used for adjusting the attitude of the boat. See the TRIM TABS for more details.

- **WASHDOWN**

This switch activates the optional washdown system.

- **WATER PRESSURE**

This switch activates the pressurized fresh water system.

- **WINDSHIELD WIPER**



This switch powers the windshield wiper.

- **ACCESSORY**

Switches and breakers labeled "ACC" are blank. Both are used for non-factory installed accessories. See the Accessory Wiring Color and Fuse/Breaker Size Chart at the end of this chapter for recommended breaker amperages. Switch labels are available from your dealer for non-factory installed options.

NOTICE
Use an anti-corrosion spray on the back of panels and on exposed wires to prevent the rust or corrosion that could lead to an electrical system failure.

TYPICAL OUTBOARD SWITCH PANEL WIRING

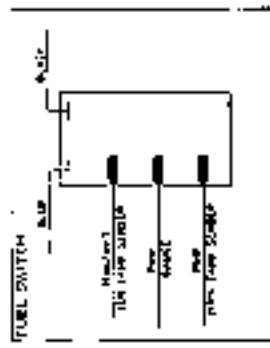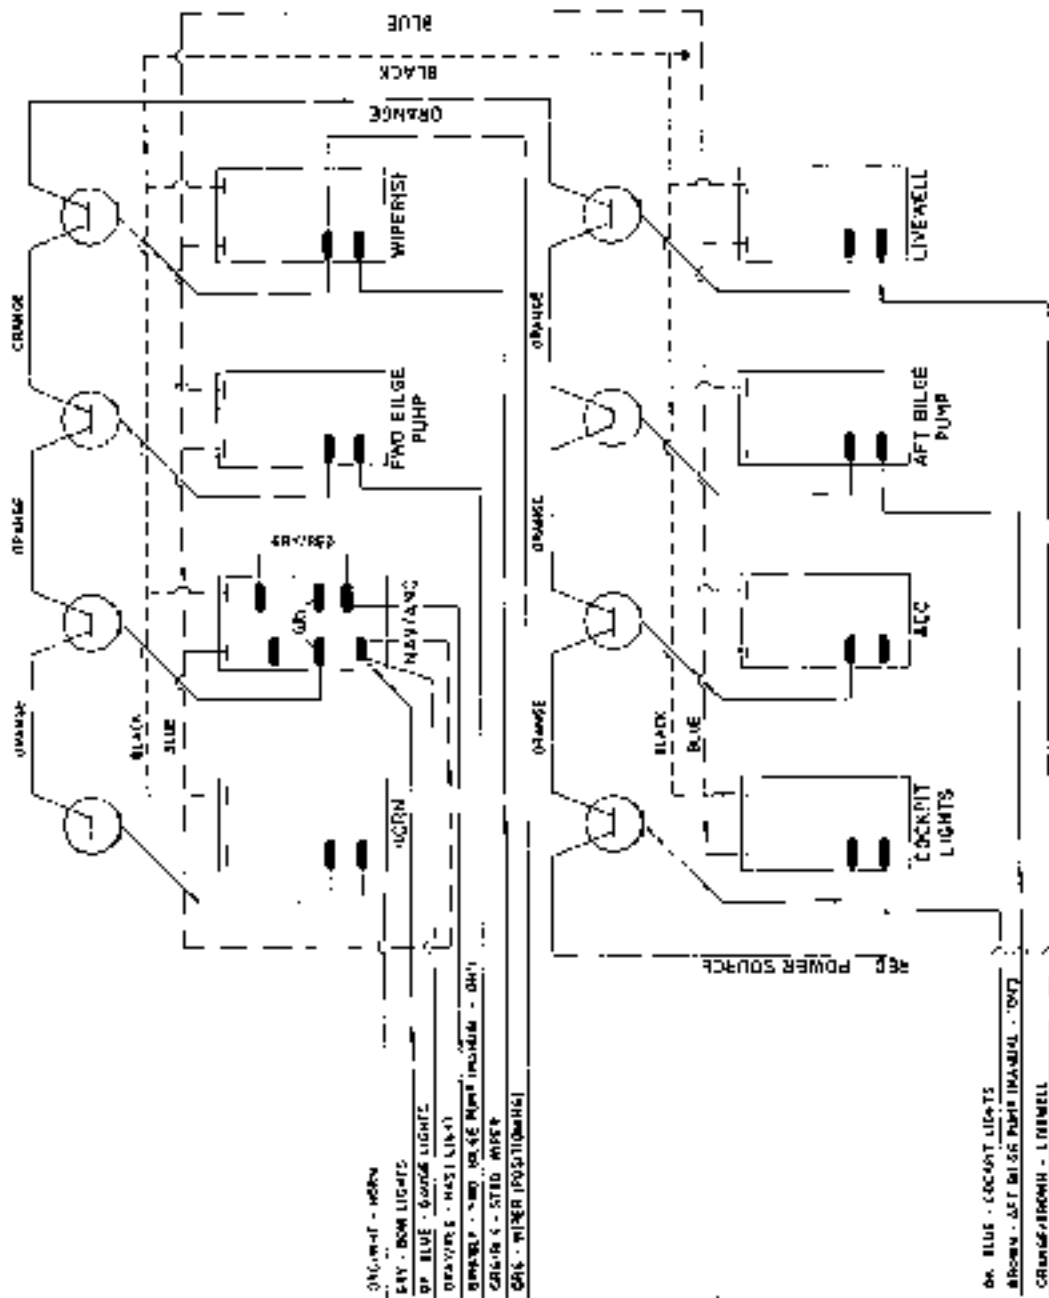


- NOTE.
1. WIRES TERMINATE IN TWO PLUGS THAT GO TO INDIVIDUAL COMPONENTS THROUGH HARNESSES
 2. NOT ALL COMPONENT SYSTEMS ARE INSTALLED ON ALL MODELS. DRAWING APPLIES TO OIL-FUELED SYSTEMS THAT ARE INSTALLED AND CONNECTED. EXTRA WIRES ARE FOR DEALER TO INSTALL OTHER SYSTEMS AND ACCESSORIES
 3. INDICATOR LIGHTS ARE INCORPORATED INTO THE SWITCHES WHERE NEEDED
 4. BOATS WITH TWO FUEL TANKS HAVE A FUEL POSITION SWITCH FOR SELECTING MAIN OR AUX. TANK. WIRING FOR THE SWITCHES SHOWN IN FIGURE 1

258 VOYAGER

AUXILIARY FUSE PANEL

The auxiliary fuse panel located under the dash offers the ability to install electronics in addition to the accessory switches located in the dash. Your boat utilizes the automotive type fuses.

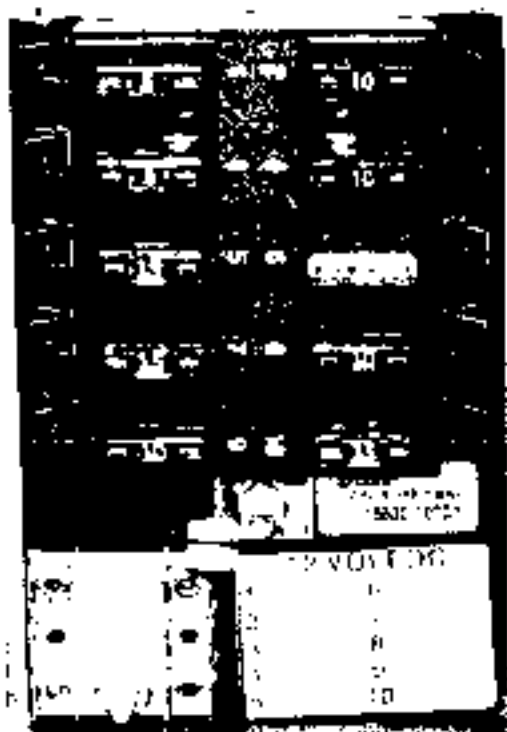

MAIN CIRCUIT BREAKER

There is a 40 AMP circuit breaker located in the rigging compartment under the aft seat lid. This is the main breaker protecting the wiring supplying power to the accessory switch panel. If this breaker is tripped depressing the red button on the breaker box will reset it.

ACCESSORY OUTLET - 12 VOLT

A 12-volt outlet is installed at the helm. This outlet provides an easily accessible power supply for accessories such as cellular phones and spotlights.

NOTICE

This outlet cannot be used with a cigarette lighter.

RIGGING COMPARTMENT

The rigging compartment is located under the aft seat area. This enclosure is functional for rigging ignition protected accessories and for better passage to rigging components located aft of this compartment. This compartment contains two flats for mounting transducers.

NOTICE

The rigging hatch and mounting screws must be sealed with silicone sealer after rigging is complete. If the lid is removed it must be resealed to insure watertight integrity.

COMPASS

The compass is located at the helm station in direct view of the operator when navigating the boat. Following the instructions in the compass manual included in the "Owners Packet" will help make compensation adjustments to the compass.

BILGE PUMP & FLOAT SWITCH

Your boat is equipped with automatic float switches adjacent to the bilge pumps. A float switch will enable the bilge pump to come on automatically if a significant amount of water accumulates in the bilge. These switches are wired directly to the batteries. They function independently of the battery select switch(es) and can activate the bilge pump with the battery select switches in the "off" position. Batteries should be inspected frequently to ensure proper operation. The bilge pumps are also equipped with switches at the helm. When a switch is in the "on" position the pump will run continuously. When a switch is in the "off" position, the pump is off unless activated by the float switch.

CAUTION

Do not run the bilge pump dry for a prolonged period of time.

BILGE PUMP LOCATION

Your 258 has two bilge pumps. One is located in the aft bilge under the access plate just forward of the transom and the other one is in the cabin under the sole floor. This pump can be reached through the access plate in the cabin floor.

258 VOYAGER

SEACOCKS

Ball valve seacocks are installed on the inlet thru hulls for the livewell and washdown systems and on the discharge thru hull for some head systems. It is necessary for the seacocks to be in the open position to operate the livewell and washdown systems. The open position is identified by the orientation of the handle. If the handle is in line or parallel to the body of the valve, the seacock is in the open position. If the handle is perpendicular to the body of the valve, the seacock is in the closed position.

NOTICE

All seacocks should be in the closed position if not in use or if the boat is unattended to prevent the taking on of water if a plumbing component fails.

LIVEWELL-RAW WATER

To operate the livewell, first open the seacock located on the port side of the aft rigging compartment. Place the livewell standpipe in the drain located at the bottom of the livewell; screw it down until the black flange makes contact with the flange on the drain fitting. The livewell switch at the helm should be in the "ON" position. Water will enter through an inlet near the top of the livewell and be distributed through a series of holes arranged vertically along the side of the livewell. The water will rise to a depth even with the strainer on the standpipe and drain overboard.

NOTICE

If the seacock is left open and the pump is not "ON", the boat's forward motion through the water will gradually fill the box. To prevent this inadvertent filling close the seacock when the livewell option is not in use.

NOTICE

Under certain conditions placing the outboard engine(s) in reverse will ventilate the water under the boat and create an airlock in the livewell pump. To prevent an airlock, turn the livewell "OFF" prior to any high RPM or constant reverse operation. If the livewell pump becomes air-locked, correct this situation by turning the pump "OFF" for 20 seconds.

WASHDOWN OPERATION

To operate the washdown open the seacock located on starboard side under the aft seat lid. Depress the washdown switch on the accessory switch panel at the helm. The washdown system will now be pressurized at the washdown faucet outlet. This faucet may be used alone or with a washdown hose. A washdown hose with a spray nozzle attached may be used intermittently without turning the switch "off". This operation is basically the same as a home yard hose with a nozzle. The washdown pump has an internal pressurization switch that will maintain water pressure as needed until the switch is turned "off" at the switch panel.

COCKPIT SHOWER


To operate the cockpit shower the water pressure switch located on the accessory panel must be in the "on" position. Open the flap and pull the shower wand from the recessed deck fitting. Depress the button on the back of the wand to spray water. To reinstall the shower wand gently feed the hose down through the deck and replace the flap on the fitting.

TRIM TABS

Trim tabs are electrically and hydraulically operated and are used to regulate the attitude of the boat while moving. They may also be used to adjust the boat's running angle in adverse seas or to compensate for unusual load conditions.



TRIM TAB

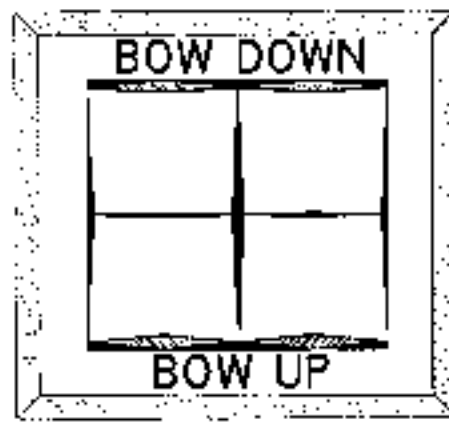

TRIM TAB SWITCH

The trim tabs are operated by a two-rocker switch panel and will aid in trimming the boat fore and aft for a smoother ride. The switches are marked "bow down". Trim tabs in the extreme "bow up" positions will have no effect on the boat's ride.

Trim tabs can improve the ride of your boat by adjusting where the water is hitting the keel line. In a slight chop the waves may be hitting the keel of your boat around the helm area causing an uncomfortable ride. By adjusting the trim tabs and lowering the bow the waves will hit the keel at a more forward point softening the ride. Experiment with trim tabs in various sea conditions to decide the best positions for your boat under different circumstances.

Trim tabs are also useful in correcting a port or starboard running list. If the boat is listing to the port side press the starboard trim tab switch toward "bow down". Press the port trim tab switch toward "bow down" to correct a starboard list. This will tend to lower the bow by pulling the higher side to a level position. If your bow is already in a low position you may correct a listing condition by pressing the trim tab switch toward "bow up". This will raise the low side and level the boat, improving the running angle.

Trim tabs in the extreme "bow down" position will cause the boat to come on plane with minimum bow rise. Unless you are operating at low speeds or with considerable cockpit weight you will likely want to raise the tabs slightly when underway in order to avoid "plowing" water. With the tabs in the "bow down" position you will be able to maintain a plane at the least possible RPMs.

NOTICE


Most drive units are equipped with an adjustable rudder trim tab. This trim tab should be adjusted to balance the steering at the speed that you travel most frequently. Variations in speed, boat load or changes in the drive unit trim will cause the steering to pull in one direction. If the boat pulls to the left adjust the trim tab to the left and vice-versa.

TRIM TAB PUMP LOCATION


The pump is located on the starboard side of the aft rigging compartment. The hydraulic fluid should be checked on a seasonal basis.

BATTERY SELECT SWITCH

Boats that are equipped with two batteries use a select switch to indicate which battery will be used. The switch is labeled **Battery 1**, **Battery 2**, **BOTH** and **OFF**. Alternate select switch between battery #1 and battery #2.

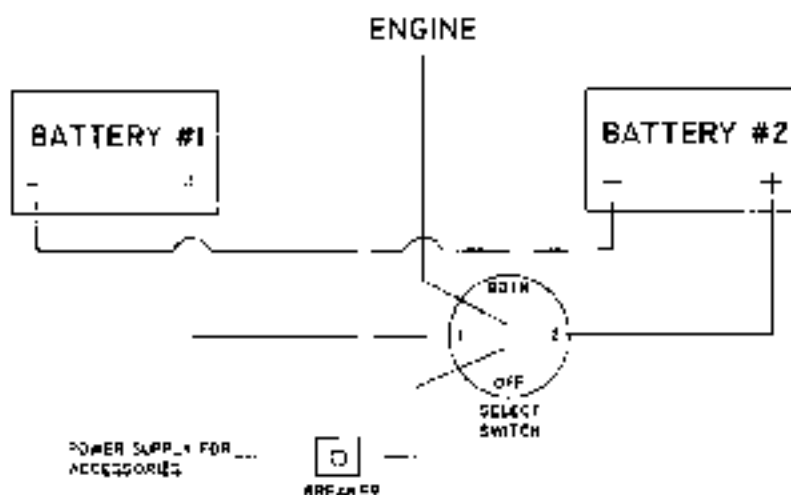

On twin engine boats with two select switches, a switch should be connected to each engine. Either battery may start either engine by selecting position #1 or position #2 on the switches. In normal use select position #1 on one switch and position #2 on the other so that both batteries will be charged simultaneously.

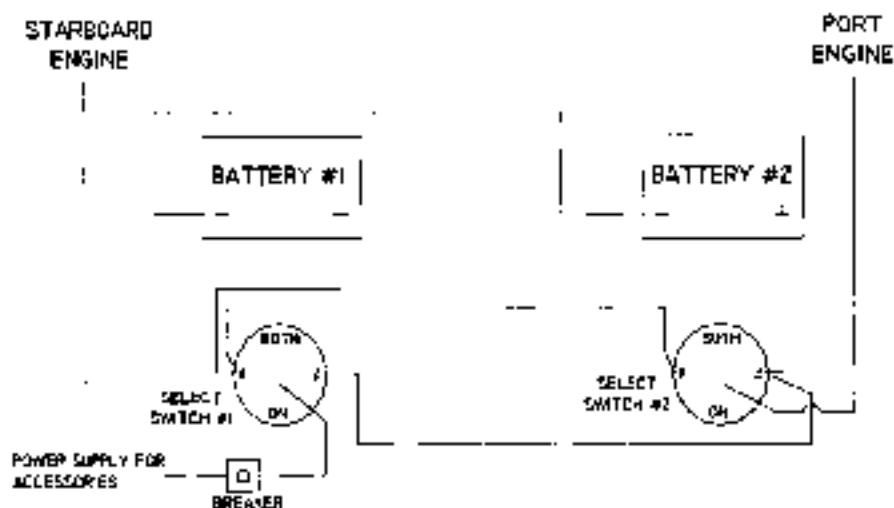

In an emergency situation when neither battery will start the engine(s) the select switches allow you to combine the power of both batteries by selecting **BOTH**. The switches should be returned to either the #1 or #2 position after the engines are started to allow each battery to be charged.

WARNING

Never turn the battery select switch to the "OFF" position with the engine(s) running or the charging system could be damaged.

OPERATION OF OPTIONAL FEATURES

HEAD OPERATING INSTRUCTIONS

MARINE HEADS

• HAND PUMP MARINE HEAD OPERATION


1. Open the marine head inlet seacock (handle in the vertical position). This seacock is located in the aft port v-berth storage area.
2. Position the wet/dry bowl selector in the wet bowl setting. Fill the toilet with water by pumping the handle several times.
3. Flush the toilet by pumping the handle several more times in the wet bowl position.
4. Move the bowl selector to the dry bowl position and pump the handle until almost all of the water is removed. Leave the toilet in the dry bowl position when not in use.

• MARINE ELECTRIC HEAD OPERATION

1. Open the marine head inlet seacock (handle in the vertical position). This seacock is located in the aft port v-berth.
2. Flush the toilet by turning the flush control knob clockwise on the pump beside the bowl. Turn the flush control knob counter clockwise to remove most of the water from the bowl.

• EMPTYING MARINE HEAD HOLDING TANK BY USE OF OVERBOARD DISCHARGE

1. Open the marine head discharge seacock (handle in the vertical position). This seacock is located in the aft port v-berth.
2. Turn the monitor "ON" at the control panel.
3. Press the discharge button until the light on the control panel indicates the tank is empty.
4. Turn the monitor "OFF" and close the discharge seacock (handle in the horizontal position).



Overboard discharge seacock must be sealed and secured in the closed position in accordance with the laws in your boating area.

• EMPTYING MARINE HEAD HOLDING TANK THROUGH DECK PUMP-OUT

1. Remove the cap from the deck pump-out fitting located in the port walkaround.
2. Connect a vacuum hose from a pump-out station to the deck fitting and run until the tank is empty. Replace the cap on the deck pump-out fitting.

Reference the Marine Head Layout diagram at the end of this chapter.

PORTABLE HEADS

• PORTABLE HEAD OPERATION

1. The upper fresh water reservoir must be filled with water prior to use.
2. The upper fresh water reservoir must be filled with water prior to use. Compress the bellows pump located on the left corner of the toilet a few times to add water to the bowl.
3. Flush the toilet by pulling the slide valve handle out (located on the front of the toilet).
4. Compress the bellows pump until the bowl is rinsed.
5. Close the slide valve handle by pushing it in fully.

• PORTABLE HEAD WITH DECK PUMP-OUT

For flushing instructions follow the steps outlined under **PORTABLE HEAD OPERATION**. To empty the portable head reservoir by use of a deck pump-out follow the instructions below.

- 1). Remove the cap from the deck pump-out fitting located in the port walkaround.
- 2). Connect a vacuum hose from a pump-out station to the deck fitting and run until the reservoir is empty. Replace the cap on the deck pump-out fitting.

• PORTABLE HEAD WITH IN-LINE MACERATOR

For flushing instructions follow the steps outlined under **PORTABLE HEAD OPERATION**. There are two ways to empty the portable head reservoir with this type of set-up. The waste may be vacuumed out through the deck fitting or discharged through a seacock in the hull bottom.

Vacuum through deck fitting follow the instructions below.

1. Locate the Y-valve mounted on the aft wall inside the console. Place the Y-valve handle in the deck pump-out position (handle pointed up).
2. Follow the steps outlined under **PORTABLE HEAD WITH DECK PUMP-OUT**.

To discharge through macerator and seacock follow these instructions.

- 1). Locate the Y-valve mounted on the aft wall inside the console. Place the Y-valve handle in the overboard discharge position (handle pointed down).
- 2). Open the head discharge seacock (handle in the vertical position). This seacock is located on the aft wall inside the console.
- 3). Turn "ON" the head pump switch at the helm and discharge until the reservoir is empty. Close the discharge seacock (handle in the horizontal position).



CAUTION

Overboard discharge seacock must be sealed and secured in the closed position in accordance with the laws in your boating area

OUTRIGGERS

Outriggers allow you to spread the lines trilled from your boat and decrease the chance of entanglement.

• ADVANTAGES

Advantages of outriggers include: offering bait throughout a larger area behind the boat, placing bait out of the wake zone, automatic drop back following strikes (which allows for fish to completely accept bait) and a reduction in unnecessary twisting action characteristic of artificial bait.

• INSTRUCTIONS

Guidelines for proper installation and use are provided in your Owner's Packet.

• CARE AND MAINTENANCE


Outriggers should be washed with fresh water, a mild soap and a soft cloth. The outrigger poles should be sprayed down with fresh water. Never use acidic or abrasive cleaners on outriggers.

A periodic waxing of your outriggers is suggested if your boat is frequently exposed to salt water. The wax will provide a protective coating and seal the pores of the metal. A non-abrasive high quality marine or automotive wax is recommended. Before storage clean and wax the outriggers.


During assembly grease all threads, bolts and tubes where one section is inserted into another. Once a year disassemble and regrease all applicable surfaces.

A periodic check for stretched or worn spreader wires on the outrigger poles is advised. If wires are stretched they should be re-tensioned to provide even support.


ACCESS PLATE AND RIGGING TUBE LOCATIONS

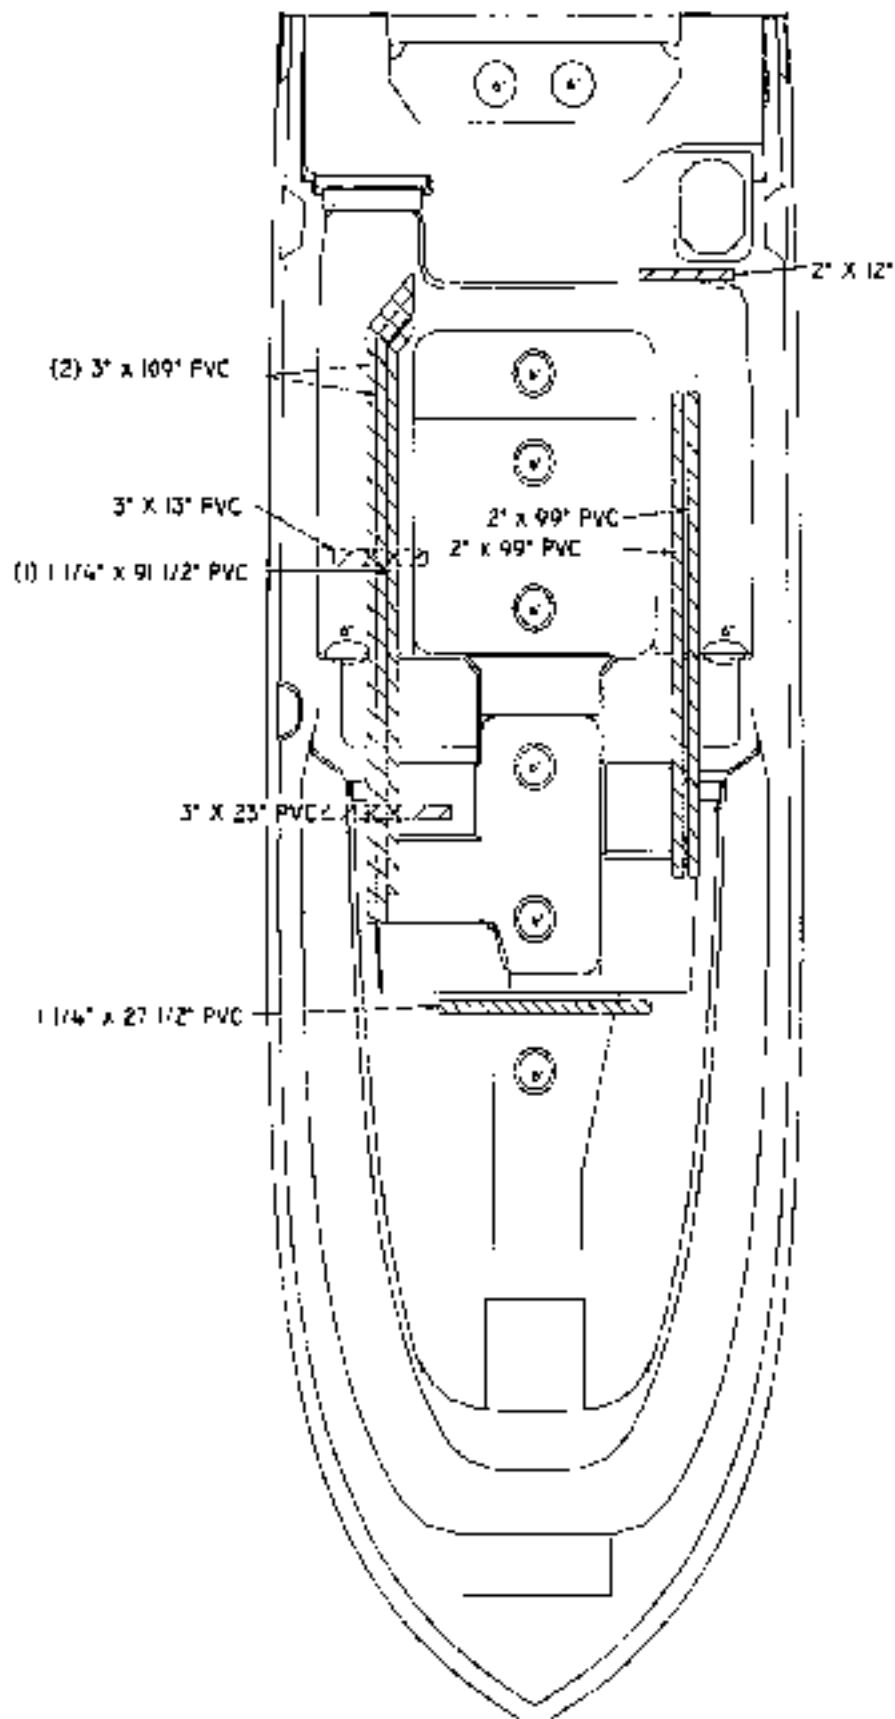


FRESH WATER SYSTEM

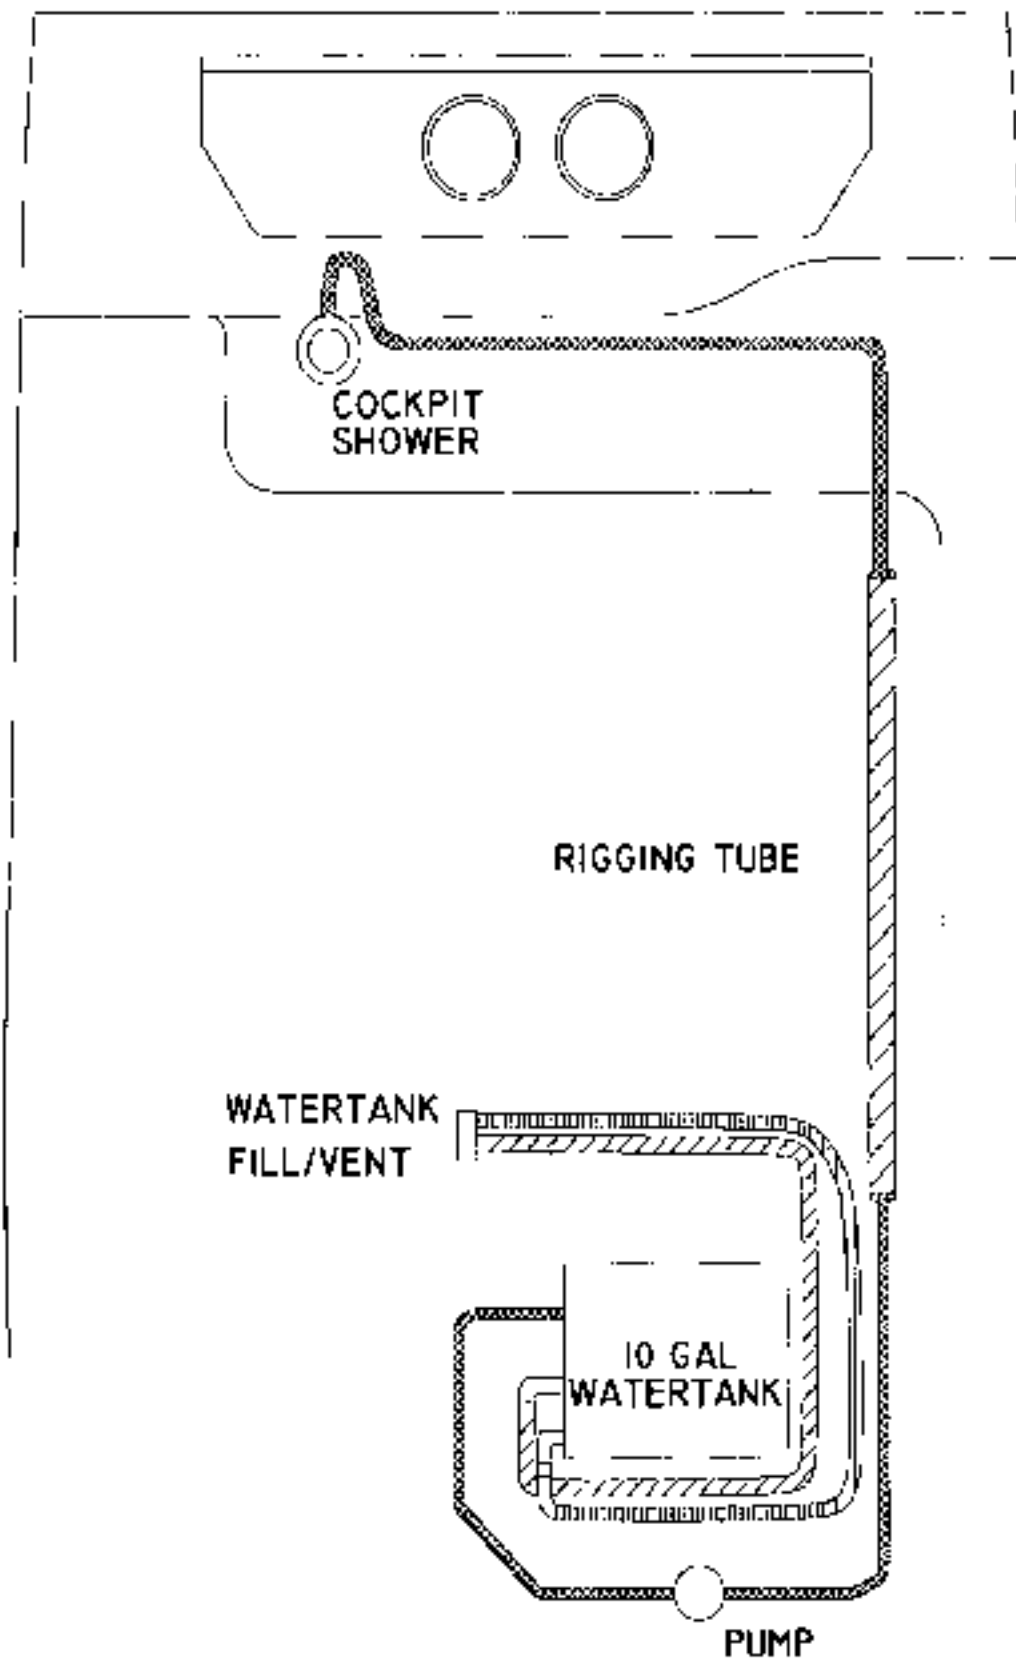


HARDTOP WIRING

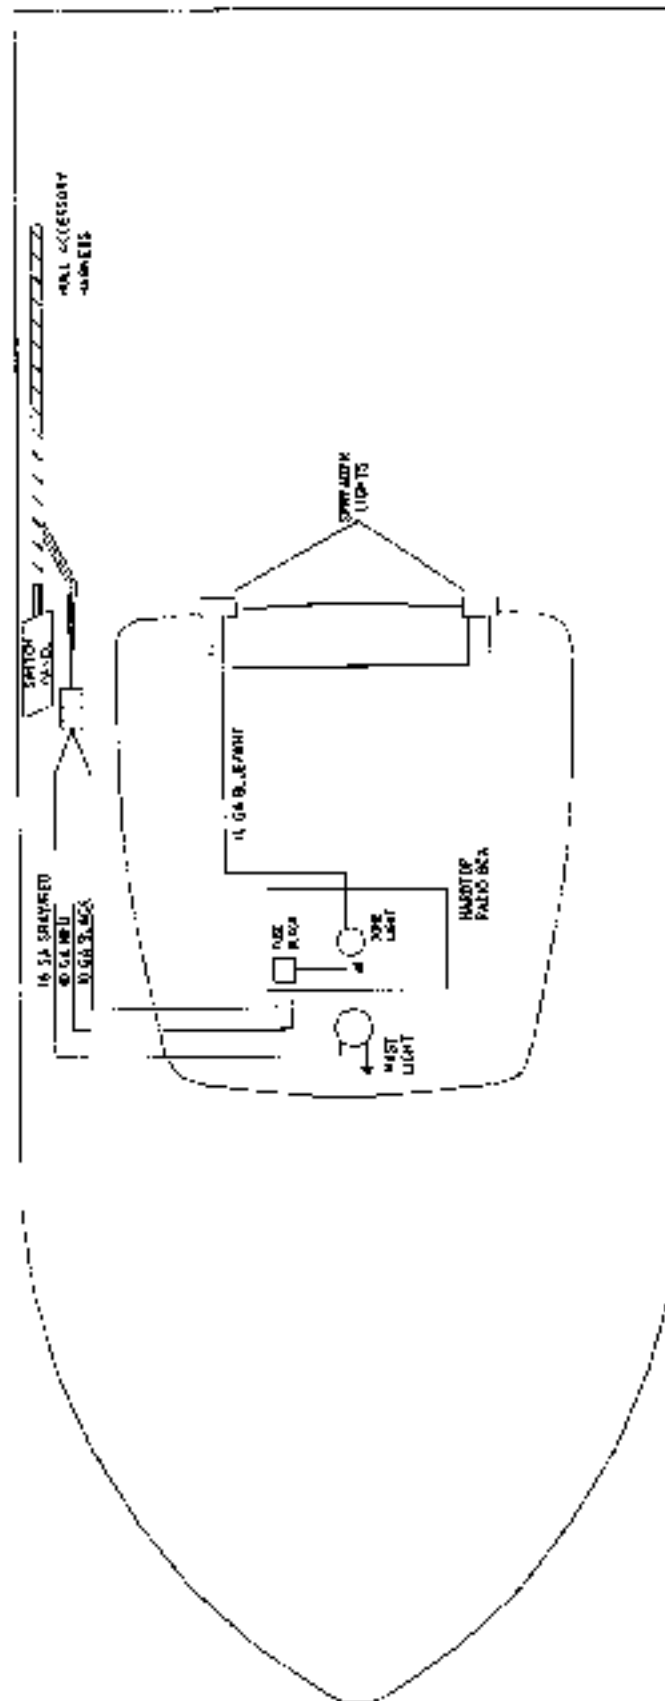


HEAD LAYOUT - MARINE

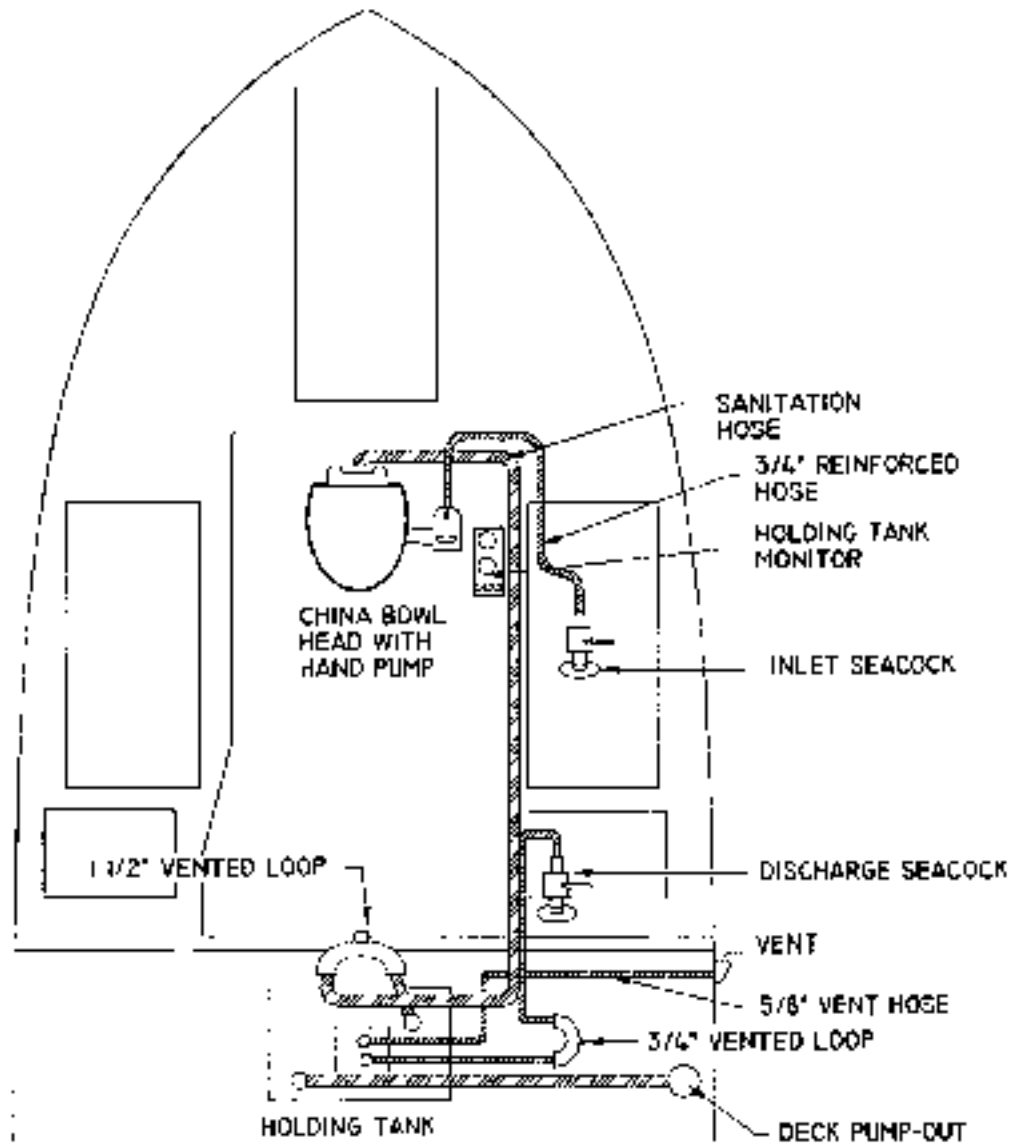


HEAD LAYOUT - PORTABLE W/MACERATOR

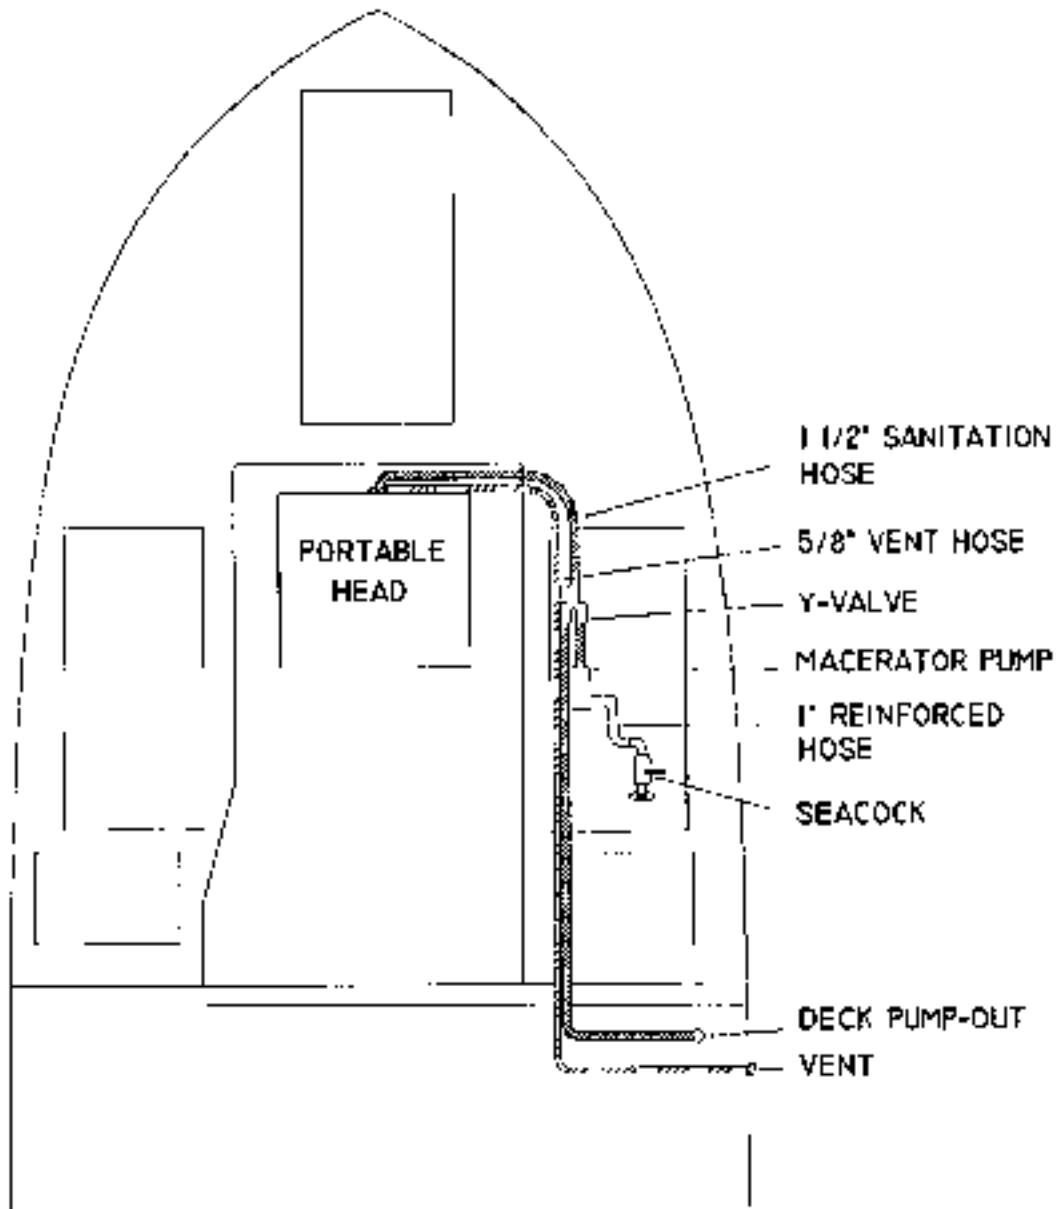


LABELS AND LOCATION

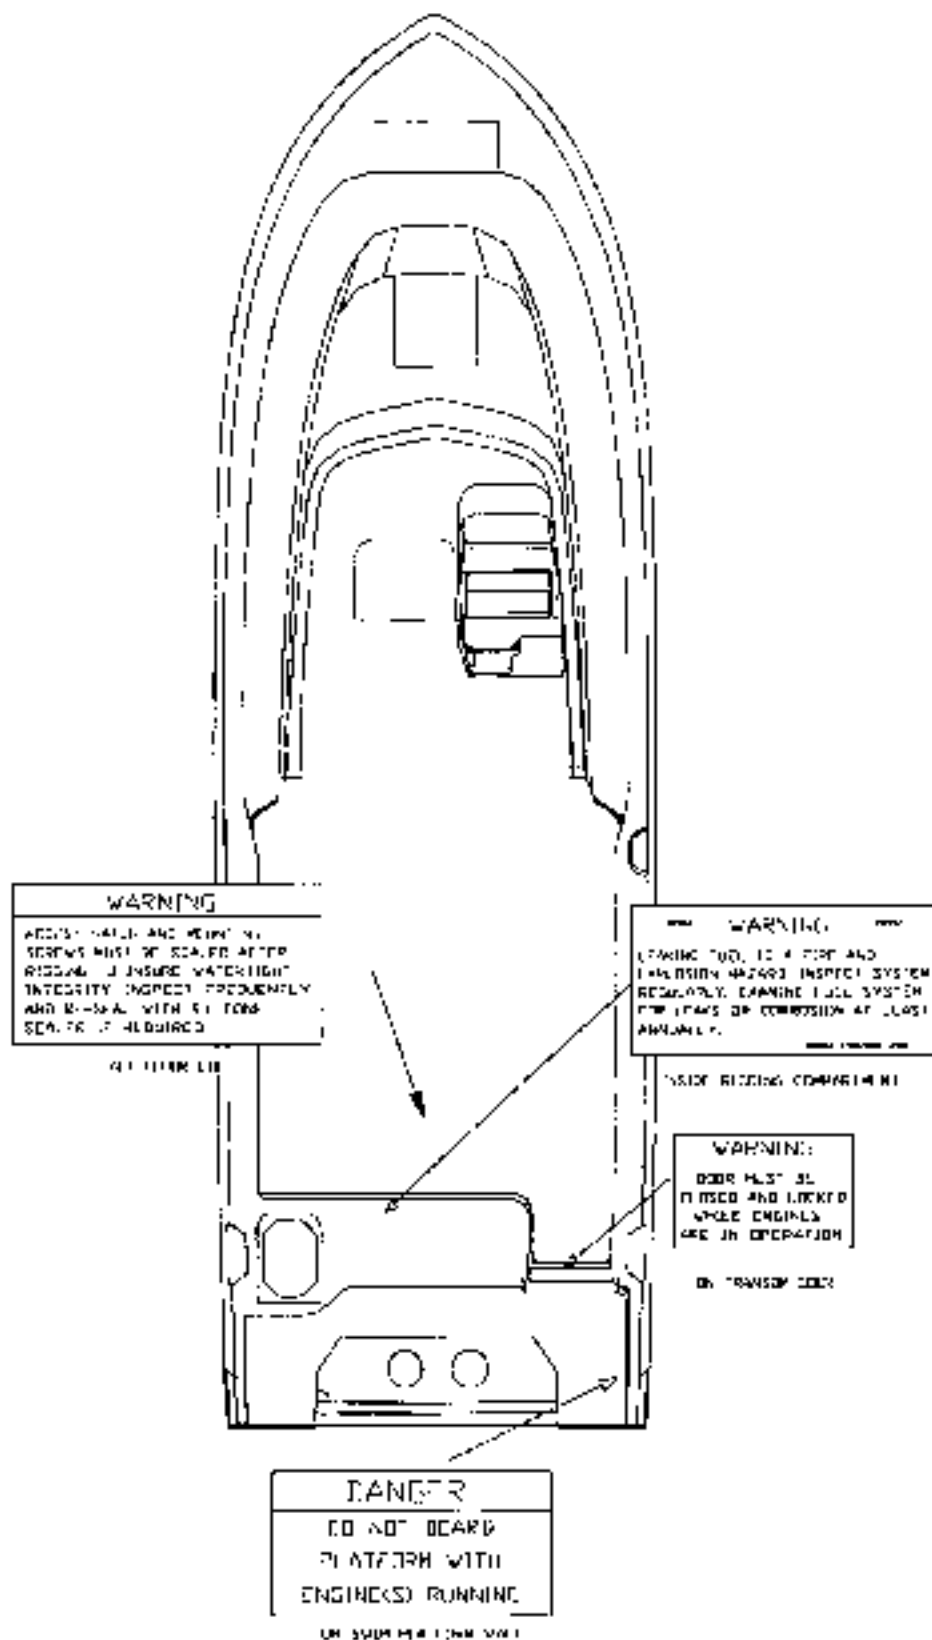

LIVEWELL LAYOUT

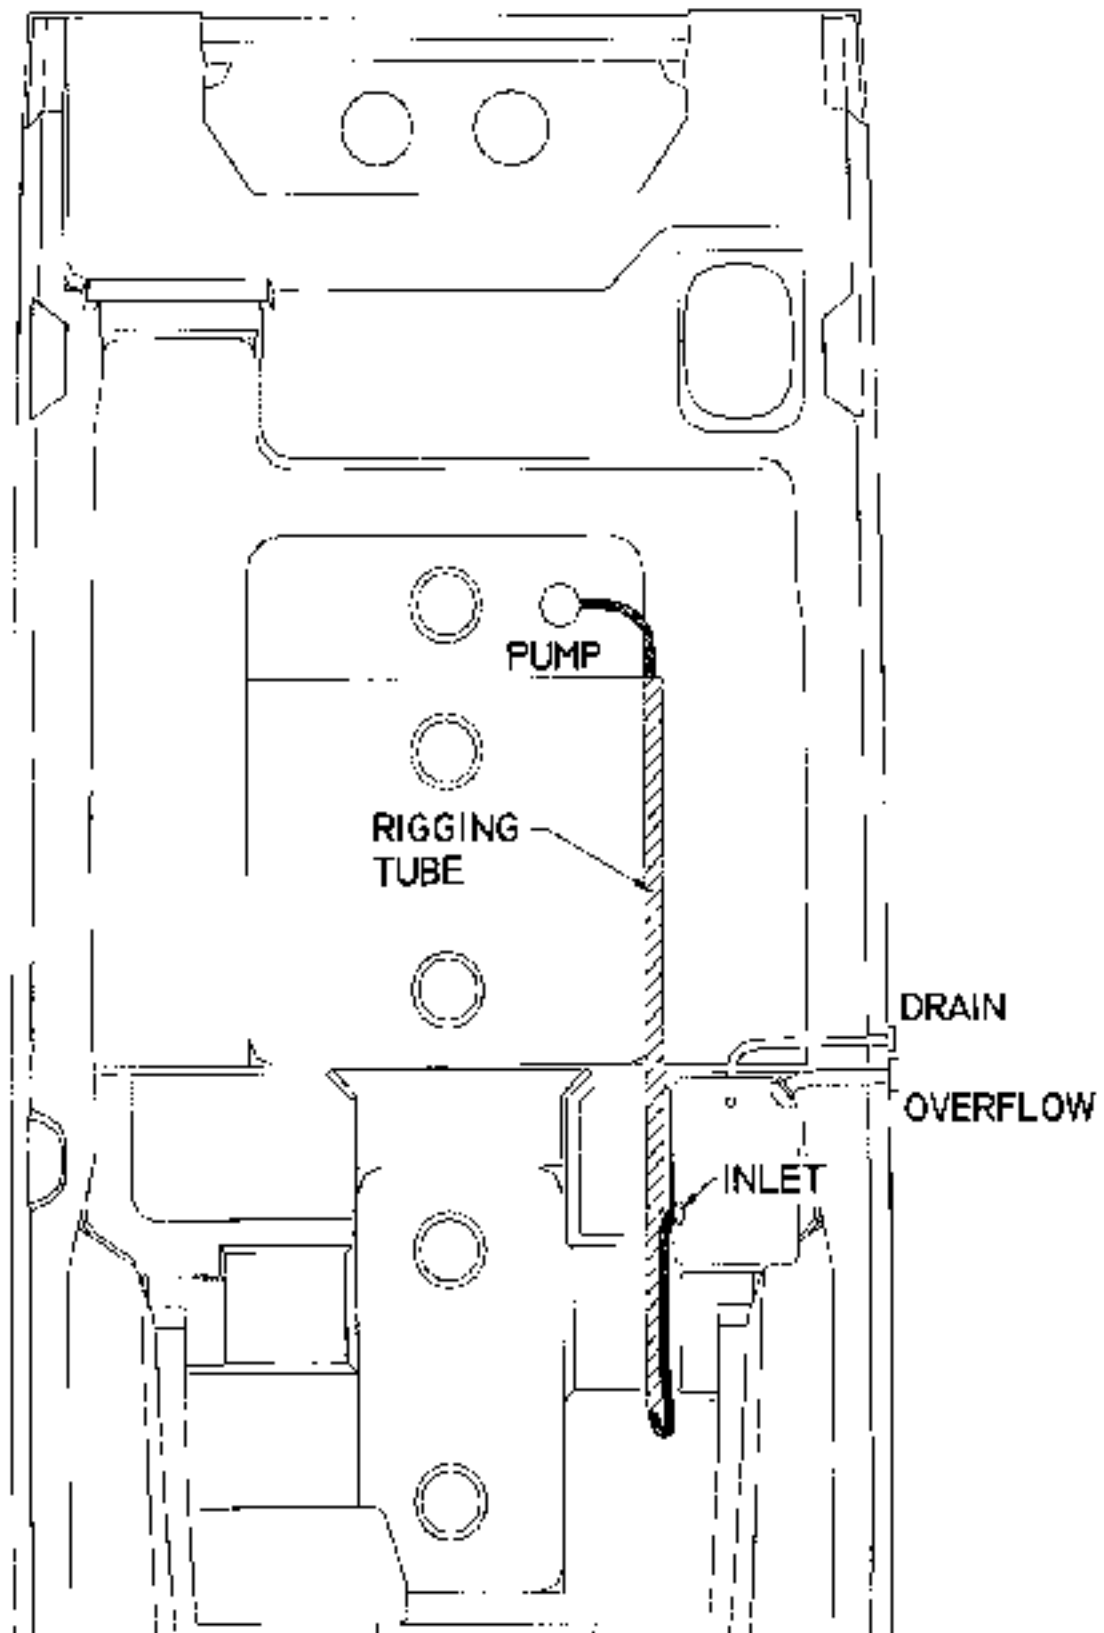

LIVEWELL/WASHDOWN SYSTEM

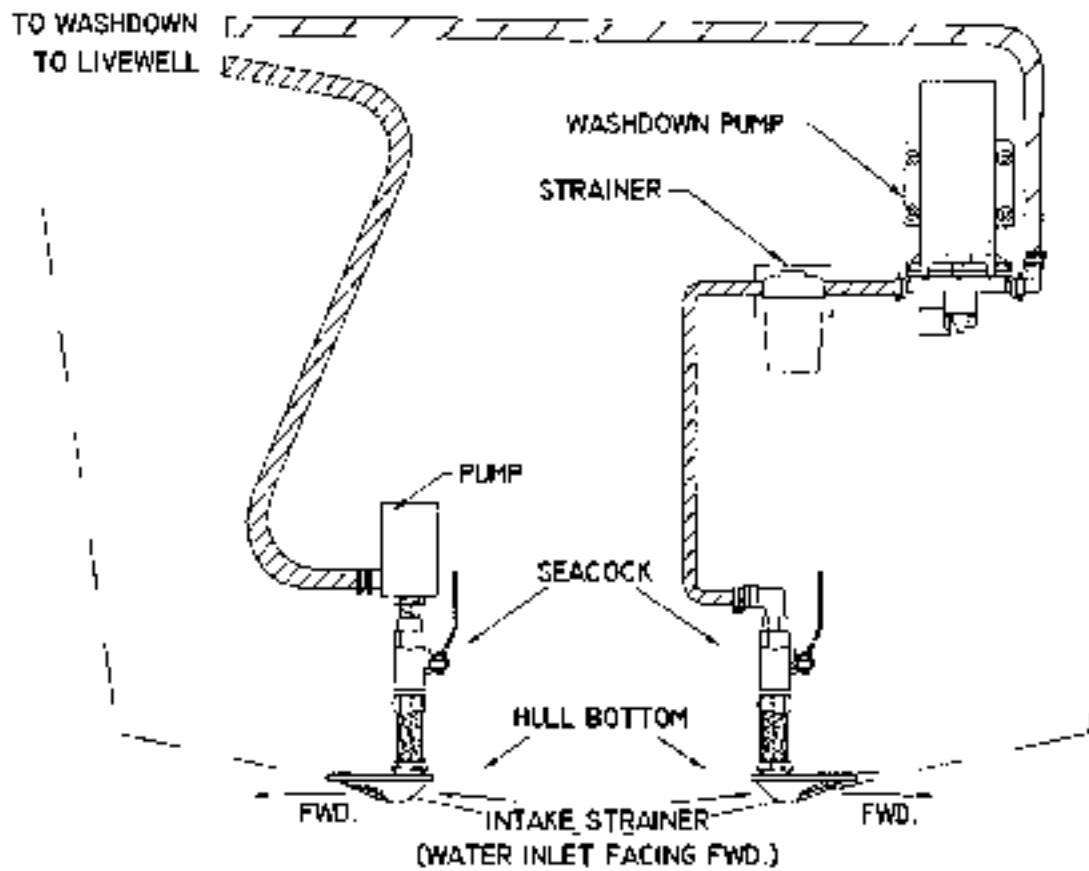

THRU HULL DETAIL

#	DESCRIPTION
A	SCUPPERS
B	STBD FISHBOX
C	FWD BILGE PUMP
D	MH/HH/HM VENT OPT
E	AFT BILGE PUMP
F	ICEBOX/FISHBOX DRAIN
G	LIVWELL DRAIN
H	SINK DRAIN

